

9-2320-244-34 P

TM 9-2320-244-34P

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

DIRECT SUPPORT AND GENERAL
SUPPORT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOL LIST
FOR

TRUCK, CARGO: 1- $\frac{1}{4}$ TON, 4 x 4,
M715 (2320-921-6365)

W/WINCH (2320-921-6366)

TRUCK, AMBULANCE: 1- $\frac{1}{4}$ TON,
4 x 4, M725 (2310-921-6369)

TRUCK, MAINTENANCE: 1- $\frac{1}{4}$ TON,
4 x 4, M726 (2320-921-6370)

W/WINCH (2320-921-6833)

HEADQUARTERS, DEPARTMENT OF THE ARMY

NOVEMBER
1971

D 101.11:

Technical Manual }
No. 9-2320-244-34P }

HEADQUARTERS,
DEPARTMENT OF THE ARMY
Washington, D. C., 12 November 1971

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOL LIST FOR

TRUCK, CARGO: 1-¼ TON, 4 x 4, M715
(2320-921-6365)

W/WINCH (2320-921-6366)

TRUCK, AMBULANCE: 1-¼ TON, 4 x 4, M725
(2310-921-6369)

TRUCK, MAINTENANCE: 1-¼ TON, 4 x 4, M726
(2320-921-6370)

W/WINCH (2320-921-6833)

SECTION I. INTRODUCTION

	Figure	Page
Truck, Cargo: 1-¼ Ton, 4 x 4, M715, right front view	1	9
Truck, Ambulance: 1-¼ Ton, 4 x 4, M725, left front view	2	9
Truck, Maintenance: 1-¼ Ton, 4 x 4, M726, left front view	3	10

SECTION II. REPAIR PARTS LIST

GROUP 01 — ENGINE		
0100 — Engine Front Mounts	4	38
0100 — Engine Rear Mount and Related Parts	5	39
0100 — Engine Lifting Eyes, Oil Filter and Related Parts	6	40
0101 — Cylinder Block and Head	7	41
0101 — Cylinder head and Valve	8	42
0102 — Crankshaft and Related Parts	9	43
0102 — Vibration Damper and Pulley	10	44
0103 — Flywheel Assembly	11	44
0103 — Flywheel Housing and Related Parts	12	45
0104 — Pistons, Rings and Connecting Rods	13	46
0105 — Cam Bearing Deck and Rocker Arms	14	47
0105 — Timing Chain Cover and Related Parts	15	48
0105 — Timing Chain and Gears	16	49
0105 — Rocker Arm Cover and Related Parts	17	50
0106 — Oil Pan, Oil Pump and Screen	18	51
0106 — Manifold and Related Parts	19	52
0106 — Ventilating System	20	53
GROUP 02 — CLUTCH		
0200 — Clutch Assembly	21	59
0202 — Clutch Release Mechanism	22	60
0202 — Clutch Release Linkage	23	61
GROUP 03 — FUEL SYSTEM		
0301 — Carburetor and Governor	24	81
0302 — Fuel Pump and Related Parts	25	82
0304 — Air Cleaner Assembly	26	83

*This manual supersedes TM 9-2320-244-34P, August 1968 including all changes.

REPAIR PARTS LIST — Continued

Section II. Group 3 — Fuel System — Continued

	Figure	Page
0304 — Air Cleaner and Related Parts	27	84
0304 — Air Cleaner Attaching Brackets and Parts	28	85
0306 — Fuel Lines and Fittings	29	86
0306 — Fuel Tank and Related Parts	30	87
0312 — Accelerator, Throttle and Choke Controls	31	98
GROUP 04 — EXHAUST SYSTEM		
0401 — Muffler, Exhaust Pipes and Related Parts	32	92
GROUP 05 — COOLING SYSTEM		
0501 — Radiator, Shroud and Related Parts	33	97
0503 — Cooling Fan, Water Pump, Thermostat and Related Parts	34	98
GROUP 06 — ELECTRICAL SYSTEM		
0601 — Alternator and Related Parts	35	127
0603 — Starting Motor and Switch	36	127
0603 — Starting Motor	37	
0605 — Ignitor, Spark Plugs and Leads	38	129
0605 — Ignitor Assembly	39	130
0607 — Instrument Cluster, Lights Switch and Ignition Switch	40	131
0608 — Circuit Breakers (Ambulance)	41	132
0608 — Directional Signal and Dimmer Switch	42	133
0608 — Receptacle and Lead (Ambulance)	43	134
0608 — Exhaust Blower Switch (Ambulance)	44	135
0609 — Front Blackout Marker, Directional and Parking Light	45	135
0609 — Dome Light (Ambulance)	46	136
0609 — Rear Blackout Marker, Directional and Stop Light	47	136
0609 — Blackout Stop Light	48	137
0609 — Blackout Driving Light	49	138
0609 — Headlight Assembly	50	139
0609 — Surgical Light	51	140
0609 — Spotlight Assembly	52	141
0610 — Sending Units	53	142
0611 — Horn, Horn Button and Steering Wheel	54	143
0612 — Batteries and Cables	55	144
0612 — Battery Box (M715 and M725)	56	145
0612 — Battery Box (M725)	57	146
0613 — Vehicle Wiring Harness (1 of 2)	58	147
0613 — Vehicle Wiring Harness (2 of 2)	58	148
0613 — Vehicle Wiring Harness (M725)	59	
0613 — Intervehicle Receptacle	60	150
GROUP 07 — TRANSMISSION		
0700 — Transmission	61	160
0700 — Transmission Cover and Mainshaft	62	161
0701 — Transmission Mainshaft	63	162
0701 — Transmission Countershaft, Reverse Idler Shaft and Main Drive Gear	64	
0704 — Transmission Top Cover	65	164
GROUP 08 — TRANSFER		
0801 — Power Transfer Case and Mounting Parts	66	176
0801 — Power Transfer Assembly	67	177
0801 — Upper Output Shaft Assembly	68	178
0801 — Parking Brake and Output Shaft and Related Parts	69	179
0803 — Power Transfer Gear Shift Levers and Related Parts	70	180
0803 — Power Transfer Vent Tubing	71	181
GROUP 09 — PROPELLER SHAFTS		
0900 — Propeller Shafts	72	184
GROUP 10 — FRONT AXLE		
1000 — Front Axle Breather Parts	73	192
1002 — Front Axle Differential and Related Parts	74	193
1004 — Steering Tie Rods, Steering Knuckles and Parts	75	194
GROUP 11 — REAR AXLE		
1100 — Rear Axle Breather Parts	76	200
1102 — Rear Axle Assembly, Differential and Parts	77	201
GROUP 12 — BRAKES		
1201 — Handbrakes	78	212
1201 — Handbrake Lever and Related Parts	79	213
1202 — Brake Assemblies and Mounting Parts	80	214
1204 — Master Cylinder and Related Parts	81	215

REPAIR PARTS LIST — Continued

Section II. GROUP 12 — BRAKES — Continued	Figure	Page
1204 — Brake System Lines and Fittings	82	216
1206 — Brake Pedal, Support and Related Parts	83	217
GROUP 13 — WHEELS		
1311 — Hub and Drum Assemblies and Related Parts	84	221
1313 — Tires, Tubes and Rims	85	222
GROUP 14 — STEERING		
1401 — Steering Gear	86	231
1401 — Drag Link Assembly and Steering Gear Mounting Parts	87	231
1401 — Steering Column and Related Parts	88	232
GROUP 15 — FRAME AND TOWING ATTACHMENTS		
1501 — Frame Assembly	89	240
1501 — Front Bumper	90	241
1501 — Rear Bumperettes and Related Parts	91	242
1503 — Pintle Assembly	92	243
1504 — Spare Tire Mounting Parts	93	244
GROUP 16 — SPRINGS AND SHOCK ABSORBERS		
1601 — Front Springs and Shock Absorbers	94	252
1601 — Rear Springs and Shock Absorbers	95	253
1601 — Front and Rear Springs	96	254
GROUP 18 — BODY, CAB AND HOOD		
1801 — Front End Covers and Related Parts	97	320
1801 — Front Door Assemblies (M715 and M726)	98	321
1801 — Front Door Fixed Glass and Mounting Parts	99	322
1801 — Front Door Glass and Mounting Parts	100	323
1801 — Door Seal and Related Parts	101	324
1801 — Glove Compartment, Door and Mounting Parts	102	325
1801 — Transmission Access Cover	103	326
1801 — Front Door Handle	104	327
1801 — Front End Grille, Fender Shields and Related Parts	105	328
1801 — Hood and Mounting Parts	106	329
1801 — Front Body Holddown Parts	107	330
1802 — Front Fenders	108	331
1802 — Windshield Assembly	109	332
1806 — Drivers and Passengers Seats and Mounting Parts	110	333
1806 — Stowage Straps	111	334
1808 — Rifle Mounting Bracket	112	335
1810 — Cargo Box and Related Parts	113	336
1810 — Container Stowage and Tool Box	114	337
1810 — Cargo Box Mounting Parts	115	338
1810 — Rack and Troop Seats	116	339
1812 — Drivers and Passengers Door and Related Parts (M725)	117	340
1812 — Drivers and Passengers Door Regulator, Window and Related Parts (M725)	118	341
1812 — Drivers and Passengers Door Lock Assembly (M725)	119	342
1812 — Partition Door Assembly and Related Parts	120	343
1812 — Ambulance Rear Doors and Related Parts	121	344
1812 — Rear Step and Attendants Seat	122	345
1812 — Ambulance Floor Board and Related Parts	123	346
1812 — Exhaust Blower Duct, Cover and Mounting Parts	124	347
1812 — Ambulance Exhaust Vent Duct and Related Parts	125	348
1812 — Exhaust Blower Assembly	126	349
1812 — Ambulance Rear Compartment and Miscellaneous Items	127	350
1812 — Litter Rack Hanger, Mounting Brackets and Related Parts	128	351
1812 — Litter Rack Assembly	129	352
1812 — Windshield, Front End Panels and Related Parts	130	353
1812 — Front End, Rear Compartment and Related Parts	131	354
1812 — Ambulance Body Mounting Parts	132	355
GROUP 20 — WINCH, AND POWER TAKE-OFF		
2001 — Winch Drive Shafts	133	369
2001 — Winch Mounting Parts	134	370
2001 — Winch Assembly	135	371
2004 — Power Take-Off Control Linkage	136	372
2004 — Power Take-Off Mounting Parts	137	373
2004 — Power Take-Off Assembly	138	374

REPAIR PARTS LIST — Continued

Section II. GROUP 22 — BODY CHASSIS AND ACCESSORY ITEMS

	Figure	Page
2201 — Cab Cover and Frame	139	392
2201 — Cargo Canvas and Bows	140	393
2202 — Heater Control Box Assembly	141	394
2202 — Windshield Wipers, Motors and Related Parts	142	395
2202 — Rear View Mirrors, Reflectors and Mounting Parts	143	396
2202 — Rear Compartment and Crew Compartment Heaters	144	397
2202 — Rear Compartment Heater and Related Parts	145	398
2202 — Fresh Air Heater and Related Parts	146	399
2210 — Data Plates	147	400
GROUP 33 — SPECIAL PURPOSE KITS		
3303 — Power Plant Heater Kit	148	425
3303 — Power Plant Heater Assembly	149	426
3303 — Crew Compartment Heater Kit	150	427
3303 — Cab Winterization Top	151	428
3305 — Deep Water Fording Kit	152	429
3307 — Slave Receptacle Kit	153	430
3307 — 100 AMP Alternator Kit	154	431
GROUP 47 — GAGES (NONELECTRICAL)		
4701 — Speedometer and Cable	155	433

SECTION III. SPECIAL TOOLS

2604 — Special Tools	156	440
2604 — Special Tools	157	441
2604 — Special Tools	158	442
2604 — Special Tools	159	443

SECTION IV. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS REFERENCE TO FIGURE AND ITEM NUMBER

444

Section I. INTRODUCTION

1. Scope.

This manual lists repair parts and special tools required for the performance of direct support and general support maintenance of the Truck, Cargo M715, Truck, Ambulance M725, and Truck, Maintenance M726.

2. General.

This Repair Parts and Special Tools List is divided into the following sections:

a. Repair Parts — Section II. A list of repair parts authorized for the performance of maintenance at the direct support and general support level in figure and item number sequence.

b. Special Tools, Test and Support Equipment — Section III. A list of special tools, test and support equipment authorized for the performance of maintenance at the direct support and general support level.

c. Federal Stock Number and Reference Number Index — Section IV. A list of Federal Stock Numbers in ascending numerical sequence followed by a list of reference numbers in ascending alpha-numeric sequence, cross-referenced to the illustration figure number and item number.

3. Explanation of Columns.

The following provides an explanation of columns in the tabular lists in Sections II, III, and IV:

a. Source, Maintenance, and Recoverability Codes (SMR), Column 1:

(1) Source code, indicates the selection status and source for the listed item. Source codes used are:

Code	Explanation
P	Repair parts which are stocked in or supplied from the GSA/DSA, or Army supply system and authorized for use at indicated maintenance categories.
P2	Repair parts which are procured and stocked for insurance purposes because the combat or military essentiality of the end item dictates that a minimum quantity be available in the supply system.
P9	Assigned to items which are NSA design controlled: unique repair parts, special tools, test, measuring and diagnostic equipment, which are stocked and supplied by the Army COMSEC logistic system, and which are not subject to the provisions of AR380-41.
P10	Assigned to items which are NSA design controlled: special tools, test, measur-

Code

Explanation

	ing and diagnostic equipment for COMSEC support, which are accountable under the provisions of AR380-41, and which are stocked and supplied by the Army COMSEC logistic system.
M	Repair parts which are not procured or stocked, but are to be manufactured in indicated maintenance levels.
A	Assemblies which are not procured or stocked as such, but are made up of two or more units. Such component units carry individual stock numbers and descriptions, are procured and stocked separately and can be assembled to form the required assembly at indicated maintenance categories.
X	Parts and assemblies which are not procured or stocked and the mortality of which normally is below that of the applicable end item or component. The failure of such part or assembly should result in retirement of the end item from the supply system.
X1	Repair parts which are not procured or stocked. The requirement for such items will be filled by use of the next higher assembly or component.
X2	Repair parts which are not stocked. The indicated maintenance category requiring such repair parts will attempt to obtain same through cannibalization. Where such repair parts are not obtainable through cannibalization, requirements will be requisitioned, with accompanying justification, through normal supply channels.
C	Repair parts authorized for local procurement. Where such repair parts are not obtainable from local procurement, requirements will be requisitioned through normal supply channels accompanied by a supporting statement of nonavailability from local procurement.
G	Major assemblies that are procured with PEMA funds for initial issue only as exchange assemblies at DSU and GSU level. These assemblies will not be stocked above DS and GS level or returned to depot supply level.

(2) Maintenance code, indicates the lowest category of maintenance authorized to install the listed item. The maintenance level codes are:

Code	Explanation
O	Organizational maintenance
F	Direct support maintenance
H	General support maintenance
D	Depot maintenance

(3) Recoverability code, indicates whether un-serviceable items should be returned for recovery or salvage. Items not coded are expendable. Recoverability codes are:

Code	Explanation
R	Repair parts and assemblies which are economically reparable at DSU and GSU activities and are normally furnished by supply on an exchange basis.
S	Repair parts and assemblies which are economically reparable at DSU and GSU activities and which normally are furnished by supply on an exchange basis. When items are determined by a GSU to be uneconomically reparable, they will be evacuated to a depot for evaluation and analysis before final disposition.
T	High dollar value recoverable repair parts which are subject to special handling and are issued on an exchange basis. Such repair parts normally are repaired or overhauled at depot maintenance activities.
U	Repair parts specifically selected for salvage by reclamation units because of precious metal content, critical materials, or high dollar value reusable casings or castings.

b. *Federal Stock Number, Column 2.* This column indicates the Federal Stock Number assigned to the item and will be used for requisitioning purposes.

c. *Description, Column 3.* This column indicates the Federal item name and any additional description of the item required. A part number or other reference number is followed by the applicable five-digit Federal supply code for manufacturers in parentheses. Repair parts quantities included in the kits, sets, and assemblies are shown in front of the repair part name. Material required for manufacture or fabrication is identified.

d. *Unit of Measure (U/M), Column 4.* A 2 character alphabetic abbreviation indicating the amount of quantity of the item upon which the allowances are based, e.g., ft, ea, pr, etc.

e. *Quantity Incorporated in Unit, Column 5.* This column indicates the quantity of the item used in the assembly group. A "V" appearing in this column in lieu of a quantity indicates that a definite quantity cannot be indicated (e.g., shims, spacers, etc.).

f. *30-Day DS/GS Maintenance Authorization, Columns 6, and 7.*

(1) The Repair Parts List includes asterisk entries in separate columns — one for Direct Support (DS) and one for General Support (GS) - as appropriate to indicate the total range of repair parts authorized for use at that category or required to be removed or disassembled during the performance of authorized maintenance operations. They will be requisitioned initially on an "as required" basis. The repair parts authorized at the DS/GS levels will be those authorized for the maintenance mission at these levels. Requirements for repair part stockage and for distribution to supported units will be based on demand and determined in accordance with AR 711-16.

(2) Special Tools or Test, Measurement and Diagnostic Equipment (TMDE) and other support equipment peculiar to an item are listed with quantities in the appropriate density spread/allowance columns.

g. *1-Year Allowances Per 100 Equipments/Contingency Planning Purposes, Column 8.* This column indicates the requirement for contingency planning purposes.

h. *Depot Maintenance Allowance Per 100 Equipments, Column 9.* This column indicates authorization for depot use.

i. *Illustration, Column 10.* This column is divided as follows:

(1) Figure Number, Column 10a. Indicates the figure number of the illustration in which the item is shown.

(2) Item Number, Column 10b. Indicates the call-out number used to reference the item in the illustration.

4. Special Information.

a. Identifications of the usable on codes included in column 3 of this publication are:

Code	Used on
BA	Model M715
BB	Model M715 W/ Winch
CA	Model M725
DA	Model M724 (Chassis)
DB	Model M724 (Chassis) W/ Winch
EA	Model M726
EB	Model M726 W/ Winch

b. Parts which require manufacture or assembly at a category higher than that authorized for installation will indicate in the source column the higher category.

c. The following publications pertain to M715, M724, M725 and M726 and their components.

LO 9-2320-244-12 Lubrication Order

TM 9-2320-244-10 Operator's Manual
 TM 9-2320-244-20 Organization Maintenance Manual
 TM 9-2320-244-20P Organizational Maintenance Repair
 Parts and Special Tools List
 TM 9-2320-244-34 Direct Support and General Support
 Maintenance Manual

RL Roll
 STD Standard
 THK Thick
 V Volt
 W/ With

5. How to Locate Repair Parts.

a. When Federal Stock Number or reference number is unknown:

(1) *First*. Using the table of contents, determine the functional group, within which the repair part belongs. This is necessary since illustrations are prepared for functional groups, and listings are divided into the same groups.

(2) *Second*. Find the illustration covering the functional group to which the repair part belongs.

(3) *Third*. Identify the repair part on the illustration and note the illustration figure and item number of the repair part.

(4) *Fourth*. Using the Repair Parts Listing, find the functional group to which the repair part belongs and locate the illustration figure and item number noted on the illustration.

b. When Federal Stock Number or reference number is known:

(1) *First*. Using the Index of Federal Stock Numbers and Reference Numbers find the pertinent Federal stock number or reference number. This index is in ascending FSN sequence followed by a list of reference numbers in ascending alpha-numeric sequence, cross-referenced to the illustration figure number and item number.

(2) *Second*. Using the Repair Part Listing, find the functional group of the repair part and the illustration figure number and item number referenced in the Index of Federal Stock Numbers and Reference Numbers.

6. Abbreviations.

Abbreviations	Explanation
AC	Alternating Current
ALT	Alternator
AMP	Amphere
ASSY	Assembly
EA	Each
FT	Foot (Feet)
GAL	Gallon
HEX	Hexagon
ID	Inside Diameter
IN	Inch
LG	Long
LH	Left Hand
NO.	Number
OD	Outside Diameter
RH	Right Hand

7. Federal Supply Codes for Manufacturers.

Code	Manufacturer
00000	Ordnance Corps
04768	Stahl Metal Products, Division of Scott and Fetzer Co.
08288	Military Supply Standards
08302	Braden Winch Division of Braden Industries, Inc.
10001	Naval Ordnance Systems Command
11757	Dana Corp. Salisbury Div. — Chelsea Plant
18265	Donaldson Co., Inc.
19207	Army Tank-Automotive Command
19728	The Prestolite Co., Division of Eltra Corp.
23040	Ford Motor Co., Autolite Ford Parts Division
24617	General Motors Corp.
25472	The B. F. Goodrich Co.
29092	Colt Industries, Inc., Holly Carburetor Division
33116	Wheel Drum and Brake, Division of Kelsey-Hayes Co.
39125	McCaffrey MP Inc.
57733	Stewart-Warner Corp.
58464	Superior Coach Corp.
60038	Timken Roller Bearing Co.
63477	Wagner Electric Corp., Wagner Divi- sion
65909	Kaiser Jeep Corporation
71500	Carter Carburetor, Division of ACF Industries, Inc.
72447	Dana Corporation
77640	Ross Gear, Division of TRW Inc., Lafayette Plant
78189	Illinois Tool Works, Inc., Shakeproof Div.
78385	Southwind, Division of Stewart- Warner Corp.
78940	United Air Cleaner, Division of Fil- tration Corp.
78977	Unity Manufacturing Company
30244	General Services Administration, Federal Supply Service
81221	Neapco Products, Inc.

Code**Manufacturer**

81340 Military Specifications Promul-
gated by Standardization Div.,
Directorate of Logistic Services,
DSA
95019 Dana Corporation, Spicer Division
96906 Military Standards Promulgated by
Standardization Div., Direc-
torate of Logistic Services, DSA

**8. Recommendations for Maintenance
Publication Improvements.**

Report of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to: Commanding General, Headquarters, U. S. Army Tank Automotive Command, Warren, Michigan 48090, Attention: AMSTA-MAP.

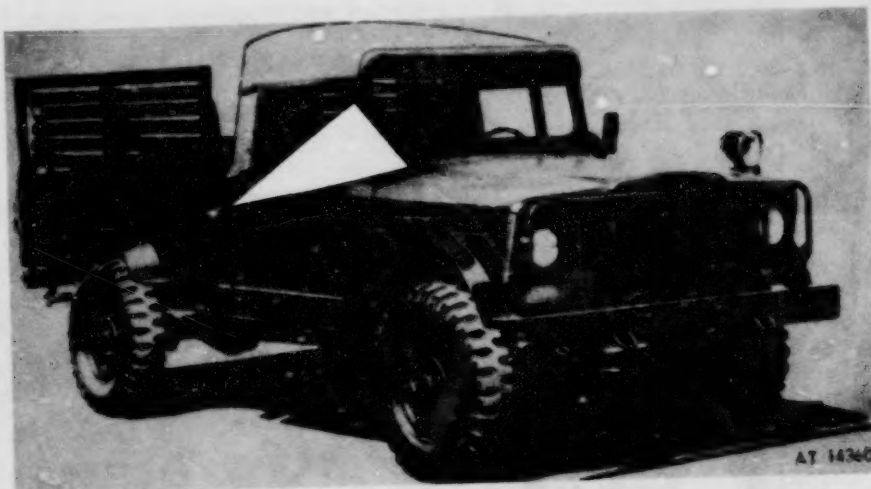


Figure 1. Truck, Cargo: 1-1/4 Ton, 4 x 4, M715, right front view

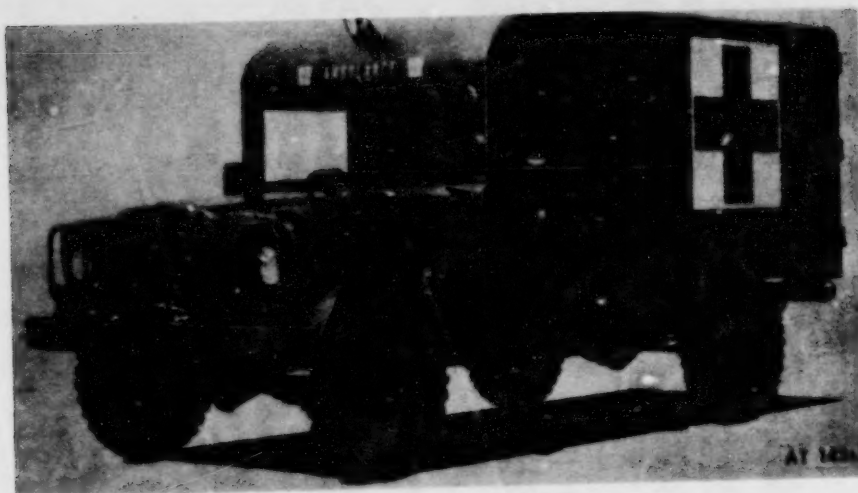


Figure 2. Truck, Ambulance: 1-1/4 Ton, 4 x 4, M725, left front view

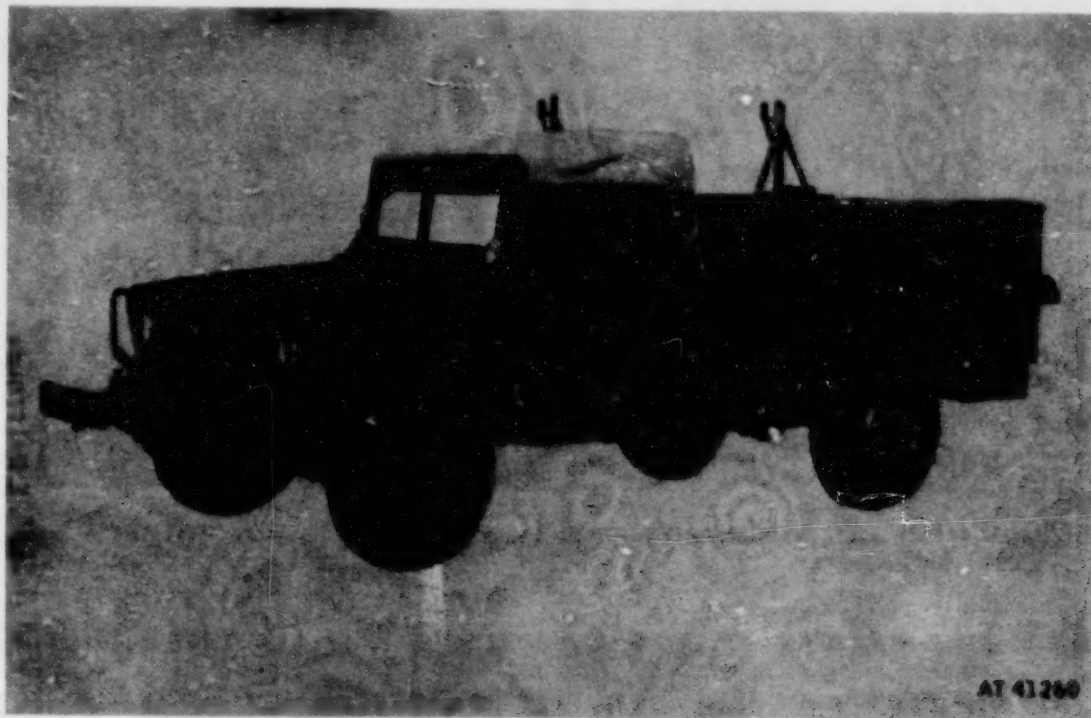


Figure 3. Truck, Maintenance: 1-1/2 Ton, 4 x 4, M726, left front view

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS														
(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DE maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip catgry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		GROUP 01 - ENGINE												
		0100 - ENGINE ASSEMBLY												
PFT	2805-152-2500	ENGINE ASSEMBLY WITH GOVERNOR USED ON SERIAL NUMBERS FROM 13577 AMBULANCE, 28680 CARGO, 10001 MAINTENANCE 11663219 (19207)	EA	1	*	*	*	*	*	*				
PFT	2805-167-9049	ENGINE ASSEMBLY WITHOUT GOVERNOR SERIAL NUMBERS TO 13576 AMBULANCE 28679 CARGO, 10000 MAINTENANCE 5704033 (19207)	EA	1	*	*	*	*	*	*				
PH	2805-927-3285	GASKET SET, ENGINE OVERHAUL 5704428 (19207)	EA	1				*	*	*				
		COMPOSED OF:												
X1		1-SEAL, CRANKSHAFT, FRONT 11640704 (19207)											13	20
X1		1-SEAL, EXCLUDER 11640881 (19207)											10	8
PF	2590-226-2159	1-GASKET, CYLINDER HEAD 11657636 (19207)											7	5
PF	2805-277-990	4-WASHER, ROCKER COVER 11657057 (19207)											17	9
PF	2805-933-3718	1-GASKET, ROCKER COVER 11640743 (19207)											17	2
X1		1-GASKET, INTAKE MANIFOLD 11640814 (19207)											19	12
PO	2930-699-9021	2-GASKET, WATER OUTLET 8328456 (19207)											34	19
PO	2805-929-3563	1-GASKET, EXHAUST MANIFOLD 11656803 (19207)											19	5

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

[illegible]

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip catgry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-90	(b) 91-100	(c) 101-150	(a) 1-90	(b) 91-100	(c) 101-150			(a) Figure No.	(b) Item No.
		0100-ENGINE ASSEMBLY-Continued												
PF	5330-157-6233	GASKET SET, ENGINE OVERHAUL-Continued 1-SEAL, FILLER BLOCK 11657115 (19207)											9	13
PF	2805-927-3282	GASKET SET, VALVE GRIND 5704427 (19207)	EA	1	*	*	*	*	*	*				
		COMPOSED OF:												
PF	2590-226-2159	1-GASKET, CYLINDER HEAD 11657636 (19207)											7	5
1X1		4-"O" RING 11640843 (19207)											17	8
PF	2805-277-9990	4-WASHER, ROCKER COVER 11657057 (19207)											17	9
PF	2805-933-3718	1-GASKET, ROCKER COVER 11640743 (19207)											17	2
X1		1-GASKET, INTAKE MANIFOLD 11640814 (19207)											19	12
PO	2930-699-9021	2-GASKET, WATER OUTLET 8328456 (19207)											34	19
PO	2805-929-3563	1-GASKET, EXHAUST MANIFOLD 11656803 (19207)											19	5
PO	5330-159-3249	1-GASKET, CARBURETOR 11640784 (19207)											24	5
PO	2805-400-4835	1-GASKET, EXHAUST MANIFOLD FLANGE 11640841 (19207)											32	27
PF	5330-235-5886	12-SEAL ASSEMBLY, VALVE GUIDE 11640887 (19207)											8	16
X1		2-TAPE, CYLINDER HEAD 11641078-3 (19207)												

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

GENERAL SUPPORT AND SPECIAL TOOLS LIST - Continued														
(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day GS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr ajw per 100 equip catgry	(9) Deput maint ajw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
X1		0100-ENGINE ASSEMBLY-Continued GASKET SET, VALVE GRIND-Continued 1-GASKET, FRONT COVER 11657963 (19207)												
PO	2805-159-8684	BRACE, FRONT, ENGINE MOUNT 11656969 (19207)	EA	2	*	*	*	*	*	*			4	1
PO	5305-269-2805	BOLT, 3/8-24 x 1-1/4 MS90726-62 (96906)	EA	4	*	*	*	*	*	*			4	2
PO	5310-637-9541	WASHER, LOCK, 3/8 MS35338-46 (96906)	EA	10	*	*	*	*	*	*			4	3
PO	5305-269-3211	BOLT, 3/8-16 x 1, ADAPTER AND BRACE MOUNTING MS90725-60 (96906)	EA	2	*	*	*	*	*	*			4	4
PO	5305-269-3210	BOLT, 3/8-16 x 7/8 ADAPTER MOUNTING MS90725-59 (96906)	EA	4	*	*	*	*	*	*			4	5
PO	5310-012-0382	WASHER, PLAIN MS27183-14 (96906)	EA	4	*	*	*	*	*	*			4	6
PO	5340-929-5724	MOUNT, ENGINE, FRONT 11657839 (19207)	EA	2	*	*	*	*	*	*			4	7
PO	5310-732-0559	NUT, 3/8-24 MS51968-8 (96906)	EA	4	*	*	*	*	*	*			4	8
PO	5310-126-5367	NUT, 7/16-20 MS21045-C7 (96906)	EA	2	*	*	*	*	*	*			4	9
PO	5310-276-3455	WASHER, SPECIAL 8329680 (19207)	EA	2	*	*	*	*	*	*			4	10
PO	5310-488-3888	NUT, SUPPORT TO SUPPORT BOLT MS51943-40 (96906)	EA	3	*	*	*	*	*	*			5	1
X20		SUPPORT, REAR, ENGINE AND TRANSMISSION 11656942 (19207)	EA	1	*	*	*	*	*	*			5	2
PO	5310-732-0559	NUT, PLAIN, HEXAGON, INSULATOR (4) SUPPORT (2) MS51968-8 (96906)	EA	6	*	*	*	*	*	*			5	3

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr stor per 100 equip energy	(9) Depot maint stor per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		0100—ENGINE ASSEMBLY—Continued												
PO	5310-809-4061	WASHER, LOCK, SUPPORT TO FRAME BOLT MS27183-15 (96906)	EA	1	*	*	*	*	*	*			5	4
PO	5365-410-9795	SPACER, SUPPORT TO FRAME 11656947 (19207)	EA	1	*	*	*	*	*	*			5	5
PO		LOCK, SUPPORT MOUNTING 11656943 (19207)	EA	1	*	*	*	*	*	*			5	6
XI		STUD, SUPPORT MOUNTING 11657107 (19207)	EA	2									5	7
PO	5340-933-3314	INSULATOR, ENGINE REAR MOUNT 11656970(19207)	EA	1	*	*	*	*	*	*			5	8
PO	5305-269-2802	SCREW, CAP, HEXAGON HEAD, INSULATOR ATTACHING MS90726-59 (96906)	EA	2	*	*	*	*	*	*			5	9
PO	5340-462-8549	PAD, RUBBER, SUPPORT TO FRAME 11656946 (19207)	EA	1	*	*	*	*	*	*			5	10
PO	5310-012-0382	WASHER, LOCK, INSULATOR (4) SUPPORT (1) MS35338-46 (96906)	EA	5	*	*	*	*	*	*			5	11
PO	5305-241-6690	BOLT, SUPPORT TO FRAME 11640782 (19207)	EA	1	*	*	*	*	*	*			5	12
PO	5310-880-7746	NUT, PLAIN HEXAGON, SUPPORT TO FRAME ATTACHING MS51968-5 (96906)	EA	2	*	*	*	*	*	*			5	13
PO	5310-407-9566	WASHER, LOCK, SUPPORT TO FRAME ATTACHING MS35338-45 (96906)	EA	2	*	*	*	*	*	*			5	14
PO	5305-716-8176	BOLT, SUPPORT TO SUPPORT ATTACHING MS90726-122 (96906)	EA	1	*	*	*	*	*	*			5	15
PO		WASHER, SUPPORT TO SUPPORT BOLT 11656939 (19207)	EA	2	*	*	*	*	*	*			5	16
PO	5310-436-8412	INSULATOR, RUBBER, SUPPORT TO SUPPORT ATTACHING 11656940 (19207)	EA	2	*	*	*	*	*	*			5	17

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNM code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr aw per 100 equip enrgy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		0100—ENGINE ASSEMBLY—Continued												
X20		SUPPORT 11656723 (19207)	EA	1	*	*	*	*	*	*			5	18
PO	5310-081-4219	WASHER, FLAT, SUPPORT TO FRAME ATTACHING MS27183-12 (96906)	EA	2	*	*	*	*	*	*			5	19
PO	5306-225-9089	SCREW, SUPPORT TO FRAME ATTACHING MS90726-34 (96906)	EA	2	*	*	*	*	*	*			5	20
PO	5310-809-3079	WASHER, SUPPORT TO SUPPORT BOLT MS27183-19 (96906)	EA	1	*	*	*	*	*	*			5	21
X20		SPACER, SUPPORT TO SUPPORT ATTACHING 11656944 (19207)	EA	1	*	*	*	*	*	*			5	22
X20		SPACER, SUPPORT TO SUPPORT ATTACHING 11656945 (19207)	EA	1	*	*	*	*	*	*			5	23
PO	5340-157-7702	EYE, LIFTING, FRONT 11656968 (19207)	EA	1	*	*	*	*	*	*			6	3
PO	5340-157-7681	EYE, LIFTING, REAR 11656967 (19207)	EA	1	*	*	*	*	*	*			6	5
PO	5310-080-6004	WASHER, FLAT, REAR LIFTING EYE MS27183-14 (96906)	EA	1	*	*	*	*	*	*			6	6
PO	5306-045-1976	BOLT, REAR LIFTING EYE 451976 (24617)	EA	1	*	*	*	*	*	*			6	7
		0101—CRANKCASE, BLOCK, CYLINDER HEAD												
PF	2805-917-0708	BOLT, CYLINDER HEAD 11641095-2 (19207)	EA	3	*	*	*	*	*	*			7	1
PF	5310-929-9400	WASHER, CYLINDER HEAD BOLT 10910174-30 (19207)	EA	14	*	*	*	*	*	*			7	2
PF	2805-917-0614	HEAD ASSEMBLY, CYLINDER 11657871 (19207)	EA	1	*	*	*	*	*	*			7	3

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip capcity	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0101 CRANKCASE, BLOCK, CYLINDER HEAD Continued												
PF	2805-917-0619	BOLT, CYLINDER HEAD 11641095-1 (19207)	EA	9	*	*	*	*	*	*			7	4
PF	2590-226-2159	GASKET, CYLINDER HEAD 11657636 (19207)	EA	1	*	*	*	*	*	*			7	5
PF	2805-927-3270	KIT, EXPANSION PLUG 5704409 (19207)	EA	1	*	*	*	*	*	*			7	
		COMPOSED OF:												
PF	5340-220-3639	6-PLUG, WATER JACKET 11657668 (19207)	EA	6	*	*	*	*	*	*			7	6
X1		1-PLUG, WATER JACKET 11640849 (19207)											7	15
PF	4730-220-3637	PLUG, PIPE, BLOCK 11656793 (19207)	EA	2	*	*	*	*	*	*			7	7
PO	4730-012-7951	PLUG, PIPE, DRAIN 127951 (24617)	EA	1	*	*	*	*	*	*			7	8
X1		BLOCK, ASSEMBLY, ENGINE 11657538 (19207)	EA	1									7	12
X2		SLEEVE, DOWEL, BLOCK 11657674 (19207)	EA	2	*	*	*	*	*	*			7	13
PF	2805-929-3334	BOLT, CYLINDER HEAD. 11641095-3 (19207)	EA	2	*	*	*	*	*	*			7	17
PF	2805-220-3647	PLUG, CUP, CYLINDER HEAD 11640739 (19207)	EA	2	*	*	*	*	*	*			8	4
PO	4730-057-5555	PLUG, HEATER CONNECTION MS49005-6 (96906)	EA	1	*	*	*	*	*	*			8	5
X1		HEAD, CYLINDER 11657430 (19207)	EA	1									8	6

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

[illegible]

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr air per 100 equip catgry	(9) Depot maint air per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a) Figure No.	(b) Item No.
X1		0102—CRANKSHAFT—Continued BEARING SET, CRANKSHAFT (STD)—Continued 2-BEARING, MAIN, INTERMEDIATE, LOWER 11640824 (19207)											9	19
X1		1-BEARING, MAIN, CRANKSHAFT, FRONT LOWER 11640822 (19207)											9	24
PF	2805-152-2479	CRANKSHAFT ASSEMBLY 11657098 (19207)	EA	1	*	*	*	*	*	*			9	4
X1		CRANKSHAFT 11657099 (19207)	EA	1									9	5
PH	2520-927-3293	BUSHING, CRANKSHAFT 11640745 (19207)	EA	1				*	*	*			9	6
PF	5310-081-4219	WASHER, FILLER BLOCK MOUNTING MS27183-12 (96906)	EA	4	*	*	*	*	*	*			9	7
PF	2805-152-2480	BLOCK, FILLER, ASSEMBLY, REAR, CRANKSHAFT 11657109 (19207)	EA	1	*	*	*	*	*	*			9	8
X1		DOWEL, PIN, REAR BEARING, FILLER BLOCK 11657116 (19207)	EA	2									9	9
X1		BLOCK, REAR, BEARING, FILLER 11657114 (19207)	EA	1									9	10
PF	2805-113-0729	GUARD, REAR BEARING, OIL SEAL 11657111 (19207)	EA	1	*	*	*	*	*	*			9	11
PF	2805-220-3641	SEAL, REAR, MAIN BEARING 11640809 (19207)	EA	2	*	*	*	*	*	*			9	12
PF	5330-157-6233	SEAL, REAR PAN AND FILLER BLOCK 11657115 (19207)	EA	1	*	*	*	*	*	*			9	13
PF	5305-983-6622	SCREW, CRANKSHAFT, REAR, FILLER BLOCK MS16997-81 (96906)	EA	2	*	*	*	*	*	*			9	14
PH	2805-199-9843	DOWEL, MAIN BEARING CAP 11640909 (19207)	EA	5				*	*	*			9	16

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip catgry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-99	(b) 21-99	(c) 51-99	(a) 1-99	(b) 21-99	(c) 51-99			(a) Figure No.	(b) Item No.
		0102—CRANKSHAFT—Continued												
X1		CAP, REAR, MAIN BEARING 11656801 (19207)	EA	1									9	17
PF	5305-462-7023	SCREW, MAIN BEARING, CAP FRONT (2)—FRONT INNER (2)— REAR (2) 11640955 (19207)	EA	6	*	*	*	*	*	*			9	18
X1		CAP, REAR, INTERMEDIATE, MAIN BEARING 11656802 (19207)	EA	1									9	20
PH	5305-462-7024	SCREW, REAR, INTERMEDIATE, MAIN BEARING 11657667 (19207)	EA	2				*	*	*			9	21
X1		CAP, FRONT, INTERMEDIATE, MAIN BEARING 11656799 (19207)	EA	1									9	22
X1		CAP, FRONT, MAIN BEARING 11656800 (19207)	EA	1									9	23
PH	2805-199-9844	DOWEL, FRONT, MAIN BEARING CAP 11657673 (19207)	EA	2				*	*	*			9	25
PF	5305-983-6621	SCREW, FRONT FILLER BLOCK MOUNTING MS16997-80 (96906)	EA	2	*	*	*	*	*	*			9	26
PF	5310-407-9566	WASHER, FRONT FILLER BLOCK MOUNTING MS35338-45 (96906)	EA	2	*	*	*	*	*	*			9	27
X2F		FILLER, BLOCK ASSEMBLY, FRONT MAIN BEARING 11656795 (19207)	EA	1	*	*	*	*	*	*			9	28
PF	2805-110-1974	SEAL, FRONT, FILLER BLOCK 11657695 (19207)	EA	1	*	*	*	*	*	*			9	29
X1		FILLER, BLOCK, FRONT, MAIN 11656797 (19207)	EA	1									9	30
PF	2805-917-5583	DAMPER, VIBRATION AND PULLEY ASSEMBLY 11657747 (19207)	EA	1	*	*	*	*	*	*			10	1
PF	5305-710-4189	SCREW, PULLEY ATTACHING MS90726-84 (96906)	EA	2	*	*	*	*	*	*			10	2

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SACB code	(2) Federal stock Number	(3) Description Reference Number & Mil. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day GS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip enrgy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0102—CRANKSHAFT—Continued												
PF	5310-209-0965	WASHER, LOCK, PULLEY ATTACHING MS35338-47 (96906)	EA	2	*	*	*	*	*	*			10	3
PF	2930-933-3549	LOCK, VIBRATION DAMPER PULLEY 11657112 (19207)	EA	1	*	*	*	*	*	*			10	4
X1		PULLEY, VIBRATION DAMPER 11640968-12 (19207)	EA	1									10	5
PF	3020-459-9745	DAMPER AND SEAL ASSEMBLY 11657108 (19207)	EA	1	*	*	*	*	*	*			10	6
X1		DAMPER 11650714 (19207)	EA	1									10	7
X1		SEAL, DAMPER 11640881 (19207)	EA	1									10	8
PF	2805-220-3640	WASHER, VIBRATION DAMPER AND PULLEY ATTACHING 11657106 (19207)	EA	1	*	*	*	*	*	*			10	9
PF	5305-727-8816	SCREW, CAP VIBRATION DAMPER AND PULLEY TO CRANKSHAFT MS90726-187 (96906)	EA	1	*	*	*	*	*	*			10	10
		0103—FLYWHEEL ASSEMBLY												
PF	2805-927-3272	FLYWHEEL ASSEMBLY 11657100 (19207)	EA	1	*	*	*	*	*	*			11	1
PF	2805-933-3739	RING, GEAR, FLYWHEEL 11657101 (19207)	EA	1	*	*	*	*	*	*			11	2
X1		FLYWHEEL 11657102 (19207)	EA	1									11	3
PF	5310-774-4472	NUT, FLYWHEEL ATTACHING 7744472 (19207)	EA	6	*	*	*	*	*	*			11	4
PF	5310-595-7237	WASHER, FLYWHEEL ATTACHING MS35333-42 (96906)	EA	6	*	*	*	*	*	*			11	5

2

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NRP code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D8 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr allow per 100 equip category	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		0103-FLYWHEEL ASSEMBLY-Continued												
PF	2805-917-1016	BOLT, FLYWHEEL ATTACHING 11657103 (19207)	EA	6	*	*	*	*	*	*			11	
PF	5305-225-3840	SCREW, CAP HEX HEAD, PLUG ATTACHING MS90725-7 (96906)	EA	3	*	*	*	*	*	*			12	1
PF	5310-234-7841	WASHER TO ATTACH FLYWHEEL HOUSING PLUG 11657560 (19207)	EA	4	*	*	*	*	*	*			12	2
PF	4730-485-9289	PLUG, FLYWHEEL HOUSING 11657561 (19207)	EA	3	*	*	*	*	*	*			12	3
X2F		HOUSING, FLYWHEEL 11657682 (19207)	EA	1	*	*	*	*	*	*			12	4
PF	5330-133-6231	GASKET, FLYWHEEL HOUSING TO OIL PAN 11657680 (19207)	EA	1	*	*	*	*	*	*			12	5
PF	5330-159-3260	GASKET, FLYWHEEL HOUSING TO ENGINE BLOCK 11657205 (19207)	EA	1	*	*	*	*	*	*			12	6
PF	5330-157-4657	GASKET, FLYWHEEL HOUSING PAN TO FLYWHEEL HOUSING 11657311 (19207)	EA	1	*	*	*	*	*	*			12	7
PF	2805-152-2482	PAN, FLYWHEEL HOUSING 11657688 (19207)	EA	1	*	*	*	*	*	*			12	8
PF	5310-407-9566	WASHER MS35338-45 (96906)	EA	6	*	*	*	*	*	*			12	9
PF	5306-225-9081	SCREW, CAP, HEX HEAD TO ATTACH FLYWHEEL HOUSING AND PAN MS90725-36 (96906)	EA	6	*	*	*	*	*	*			12	10
PF	5310-209-0965	WASHER, LOCK MS35338-47 (96906)	EA	4	*	*	*	*	*	*			12	11
PF	5305-687-5910	BOLT, 7/16-14 x 3-3/8, FLYWHEEL HOUSING ATTACHING 187151 (24617)	EA	2	*	*	*	*	*	*			12	12

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day GS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip catgry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		0103-FLYWHEEL ASSEMBLY-Continued												
PF	5340-587-1447	PLUG, EXPANSION, CLUTCH HOUSING, SHAFT HOLE 8336138 (19207)	EA	1	*	*	*	*	*	*			12	13
PF		NUT AND LOCK WASHER, PLUG ATTACHING 8328462 (19207)	EA	3	*	*	*	*	*	*			12	14
PF	5306-462-7022	BOLT, 7/16-14 x 1-5/8, FLYWHEEL HOUSING AND GASKET 11657679 (19207)	EA	2	*	*	*	*	*	*			12	15
PF	5310-234-7840	WASHER, FLYWHEEL, HOUSING ATTACHING 11657678 (19207)	EA	1	*	*	*	*	*	*			12	16
PF	5305-069-5574	BOLT, CAP, HEX HEAD, 7/16-14 x 1-1/8 MS90725-86 (96906)	EA	1	*	*	*	*	*	*			12	17
PF	5310-234-7842	WASHER, SPECIAL, PLUG ATTACHING 11657677 (19207)	EA	2	*	*	*	*	*	*			12	18
PF	5330-954-1248	SEAL, PLAIN ENCASED 7066144 (19207)	EA	1	*	*	*	*	*	*			12	19
PF	2805-229-4676	BUSHING, FLYWHEEL HOUSING 11641000 (19207)	EA	2	*	*	*	*	*	*			12	20
PO		TEE, FLYWHEEL HOUSING, VENT LINE CONNECTION 191347 (24617)	EA	1	*	*	*	*	*	*			12	21
PO		TUBE ASSEMBLY, BELL HOUSING VENT 11657450 (19207)	EA	1	*	*	*	*	*	*			12	22
X1		TURE, BELL HOUSING VENT 11657450-1 (19207)	EA	1									12	23
PO	4730-013-7397	FITTING 137397 (24617)	EA	1	*	*	*	*	*	*			12	24

[illegible]

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntgcy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
PH		0104-PISTONS, CONNECTING RODS - Continued SET, RING, .020 OVERSIZE 5704060 (19207)	EA	1				*	*	*			13	
X1		RING, PISTON, UPPER 11641016-1 (19207)	EA	6									13	2
X1		RING, PISTON, LOWER 11641023-1 (19207)	EA	6									13	3
X1		SPRING, OIL, RING 11640804-1 (19207)	EA	6									13	4
X1		RING, OIL 11657130-1 (19207)	EA	6									13	5
PH		PISTON, .020 OVERSIZE 11641039-1 (19207)	EA	6				*	*	*			13	8
PH	2805-927-3290	BEARING SET, CONNECTING ROD: 1, 3, 5 (STD) UPPER AND LOWER 5704436 (19207)	EA	3				*	*	*			13	9
PH	2805-927-3330	BEARING SET, CONNECTING ROD: 2, 4, 6 (STD) UPPER AND LOWER 5704440 (19207)	EA	3				*	*	*			13	9
PH	2805-933-3551	CONNECTING ROD ASSEMBLY: 1, 3, 5 11657124 (19207)	EA	3				*	*	*			13	14
		COMPOSED OF:												
PH	5310-462-7019	NUT, HEX 11641017 (19207)	EA	2				*	*	*			13	10
X1		CONNECTING ROD & CAP: 1, 3, 5 11657119-2 (19207)	EA	3									13	11
PH	2805-933-3717	BOLT 11657127 (19207)	EA	2				*	*	*			13	12
PH	3120-159-6973	BUSHING, CONNECTING ROD 11657125 (19207)	EA	6				*	*	*			13	13

26

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBS code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr allow per 100 equip category	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a) Figure No.	(b) Item No.
PH	2805-927-3322	0104 - PISTONS, CONNECTING RODS—Continued CONNECTING ROD ASSEMBLY: 2, 4, 6 11657128 (19207)	EA	3		*		*	*	*			13	14
		COMPOSED OF:												
PH	5310-462-7019	NUT, HEXAGON 11641017 (19207)	EA	2				*	*	*			13	10
X1		CONNECTING ROD & CAP: 2, 4, 6 11657119-1 (19207)	EA	1									13	11
PH	2805-933-3717	BOLT 11657127 (19207)	EA	2				*	*	*			13	12
PH	3120-159-6973	BUSHING 11657125 (19207)	EA	1				*	*	*			13	13
		0105 - VALVES, CAMSHAFTS AND TIMING SYSTEMS												
PF	5310-927-9399	NUT, ROCKER ARM ADJUSTING 11657059 (19207)	EA	12	*	*	*	*	*	*			14	1
PF	2805-927-3335	GUIDE, ROCKER ARM 11657062 (19207)	EA	1	*	*	*	*	*	*			14	2
X2F		DECK ASSEMBLY, CAM BEARING (COMPLETE) 11657703 (19207)	EA	1	*	*	*	*	*	*			14	-
PF	2805-927-3273	CAMSHAFT ASSEMBLY 11657421 (19207)	EA	1	*	*	*	*	*	*			14	3
X1		CAMSHAFT 11657421-1 (19207)	EA	1									14	4
X1		PLUG, EXPANSION 541429 (19207)	EA	1									14	5
PF	2805-900-3145	DECK ASSEMBLY, CAM (PART) 11657982 (19207)	EA	1	*	*	*	*	*	*			14	6
PF	2805-933-3738	STUD, ROCKER ARM MOUNTING 11657420 (19207)	EA	2	*	*	*	*	*	*			14	7

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D8 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr air per 100 equip catgry	(9) Depot maint air per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0105—VALVES, CAMSHAFTS AND TIMING SYSTEMS—Continued												
PF	5307-159-6248	STUD, ROCKER ARM GUIDE & COVER BRACE MOUNTING, 3/8-16 x 3/8-24 x 2-3/4 11657706-2 (19207)	EA	2	*	*	*	*	*	*			14	8
PF	5307-246-9627	STUD, CAMSHAFT RETAINER PLATE MOUNTING 11657704-6 (19207)	EA	2	*	*	*	*	*	*			14	9
PF	2805-927-3314	PLATE, CAMSHAFT RETAINER 11640736 (19207)	EA	1	*	*	*	*	*	*			14	10
PF	5310-407-9566	WASHER, CAMSHAFT PLATE RETAINER MS35338-45 (96906)	EA	2	*	*	*	*	*	*			14	11
PF	5310-880-7746	NUT, CAMSHAFT PLATE, 5/16-24 MS51968-5 (96906)	EA	2	*	*	*	*	*	*			14	12
PF	5307-246-9628	STUD, ROCKER ARM GUIDE & COVER ASSEMBLY MOUNTING, 3/8-16 x 3/8-24 x 1-1/2 11657706-1 (19207)	EA	2	*	*	*	*	*	*			14	13
PF	2805-933-3740	ROCKER, ARM ASSEMBLY 11640812 (19207)	EA	12	*	*	*	*	*	*			14	14
PF	2805-927-3315	BALL, ROCKER ARM 11657061 (19207)	EA	12	*	*	*	*	*	*			14	15
PF	5310-081-4219	WASHER, CAM BEARING DECK MS27183-12 (96906)	EA	3	*	*	*	*	*	*			14	16
PF	5310-407-9566	WASHER, CAM BEARING DECK MS35338-45 (96906)	EA	3	*	*	*	*	*	*			14	17
PF	5310-880-7746	NUT, CAM BEARING DECK ATTACHING MS51968-5 (96906)	EA	3	*	*	*	*	*	*			14	18
PF	5307-246-9629	STUD, CAM BEARING DECK 11657638-3 (19207)	EA	1	*	*	*	*	*	*			14	19
PF	5360-102-9935	SPRING, CHAIN TENSION, ASSEMBLY 11657705 (19207)	EA	1	*	*	*	*	*	*			15	1

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNER code	(2) Federal stock Number	(3) Description Reference Number & Milg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr ajw per 100 equip catgry	(9) Depot maint ajw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0105—VALVES, CAMSHAFTS AND TIMING SYSTEMS—Continued												
PF	2805-104-6661	PAD, ASSEMBLY, CHAIN TENSION 11657711 (19207)	EA	1	*	*	*	*	*	*			15	2
PF	2990-442-5919	COVER ASSEMBLY, TIMING CHAIN 11657713 (19207)	EA	1	*	*	*	*	*	*			15	—
PF	5330-159-3224	GASKET, CHAIN TENSION GUIDE ASSEMBLY 11657557 (19207)	EA	1	*	*	*	*	*	*			15	3
X2F		GUIDE ASSEMBLY, CHAIN TENSION 11657714 (19207)	EA	1	*	*	*	*	*	*			15	4
X1		COVER, TIMING CHAIN 11657712 (19207)	EA	1									15	7
PF		TAPE, TIMING CHAIN COVER 11641078 (19207)	EA	1	*	*	*	*	*	*			15	8
PF	5310-081-4219	WASHER, FLAT, 5/16" TO ATTACH TIMING COVER & INSPEC- TION PLATE MS27183-12 (96906)	EA	2	*	*	*	*	*	*			15	9
PF	5310-207-9566	WASHER, LOCK, 5/16" MS35338-45 (96906)	EA	2	*	*	*	*	*	*			15	10
PF		GASKET, OIL CHECK PLUG 11640682 (19207)	EA	1	*	*	*	*	*	*			15	15
PF	5365-159-3839	PLUG, TIMING CHAIN, OIL CHECK 11657708 (19207)	EA	1	*	*	*	*	*	*			15	16
PF	5330-159-3262	GASKET, TIMING CHAIN COVER INSPECTION 11656991 (19207)	EA	1	*	*	*	*	*	*			15	17
X2F		PLATE, TIMING CHAIN COVER INSPECTION 11657558 (19207)	EA	1	*	*	*	*	*	*			15	18
PF	5310-880-7746	NUT, 5/16"-24 MS31965-5 (96906)	EA	2	*	*	*	*	*	*			15	19

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip cntgey	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
PF	5307-240-9627	0105-VALVES, CAMSHAFTS AND TIMING SYSTEMS-Continued COVER ASSEMBLY, TIMING CHAIN-Continued STUD, TIMING COVER INSPECTION PLATE, 5/16"-18 x 5/16-24 x 1-1/4" 11657704-3 (19207)	EA	2	*	*	*	*	*	*			15	21
PF	4730-042-6318	PLUG, TIMING COVER DRAIN 444697 (19207)	EA	1	*	*	*	*	*	*			15	22
PF	5310-761-6882	NUT, 1/4"-20 MS51967-2 (96906)	EA	1	*	*	*	*	*	*			15	26
PF	5310-582-5965	WASHER, LOCK, 1/4" MS35338-44 (96906)	EA	1	*	*	*	*	*	*			15	27
PF	5310-809-4058	WASHER, FLAT, 1/4" (TO ATTACH CHAIN TENSION GUIDE ASSEMBLY & GASKET) MS27183-10 (96906)	EA	1	*	*	*	*	*	*			15	28
PF		SHAFT, CHAIN TENSION PAD MOUNTING 11657214 (19207)	EA	1	*	*	*	*	*	*			15	5
PF	2805-110-9778	GASKET, TIMING CHAIN COVER 11657915 (19207)	EA	1	*	*	*	*	*	*			15	6
PF		TAPE, TO ATTACH TIMING COVER & GASKET 11641078 (19207)	EA	4	*	*	*	*	*	*			15	8
PF	5310-081-4219	WASHER, TIMING COVER ATTACHING, FLAT, 5/16" MS27183-12 (96906)	EA	12	*	*	*	*	*	*			15	9
PF	5310-407-9566	WASHER, LOCK, TIMING COVER ATTACHING, 5/16 MS35338-45 (96906)	EA	12	*	*	*	*	*	*			15	10
PF	5306-226-4837	SCREW, TIMING COVER ATTACHING, 5/16-18 x 3-1/8 MS90728-44 (96906)	EA	1	*	*	*	*	*	*			15	11
PF	5306-151-6248	BOLT, SPECIAL, TIMING CHAIN COVER 5/16-18 x 2.85 11657568 (19207)	EA	1	*	*	*	*	*	*			15	12
PF		WASHER, SEAL, TIMING COVER ATTACHING, 5/16 11657715 (19207)	EA	1	*	*	*	*	*	*			15	13

8 SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST - Continued														
(1) DMM code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DB maint. allowance			(7) 60-day DB maint. allowance			(8) 1-yr allow per 100 equip crater	(9) Dept maint allow per 100 equip	(10) Illustration	
					(6) 1-30	(6) 31-60	(6) 61-100	(7) 1-30	(7) 31-60	(7) 61-100			(10) Figure No.	(10) Item No.
		0105- VALVES, CAMSHAFTS AND TIMING SYSTEMS -Continued												
PF	5306-225-8505	SCREW, TIMING COVER ATTACHING, 5/16-18 x 2-1/4 MS90725-41 (96906)	EA	1	*	*	*	*	*	*			15	14
X1		SEAL, CRANKSHAFT, TIMING COVER 11640704 (19207)	EA	1									15	20
PF	5306-225-8506	BOLT, TIMING COVER ATTACHING, 5/16-18 x 2-1/2 MS90725-42 (96906)	EA	9	*	*	*	*	*	*			15	23
PF	3330-297-4519	SEAL, "O" RING, TIMING CHAIN COVER TO ENGINE BLOCK SLEEVE 11640770 (19207)	EA	2	*	*	*	*	*	*			15	24
PF	2805-227-9976	SLEEVE, TIMING CHAIN COVER TO ENGINE BLOCK 11640914 (19207)	EA	1	*	*	*	*	*	*			15	25
PF	2805-927-3275	CHAIN, TIMING 11640810 (19207)	EA	1	*	*	*	*	*	*			16	1
PF	2805-927-3269	KIT-SET, TIMING SPROCKET 5704406 (19207)	EA	2	*	*	*	*	*	*				
		COMPOSED OF:												
X1		SPROCKET, LOWER 11640811 (19207)	EA	1									16	2
X1		SPROCKET ASSEMBLY, UPPER 11637135 (19207)	EA	1									16	3
X1		PIN, SPROCKET ATTACHING 11657378 (19207)	EA	1									16	4
PF	5310-253-2610	WASHER, PLAIN, 1/2" 11657418 (19207)	EA	1	*	*	*	*	*	*			16	6
PF	5310-584-5272	WASHER, LOCK, 1/2 MS55338-48 (96906)	EA	1	*	*	*	*	*	*			16	7
PF	5305-228-7768	BOLT, 1/2-20 x 2 MS90726-115 (96906)	EA	1	*	*	*	*	*	*			16	8

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc to unit	(6) 30-day D6 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr dep per 100 equip enclg	(9) Depos maint per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-120	(a) 1-30	(b) 31-60	(c) 61-120			(a) Figure No.	(b) Item No.
PF	5315-616-5530	0105-VALVES, CAMSHAFTS AND TIMING SYSTEMS—Continued KIT SET, TIMING SPROCKET—Continued KEY, WOODRUFF MS35756-15 (96906)	EA	1	*	*	*	*	*	*			16	15
PF	2805-929-3566	ECCENTRIC, FUEL PUMP 11657564 (19207)	EA	1	*	*	*	*	*	*			16	5
X2F		BRACKET, ASSEMBLY, TIMING CHAIN GUIDE 11657793 (19207)	EA	1	*	*	*	*	*	*			16	9
X3F		PLATE, TIMING CHAIN GUIDE 11657710 (19207)	EA	1	*	*	*	*	*	*			16	10
PF	5310-407-9566	WASHER, TIMING CHAIN GUIDE BRACKET ASSEMBLY & PLATE MS35338-45 (96906)	EA	2	*	*	*	*	*	*			16	11
PF	5310-880-7746	NUT, TIMING CHAIN BRACKET MS51968-5 (96906)	EA	2	*	*	*	*	*	*			16	12
PF	2805-220-3643	SLINGER, OIL, TIMING CHAIN 11657105 (19207)	EA	1	*	*	*	*	*	*			16	13
PF	2805-118-1795	ROCKER, COVER ASSEMBLY 11657053 (19207)	EA	1	*	*	*	*	*	*			17	1
PF	2805-933-3718	GASKET, ROCKER ARM COVER 11640743 (19207)	EA	1	*	*	*	*	*	*			17	2
X1		COVER, ROCKER ARM 11657063 (19207)	EA	1									17	3
PF	2805-462-8498	BRACE, ROCKER COVER 11657060 (19207)	EA	2	*	*	*	*	*	*			17	4
PF	5310-733-0559	NUT, 3/8-24 MS51968-8 (96906)	EA	4	*	*	*	*	*	*			17	5
PF	2805-227-9947	WASHER, FLAT (SPECIAL) 3/8 TO ATTACH ROCKER COVER AND BRACES 11657056 (19207)	EA	1	*	*	*	*	*	*			17	6
PF	5310-728-9957	WASHER, FLAT, 3/8 10910174-22 (19207)	EA	3	*	*	*	*	*	*			17	7

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST -- Continued

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST -- Continued														
(1) SMP code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr altw per 100 equip category	(9) Depot maint altw per 100 equip	(10) Illustration	
					(6) 1-20	(6) 21-50	(6) 51-100	(7) 1-20	(7) 21-50	(7) 51-100			(10) Figure No.	(10) Item No.
					Usable on Code									
PF		0105-VALVES, CAMSHAFTS AND TIMING SYSTEMS - Continued												
		"O" RING 11640843 (19207)	EA	4	*	*	*	*	*	*			17	8
PF	2805-277-9990	WASHER, ROCKER COVER 11657057 (19207)	EA	4	*	*	*	*	*	*			17	9
PF	2805-397-9660	LOCK, VALVE SPRING RETAINER 11657701 (19207)	EA	24	*	*	*	*	*	*			8	1
PF	2805-453-9112	ROTOR ASSEMBLY, EXHAUST VALVE 11640959 (19207)	EA	6	*	*	*	*	*	*			8	2
PF	2805-933-3716	SPRING, VALVE 11657905 (19207)	EA	12	*	*	*	*	*	*			8	3
PF	2805-933-3284	RETAINER, VALVE SPRING 11640838 (19207)	EA	6	*	*	*	*	*	*			8	15
PF	5330-235-5886	SEAL ASSEMBLY, VALVE GUIDE 11640887 (19207)	EA	12	*	*	*	*	*	*			8	16
PF	2805-933-3535	VALVE, GUIDE 11657641-1 (19207)	EA	12	*	*	*	*	*	*			8	17
PF	2805-917-0709	VALVE, EXHAUST VALVE 11640819 (19207)	EA	6	*	*	*	*	*	*			8	20
PF	2805-933-3737	VALVE, INTAKE 11640678 (19207)	EA	6	*	*	*	*	*	*			8	22
PF	2805-927-3319	INSERT, EXHAUST VALVE 11640829 (19207)	EA	6	*	*	*	*	*	*			8	23
		0106-ENGINE LUBRICATING SYSTEM												
PF	2805-462-7074	GASKET, OIL PUMP, MOUNTING 11657224 (19207)	EA	1	*	*	*	*	*	*			18	1
PF		STUD, OIL PUMP MOUNTING, 5/16-18 x 5/16-24 x 3-1/4 11657704-1 (19207)	EA	3	*	*	*	*	*	*			18	2

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	Description Reference Number & Mfg. Code Usable on Cod	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DB maint. allowance			(7) 30-day GB maint. allowance			(8) 1-yr slw per 100 equip entry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			Figure No.	Item No.
		0106 - ENGINE LUBRICATING SYSTEM - Continued												
PF	2805-927-3325	GASKET, SET, OIL PAN 5704430 (19207)	EA	1	*	*	*	*	*	*			18	-
		COMPOSED OF:												
PF	5330-159-3257	2-GASKET, SIDE 11640961 (19207)	EA	2	*	*	*	*	*	*			18	3
PO	5330-834-2912	1-GASKET, DRAIN PLUG MS35769-18 (96906)	EA	1	*	*	*	*	*	*			6	10
PF	2805-220-3641	2-SEAL, OIL 11640809 (19207)											9	12
PF	5330-157-6233	1-SEAL, REAR F'LLER BLOCK 11657115 (19207)											9	13
PF	2805-110-1974	1-GASKET, END 11657695 (19207)											9	29
PF	2805-227-9974	TUBE ASSEMBLY, OIL SUCTION 11657256 (19207)	EA	1	*	*	*	*	*	*			18	4
PF	5305-462-7023	SCREW, MAIN BEARING CAP, OIL SUCTION TUBE 11640955 (19207)	EA	1	*	*	*	*	*	*			18	5
PF	5315-816-1794	PIN, COTTER, INTAKE STRAINER ASSEMBLY MS24665-285 (96906)	EA	1	*	*	*	*	*	*			18	6
PF	2805-927-3339	SCREEN ASSEMBLY, OIL INTAKE 11640935 (19207)	EA	1	*	*	*	*	*	*			18	7
PF	2805-917-0712	OIL PAN ASSEMBLY 11657313 (19207)	EA	1	*	*	*	*	*	*			18	8
PF	5310-081-4219	WASHER, OIL PAN ASSEMBLY MS27183-12 (96906)	EA	14	*	*	*	*	*	*			18	9
PF	5306-018-7993	SCREW AND LOCK WASHER 187993 (24617)	EA	14	*	*	*	*	*	*			18	10

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

VALVE SUPPORT MAINTENANCE SUPPORT PARTS AND SPECIAL TOOLS LIST - Continued														
(1) NBS code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty line in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr air per 100 equip catgry	(9) Depot maint air per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		0106-ENGINE LUBRICATING SYSTEM-Continued												
PF	5310-880-7746	NUT, OIL PUMP MS51968-5 (96906)	EA	3	*	*	*	*	*	*			18	11
PF	5310-407-9566	WASHER MS35338-45 (96906)	EA	3	*	*	*	*	*	*			18	12
PF	5310-087-0057	WASHER MS27183-2 (96906)	EA	3	*	*	*	*	*	*			18	13
PF	2805-933-3550	PUMP ASSEMBLY, OIL 11657767 (19207)	EA	1	*	*	*	*	*	*			18	14
PO	4720-152-1351	HOSE ASSEMBLY, CRANKCASE TO AIR HORN 11657458 (19207)	EA	1	*	*	*	*	*	*			18	15
PO	5310-975-2075	NUT, CRANKCASE BREATHER TUBE NIPPLE MS35691-21 (96906)	EA	1	*	*	*	*	*	*				
PO	5310-080-6004	WASHER, CRANKCASE BREATHER TUBE HOSE NIPPLE MS27183-14 (96906)	EA	1	*	*	*	*	*	*				
PO	4730-014-2432	NUT, IGNITOR VENT TUBE 142432 (24617)	EA	1	*	*	*	*	*	*				
PO	5340-282-7519	CLIP, BRACKET TUBE SUPPORT MS21333-34 (96906)	EA	1	*	*	*	*	*	*				
PO	4730-230-2959	CLAMP, HOSE, OIL FILLER TO CRANKCASE VENT VALVE MS39326-11 (96906)	EA	2	*	*	*	*	*	*				
X20		SUPPORT, OIL FILLER TO CRANKCASE VENT VALVE AND IGNITOR VENT TUBE HOSE 11640773 (19207)	EA	1	*	*	*	*	*	*				
PO	2805-933-3534	OIL, FILLER CAP ASSEMBLY 11641028 (19207)	EA	1	*	*	*	*	*	*			6	4
PO	4730-301-7470	ADAPTER, CRANKCASE VENT VALVE 444000 (24617)	EA	1	*	*	*	*	*	*			6	8
PO	2805-462-7039	VALVE, CRANKCASE VENT 11640816 (19207)	EA	1	*	*	*	*	*	*			6	9

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) ASR code	(2) Federal stock Number	(3) Description Reference Number & Mig. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip catrgy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0106—ENGINE LUBRICATING SYSTEM Continued												
PO	2805-918-4780	PLUG, MAGNETIC, OIL PAN DRAIN MS35844-99 (96906)	EA	1	*	*	*	*	*	*			6	11
PO	6680-167-9783	INDICATOR ASSEMBLY, OIL LEVEL 11657318 (19207)	EA	1	*	*	*	*	*	*			6	12
PO	2940-832-6054	FILTER, OIL ASSEMBLY 11630417 (19207)	EA	1	*	*	*	*	*	*			6	13
PO	2805-927-3338	ADAPTER, OIL FILTER 11640948 (19207)	EA	1	*	*	*	*	*	*			6	14
PO	4710-472-4190	TUBE ASSEMBLY, CRANKCASE BREATHER 11656798 (19207)	EA	1	*	*	*	*	*	*			7	9
P20	2805-227-9973	SCREEN ASSEMBLY, CRANKCASE BREATHER 11640911 (19207)	EA	1	*	*	*	*	*	*			7	10
X2F		TUBE ASSEMBLY, OIL INDICATOR GUIDE 11657348 (19207)	EA	1	*	*	*	*	*	*			7	11
PF	2805-220-3650	NOZZLE, TIMING CHAIN & GEAR OIL LINE 11656792 (19207)	EA	1	*	*	*	*	*	*			7	14
PO	4730-765-9091	TEE, PIPE, FLEXIBLE OIL LINE 444120 (19207)	EA	1	*	*	*	*	*	*			7	16
PO	4730-014-3343	ELBOW, OIL LINE, CYLINDER HEAD 143343 (24617)	EA	1	*	*	*	*	*	*			8	7
PO	2805-122-0884	OIL LINE, FLEXIBLE, CYLINDER HEAD TO TEE 11640832 (19207)	EA	1	*	*	*	*	*	*			8	8
PF	2805-235-1760	GEAR, OIL PUMP DRIVE, CRANKSHAFT 11657104 (19207)	EA	1	*	*	*	*	*	*			16	14
		0108—MANIFOLD AND RELATED PARTS												
PO	5310-059-9264	NUT, EXHAUST MANIFOLD ATTACHING, 3/8-24 MS21045-C6 (96906)	EA	10	*	*	*	*	*	*			19	1

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D&S maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntgty	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		0108 - MANIFOLD AND RELATED PARTS—Continued												
PO	5310-464-2745	WASHER, SPECIAL, EXHAUST MANIFOLD ATTACHING 11656960 (19207)	EA	2	*	*	*	*	*	*			19	2
PO	5310-728-9957	WASHER, EXHAUST MANIFOLD MOUNTING 10910174-22 (19207)	EA	8	*	*	*	*	*	*			19	3
PO	2805-442-5901	MANIFOLD, EXHAUST 11656805 (19207)	EA	1	*	*	*	*	*	*			19	4
PO	2805-929-3563	GASKET, EXHAUST MANIFOLD 11656803 (19207)	EA	1	*	*	*	*	*	*			19	5
PO	2805-917-0717	MANIFOLD ASSEMBLY, INTAKE 11656955 (19207)	EA	1	*	*	*	*	*	*			19	6
PO	5310-407-9566	WASHER, INTAKE MANIFOLD MS335338-45 (96906)	EA	5	*	*	*	*	*	*			19	7
PO	5310-880-7746	NUT, INTAKE MANIFOLD MOUNTING MS31968-5 (96906)	EA	5	*	*	*	*	*	*			19	8
PF	5307-250-0311	STUD, EXHAUST MANIFOLD MOUNTING 11657637 (19207)	EA	2	*	*	*	*	*	*			19	9
PF	5307-246-9626	STUD, EXHAUST MANIFOLD MOUNTING 11657637-2 (19207)	EA	6	*	*	*	*	*	*			19	10
PF	5307-250-0312	STUD, EXHAUST MANIFOLD MOUNTING 11657637-3 (19207)	EA	2	*	*	*	*	*	*			19	11
PO	2805-927-3289	GASKET SET, INTAKE MANIFOLD 5704401 (19207)	EA	1	*	*	*	*	*	*				
		COMPOSED OF:												
X1		1-GASKET, MANIFOLD 11640814 (19207)											19	12
X1		1-GASKET, CARBURETOR 11640784 (19207)											24	5

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Milg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip catgry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					(1-20)	(21-50)	(51-100)	(1-20)	(21-50)	(51-100)			Figure No.	Item No.
PO	2930-699-9021	0108-MANIFOLD AND RELATED PARTS-Continued 2-GASKET, THERMOSTAT HOUSING 8328456 (19207)											34	19
PF		STUD, INTAKE MANIFOLD MOUNTING 11657638-2 (19207)	EA	2	*	*	*	*	*	*			8	12
PF	5307-246-9624	STUD, INTAKE MANIFOLD MOUNTING 11657638-1 (19207)	EA	3	*	*	*	*	*	*			8	14
PO	4720-462-7041	TUBE, OIL FILLER TO CRANKCASE VENT VALVE 11657300 (19207)	EA	1	*	*	*	*	*	*			20	1

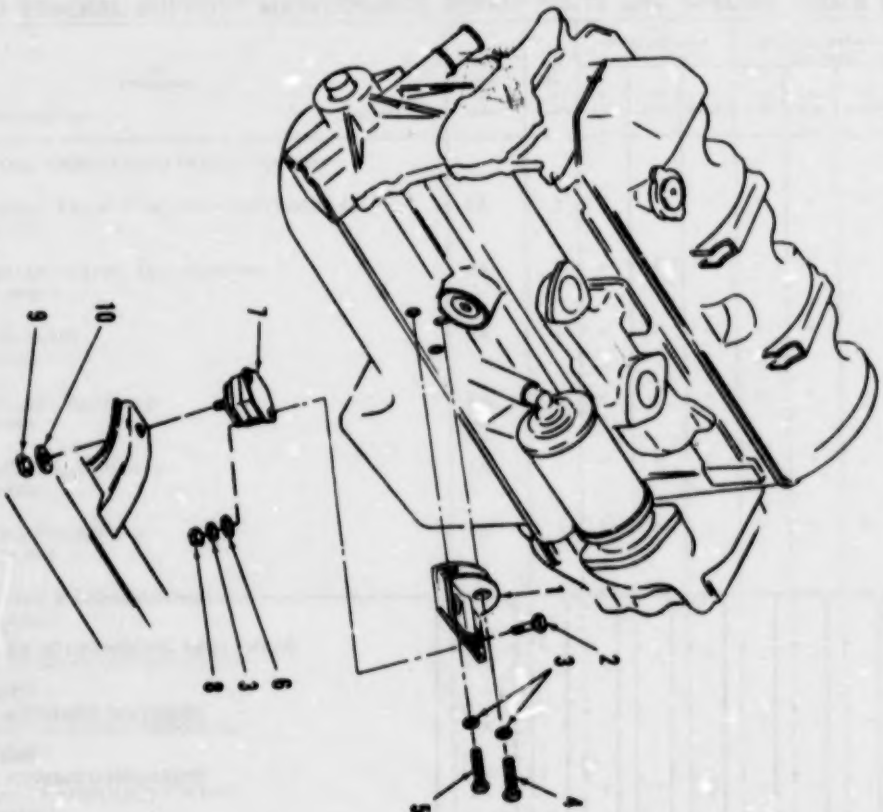


Figure 4. Engine Front Mounts

AT 41276

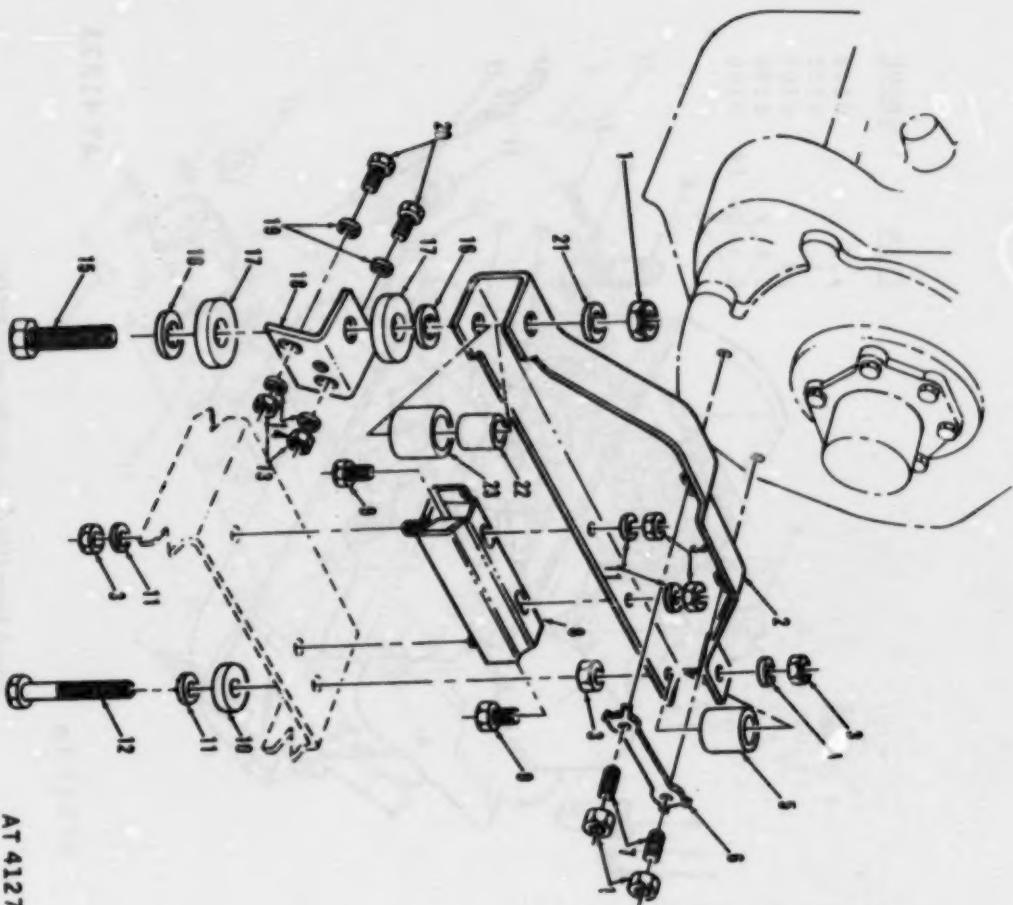


Figure 5. Engine Rear Mount and Related Parts

AT 41277

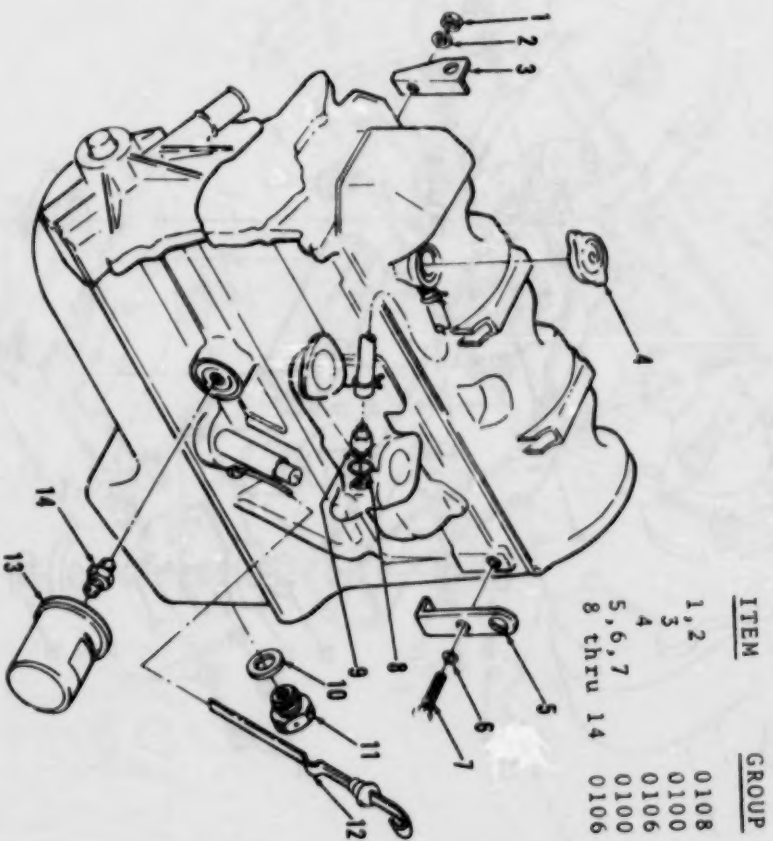


Figure 6. Engine Lifting Lever, Oil Filter and Related Parts

AT 41278


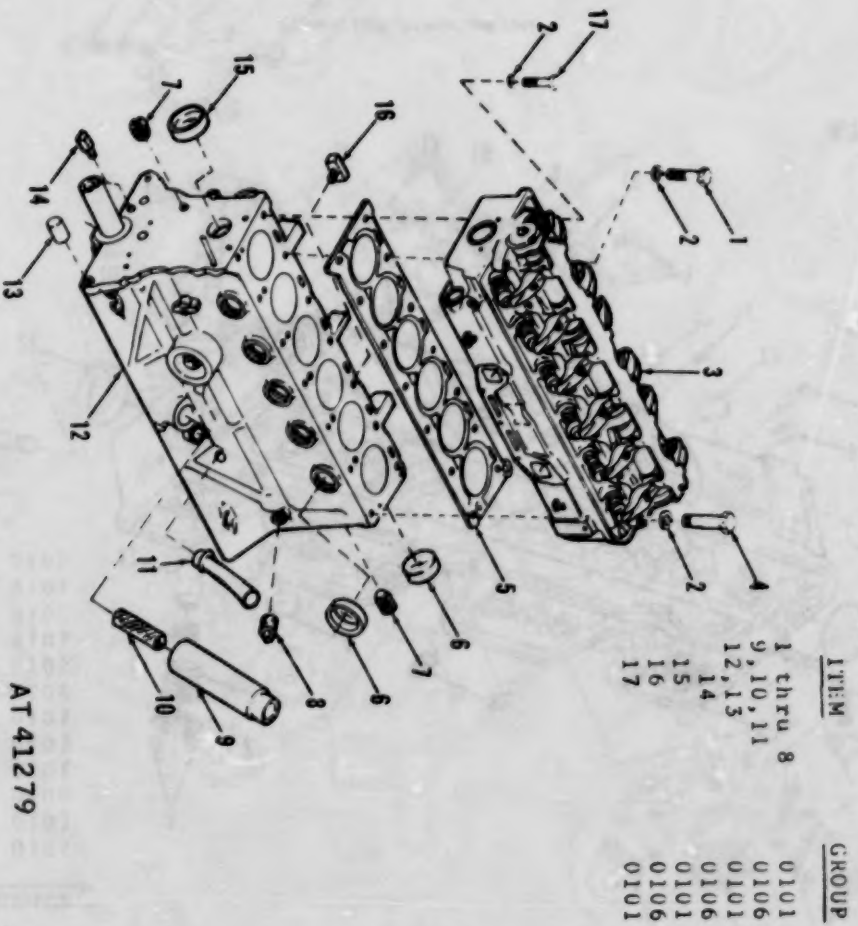


Figure 7. Cylinder Block and Head

ITEM	GROUP
1, 2, 3	0105
4, 5, 6	0101
7, 8	0106
9, 10, 11	0101
12	0108
13	0101
14	0108
15, 16, 17	0105
18, 19	0101
20	0105
21	0101
22, 23	0105

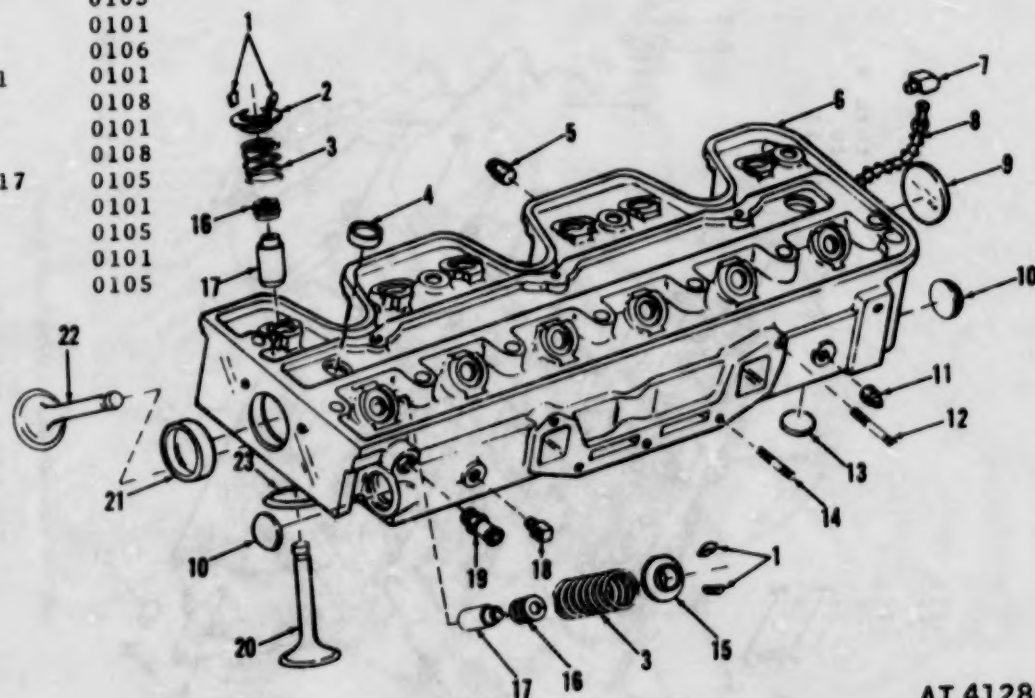

AT 41280

Figure 8. Cylinder head and Valve

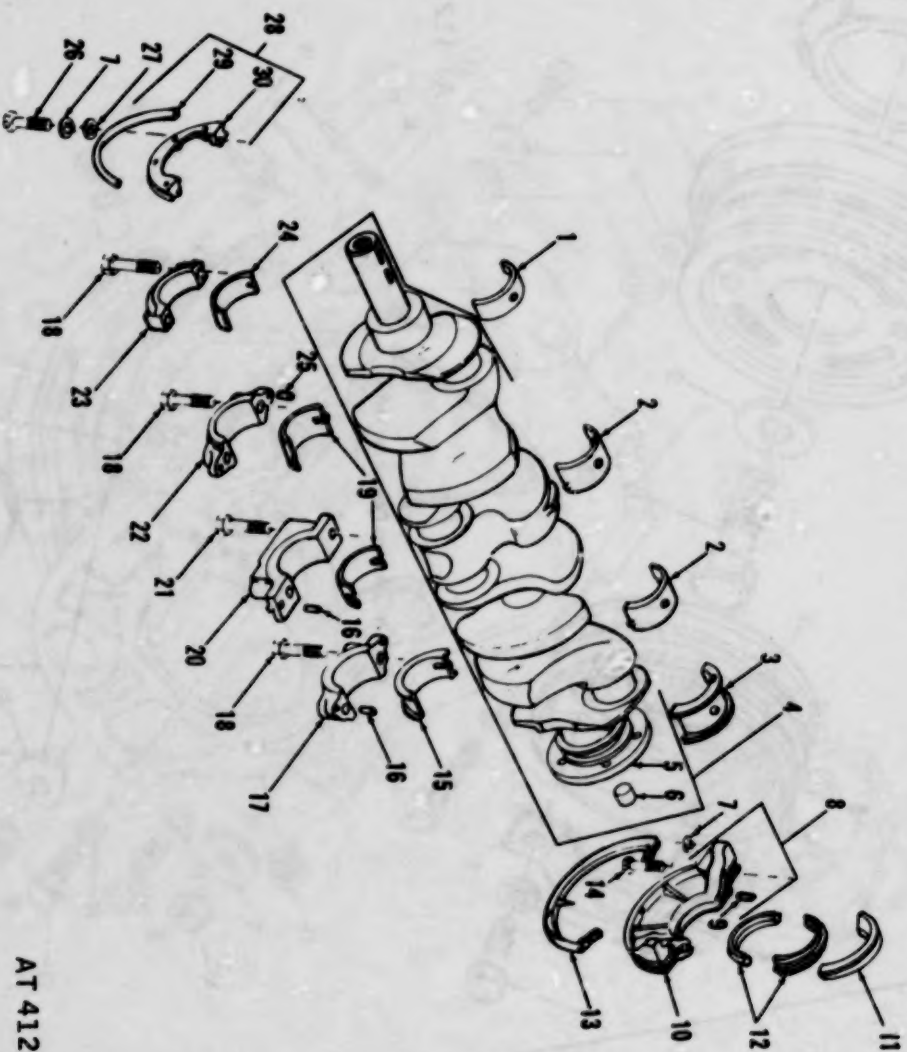


Figure 9. Crankshaft and Related Parts

AT 41281

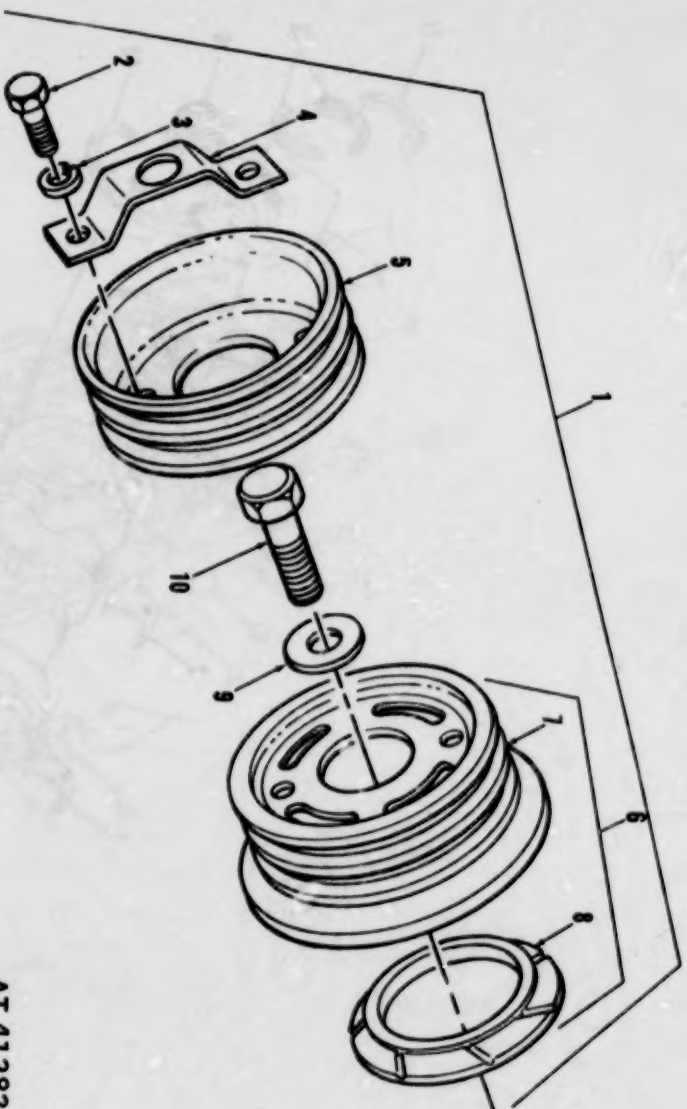


Figure 10. Vibration Damper and Pulley

AT 41282

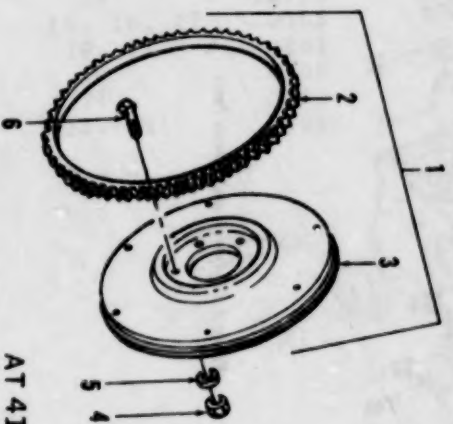


Figure 11. Flywheel Assembly

AT 41283

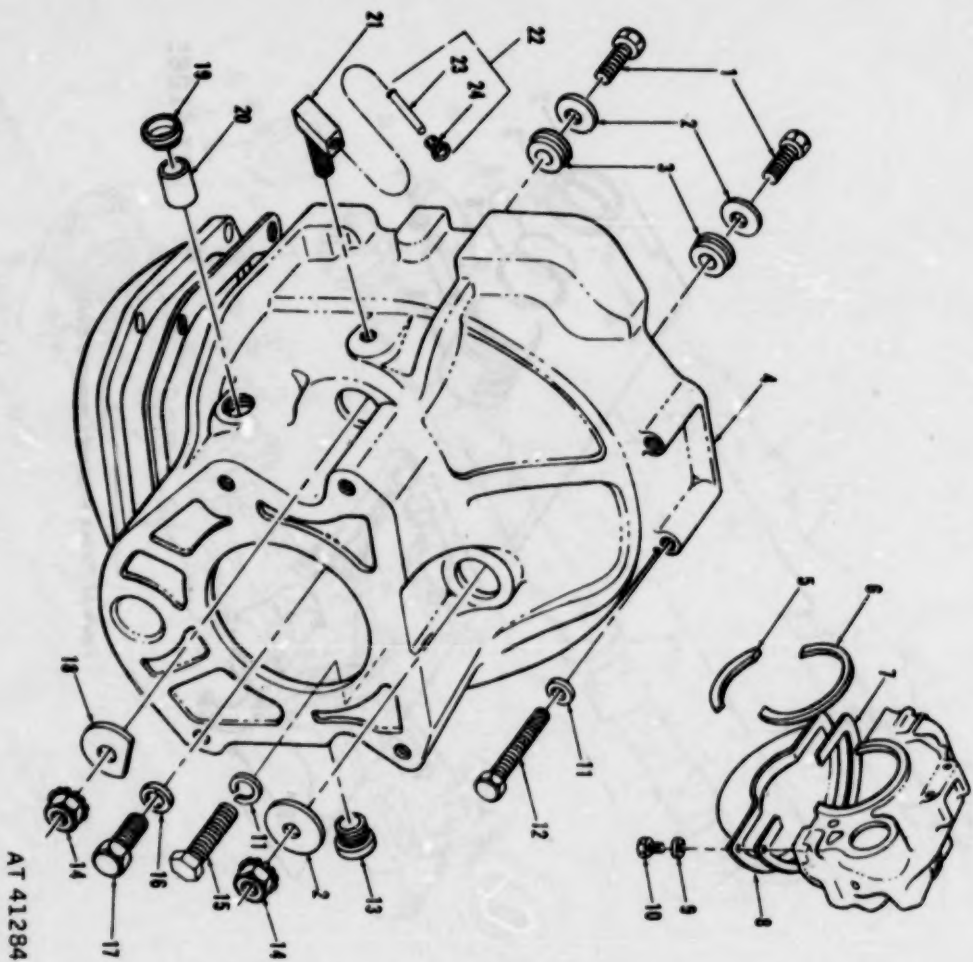


Figure 12. Flywheel Housing and Related Parts

AT 41284

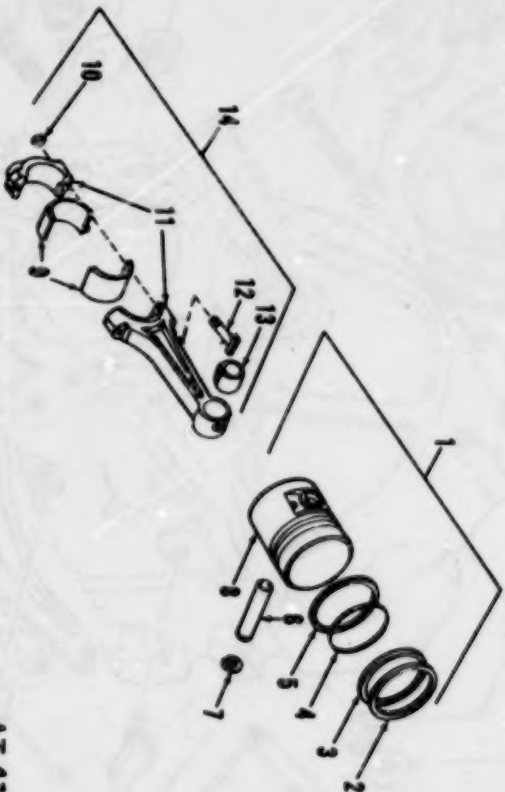


Figure 1.3 Piston, Rings and Connecting Rods

AT 41285


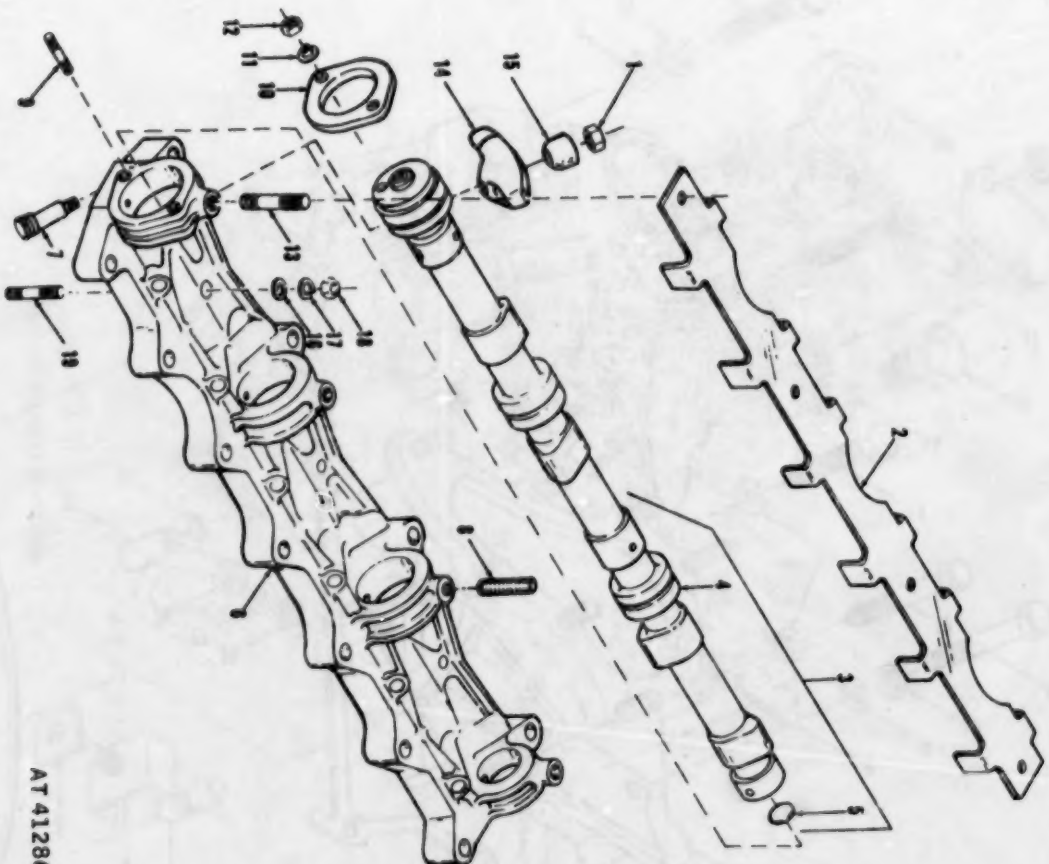



Figure 14. Cam Bearing Deck and Rocker Arms

AT 41286

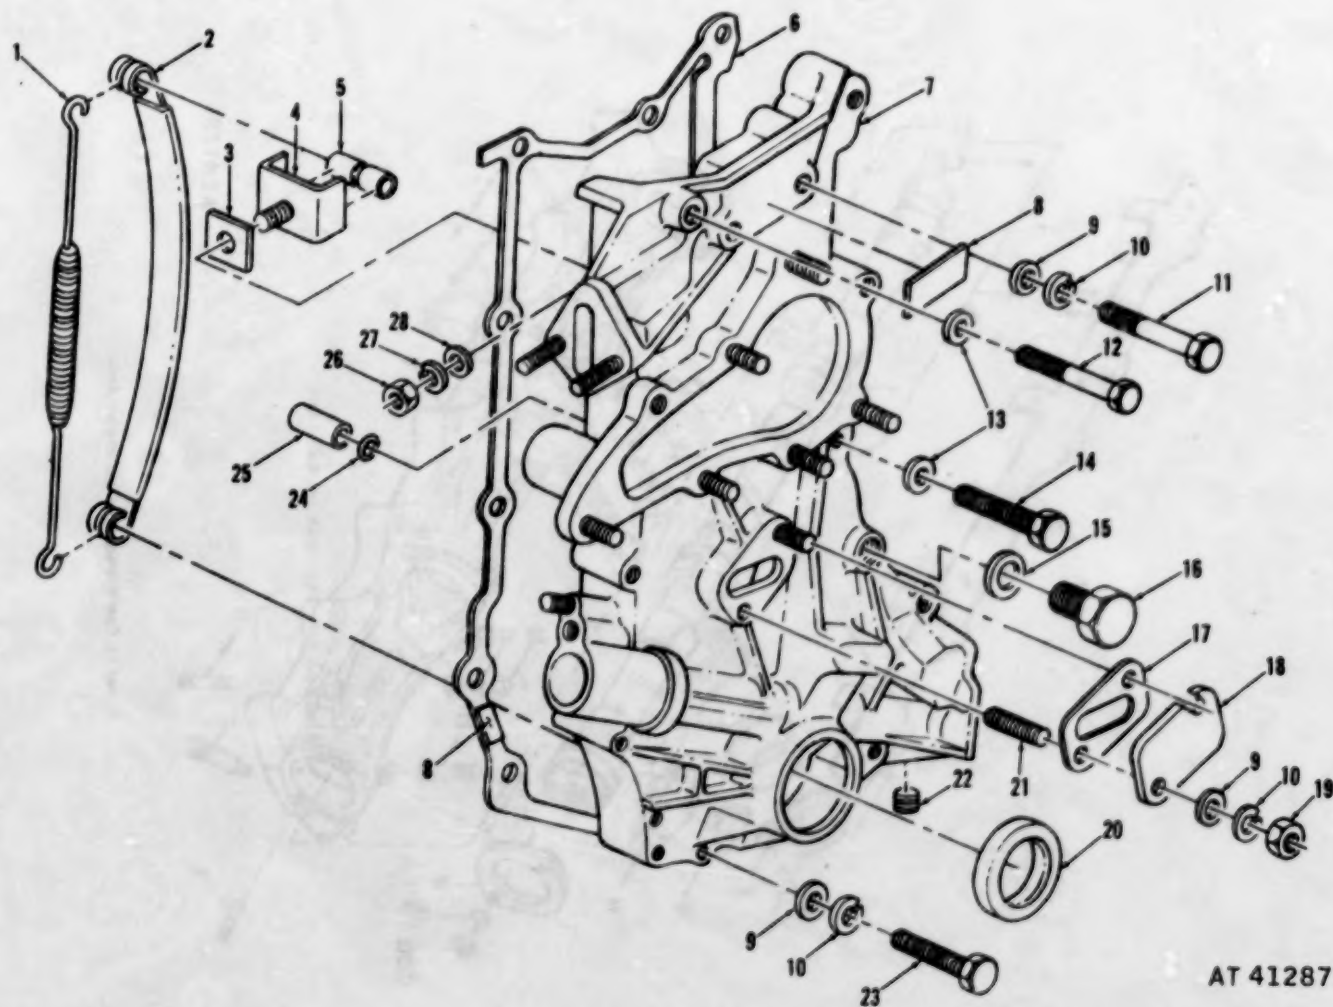

AT 41287


Figure 15. Timing Chain Cover and Related Parts

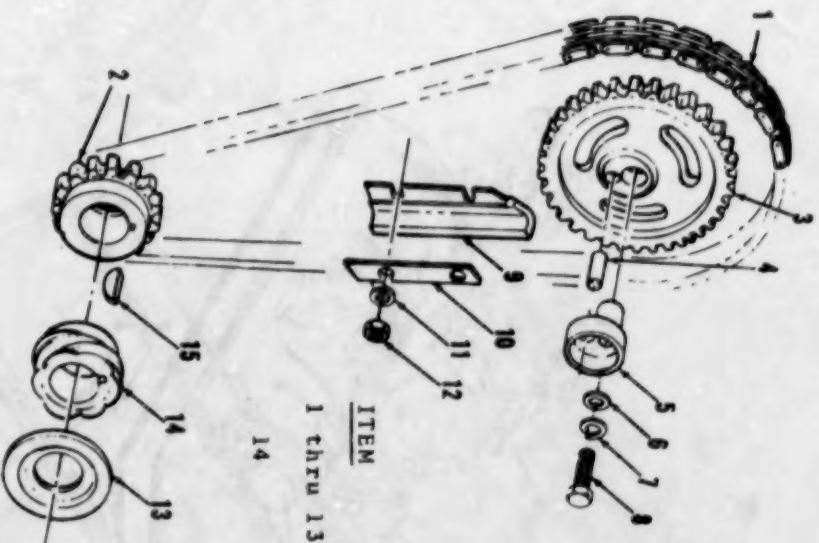

<u>ITEM</u>	<u>GROUP</u>
1 thru 13	0105
14	0106

AT 41288

Figure 16. Timing Chain and Gears

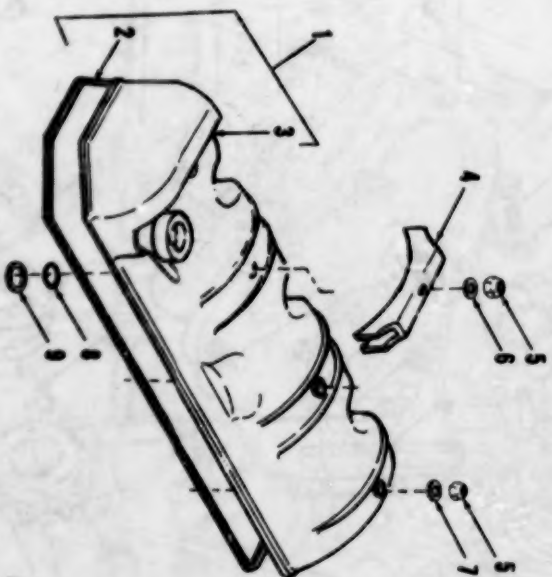

AT 41289

Figure 17. Rocker Arm Cover and Related Parts

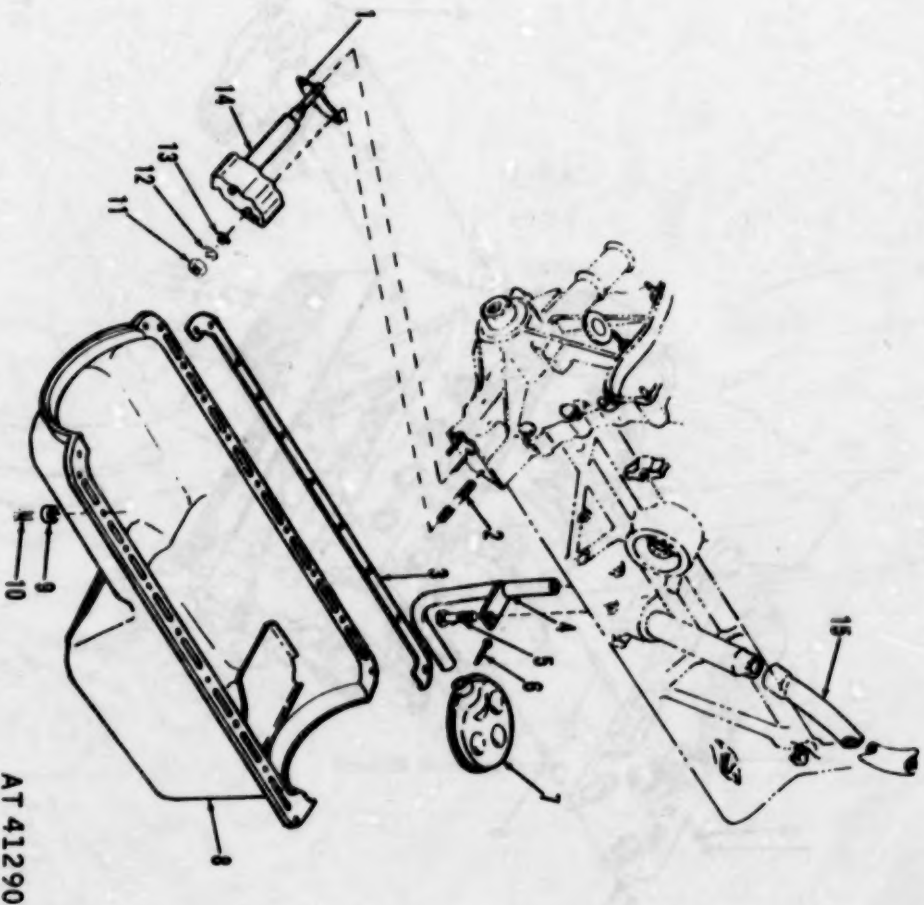


Figure 18. Oil Pan, Oil Pump and Screen

AT 41290


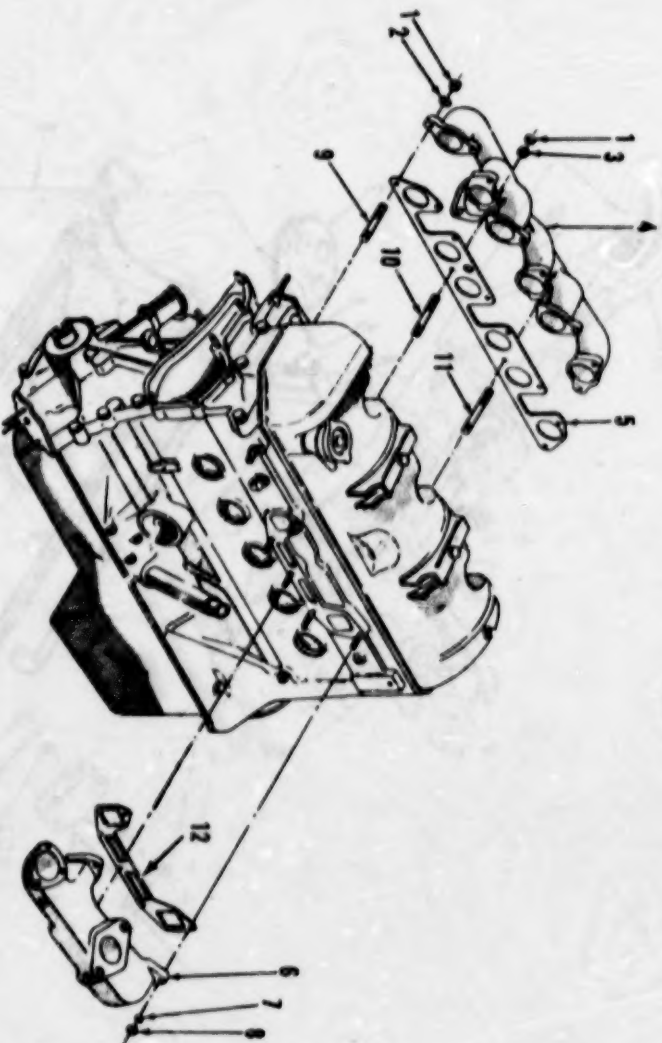


Figure 19. Manifold and Related Parts

AT 41291

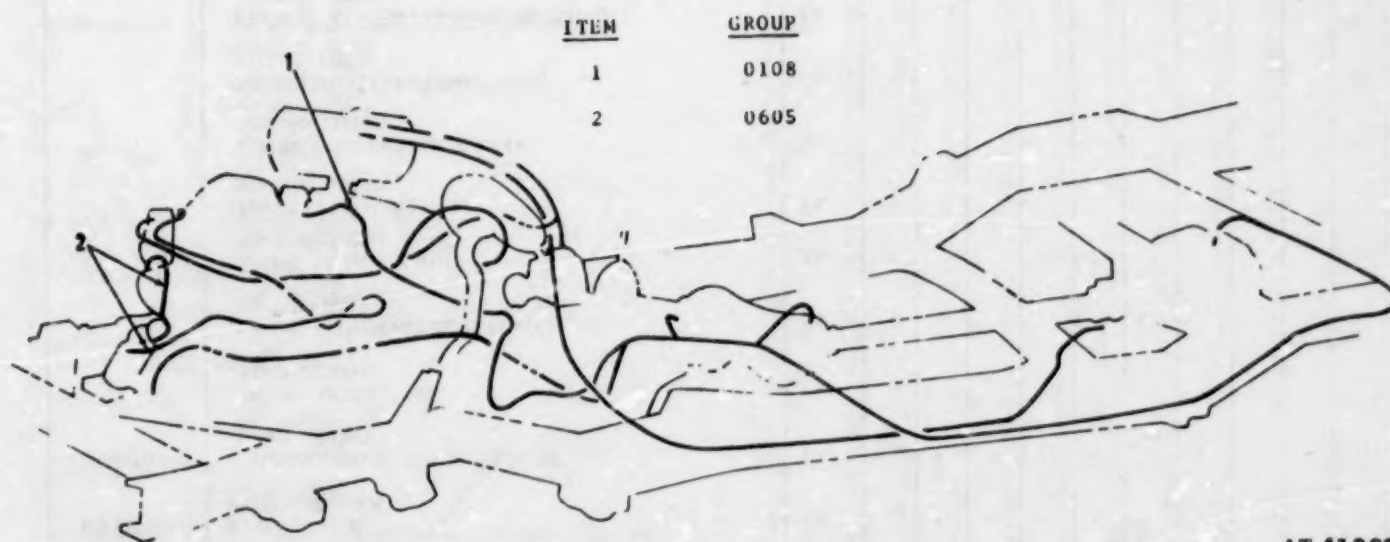

<u>ITEM</u>	<u>GROUP</u>
1	0108
2	0605

AT 41292

Figure 20. Ventilating System

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SBR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr allow per 100 equip cntgcy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		GROUP 02—CLUTCH												
		0200—CLUTCH ASSEMBLY												
PF	5305-269-3210	BOLT, PRESSURE PLATE ATTACHING 106330 (00000)	EA	6	*	*	*	*	*	*			21	1
PF	5310-637-9541	WASHER, LOCK MS35338-46 (96906)	EA	6	*	*	*	*	*	*			21	2
PF	2520-927-3340	PLATE ASSEMBLY, CLUTCH PRESSURE 11640962 (19207)	EA	1	*	*	*	*	*	*			21	3
X1		SPRING, ANTI-RATTLE 5248952 (24617)	EA	3									21	4
X1		SPRING, CLUTCH PRESSURE PLATE 11657758 (19207)	EA	6									21	5
X1		SPRING, CLUTCH THRUST 11657759 (19207)	EA	3									21	6
X1		PLATE, CLUTCH PRESSURE 11662607 (19207)	EA	1									21	7
X1		COVER, PRESSURE PLATE, REAR 11662608 (19207)	EA	1									21	8
X1		PIN, EYEBOLT, RETAINING 7377106 (19207)	EA	3									21	9
X1		EYE BOLT, CLUTCH PRESSURE ADJUSTING 11662605 (19207)	EA	3									21	10
X1		LEVER, CLUTCH RELEASE 11662610 (19207)	EA	3									21	11
X1		STRUT, CLUTCH RELEASE LEVER 11662606 (19207)	EA	3									21	12
X1		NUT, CLUTCH PRESSURE ADJUSTING 7703707 (19207)	EA	3									21	13
PF	2520-927-3278	DRIVEN PLATE ASSEMBLY, CLUTCH, DISK 11640960 (19207)	EA	1	*	*	*	*	*	*			21	14

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DB maint. allowance			(7) 30-day GB maint. allowance			(8) 1-yr slw per 100 equip cntry	(9) 1-yr slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0202-CLUTCH RELEASE MECHANISM												
PF	2520-246-2269	SLEEVE ASSEMBLY, CLUTCH RELEASE BEARING 11657352 (19207)	EA	1	*	*	*	*	*	*			22	1
PF	3110-933-3807	BEARING ASSEMBLY, CLUTCH RELEASE 11641075 (19207)	EA	1	*	*	*	*	*	*			22	2
X1		SLEEVE, CLUTCH RELEASE BEARING 11656920 (19207)	EA	1									22	3
PF	5315-844-5896	PIN, COTTER MS24665-287 (96906)	EA	2	*	*	*	*	*	*			22	4
PF	2520-420-3898	PLATE, CLUTCH YOKE 11656846 (19207)	EA	2	*	*	*	*	*	*			22	5
PF	9505-592-4690	LOCK, WIRE MS20955-F32 (96906)	EA	V	*	*	*	*	*	*			22	6
PF	5305-462-7018	SCREW 11656851 (19207)	EA	1	*	*	*	*	*	*			22	7
PF	5340-933-3778	SPRING 11657294 (19207)	EA	2	*	*	*	*	*	*			22	8
PF	2520-933-3712	YOKE 11657058 (19207)	EA	1	*	*	*	*	*	*			22	9
PF	2520-933-3529	SHAFT AND LEVER ASSEMBLY, CLUTCH RELEASE 11656839 (19207)	EA	1	*	*	*	*	*	*			22	10
PF	5310-044-2832	NUT, CLUTCH PEDAL RETAINING PIN MS51943-40 (96906)	EA	1	*	*	*	*	*	*			23	1
PO	5306-177-5529	BOLT, CLUTCH PEDAL STOP MS21094-6010 (96906)	EA	1	*	*	*	*	*	*			23	2
PF	2520-443-8133	PIN, CLUTCH PEDAL RETAINING 11656847 (19207)	EA	1	*	*	*	*	*	*			23	2
PF	2520-400-2435	BRACKET ASSEMBLY, CLUTCH PEDAL RETAINER 11656830 (19207)	EA	1	*	*	*	*	*	*			23	4

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SAR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr altw per 100 equip entry	(9) Depot maint altw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0202 - CLUTCH RELEASE MECHANISM - Continued												
PF	5305-269-3210	SCREW, CAP, HEX HEAD MS90725-59 (96906)	EA	2	*	*	*	*	*	*			23	5
X2F		PEDAL ASSEMBLY, CLUTCH 11656837 (19207)	EA	1	*	*	*	*	*	*			23	-
PO	2540-443-8032	BUMPER, CLUTCH PEDAL STOP 11656917 (19207)	EA	1	*	*	*	*	*	*			23	6
X1		LEVER, CLUTCH PEDAL 11656838 (19207)	EA	1									23	7
X1		PEDAL, CLUTCH 11656850 (19207)	EA	1									23	8
PF	5320-067-9837	RIVET, FLAT 104268 (24617)	EA	2	*	*	*	*	*	*			23	9
PF	3110-227-4428	BEARING, CLUTCH PEDAL MS17131-22 (96906)	EA	2	*	*	*	*	*	*			23	10
PO	5305-269-3211	BOLT, CAP, HEX HEAD, TO ATTACH BELLCRANK MOUNTING AND PIVOT MS90725-60 (96906)	EA	1	*	*	*	*	*	*			23	11
PO	5310-637-9541	WASHER, SUPPORT (1) RELEASE ROD (2) MS35338-46 (96906)	EA	3	*	*	*	*	*	*			23	12
X20		BRACKET, BELLCRANK MOUNTING & PIVOT 11656844 (19207)	EA	1	*	*	*	*	*	*			23	13
PO	5310-550-3503	WASHER, CLUTCH RELEASE, BELLCRANK ASSEMBLY MS35335-36 (96906)	EA	2	*	*	*	*	*	*			23	14
PO	5310-835-2036	NUT, PIVOT (2) RELEASE LEVER (2) MS35691-29 (96906)	EA	4	*	*	*	*	*	*			23	15
PO	2520-123-0197	SPRING, CLUTCH PEDAL RETURN 11656842 (19207)	EA	1	*	*	*	*	*	*			23	16

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty line in unit	(6) 30-day DS maint. allowance			(7) 30-day DS maint. allowance			(8) 1-yr aw per 100 equip enrgy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		0202-CLUTCH RELEASE MECHANISM — Continued												
PO	5315-754-0848	PIN, CLEVIS, CLUTCH PEDAL RETURN SPRING MS35810-33 (96906)	EA	1	*	*	*	*	*	*			23	17
PO	5315-842-3044	PIN, COTTER MS24665-283 (96906)	EA	3	*	*	*	*	*	*			23	18
PO	5310-080-6004	WASHER, BELLCRANK LOWER LEVER TO CLUTCH RELEASE LEVER MS27183-14 (96906)	EA	2	*	*	*	*	*	*			23	19
PO		CONNECTING LINK, CLUTCH RELEASE LEVER 11656831 (19207)	EA	1	*	*	*	*	*	*			23	20
PO	2540-737-5117	CLIP 7375117 (19207)	EA	1	*	*	*	*	*	*			23	21
PO	5340-159-3849	LINK & PIN ASSEMBLY, CLUTCH RELEASE LEVER 11656922 (19207)	EA	1	*	*	*	*	*	*			23	
X1		LINK, CLUTCH RELEASE 11656922-1 (19207)	EA	1									23	22
X20		PIN, WELD 11640733-1 (19207)	EA	1	*	*	*	*	*	*			23	23
X20		SUPPORT, CLUTCH PEDAL RETURN SPRING 11656848 (19207)	EA	1	*	*	*	*	*	*			23	24
PO	5305-269-3212	SCREW, CAP, HEX HEAD, CLUTCH PEDAL RETURN SPRING MS90725-61 (96906)	EA	1	*	*	*	*	*	*			23	25
PO	2530-125-8727	COVER, PEDAL 11656845 (19207)	EA	1	*	*	*	*	*	*			23	26
PO	5305-056-9945	SCREW, CLUTCH ROD GROMMET RETAINER MS24621-18 (96906)	EA	4	*	*	*	*	*	*			23	27
PO	4730-050-4203	FITTING LUBE MS15720-1 (96906)	EA	1	*	*	*	*	*	*			23	28
X20		BELLCRANK ASSEMBLY, CLUTCH RELEASE 11656833 (19207)	EA	1	*	*	*	*	*	*			23	29

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBSL code	(3) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr alt per 100 equip catgry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0202-CLUTCH RELEASE MECHANISM—Continued												
PO	2520-404-0682	BOOT, CLUTCH RELEASE BELLCRANK ASSEMBLY END 11640763 (19207)	EA	2	*	*	*	*	*	*			23	30
PO		RETAINER, BALL STUD 11640765 (19207)	EA	1	*	*	*	*	*	*			23	31
PO		BALL STUD, CLUTCH RELEASE BELLCRANK ASSEMBLY PIVOT 11656921 (19207)	EA	2	*	*	*	*	*	*			23	32
PO	2520-470-9955	BUSHING, CLUTCH RELEASE BELLCRANK STUD 11640764 (19207)	EA	2	*	*	*	*	*	*			23	33
PO	3040-455-5011	BALL JOINT ASSEMBLY, LOWER 11657354 (19207)	EA	1	*	*	*	*	*	*			23	34
PO	5310-975-2075	NUT, LOWER BALL JOINT ASSEMBLY MS35691-21 (96906)	EA	1	*	*	*	*	*	*			23	35
PO	2520-476-6510	RETAINER, CLUTCH ROD GROMMET 11657232 (19207)	EA	1	*	*	*	*	*	*			23	36
PO	5325-158-0081	GROMMET, CLUTCH ROD 11657230 (19207)	EA	1	*	*	*	*	*	*			23	37
X20		ROD ASSEMBLY, CLUTCH RELEASE 11657353 (19207)	EA	1	*	*	*	*	*	*			23	38
PO	5310-732-0559	NUT MS51968-8 (96906)	EA	2	*	*	*	*	*	*			23	39
PF	5306-018-7993	SCREW AND LOCK WASHER, HEX HEAD, CLUTCH PEDAL RETAINER BRACKET 187993 (24617)	EA	2	*	*	*	*	*	*			23	40
PF	5310-087-4652	NUT, HEXAGON MS51922-17 (96906)	EA	2	*	*	*	*	*	*			23	41

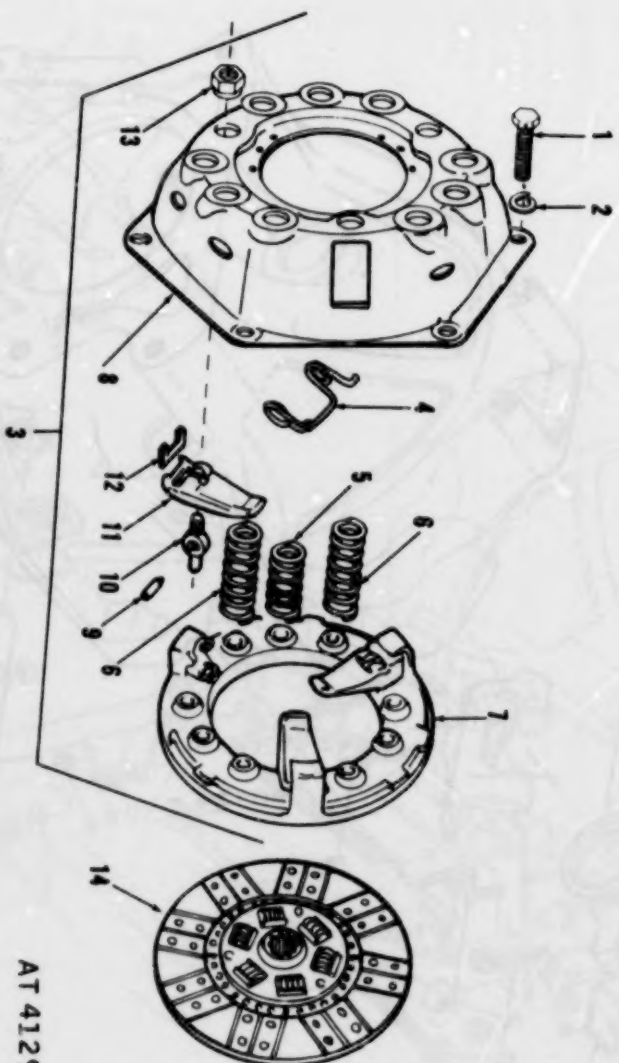


Figure 21. Clutch Assembly

AT 41293

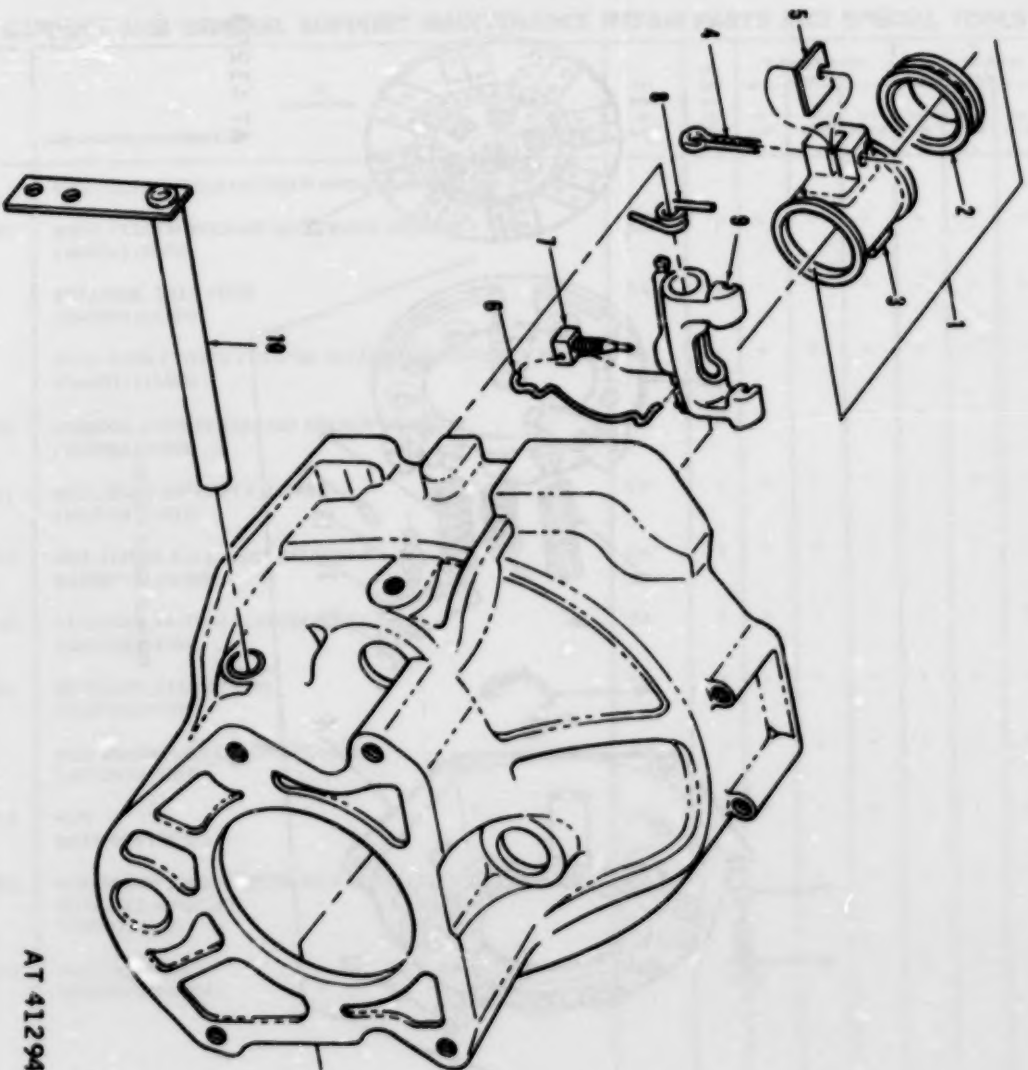


Figure 22. Clutch Release Mechanism

AT 41294

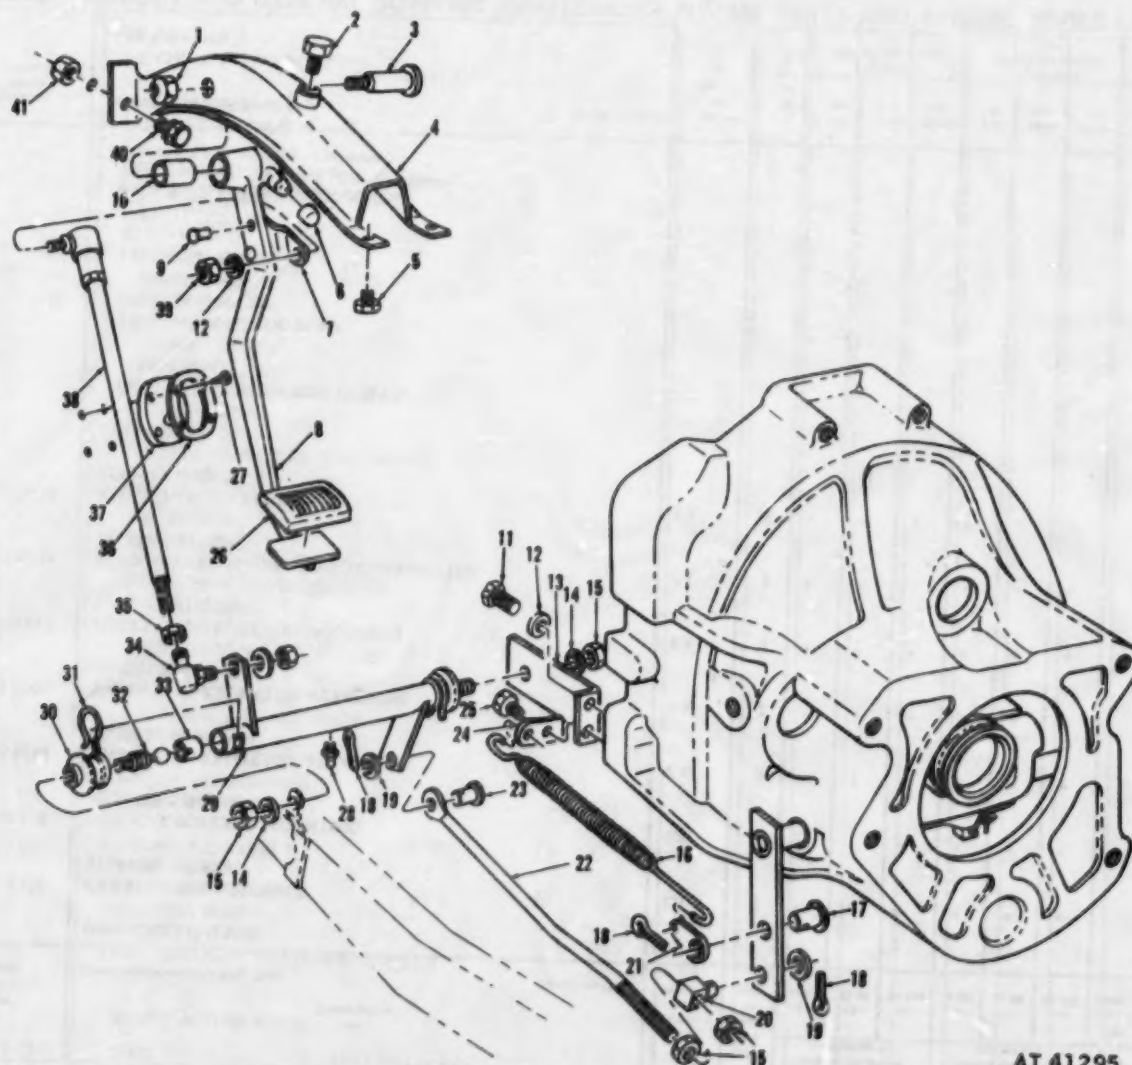


Figure 23. Clutch Release Linkage

AT 41295

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE ITEMS														
(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip entry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0301-CARBURETOR												
POR	2910-933-3736	CARBURETOR ASSEMBLY 11641002 (19207)	EA	1	*	*	*	*	*	*			24	1
PO	5310-732-0559	NUT, CARBURETOR MOUNTING MS51968-8 (96906)	EA	2	*	*	*	*	*	*			24	2
PO	5310-122-5658	WASHER, CARBURETOR ATTACHING MS35338-46 (96906)	EA	2	*	*	*	*	*	*			24	3
PO	5310-080-6004	WASHER, CARBURETOR ATTACHING MS27183-14 (96906)	EA	2	*	*	*	*	*	*			24	4
PO	5330-159-3249	GASKET, CARBURETOR MOUNTING 11640784 (19207)	EA	1	*	*	*	*	*	*			24	5
PO	5307-159-6274	STUD, INTAKE MANIFOLD TO CARBURETOR 11656957 (19207)	EA	2	*	*	*	*	*	*			24	10
PF	2910-927-3324	KIT, REPAIR, CARBURETOR 85R2688 (29092)	EA	1	*	*	*	*	*	*				
		COMPOSED OF:												
X1		1-BALL PUMP, PUSH ROD SLEEVE 28R94 (29092)												
X1		1-DIAPHRAGM, ROD PUMP 35R852A1 (29092)												
X1		1-GASKET, AIR HORN 8R923 (29092)												
X1		1-GASKET, ECONOMIZER BODY 8R534 (29092)												
X1		1-GASKET, FLANGE 8R1329 (29092)												
X1		1-GASKET, FLOAT BOWL 8R956 (29092)												

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NRR code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr air per 100 equip cntgty	(9) Depot maint air per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a) Figure No.	(b) Item No.
XI		0301-CARBURETOR - Continued KIT, REPAIR, CARBURETOR -Continued 1-GASKET, IDLE ADJUSTMENT 8R518 (29092)												
XI		1-LEVER, PUMP 63R787 (29092)												
XI		1-LINK, PUMP 33R418-1 (29092)												
XI		1-NEEDLE, IDLE ADJUSTING 15R94-1 (29092)												
XI		1-NEEDLE AND SEAT FUEL INLET 18R117A (29092)												
XI		1-RETAINER, FLOAT 36R169 (29092)												
XI		1-RETAINER, PUMP LEVER 75R37-1 (29092)												
XI		2-SCREW, CHOKE PLATE 5R476-1 (29092)												
XI		2-SCREW, THROTTLE PLATE 5R476-1 (29092)												
XI		1-STEM, ECONOMIZER 25R385A (29092)												
XI		1-SEAL, FUEL INLET 27R229 (29092)												
		0302- FUEL PUMP												
MO		TUBE ASSEMBLY, VACUUM MANIFOLD 11657923 (19207)	EA	1									25	1
PO	4710-289-2542	MANUFACTURE FROM: TUBE, STEEL, 0.312 O.D., 0.028 WALL, 3.62 11657923-1 (19207)	FT	V	*	*	*	*	*	*			25	2

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas.	(5) Qty inc in unit	(6) 30-day D8 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr ajw per 100 equip cntgty	(9) Depot maint ajw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
PO	4730-014-2427	0302 - FUEL PUMP - Continued TUBE ASSEMBLY, VACUUM MANIFOLD - Continued NUT, INVERTED FLARE 142427 (24617)	EA	1	*	*	*	*	*	*			25	3
PO	4730-889-6133	CONNECTOR, VACUUM ASSIST HOSE TUBE 137406 (24617)	EA	1	*	*	*	*	*	*			25	4
PO	5310-880-7746	NUT, HEXAGON, FUEL PUMP MOUNTING MS51968-5 (96906)	EA	2	*	*	*	*	*	*			25	6
PO	5310-407-9566	WASHER, LOCK, FUEL PUMP MOUNTING MS35338-45 (96906)	EA	2	*	*	*	*	*	*			25	7
PO	5310-012-0393	WASHER, FLAT, FUEL PUMP MOUNTING MS27183-12 (96906)	EA	2	*	*	*	*	*	*			25	8
PO	2910-927-3286	KIT, FUEL PUMP 5704405 (19207)	EA	1	*	*	*	*	*	*			25	9
		COMPOSED OF:												
X1		1-PUMP, FUEL 11641001 (19207)											25	10
X1		1-GASKET 11657562 (19207)											25	11
MO		TUBE ASSEMBLY, VACUUM ASSIST 11657301 (19207)	EA	1									25	12
		MANUFACTURE FROM:												
PO	4730-014-2427	NUT, INVERTED FLARE 142427 (24617)	EA	1	*	*	*	*	*	*			25	13
PO	4710-289-2542	TUBE, STEEL, 0.312 O.D., 0.028 WALL 22.20 LG. 11657301-1 (19207)	FT	V	*	*	*	*	*	*			25	14
PO	4730-131-4951	CLAMP, HOSE, VACUUM ASSIST HOSE 11657394-2 (19207)	EA	2	*	*	*	*	*	*			25	15

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Milg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip cntry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a) Figure No.	(b) Item No.
		0302—FUEL PUMP—Continued												
PO	4720-130-4609	HOSE, FUEL PUMP VACUUM ASSIST 11657394-1 (19207)	EA	1	*	*	*	*	*	*			25	16
PF	2910-933-3536	KIT, PARTS, FUEL PUMP 5704413 (19207)	EA	1	*	*	*	*	*	*				
		COMPOSED OF:												
X1		1-RIVET, PLUG 11B69 (71500)												
X1		1-PLUG, SEAL 11B382 (71500)												
X1		1-GASKET, FLANGE 121-134 (71500)												
X1		3-GASKET, VALVE HOUSING 121-414 (71500)												
X1		1-RING, PISTON 160-239 (19207)												
X1		1-DIAPHRAGM, AIRDOME 203-38 (71500)												
X1		1-DIAPHRAGM ASSEMBLY 203-1698 (71500)												
MO		TUBE ASSEMBLY, FUEL PUMP VENT 11657272 (19207)											25	20
		MANUFACTURE FROM:												
PO	4710-971-4187	TUBE, STEEL, 0.250 O.D., 0.028 WALL, 15.99 LG. 11657272-1 (19207)	FT	V	*	*	*	*	*	*			25	21
PO	4730-014-2432	NUT, INVERTED FLARE 142432 (24617)	EA	1	*	*	*	*	*	*			25	22

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SWM code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30 day DS maint allowance			(7) 30 day GS maint allowance			(8) 1 yr aw per 100 equip cntry	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0302—FUEL PUMP—Continued												
PO	4730-889-6135	CONNECTION FUEL PUMP VENT TUBE 137405 (24617)	EA	1	*	*	*	*	*	*			25	23
PO	4730-137-9236	CLAMP, HOSE, FUEL PUMP VENT 11640805-3 (19207)	EA	2	*	*	*	*	*	*			25	24
PO		HOSE, FUEL PUMP VENT 11657469-7 (19207)	EA	1	*	*	*	*	*	*			25	25
PO	5340-368-4935	CLIP, FUEL PUMP VENT TUBE 7375124 (19207)	EA	2	*	*	*	*	*	*			25	27
PO	4730-640-1051	ELBOW, FUEL PUMP OUTLET 137422 (24617)	EA	1	*	*	*	*	*	*			29	21
PO	4730-889-6133	CONNECTION, FUEL PUMP INLET 137406 (24617)	EA	1	*	*	*	*	*	*			29	22
X20		TUBE ASSEMBLY, FUEL PUMP TO FILTER 11657273 (19207)	EA	1	*	*	*	*	*	*			29	23
		0304—AIR CLEANER												
PO	2940-119-0850	AIR CLEANER ASSEMBLY USED ON VEHICLES BEFORE SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726) 11658089 (19207)	EA	1	*	*	*	*	*	*			26	1
PO	4730-470-6624	CLAMP 214833K01 (78940)	EA	1	*	*	*	*	*	*			26	3
PO	2940-142-0553	PRECLEANER AND RAIN DEFLECTOR 11598930 (19207)	EA	1	*	*	*	*	*	*			26	4
PO	4730-278-2043	CLAMP, 3-1/8" 10950978-9 (19207)	EA	1	*	*	*	*	*	*			26	5
X20		BODY, AIR CLEANER 990300 (65909)	EA	1	*	*	*	*	*	*			26	6
PO	2940-124-7128	GASKET, AIR CLEANER 11640802 (19207)	EA	1	*	*	*	*	*	*			26	7

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day G5 maint. allowance			(8) 1-yr altw per 100 equip cntry	(9) Depot maint altw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-30	31-100	1-20	21-30	31-100			Figure No.	Item No.
		0304 - AIR CLEANER - Continued												
PO	2940-875-9000	ELEMENT, AIR CLEANER 250A32 (78940)	EA	1	*	*	*	*	*	*			26	8
PO	2940-119-0849	COVER, AIR CLEANER 11598930 (19207)	EA	1	*	*	*	*	*	*			26	9
PO	2940-928-6134	GASKET, CARBURETOR AIR INTAKE 11640776 (19207)	EA	1	*	*	*	*	*	*			26	2
PO	2940-135-6532	AIR CLEANER ASSEMBLY USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726) 11640725 (19207)	EA	1	*	*	*	*	*	*			27	1
X1		COVER P11-2993 (18265)	EA	1									27	2
X1		BOLT P10-4426 (18265)	EA	1									27	3
PO	2940-135-6528	GASKET, COVER P10-1324 (18265)	EA	1	*	*	*	*	*	*			27	4
PO	4730-278-2043	CLAMP, RAIN DEFLECTOR 10950978-9 (19207)	EA	1	*	*	*	*	*	*			27	5
PO	2940-142-0553	DEFLECTOR, RAIN 11598930 (19207)	EA	1	*	*	*	*	*	*			27	6
X1		BODY P11-2982 (18265)	EA	1									27	8
PO		DECAL 11640865 (19207)	EA	1	*	*	*	*	*	*			27	9
PO		CLAMP EVACUATOR VALVE TO BODY P10-4002 (18265)	EA	1	*	*	*	*	*	*			27	10
PO	2940-135-6530	VALVE, VACUATOR ASSEMBLY P10-3198 (18265)	EA	1	*	*	*	*	*	*			27	11

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip origity	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
PO		0304-AIR CLEANER-Continued CLAMP, HOSE, VACUUM ASSIST HOSE-Continued SPRING, VACUATOR VALVE P10-4777 (18265)	EA	1	*	*	*	*	*	*			27	12
PO	2940-135-6531	ELEMENT, AIR CLEANER (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11662692 (19207)	EA	1	*	*	*	*	*	*			27	7
PO		TUBE, AIR CLEANER VENT (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657469-5 (19207)	EA	1	*	*	*	*	*	*			27	13
PO	4730-139-3904	TEE, CONNECTION, AIR CLEANER (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M715), 10001 (M726)) 11640795 (19207)	EA	1	*	*	*	*	*	*			27	14
PO	4730-137-9236	CLAMP, AIR INTAKE CAP ASSEMBLY, VENT (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11640805-3 (19207)	EA	2	*	*	*	*	*	*			27	15
PO	4730-249-8278	TEE, CARBURETOR AIR INTAKE VENT LINE (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 143482 (24617)	EA	1	*	*	*	*	*	*			27	16
X20		AIR HORN, CARBURETOR (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657690 (19207)	EA	1	*	*	*	*	*	*			27	17
PO	4730-908-6292	CLAMP, HOSE FLEXIBLE (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) MS35842-14 (96906)	EA	2	*	*	*	*	*	*			27	18
PO	2940-928-6134	GASKET, CARBURETOR AIR INTAKE (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11640776 (19207)	EA	1	*	*	*	*	*	*			27	19

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NARS code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D8 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr alt per 100 equip cntry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		0304—AIR CLEANER—Continued												
PO		CLAMP, ASSEMBLY AIR INTAKE RETAINER (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11640880 (19207)	EA	1	*	*	*	*	*	*			27	20
PO	2940-135-6533	HOSE ASSEMBLY, FLEXIBLE 11641011 (19207) (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726))	EA	1	*	*	*	*	*	*			27	21
PO	4710-495-0181	TUBE ASSEMBLY, AIR CLEANER VENT (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657455 (19207)	EA	1	*	*	*	*	*	*			27	22
PO	5310-241-6658	NUT, HEXAGON (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) Ms51943-34 (96906)	EA	13	*	*	*	*	*	*			28	1
PO		U-BOLT, AIR CLEANER ASSEMBLY (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657359 (19207)	EA	4	*	*	*	*	*	*			28	2
X20		BRACKET ASSEMBLY, UPPER FRONT MOUNTING (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657596 (19207)	EA	1	*	*	*	*	*	*			28	3
PO		BOLT, HINGE BRACKET (2) LOWER FRONT MOUNTING SUPPORT (3) (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657687 (19207)	EA	5	*	*	*	*	*	*			28	4
PO	5306-637-9721	BOLT, HINGE BRACKET TO SUPPORT (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 123480 (24617)	EA	2	*	*	*	*	*	*			28	5

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NSN code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1 yr allow per 100 equip catrgy	(9) Depot allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0304—AIR CLEANER—Continued												
X20		SUPPORT, AIR CLEANER HINGE BRACKET (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657600 (19207)	EA	1	*	*	*	*	*	*			28	6
X20		BRACKET, AIR CLEANER, LOWER REAR (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657592 (19207)	EA	1	*	*	*	*	*	*			28	7
PO	5310-044-2823	NUT, HEXAGON (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) MS51943-31 (96906)	EA	5	*	*	*	*	*	*			28	8
PO		BRACKET, AIR CLEANER, LOWER REAR (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657597 (19207)	EA	1	*	*	*	*	*	*			28	9
X20		CLIP, AIR CLEANER, BRACKET RETAINING LOWER REAR MOUNTING (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657598-1 (19207)	EA	1	*	*	*	*	*	*			28	10
X20		STRAP ASSEMBLY, AIR CLEANER REAR (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657663 (19207)	EA	1	*	*	*	*	*	*			28	11
PO	5305-938-0603	SCREW, AIR CLEANER REAR SUPPORT STRAP (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) MS35207-295 (96906)	EA	2	*	*	*	*	*	*			28	12
PO		HOSE, AIR INTAKE CAP ASSEMBLY TO MASTER CYLINDER VENT LINE (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657469-6 (19207)	EA	1	*	*	*	*	*	*			28	13

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMN code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr air per 100 equip cntgcy	(9) Depot maint air per 100 equip	(10) Illustration	
					(a) 1-50	(b) 51-50	(c) 51-100	(a) 1-50	(b) 51-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0304 - AIR CLEANER - Continued												
X20		STRAP, AIR CLEANER FRONT SUPPORT (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657663-1 (19207)	EA	1	*	*	*	*	*	*			28	14
X20		CLIP, AIR CLEANER, BRACKET RETAINING LOWER FRONT MOUNTING (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657579-2 (19207)	EA	1	*	*	*	*	*	*			28	15
X20		BRACKET, AIR CLEANER, LOWER FRONT MOUNTING (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657594 (19207)	EA	1	*	*	*	*	*	*			28	16
X20		SUPPORT, AIR CLEANER, LOWER FRONT MOUNTING (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657590 (19207)	EA	1	*	*	*	*	*	*			28	17
X20		SUPPORT, AIR CLEANER, UPPER FRONT MOUNTING (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657595 (19207)	EA	1	*	*	*	*	*	*			28	18
PO	4010-158-2136	PIN AND LANYARD ASSEMBLY (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11640785 (19207)	EA	1	*	*	*	*	*	*			28	19
PO	5306-018-7527	BOLT, MACHINE, PLATE AND BRACE (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 187527 (24617)	EA	2	*	*	*	*	*	*			28	20
X20		BRACE AIR CLEANER MOUNTING (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657221 (19207)	EA	1	*	*	*	*	*	*			28	21

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SACR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day Df maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per equip cntry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
X20		0304 - AIR CLEANER - Continued PLATE, AIR CLEANER BRACE (USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726)) 11657361 (19207)	EA	1	*	*	*	*	*	*			28	22
PO	4730-131-4951	0306 - TANKS, LINES, FITTINGS AND HEADERS CLAMP, HOSE 11640805-2 (19207)	EA	8	*	*	*	*	*	*			29	2
PO	4720-762-9248	HOSE, FUEL TANK VENT 11657394-3 (19207)	EA	1	*	*	*	*	*	*			29	5
PO	4720-130-4605	HOSE, FUEL TANK VENT 11662523-2 (19207)	EA	1	*	*	*	*	*	*			29	6
PO	2910-119-0852	TUBE, FUEL LINE 11657391 (19207)	EA	1	*	*	*	*	*	*			29	7
PO	4720-130-4609	HOSE, FUEL LINE VENT 11657394-2 (19207)	EA	2	*	*	*	*	*	*			29	8
PO	4720-763-6497	HOSE, FUEL TANK OUTLET TUBE 11657394-1 (19207)	EA	1	*	*	*	*	*	*			29	9
PO	5305-068-0501	SCREW, FUEL LINE TUBE CLAMP ATTACHING MS90725-5 (96906)	EA	1	*	*	*	*	*	*			29	10
PO		NUT, PLAIN, HEXAGON, FUEL LINE TUBE ATTACHING 8328462 (19207)	EA	2	*	*	*	*	*	*			29	11
PO	5340-286-2494	CLAMP, FUEL LINE TUBE MS21333-36 (96906)	EA	2	*	*	*	*	*	*			29	12
PO	5340-282-7544	CLAMP, FUEL LINE TUBE MS21333-35 (96906)	EA	2	*	*	*	*	*	*			29	12
PO	5340-400-5547	CLIP, FUEL LINE RETAINING 432667 (24617)	EA	1	*	*	*	*	*	*			29	13
PO	5340-333-6078	CLIP, TUBE, FUEL AND VENT LINE 8329624 (19207)	EA	6	*	*	*	*	*	*			29	14

CA, EA, EB

BA, BB, DA, DB

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip cntry	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			Figure No.	Item No.
		0306-TANKS, LINES, FITTINGS AND HEADERS—Continued												
PO	5340-881-5303	CLAMP, FUEL LINE AND VENT TUBE MS21333-45 (96906)	EA	1	*	*	*	*	*	*			29	15
PO	2910-917-0768	TUBE ASSEMBLY, FUEL LINE, TANK TO FUEL PUMP 11657398 (19207)	EA	1	*	*	*	*	*	*			29	16
PO	5340-286-2494	CLAMP, FUEL LINE FRONT TUBE MS21333-36 (96906)	EA	1	*	*	*	*	*	*			29	17
PO	5306-283-0407	BOLT, FUEL LINE FRONT TUBE CLAMP ATTACHING 9409106 (24617)	EA	1	*	*	*	*	*	*			29	18
PO	2910-179-5503	LINE, FLEXIBLE FUEL 11640833 (19207)	EA	1	*	*	*	*	*	*			29	19
MO		TUBE ASSEMBLY, FUEL PUMP INLET 11657296 (19207)	EA	1									29	20
		MANUFACTURE FROM:												
PO	4710-971-4187	TUBE, STEEL, 0.250, O.D., 0.028 WALL 39.26 LG 11657296-1 (19207)	FT	V	*	*	*	*	*	*				
PO	4730-014-2432	NUT, INVERTED FLARE 142432 (19207)	EA	1	*	*	*	*	*	*				
MO		TUBE, FILTER TO CARBURETOR USED ON VEHICLES BEFORE SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726) 944509 (65909)	EA	1									29	24
		MANUFACTURE FROM:												
PO	4710-289-2542	TUBE, STEEL, 0.250 O.D., 0.028 WALL, 39.26 LG 944509-1 (65909)	FT	V	*	*	*	*	*	*				
PO	4730-014-2427	NUT, INVERTED FLARE 142427 (24617)	EA	1	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NASH code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
MO		0306—TANKS, LINES, FITTINGS AND HEADERS—Continued TUBE ASSEMBLY, FUEL FILTER HOSE TO CARBURETOR USED ON VEHICLES AFTER SERIAL NO. 28679 (M715), 13576 (M725) 10001 (M276) 11657840 (19207)	EA	1									29	24
PO	4730-014-2427	MANUFACTURE FROM: NUT, INVERTED FLARE 142427 (24617)	EA	1	*	*	*	*	*	*				
PO	4710-289-2542	TUBE, STEEL, 0.312 O.D., 0.028 WALL 11657840-1 (19207)	FT	V	*	*	*	*	*	*				
PO	5305-068-0502	SCREW, CLAMP ATTACHING MS90725-6 (96906)	EA	1	*	*	*	*	*	*			29	25
X20		TANK ASSEMBLY, FUEL 11657380 (19207)	EA	1	*	*	*	*	*	*			29	26
PO	2910-917-0732	TANK, FUEL 11657381 (19207)	EA	1	*	*	*	*	*	*			30	1
PO	4730-012-7951	PLUG, DRAIN 127951 (24617)	EA	1	*	*	*	*	*	*			30	17
PO	5330-443-8049	TAPE, ANTI-SQUEAK 10883265-2 (19207)	EA	4	*	*	*	*	*	*			30	18
PO	5330-196-8802	TAPE, ANTI-SQUEAK 10883265-1 (19207)	EA	1	*	*	*	*	*	*			30	19
PO	5310-853-9335	NUT, TANK STRAP ATTACHING MS35691-13 (96906)	EA	2	*	*	*	*	*	*			30	2
PO		NUT, ASSEMBLY, TANK STRAP ATTACHING 11641036 (19207)	EA	2	*	*	*	*	*	*			30	3
PO	2910-119-0851	BRACKET, STRAP MOUNTING 11657384 (19207)	EA	2	*	*	*	*	*	*			30	4
PO	5306-151-6256	BOLT, TANK STRAP ATTACHING 11657386 (19207)	EA	2	*	*	*	*	*	*			30	5
PO	4730-908-6293	CLAMP, HOSE, FILLER HOSE ATTACHING MS35842-15 (96906)	EA	1	*	*	*	*	*	*			30	6
PO	2530-900-3143	GROMMET, HOSE PROTECTING 11657126-2 (19207)	EA	1	*	*	*	*	*	*			30	7

CA, EA, EB

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SACR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cat/eqy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a) Figure No.	(b) Item No.
					1-20	21-50	51-100	1-20	21-50	51-100				
		0306-TANKS, LINES, FITTINGS AND HEADERS-Continued												
PO	2530-900-3115	GROMMET, HOSE PROTECTING 11657126-1 (19207) BA, BB, DA, DB	EA	1	*	*	*	*	*	*			30	7
PO		HOSE, FILLER TUBE TO TANK 11657393 (19207) CA	EA	1	*	*	*	*	*	*			30	8
PO		HOSE, FILLER TUBE TO TANK 11658078 (19207) EA, EB	EA	1	*	*	*	*	*	*			30	8
PO		2530-900-3048 HOSE, FILLER TUBE TO TANK 11657387 (19207) BA, BB, DA, DB	EA	1	*	*	*	*	*	*			30	8
PO		4730-908-6294 CLAMP, HOSE, FILLER HOSE ATTACHING MS35842-16 (96906)	EA	1	*	*	*	*	*	*			30	9
PO		5305-269-2802 SCREW, FILLER TUBE ATTACHING MS90726-59 (96906) BA, BB, DA, DB	EA	4	*	*	*	*	*	*			30	10
PO		2910-136-2171 TUBE ASSEMBLY, FUEL TANK FILLER 11640969 (19207)	EA	1	*	*	*	*	*	*			30	11
PO		2910-119-0852 TUBE ASSEMBLY, FUEL TANK FILLER 11662526 (19207) CA, EA, EB	EA	1	*	*	*	*	*	*			30	11
PO		4730-202-6063 SCREEN ASSEMBLY, FILLER TUBE 8329781 (19207) BA, BB, DA, DB	EA	1	*	*	*	*	*	*			30	12
PO		2910-459-8447 CAP, FUEL TANK MS53075-1 (96906)	EA	1	*	*	*	*	*	*			30	13
PO	5310-696-5177 NUT, PLAIN, HEXAGON, FILLER TUBE ATTACHING 8328482 (19207) BA, BB, DA, DB	EA	4	*	*	*	*	*	*			30	14	
PO	5310-012-0388 WASHER, FLAT, FILLER TUBE ATTACHING MS27183-15 (96906) BA, BB, DA, DB	EA	2	*	*	*	*	*	*			30	15	
PO	2910-136-2172 STRAP, FUEL TANK SUPPORT 11657388 (19207)	EA	2	*	*	*	*	*	*			30	16	
PO	4730-889-6135 CONNECTION, WINDSHIELD WIPER TUBE 137405 (24617)	EA	1	*	*	*	*	*	*			25	5	

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr maint allow per 100 equip enrgy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
MO		0306 - TANKS, LINES, FITTINGS AND HEADERS—Continued TUBE ASSEMBLY, FUEL PUMP TO WINDSHIELD WIPER HOSE 11657919 (19207)	EA	1									25	17
PO	4710-971-4187	TUBE, STEEL, 0.250 O.D., 0.028 WALL, 2.62 LG 11657919-1 (19207)	FT	V	*	*	*	*	*	*			25	18
PO	4730-014-2432	NUT, INVERTED FLARE 142432 (24617)	EA	1	*	*	*	*	*	*			25	19
PO		HOSE, FUEL PUMP TO WINDSHIELD WIPER ZZ-H617 (80244)	EA	1	*	*	*	*	*	*			25	26
PO		CLAMP, HOSE, WIPER HOSE 11640805-4 (19207)	EA	1	*	*	*	*	*	*			25	28
PO	5340-282-7539	CLIP, TUBE, FUEL PUMP INLET TUBE MS21333-46 (96906)	EA	1	*	*	*	*	*	*			N	1
PO	2805-220-3634	CLIP, FUEL PUMP INLET TUBE 7416464 (19207)	EA	2	*	*	*	*	*	*			N	1
PO	2540-461-2758	SPACER, FUEL PUMP INLET TUBE CLIP 11657453 (19207)	EA	2	*	*	*	*	*	*			N	1
PO	5305-462-7043	SCREW, AND LOCKWASHER, CLIP AND SPACER ATTACHING 187993 (24617)	EA	2	*	*	*	*	*	*			N	1
PO	5310-012-0393	WASHER, FLAT, CLIP AND SPACER ATTACHING MS27183-12 (96906)	EA	2	*	*	*	*	*	*			N	1
PO	5120-670-9821	CLIP, WIPER HOSE 192108 (24617)	EA	1	*	*	*	*	*	*			N	1
PO	5310-853-9335	NUT, WIPER HOSE CLIP ATTACHING MS35691-13 (96906)	EA	1	*	*	*	*	*	*			N	1
PO	4030-243-4445	GROMMET, FILLER TUBE 7375036 (19207)	EA	1	*	*	*	*	*	*			N	1
		CA, EA, EB												

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr alt per 100 equip enigy	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0308—GOVERNOR AND CONTROLS												
PO	5330-159-3249	GASKET, GOVERNOR 11640784 (19207)	EA	2	*	*	*	*	*	*			24	5
X20		SPACER, GOVERNOR TO CARBURETOR 11657634 (19207)	EA	1	*	*	*	*	*	*			24	6
PO	2910-135-6534	GOVERNOR, USED ON VEHICLES AFTER SERIAL NO. 28680 (M715), 13577 (M725), 10001 (M726) 11640981 (19207)	EA	1	*	*	*	*	*	*			24	7
PO	4730-137-9236	CLAMP, HOSE 11640805-3 (19207)	EA	2	*	*	*	*	*	*			24	8
PO		HOSE, GOVERNOR VENT 11657469-4 (19207)	EA	1	*	*	*	*	*	*			24	9
PF		KIT, GOVERNOR RETROFIT 990298 (65909)	EA	1	*	*	*	*	*	*				
		0309—FUEL FILTER												
PO	2540-900-3162	KIT, FUEL LINE FILTER 5704410 (19207)	EA	1	*	*	*	*	*	*			29	1
		COMPOSED OF:												
PO	4730-908-6293	4-CLAMP MS35842-15 (96906)	EA	4	*	*	*	*	*	*			29	2
X1		2-HOSE, FILTER 11657394-6 (19207)											29	3
X1		1-FILTER, FUEL 11640815 (19207)											29	4
		0312—ACCELERATOR & CHOKE CONTROLS												
PO	5305-984-6189	SCREW, CONTROL WIRE STOP MS35206-241 (96906)	EA	1	*	*	*	*	*	*			31	1
PO	5306-159-3827	SPRING, CARBURETOR CHOKE CABLE 11657696 (19207)	EA	1	*	*	*	*	*	*			31	2

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip cntgcy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0312-ACCELERATOR & CHOKE CONTROLS-Continued												
PO	2590-226-2150	SPRING, ACCELERATOR RETRACTING 11657084 (19207)	EA	1	*	*	*	*	*	*			31	3
PO	5340-769-7867	GROMMET, CHOKE CONTROL CABLE 7697867 (19207)	EA	1	*	*	*	*	*	*			31	4
PO	5310-696-5177	NUT, HEX & LOCK WASHER, CHOKE CABLE CONTROL 8328482 (19207)	EA	1	*	*	*	*	*	*			31	5
PO	2910-917-0867	CABLE ASSEMBLY, CHOKE CONTROL 8686901-1 (19207)	EA	1	*	*	*	*	*	*			31	6
PO	5310-080-6004	WASHER MS27183-14 (96906)	EA	1	*	*	*	*	*	*			31	7
PO	3120-765-3302	BUSHING, ACCELERATOR BELLCRANK ASSEMBLY 11640912 (19207)	EA	2	*	*	*	*	*	*			31	8
PO	2910-119-0855	BRACKET, ASSEMBLY ACCELERATOR BELLCRANK SUPPORT 11657078 (19207)	EA	1	*	*	*	*	*	*			31	9
PO	2910-119-0856	ROD, ACCELERATOR 11662527 (19207)	EA	1	*	*	*	*	*	*			31	10
PO	2910-119-0857	PEDAL ASSEMBLY, ACCELERATOR 11640888 (19207)	EA	1	*	*	*	*	*	*			31	11
PO	5305-984-7363	SCREW, ACCELERATOR PEDAL & TRIM PLATE MS35191-272 (96906)	EA	2	*	*	*	*	*	*			31	12
PO	2910-476-6566	PLATE, ACCELERATOR PEDAL TRIM 11657088 (19207)	EA	1	*	*	*	*	*	*			31	13
PO	5310-722-5658	WASHER, ACCELERATOR PEDAL BALL STUD MS35338-46 (96906)	EA	2	*	*	*	*	*	*			31	14
PO	5307-145-1760	BALL, STUD, ACCELERATOR PEDAL 11657082 (19207)	EA	2	*	*	*	*	*	*			31	15
PO	5310-124-9265	NUT, HEX & LOCK WASHER, ACCELERATOR ROD ASSEMBLY 7966348 (19207)	EA	3	*	*	*	*	*	*			31	16

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip entry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		0312-ACCELERATOR & CHOKE CONTROLS-Continued												
PO	2910-119-0854	BELLCRANK ASSEMBLY 11657080 (19207)	EA	1	*	*	*	*	*	*			31	17
PO	5315-842-3044	PIN, COTTER MS24665-283 (96906)	EA	1	*	*	*	*	*	*			31	18
PO	5315-839-5820	PIN, COTTER MS9245-27 (96906)	EA	1	*	*	*	*	*	*			31	19
PO	5315-464-7129	PIN, CLEVIS 11640915 (19207)	EA	1	*	*	*	*	*	*			31	20
PO	2910-119-0858	BRACKET, ACCELERATOR CONTROL CONDUIT ASSEMBLY SUPPORT 11657083 (19207)	EA	1	*	*	*	*	*	*			31	21
PO	5306-286-1504	SCREW, RETAINING, ACCELERATOR CONTROL CONDUIT ASSEMBLY 9409098 (24617)	EA	1	*	*	*	*	*	*			31	22
PO	5340-462-7045	CLIP, ACCELERATOR CONTROL CONDUIT ASSEMBLY, RETAINING 11640740 (19207)	EA	2	*	*	*	*	*	*			31	23
PO	5340-128-1572	SPACER, ACCELERATOR CONTROL CONDUIT ASSEMBLY 11657085 (19207)	EA	1	*	*	*	*	*	*			31	24
PO	2540-737-1193	STOP, CONTROL WIRE 7371193 (19207)	EA	1	*	*	*	*	*	*			31	25
PO		SCREW, ACCELERATOR BELLCRANK SUPPORT BRACKET ASSY. & ACCELERATOR SPRING ANCHOR CLIP 272475 (24617)	EA	3	*	*	*	*	*	*			31	26
PO	2910-917-0610	SPRING, ACCELERATOR RETRACTING 11657086 (19207)	EA	1	*	*	*	*	*	*			31	27
PO	2590-443-8077	CLIP, ACCELERATOR SPRING ANCHOR 11657087 (19207)	EA	1	*	*	*	*	*	*			31	28

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) DSMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr slw per 100 equip catrgy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		0312-ACCELERATOR & CHOKE CONTROLS-Continued												
PO	2510-832-6463	CABLE, CONDUIT ASSEMBLY, ACCELERATOR CONTROL 11641015 (19207)	EA	1	*	*	*	*	*	*			31	29
PO	2530-443-8017	BOOT, ACCELERATOR CABLE 7044900 (19207)	EA	1	*	*	*	*	*	*			31	30
PO	2590-693-0612	THROTTLE, (USED W/ 100 AMP. ALT. KIT) 7373341 (19207)	EA	1	*	*	*	*	*	*				


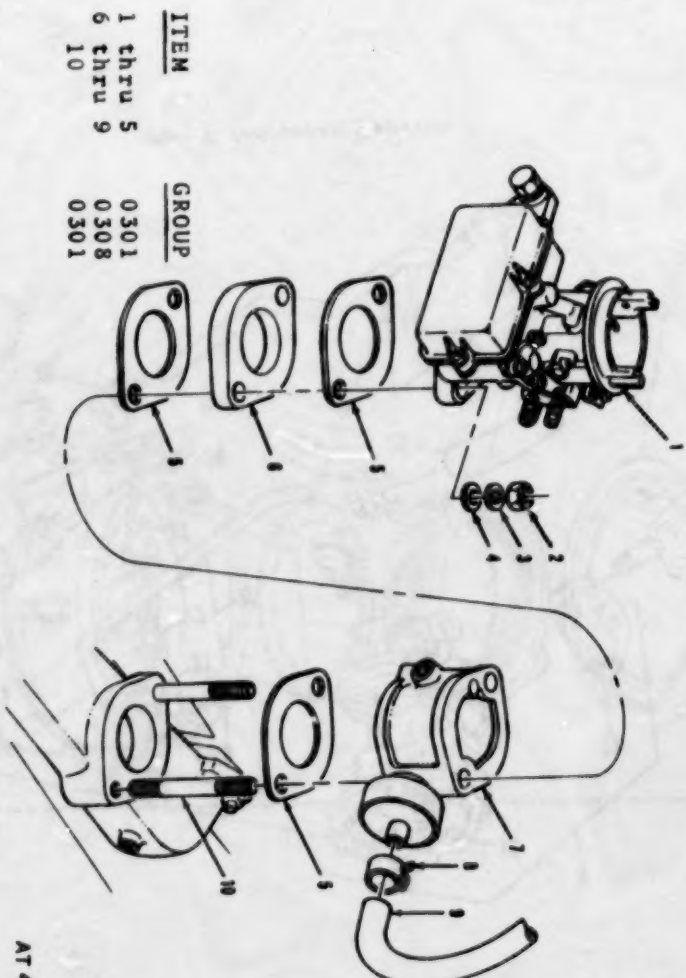


Figure 24. Carburetor and Governor

AT 41264

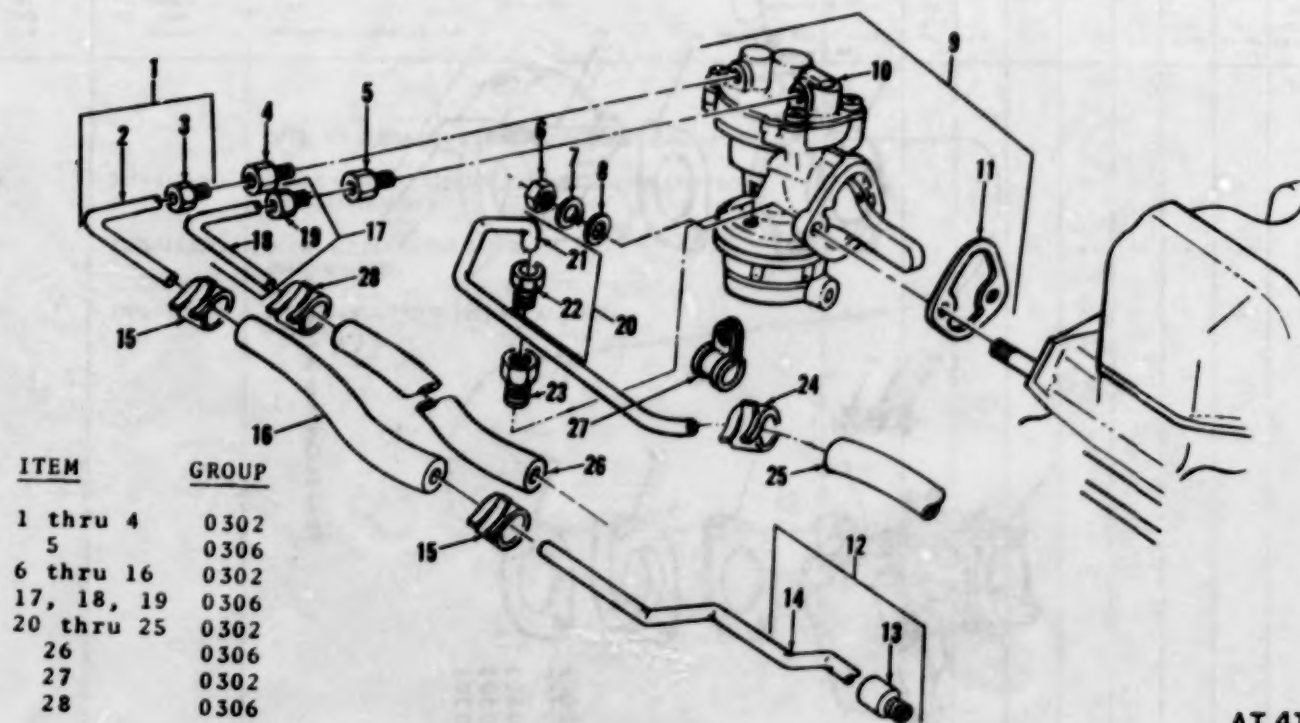

AT 41297

Figure 25. Fuel Pump and Related Parts

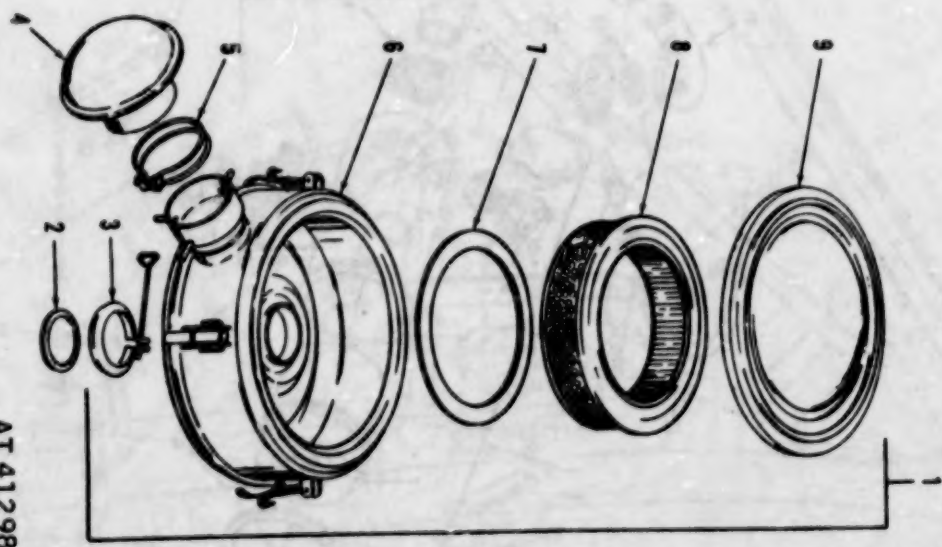


Figure 26. Air Cleaner Assembly

AT 41298

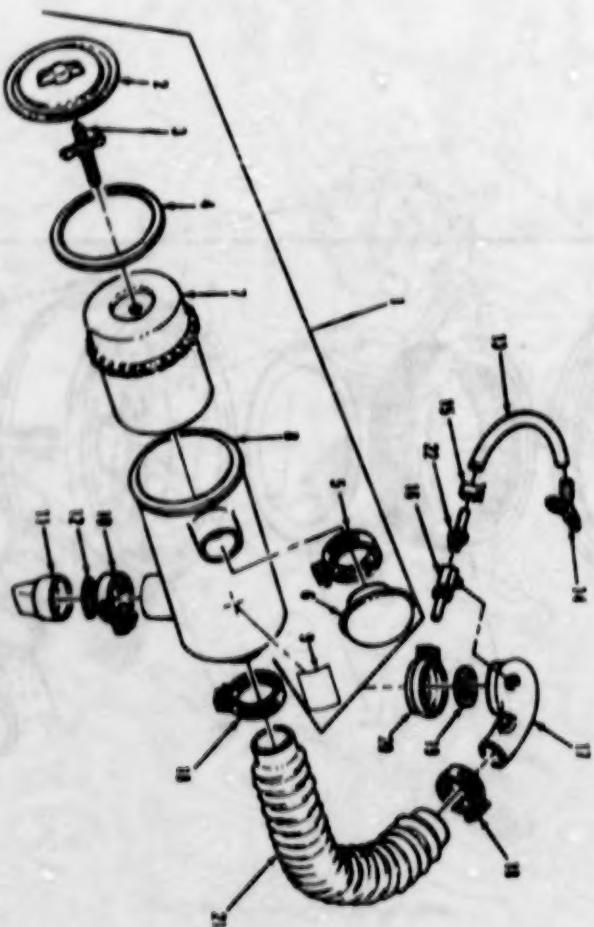


Figure 27. Air Cleaner and Related Parts

AT 41263

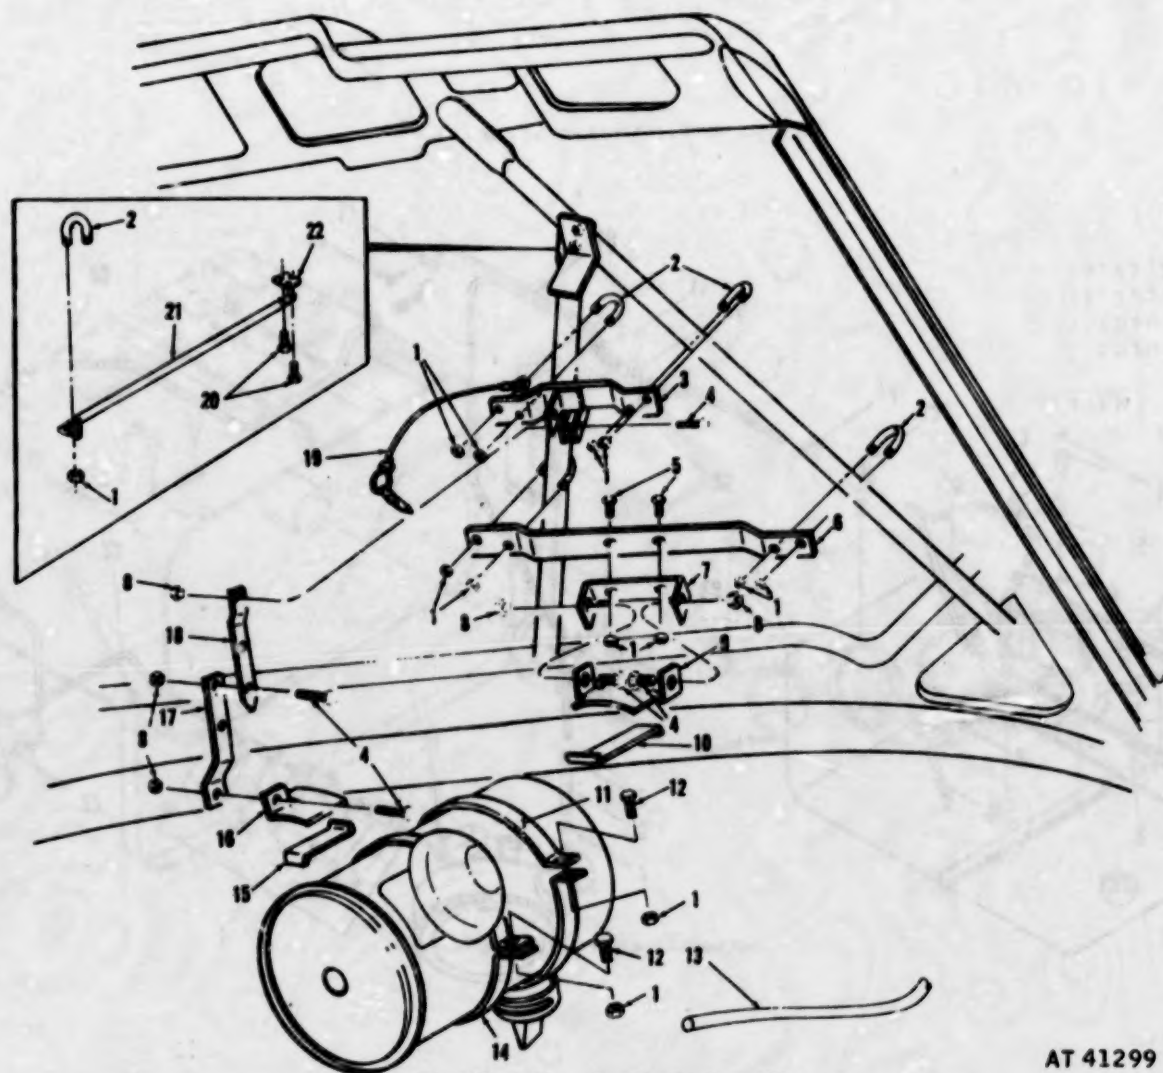


Figure 28. Air Cleaner Attaching Brackets and Parts

AT 41299


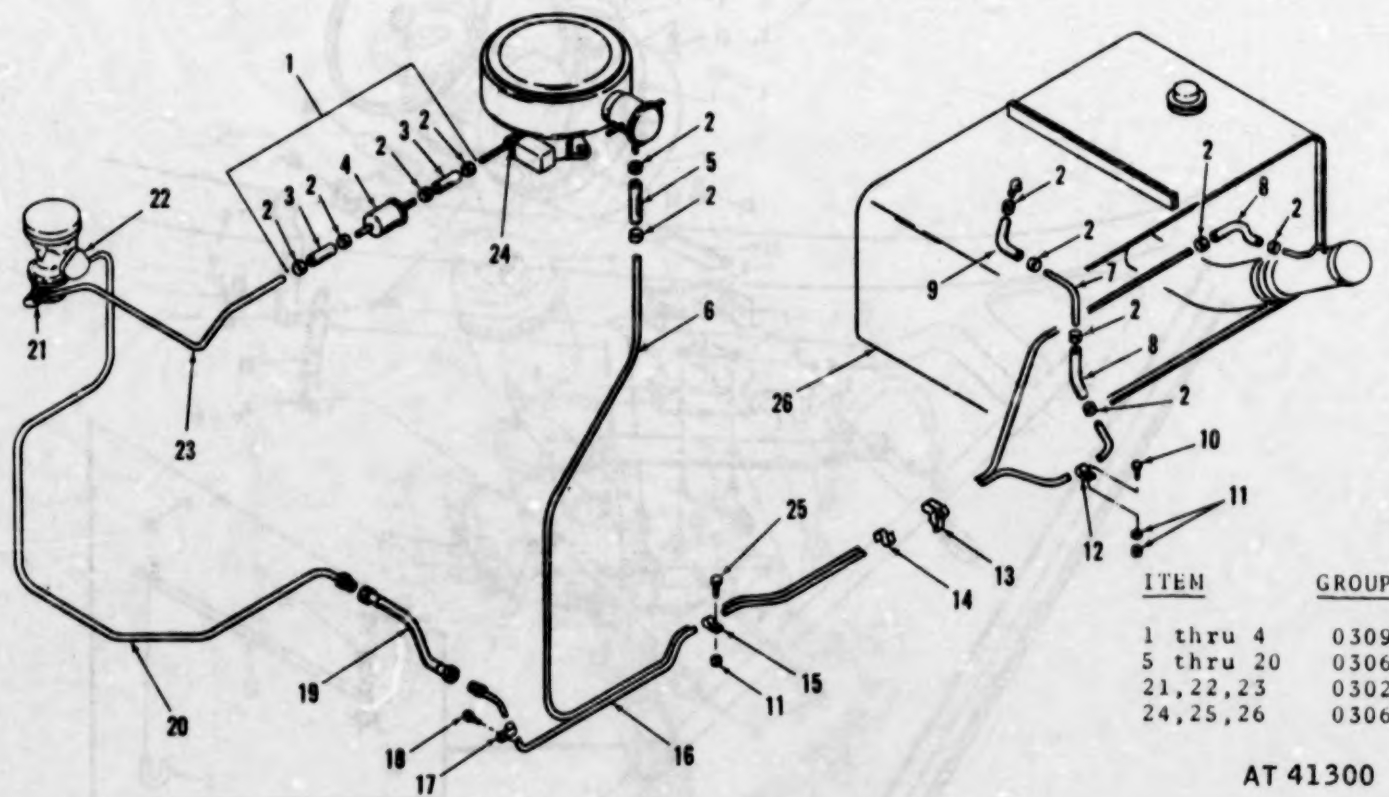


Figure 29. Fuel Lines and Fittings

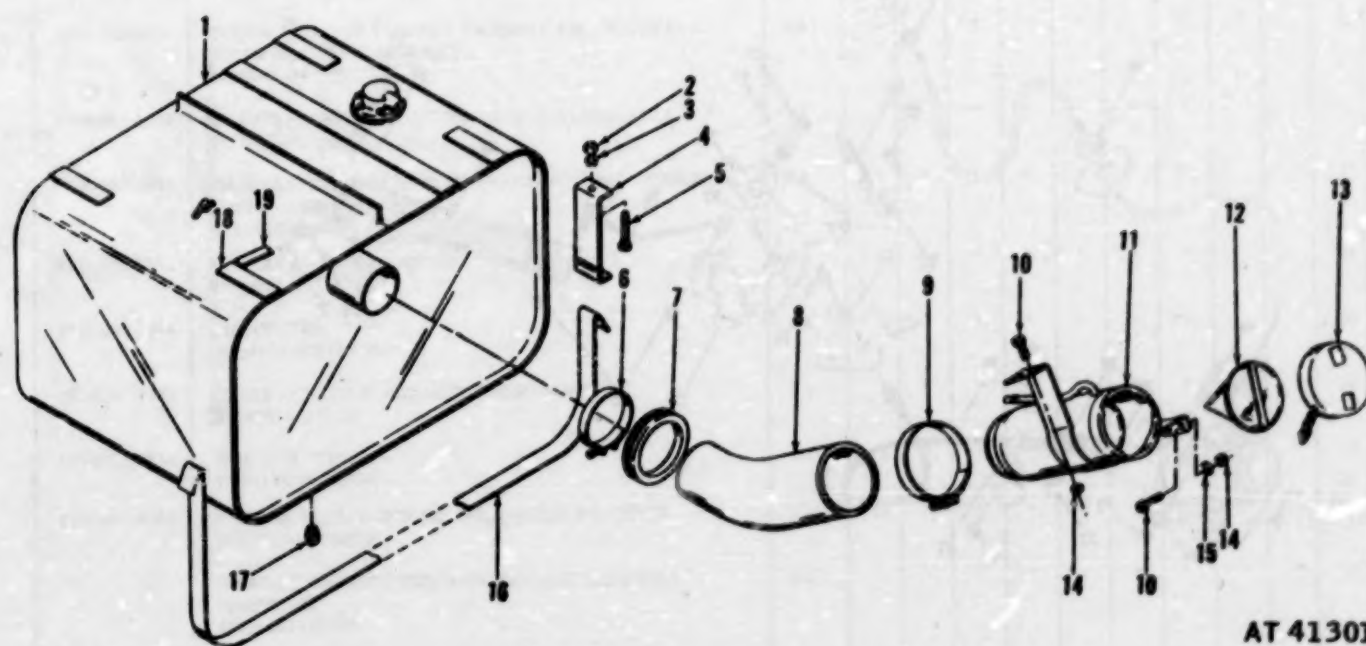

AT 41301

Figure 30. Fuel Tank and Related Parts

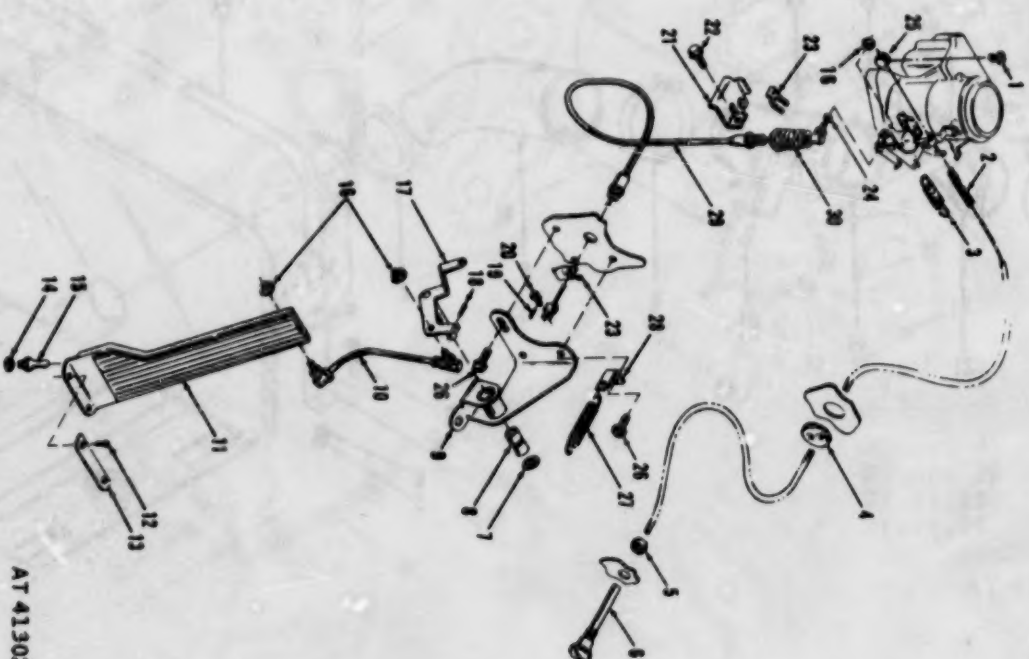


Figure 31. Accel. var. Throttle and Choke Controls

AT 41302

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBS code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day G6 maint. allowance			(8) 1 yr slw per 100 equip catgry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		GROUP 04—EXHAUST SYSTEM												
		0401—MUFFLER AND PIPES												
PO	5306-225-9030	SCREW, EXHAUST TAIL PIPE HANGER CABLE ASSEMBLY, UPPER MOUNTING BRACKET MS90726-34 (96906)	EA	2	*	*	*	*	*	*			32	1
PO	5310-081-4219	WASHER, FLAT, EXHAUST HANGERS AND BRACKETS MS27183-12 (96906)	EA	7	*	*	*	*	*	*			32	2
PO	2990-488-3491	BRACKET, EXHAUST TAIL PIPE HANGER CABLE ASSEMBLY, UPPER MOUNTING 11656843 (19207)	EA	1	*	*	*	*	*	*			32	3
PO	5315-177-7742	PIN, CLEVIS CABLE HANGER 9416017 (24617)	EA	3	*	*	*	*	*	*			32	4
PO	5315-842-3044	PIN, COTTER MS24665-283 (96906)	EA	4	*	*	*	*	*	*			32	5
PO	2990-246-3930	CABLE ASSEMBLY, EXHAUST PIPE HANGER 11640836 (19207)	EA	2	*	*	*	*	*	*			32	6
PO	5310-835-2036	NUT, JAM, 7/16-20 MS35691-29 (96906)	EA	4	*	*	*	*	*	*			32	7
PO	5310-809-4085	WASHER, FLAT, MUFFLER AND HANGER BRACKETS MS27183-16 (96906)	EA	10	*	*	*	*	*	*			32	8
X20		BRACKET, EXHAUST PIPE HANGER CABLE ASSEMBLY MOUNTING 11656853 (19207)	EA	4	*	*	*	*	*	*			32	9
PO	5306-225-9093	SCREW, CLAMP AND INSULATOR, 5/16-24 x 1-1/2 MS90726-38 (96906)	EA	1	*	*	*	*	*	*			32	10
PO	5310-982-4912	NUT MS51943-34 (96906)	EA	3	*	*	*	*	*	*			32	11
PO		INSULATOR KIT, TAIL PIPE 11656990 (19207)	EA	1	*	*	*	*	*	*			32	12


SECTION H. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBS code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day GS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip enjoy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0401—MUFFLER AND PIPES—Continued												
PO	2990-400-7027	STRAP, EXHAUST TAIL PIPE INSULATOR ASSEMBLY MOUNTING 11656988 (19207)	EA	1	*	*	*	*	*	*			32	13
PO	5306-225-9091	SCREW, INSULATOR, 5/16-24 x 1-1/4 MS90726-36 (96906)	EA	1	*	*	*	*	*	*			32	14
PO	5310-407-9566	WASHER, LOCK, 5/16 MS35338-45 (96906)	EA	1	*	*	*	*	*	*			32	15
PO	2990-869-6073	EXHAUST, TAIL PIPE ASSEMBLY 11656994 (19207)	EA	1	*	*	*	*	*	*			32	16
PO	2990-443-4809	PIPE, EXHAUST, FRONT, KIT 5704408 (19207)	EA	1	*	*	*	*	*	*			32	
		COMPOSED OF:												
PO	2990-917-0836	1-GASKET, FLANGE 11656964 (19207)			*	*	*	*	*	*			32	17
X1		1-PIPE, EXHAUST 11656993-1 (19207)											32	24
PO	5305-710-4194	3-BOLT, 7/16-20 x 1-1/2 123852 (24617)			*	*	*	*	*	*			32	25
PO	5310-126-5367	3-NUT, 7/16-20 272712 (24617)			*	*	*	*	*	*			32	26
X1		1-PIPE EXTENSION 11657693 (19207)											32	28
PO	2990-917-0836	GASKET, MUFFLER FLANGE 11656964 (19207)	EA	2	*	*	*	*	*	*			32	17
PO	2990-917-0836	GASKET, EXHAUST PIPE FLANGE 11656964 (19207)	EA	1	*	*	*	*	*	*			32	17
PO	2990-917-0733	MUFFLER ASSEMBLY 11640722 (19207)	EA	1	*	*	*	*	*	*			32	18

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip enlgy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			Figure No.	Item No.
		0401 - MUFFLER AND PIPES - Continued												
PO	5305-710-4195	SCREW, MUFFLER FLANGE AND PIPE FLANGE, ATT, 7/16-20 x 1-3/4 MS90726-90 (96906)	EA	6	*	*	*	*	*	*			32	19
PO	5310-994-1006	NUT, LOCK, 7/16-20 MS51943-38 (96906)	EA	6	*	*	*	*	*	*			32	20
X20		BRACKET, TO ATTACH PIPE ASSEMBLY 11656879 (19207)	EA	1	*	*	*	*	*	*			32	21
PO	5310-814-0673	NUT MS51943-33 (96906)	EA	2	*	*	*	*	*	*			32	22
PO	5340-784-1709	CLAMP ASSEMBLY, EXHAUST PIPE 8704441 (19207)	EA	1	*	*	*	*	*	*			32	23
PO	5305-710-4194	SCREW, PIPE TO MANIFOLD MS90726-89 (96906)	EA	2	*	*	*	*	*	*			32	25
PO	5305-710-4194	SCREW, TO ATTACH EXTENSION MS90726-89 (96906)	EA	3	*	*	*	*	*	*			32	25
PO	5310-126-5367	NUT MS21045-47 (96906)	EA	2	*	*	*	*	*	*			32	26
PO	5310-126-5367	NUT MS21045-47 (96906)	EA	3	*	*	*	*	*	*			32	26
PO	2805-400-4835	GASKET, EXHAUST PIPE FLANGE 11640841 (19207)	EA	1	*	*	*	*	*	*			32	27
PO	5310-754-0848	PIN, CLEVIS CABLE HANGER 9411483 (24617)	EA	1	*	*	*	*	*	*			32	29
PO	5310-889-2527	WASHER, LOCK, 5/16 MS45904-72 (96906)	EA	1	*	*	*	*	*	*			32	30
PO		EXTENSION, EXHAUST PIPE 11658076 (19207)	EA	1	*	*	*	*	*	*			32	31

EA, EB

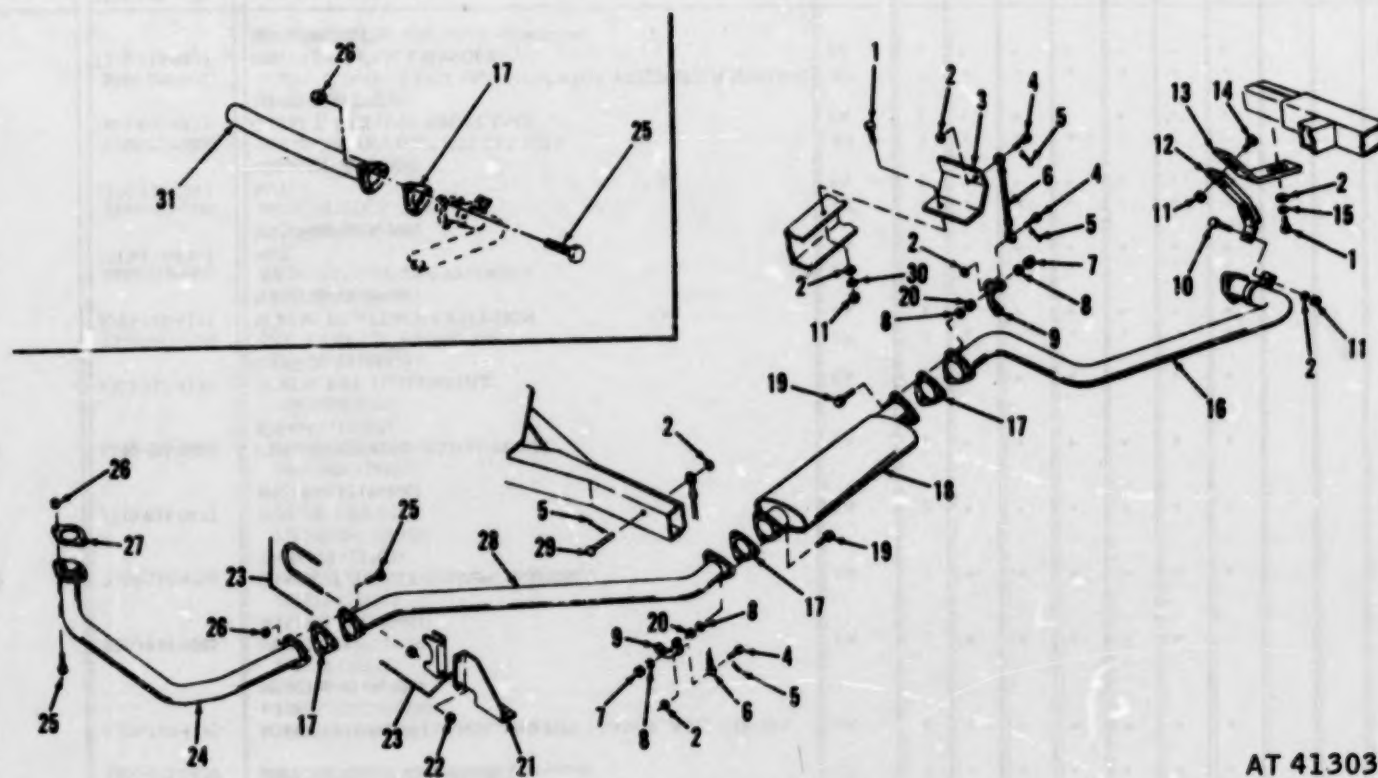

AT 41303

Figure 32. Muffler, Exhaust Pipes and Related Parts

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day GS maint. allowance			(7) 90-day GS maint. allowance			(8) 1-yr allow per 100 equip category	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-180	(a) 1-30	(b) 31-90	(c) 91-180			(a) Figure No.	(b) Item No.
		GROUP 05—COOLING SYSTEM												
		0501—RADIATOR												
PO	4730-550-8263	CLAMP, HOSE OUTLET 7965959 (19207)	EA	1	*	*	*	*	*	*			33	1
PG	2930-933-3719	HOSE ASSEMBLY, RADIATOR OUTLET 11657531 (19207)	EA	1	*	*	*	*	*	*			33	2
PO	4730-908-3193	CLAMP, HOSE, TO ATTACH RADIATOR INLET HOSE MS35842-12 (96906)	EA	3	*	*	*	*	*	*			33	3
PO	2930-083-9560	CAP, RADIATOR ASSEMBLY 11640710 (19207)	EA	1	*	*	*	*	*	*			33	4
PO	5340-066-8094	CLAMP, OVERFLOW TUBE HOLDDOWN, 7 x 5/16 MS21322-6 (96906)	EA	2	*	*	*	*	*	*			33	5
PO	4720-477-1800	HOSE, INLET UPPER 11657289 (19207)	EA	1	*	*	*	*	*	*			33	6
PO	5340-792-8125	BUMPER, RUBBER 11640874 (19207)	EA	1	*	*	*	*	*	*			33	7
PO	2930-119-0662	SHROUD, RADIATOR 11657748 (19207)	EA	1	*	*	*	*	*	*			33	8
PO	5306-275-1629	BOLT, HEX HEAD, RADIATOR SHROUD 7369880-1 (19207)	EA	4	*	*	*	*	*	*			33	9
PO	5310-012-0388	WASHER, 5/16, RADIATOR TO BODY SUPPORT MS27183-15 (96906)	EA	4	*	*	*	*	*	*			33	10
PO	5315-298-1481	PIN, RADIATOR CAP, CHAIN RETAINER MS24665-357 (96906)	EA	1	*	*	*	*	*	*			33	11
POR	2930-933-3548	RADIATOR ASSEMBLY AND DRAIN COCK 11657726 (19207)	EA	1	*	*	*	*	*	*			33	12
PO	4820-849-1220	COCK, DRAIN, RADIATOR MS35782-5 (96906)	EA	1	*	*	*	*	*	*			33	13

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty in lot	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr alt per 100 equip catgry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(11) 1-30	(12) 31-60	(13) 61-100	(14) 1-30	(15) 31-60	(16) 61-100			(17) Figure No.	(18) Item No.
		0501 - RADIATOR - Continued												
PO	5310-737-2590	NUT, SPEED "J", 5/16-10 7372590 (19207)	EA	4	*	*	*	*	*	*			33	14
MO		TUBE, OVERFLOW 992343 (65909)	EA	1									33	15
		MANUFACTURE FROM:												
PO		HOSE, RUBBER, 4375 O.D., .2875 I.D., 31" LG F63340 (39125)	FT	V	*	*	*	*	*	*				
		0503 - THERMOSTATS AND HOUSING GASKETS												
PO	5310-880-7746	NUT, HEXAGON MS51968-5 (96906)	EA	3	*	*	*	*	*	*			34	16
PO	5310-407-9566	WASHER, TO ATTACH THERMOSTAT HOUSING, SPACER AND GASKETS MS35338-45 (96906)	EA	3	*	*	*	*	*	*			34	17
PO	2930-040-2613	HOUSING, THERMOSTAT 8332060 (19207)	EA	1	*	*	*	*	*	*			34	18
PO	2930-699-9021	GASKET, THERMOSTAT HOUSING AND SPACER 8328456 (19207)	EA	2	*	*	*	*	*	*			34	19
PO	6620-933-3598	THERMOSTAT ASSEMBLY, ENGINE 11662554 (19207)	EA	1	*	*	*	*	*	*			34	20
PO	2930-198-7141	SPACER, THERMOSTAT HOUSING 11656962 (19207)	EA	1	*	*	*	*	*	*			34	21
PO	4730-250-0393	ELBOW, BY PASS TUBE 11640709 (19207)	EA	2	*	*	*	*	*	*			34	22
PO		STUD, WATER OUTLET ELBOW 11656958 (19207)	EA	3	*	*	*	*	*	*			34	23
		0504 - WATER PUMP												
PO	5306-225-8510	SCREW, CAP, HEX HEAD, 5/16-18 x 3-1/2, WATER PUMP MS907525-46 (96906)	EA	1	*	*	*	*	*	*			34	4

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr air per 100 equip catgey	(9) Depot maint air per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0504—WATER PUMP—Continued												
PO	5310-081-4219	WASHER, FLAT, WATER PUMP, 5/16 MS27183-12 (96906)	EA	8	*	*	*	*	*	*			34	5
PO	5310-407-9566	WASHER, LOCK, WATER PUMP, 5/16 MS35338-45 (96906)	EA	8	*	*	*	*	*	*			34	6
PO	4730-908-3194	CLAMP, WATER PUMP INLET CAP MS35842-11 (96906)	EA	1	*	*	*	*	*	*			34	7
PO	2930-453-8808	CAP, WATER PUMP INLET 11657669 (19207)	EA	1	*	*	*	*	*	*			34	8
PO	2930-933-3721	PARTS KIT, ENGINE WATER PUMP 704426 (19207)	EA	1	*	*	*	*	*	*			34	9
PO	5330-463-0470	GASKET, WATER PUMP 11657675 (19207)	EA	1	*	*	*	*	*	*			34	10
XI		PUMP ASSEMBLY, WATER AND PULLEY 11657631 (19207)	EA	1									34	11
PO	5340-908-3193	CLAMP, WATER PUMP TO ENGINE BLOCK HOSE MS35842-12 (96906)	EA	2	*	*	*	*	*	*			34	12
PO	4720-442-5759	HOSE, WATER PUMP TO ENGINE BLOCK 11657630 (19207)	EA	1	*	*	*	*	*	*			34	13
PO	5340-463-0482	CLAMP, WATER OUTLET TO CYLINDER HEAD HOSE 432714 (24617)	EA	2	*	*	*	*	*	*			34	14
PO	4720-456-1315	HOSE, WATER OUTLET SPACER TO CYLINDER HEAD 11656959 (19207)	EA	1	*	*	*	*	*	*			34	15
PO	4730-908-3194	CLAMP, WATER PUMP TO INTAKE MANIFOLD HOSE MS35842-11 (96906)	EA	2	*	*	*	*	*	*			34	7
PO	2930-456-1314	HOSE, WATER PUMP TO INTAKE MANIFOLD 11657629 (19207)	EA	1	*	*	*	*	*	*			34	24
PO	5310-880-7746	NUT, HEX, WATER PUMP, 5/16-24 MS51968-5 (96906)	EA	7	*	*	*	*	*	*			34	25

8

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SBR code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 20-day D6 maint. allowance			(7) 20-day G6 maint. allowance			(8) 1-yr alt per 100 equip entry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		0505 FAN ASSEMBLY												
PO	5306-225-8499	SCREW, CAP. HEX HEAD, 5/16-18 x 1 MS90725-34 (96906)	EA	4	*	*	*	*	*	*			34	1
PO	5310-407-9566	WASHER, LOCK, FAN MOUNTING, 5/16 MS35338-45 (96906)	EA	4	*	*	*	*	*	*			34	2
PO	2930-168-2340	FAN ASSEMBLY, RADIATOR 11657642 (19207)	EA	1	*	*	*	*	*	*			34	3
PO	3030-130-5209	BELT, V. SET, FAN AND ALTERNATOR MS51065-42-3 (96906)	EA	1	*	*	*	*	*	*			34	26


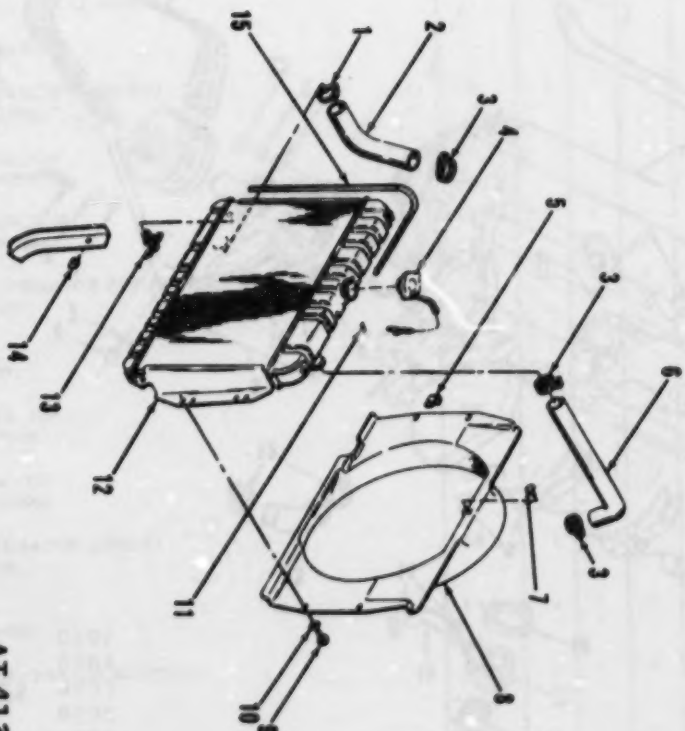


Figure 33. Radiator, Shroud and Related Parts

AT 41304

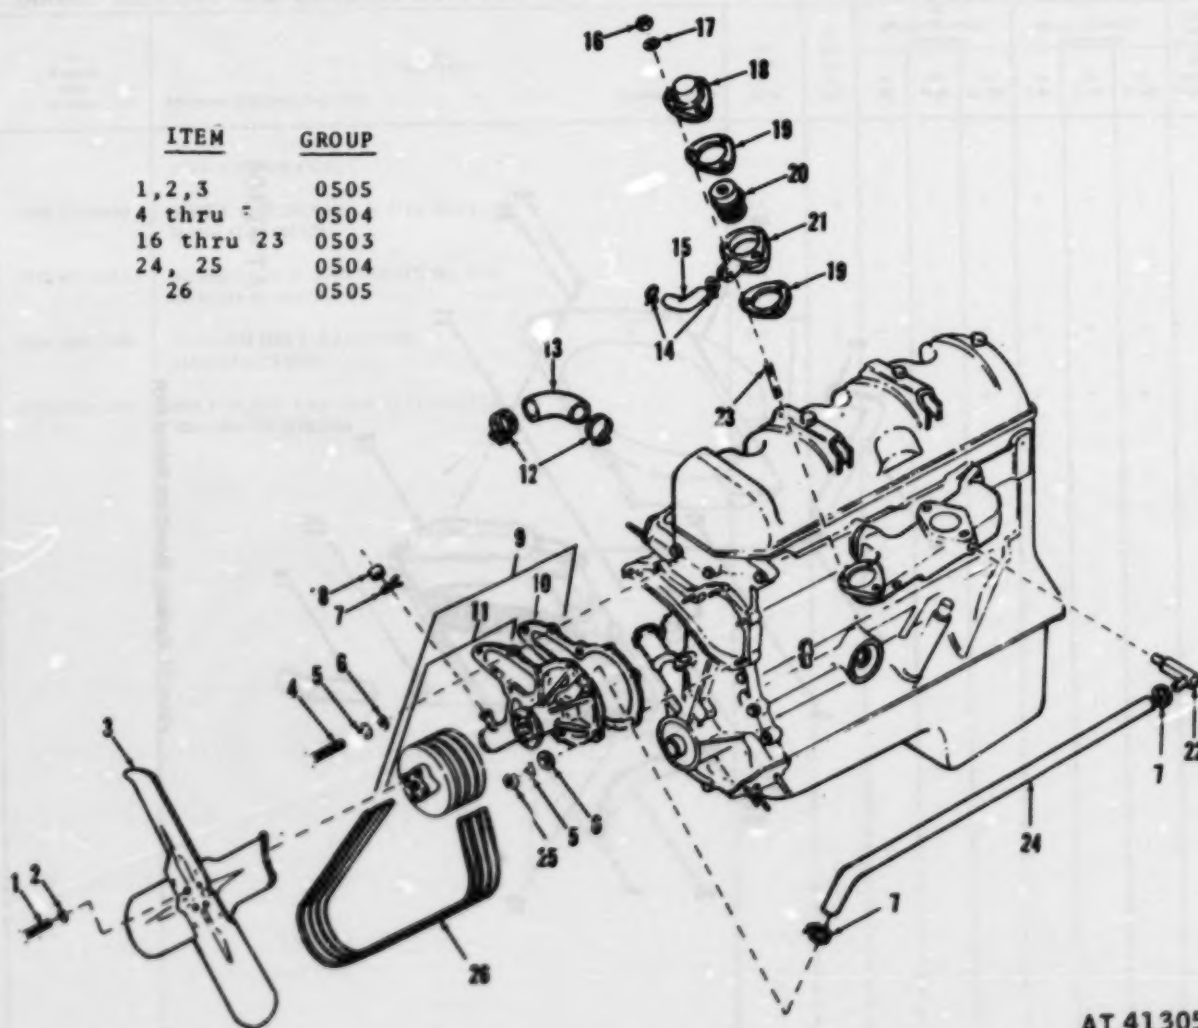

ITEM	GROUP
1, 2, 3	0505
4 thru 7	0504
16 thru 23	0503
24, 25	0504
26	0505

AT 41305

Figure 34. Cooling Fan, Water Pump, Thermostat and Related Parts

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SAR code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr alt per 100 equip catgry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-50	(b) 51-100	(c) 101-150	(a) 1-50	(b) 51-100	(c) 101-150			(a) Figure No.	(b) Item No.
		GROUP 06 ELECTRICAL SYSTEM												
		0601 ALTERNATOR												
PO	5306-226-4837	SCREW, ALTERNATOR BRACKET MS90728-44 (96906)	EA	2	*	*	*	*	*	*			35	1
PO	5310-407-9566	WASHER, LOCK, 5/16 MS5338-45 (96906)	EA	3	*	*	*	*	*	*			35	2
PO	5310-081-4219	WASHER, PLAIN, 5/16 MS27183-12 (96906)	EA	1	*	*	*	*	*	*			35	3
PO	2920-247-0003	BRACKET, ALTERNATOR ADJUSTING 11657287 (19207)	EA	1	*	*	*	*	*	*			35	4
PO	5310-698-4460	WASHER 7966692 (19207)	EA	1	*	*	*	*	*	*			35	5
PO	5310-637-9541	WASHER, LOCK, 3/8 MS35338-46 (96906)	EA	4	*	*	*	*	*	*			35	6
PO	5305-018-0121	SCREW, 3/8-16 x 7/8 MS90728-59 (96906)	EA	1	*	*	*	*	*	*			35	7
X20		BRACE, ALTERNATOR SUPPORT 11657284 (19207)	EA	1	*	*	*	*	*	*			35	8
PO	5310-880-7746	NUT, 5/16-24 MS51968-5 (96906)	EA	1	*	*	*	*	*	*			35	9
PO	2590-474-5587	BRACKET, ALTERNATOR MOUNTING 11657293 (19207)	EA	1	*	*	*	*	*	*			35	10
PO	5305-269-2804	BOLT, 3/8-24 x 1-1/8 MS90726-61 (96906)	EA	1	*	*	*	*	*	*			35	11
X20		BRACKET, ALTERNATOR MOUNTING, FRONT 11657261 (19207)	EA	1	*	*	*	*	*	*			35	12
X20		BRACKET, ALTERNATOR MOUNTING, REAR 11657198 (19207)	EA	1	*	*	*	*	*	*			35	13

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS														
(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr str per 100 equip catgry	(9) Depot maint str per 100 equip	(10) Illustration	
					(6) 1-30	(6) 31-90	(6) 91-100	(7) 1-30	(7) 31-90	(7) 91-100			(10) Figure No.	(10) Item No.
		0601 ALTERNATOR Continued												
PO	5310-732-0559	NUT, 3/8-24 MS51968-8 (96906)	EA	1	*	*	*	*	*	*			35	14
PO	5305-442-2801	BOLT, ALTERNATOR FRONT AND REAR MOUNTING BRACKETS, 3/8-24 x 3/4 MS90726-58 (96906)	EA	1	*	*	*	*	*	*			35	15
PO	5305-825-8055	SCREW, CAP HEX HEAD, ALTERNATOR MOUNTING BRACKET ASSY., 7/16-14 x 1 MS53303-85 (96906)	EA	1	*	*	*	*	*	*			36	16
PO	5305-709-8522	SCREW, CAP, HEX HEAD, 7/16-14 x 1-1/4, ALTERNATOR BRACKET MS90727-87 (96906)	EA	1	*	*	*	*	*	*			35	17
PO	5310-209-0965	WASHER, LOCK, 7/16 MS53338-47 (96906)	EA	4	*	*	*	*	*	*			35	18
PO	5310-297-3251	NUT, 7/16-20 MS51968-11 (96906)	EA	1	*	*	*	*	*	*			35	19
PO	5305-710-4191	SCREW, CAP, HEX HEAD, ALTERNATOR, 7/16-20 x 1 MS90726-85 (96906)	EA	1	*	*	*	*	*	*			35	20
PO	5305-710-419	SCREW, 7/16-20 x 1-1/2 MS90726-89 (96906)	EA	1	*	*	*	*	*	*			35	21
PO	2920-917-072	PULLEY, ALTERNATOR 11657271 (19207)	EA	1	*	*	*	*	*	*			35	22
FOR	2920-909-248	ALTERNATOR, RECTIFIED, AC, 60 AMP 10929868 (19207)	EA	1	*	*	*	*	*	*			35	23
PO	5306-225-908	SCREW, CAP, HEX HEAD, ALTERNATOR SUPPORT BRACE MS90726-33 (96906)	EA	1	*	*	*	*	*	*			35	24
		0603 STARTING MOTOR												
XBO		PLATE, STARTER SWITCH 11657749 (19207)	EA	1	*	*	*	*	*	*			36	1
PO	5305-543-233	SCREW AND LOCK WASHER, PLATE MOUNTING 188749 (24617)	EA	4	*	*	*	*	*	*			36	2

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntgcy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0603 - STARTING MOTOR - Continued												
PO	5305-068-0501	BOLT, SWITCH MOUNTING, 1/4-20 x 5/8 MS90725-5 (96906)	EA	2	*	*	*	*	*	*			36	3
PO	2920-168-2339	SWITCH PUSH STARTER 11657929 (19207)	EA	1	*	*	*	*	*	*			36	4
PO		NUT, 1/4-20 8328462 (19207)	EA	2	*	*	*	*	*	*			36	5
PO	2920-457-6673	CABLE, STARTER SWITCH TO STARTER 11657802-4 (19207)	EA	1	*	*	*	*	*	*			36	6
PO	2920-927-3329	GASKET, STARTER TO F/W HOUSING 11657533 (19207)	EA	1	*	*	*	*	*	*			36	7
PO	5310-584-5272	LOCK WASHER, STARTER MOUNTING, 1/2 120384 (24617)	EA	2	*	*	*	*	*	*			36	8
PO	5305-071-1767	BOLT, STARTER MOUNTING, 1/2-13 x 1-1/8 MS90725-110 (96906)	EA	2	*	*	*	*	*	*			36	9
PF	2920-927-3328	KIT, STARTER, PACKING & THRUST WASHER 5704396 (19207)	EA	1	*	*	*	*	*	*				
		COMPOSED OF:												
X1		1-WASHER MAK-61A (19728)												
X1		1-WASHER MU-54 (19728)												
POR	2920-933-3727	STARTER ASSEMBLY 11640749 (19207)	EA	1	*	*	*	*	*	*			36	10
PF	2920-659-6916	SPRING, BRUSH SET MZ-19CS (19728)	EA	1	*	*	*	*	*	*			37	1
X2F	2920-927-3326	PLATE ASSEMBLY, BRUSH 945718 (65909)	EA	1	*	*	*	*	*	*			37	2

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SACR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntgty	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
PF	2920-622-3786	0603-STARTING MOTOR-Continued STARTER ASSEMBLY-Continued BEARING, SLEEVE, PINION HOUSING 11663031 (19207)	EA	1	*	*	*	*	*	*			37	3
PF	2920-933-3590	DRIVE, ENGINE ELECTRIC STARTER, STARTER MOTOR 11640751 (19207)	EA	1	*	*	*	*	*	*			37	4
PF	2920-933-3576	ARMATURE, STARTER 11640750 (19207)	EA	1	*	*	*	*	*	*			37	5
PF	2920-933-7473	HEAD ASSEMBLY, W/BEARING COMPUTER END 11662688 (19207)	EA	1	*	*	*	*	*	*			37	6
PF	2920-927-3327	KIT, STARTER 5704395 (19207)	EA	1	*	*	*	*	*	*				
		COMPOSED OF:												
X1		1-SNAP RING, STARTER PINION MCL-127 (19728)												
X1		1-RETAINER, PINION MCL-129A (19728)												
X1		1-WASHER, STARTER PINION MCL-132A (19728)												
PF	2920-927-3271	KIT, BRUSH SET 5704397 (19207)	EA	1	*	*	*	*	*	*				
		COMPOSED OF:												
X1		1-BRUSH SET MDL-50C (19728)												
X1		1-BRUSH SET, GROUNDED MDL-1063CS (19728)												
PO	2920-247-0013	0605 IGNITION COMPONENTS LEAD, ELECTRICAL, NO. 6 CYLINDER 11641027-6 (19207)	EA	1	*	*	*	*	*	*			38	1

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr slw per 100 equip catgry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		0605 IGNITION COMPONENTS Continued												
PO	2920-134-7643	SPARK PLUG MS35909-5 (96906)	EA	6	*	*	*	*	*	*			38	2
PO	2920-929-8321	LEAD, ELECTRICAL, NO. 5 CYLINDER 11641027-5 (19207)	EA	1	*	*	*	*	*	*			38	3
PO	2920-927-3296	LEAD, ELECTRICAL, NO. 4 CYLINDER 11641027-4 (19207)	EA	1	*	*	*	*	*	*			38	4
PO	2920-247-0012	LEAD, ELECTRICAL, NO. 3 CYLINDER 11641027-3 (19207)	EA	1	*	*	*	*	*	*			38	5
PO	4730-908-3193	CLAMP, SPARK PLUG LEAD, 6 WIRE MS35842-12 (96906)	EA	1	*	*	*	*	*	*			38	6
PO	2920-929-8322	LEAD, ELECTRICAL, NO. 2 CYLINDER 11641027-2 (19207)	EA	1	*	*	*	*	*	*			38	7
PO	2920-247-0014	LEAD, ELECTRICAL, NO. 1 CYLINDER 11641027-1 (19207)	EA	1	*	*	*	*	*	*			38	8
PO	4730-908-3194	CLAMP, SPARK PLUG LEAD, 4 WIRE MS35842-11 (96906)	EA	1	*	*	*	*	*	*			38	9
PO	4730-277-8273	ELBOW, INLET VENT 137421 (24617)	EA	1	*	*	*	*	*	*			38	10
PO	5310-880-7746	NUT, PLAIN, HEXAGON, IGNITOR MS51968-5 (96906)	EA	1	*	*	*	*	*	*			38	11
PO	5310-407-9566	WASHER, LOCK, IGNITOR MS35338-45 (96906)	EA	1	*	*	*	*	*	*			38	12
PO	5310-081-4219	WASHER, FLAT, IGNITOR MS27183-12 (96906)	EA	1	*	*	*	*	*	*			38	13
PO		ELBOW, OUTLET VENT 137420 (24617)	EA	1	*	*	*	*	*	*			38	14
FOR	2920-927-3279	IGNITOR ASSEMBLY 11640806 (19207)	EA	1	*	*	*	*	*	*			38	15

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty line in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		0605 - IGNITION COMPONENTS —Continued												
PO	2920-933-3577	IGNITOR ASSEMBLY—Continued COVER, DISTRIBUTOR CAP 7374883 (19207)	EA	1	*	*	*	*	*	*			39	1
PO	2920-737-4880	CAP ASSEMBLY, DISTRIBUTOR 7374880 (19207)	EA	1	*	*	*	*	*	*			39	2
PO	2920-933-3728	COIL, IGNITION 8712400 (19207)	EA	1	*	*	*	*	*	*			39	3
PO	2920-928-6138	BALLAST, IGNITOR 8712401 (19207)	EA	1	*	*	*	*	*	*			39	4
X20		RECEPTACLE, IGNITOR 1BF9 (19728)	EA	1	*	*	*	*	*	*			39	5
PF	2920-928-6137	SHAFT, EXTENSION 1AT2105S (19728)	EA	1	*	*	*	*	*	*			39	6
PF		GASKET, ADVANCE ARM 1AH115A (19728)	EA	1	*	*	*	*	*	*			39	7
X2F		ARM, ADVANCE 1AU103 (19728)	EA	1	*	*	*	*	*	*			39	8
PF	2920-928-6139	DRIVE SHAFT, IGNITOR 1AT1117 (19728)	EA	1	*	*	*	*	*	*			39	9
X2F		WEIGHT SET, IGNITOR 1GC2168LS (19728)	EA	1	*	*	*	*	*	*			39	10
X2F		SPRING SET, IGNITOR WEIGHT 1GS228S (19728)	EA	1	*	*	*	*	*	*			39	11
PO	2420-279-7377	LEAD, PRIMARY 118730 (24617)	EA	1	*	*	*	*	*	*			39	12
PO	2920-933-3591	REPAIR KIT, IGNITOR 5704414 (19207)	EA	1	*	*	*	*	*	*				
X1		COMPOSED OF: 1-PACKING, PREFORMED, COVER 11640748 (19207)											39	13

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SAGE code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip enrgy	(9) Laprot maint slw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
X1		0605-IGNITION COMPONENTS-Continued REPAIR KIT, IGNITOR-Continued 1-PACKING, PREFORMED, RECEPTACLE XA744AA (19728)											39	14
PO	2920-358-7498	1-CONTACT SET IGS2224LB (19728)			*	*	*	*	*	*			39	15
PO	2920-640-7230	1-ROTOR, IGNITOR IAU1066 (19728)			*	*	*	*	*	*			39	16
PO	5910-667-5076	1-CONDENSER PACKAGE IAT3076DS (19728)			*	*	*	*	*	*			39	17
PO	2920-443-4834	TUBE, IGNITOR VENT 11657286 (19207)	EA	1	*	*	*	*	*	*			20	2
		0607-INSTRUMENT PANEL												
PO	5310-616-8272	WASHER, LOCK, HARNESS MOUNTING 418123 (57733)	EA	1	*	*	*	*	*	*			40	1
PO	5310-752-6593	WASHER, HARNESS MOUNTING, OUTER 7526593 (19207)	EA	1	*	*	*	*	*	*			40	2
X20	2590-247-0016	HARNESS, WIRING INSTRUMENT CLUSTER 8376501 (19207)	EA	1	*	*	*	*	*	*			40	3
PO	2510-657-9746	FASTENER, CLUSTER TO INSTRUMENT PANEL 7533778 (19207)	EA	4	*	*	*	*	*	*			40	4
X20		PANEL, INSTRUMENT ASSEMBLY MS51399-2 (96906)	EA	1	*	*	*	*	*	*			40	5
PO	6685-936-2139	INDICATOR, TEMPERATURE MS24543-2 (96906)	EA	1	*	*	*	*	*	*			40	6
PO	5310-752-6591	NUT, PUSH ON, INSTRUMENT PANEL MOUNTING 7526591 (19207)	EA	4	*	*	*	*	*	*			40	7
PO	5325-757-1963	STUD, INSTRUMENT CLUSTER MOUNTING PLATE 7526590 (19207)	EA	4	*	*	*	*	*	*			40	8

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBS code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr depot maint allow per 100 equip catgry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(6) 1-50	(6) 51-100	(6) 101-150	(7) 1-50	(7) 51-100	(7) 101-150			(10) Figure No.	(10) Item No.
		0607—INSTRUMENT PANEL—Continued												
PO	6625-321-6365	INDICATOR, WITH CLAMP, BATTERY GENERATOR MS24532-2 (96906)	EA	1	*	*	*	*	*	*			40	9
PO	6210-699-9458	LAMP, PANEL ASSEMBLY R376500 (19207)	EA	2	*	*	*	*	*	*			40	10
PO	5310-013-8530	WASHER, LOCK, PANEL LIGHTS MOUNTING MS35338-38 (96906)	EA	6	*	*	*	*	*	*			40	11
PO	5310-550-1130	SCREW, MACHINE, PANEL LIGHTS MOUNTING MS35223-41 (96906)	EA	6	*	*	*	*	*	*			40	12
PO	6680-933-3600	INDICATOR, WITH CLAMP, LIQUID QUANTITY MS24544-2 (96906)	EA	1	*	*	*	*	*	*			40	13
PO	6210-699-9457	LAMP, HI-BEAM, INDICATOR ASSEMBLY R376499 (19207)	EA	1	*	*	*	*	*	*			40	14
PO	6240-266-9940	LAMP, INCANDESCENT, INSTRUMENT CLUSTER PANEL (24 VOLT) 454732 (24617)	EA	3	*	*	*	*	*	*			40	15
PO	6620-938-8212	INDICATOR, OIL PRESSURE MS24541-2 (96906)	EA	1	*	*	*	*	*	*			40	16
X20		PLATE, INSTRUMENT PANEL 119956-N (00000)	EA	1	*	*	*	*	*	*			40	17
PO	5305-285-5295	SCREW, LIGHT SWITCH MOUNTING 454787 (24617)	EA	4	*	*	*	*	*	*			40	18
X20		LEVER, IGNITION SWITCH WITH WASHER 5381088 (19207)	EA	1	*	*	*	*	*	*			40	19
PO	5930-699-9438	SWITCH, IGNITION MS39060-2 (96906)	EA	1	*	*	*	*	*	*			40	20
PO	2590-741-2641	PLATE, IGNITION SWITCH 7368523 (19207)	EA	1	*	*	*	*	*	*			40	21

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Usable on Code	(5) Unit of meas	(6) Qty inc in unit	(8) 30-day DS maint allowance			(7) 30-day GS maint allowance			(9) 1-yr allow per 100 equip cntgty	(10) Depot maint allow per 100 equip	(11) Illustration	
						(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0607 INSTRUMENT PANEL Continued													
PO	5930-307-8856	SWITCH, ASSEMBLY LIGHT MS51113-1 (96906)		EA	1	*	*	*	*	*	*			40	22
PO	5307-752-6594	STUD, CLUSTER HARNESS MOUNTING 7526594 (19207)		EA	1	*	*	*	*	*	*			40	23
PO	5310-619-5529	WASHER, HARNESS MOUNTING, INNER 7526592 (19207)		EA	1	*	*	*	*	*	*			40	24
PO	5310-934-9758	NUT, PLAIN, HEX, INSTRUMENT PANEL HARNESS MS35649-202 (96906)		EA	1	*	*	*	*	*	*			40	25
		0608—MISCELLANEOUS ITEMS													
PO	5305-984-6210	SCREW, CIRCUIT BREAKER BRACKET MS35206-263 (96906)	CA	EA	2	*	*	*	*	*	*			41	1
X20		BRACKET, CIRCUIT BREAKER 11662741 (19207)	CA	EA	1	*	*	*	*	*	*			41	2
PO	5925-466-1635	CIRCUIT BREAKER, MAIN 308132 (58464)	CA	EA	3	*	*	*	*	*	*			41	3
X20		BUSS BAR, CIRCUIT BREAKER 11662742 (19207)	CA	EA	1	*	*	*	*	*	*			41	4
X20		PLATE, COVER CIRCUIT BREAKER 380804 (58464)	CA	EA	1	*	*	*	*	*	*			41	5
PO	5305-879-7941	SCREW, COVER PLATE MS24617-31 (96906)	CA	EA	4	*	*	*	*	*	*			41	6
PO	5310-298-9261	NUT, CIRCUIT BREAKER 120614 (24617)	CA	EA	6	*	*	*	*	*	*			41	7
PO	5310-934-9758	NUT, CIRCUIT BREAKER BRACKET MS35649-202 (96906)	CA	EA	2	*	*	*	*	*	*			41	8
PO	5310-013-1052	LOCK WASHER, CIRCUIT BREAKER BRACKET MS35338-43 (96906)	CA	EA	2	*	*	*	*	*	*			41	9

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SRR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day GS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip cntry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-180	(a) 1-30	(b) 31-90	(c) 91-180			(a) Figure No.	(b) Item No.
		0608—MISCELLANEOUS ITEMS—Continued												
PO		RELAY, DIRECTIONAL SIGNAL SWITCH 10944542 (19207)	EA	1	*	*	*	*	*	*			42	1
PO	5930-928-6163	SWITCH, DIRECTIONAL SIGNAL MS53051 (96906)	EA	1	*	*	*	*	*	*			42	2
PO	6240-155-2714	LAMP, INCANDESCENT, TURN SIGNAL INDICATOR MS25231-31 (96906)	EA	2	*	*	*	*	*	*			42	3
PO	5305-285-5278	SCREW AND LOCK WASHER 454789 (24617)	EA	2	*	*	*	*	*	*			42	4
PO		SCREW AND LOCK WASHER, DIMMER SWITCH BRACKET 451953 (24617)	EA	3	*	*	*	*	*	*			42	5
X20		BRACKET, DIMMER SWITCH 11657848 (19207)	EA	1	*	*	*	*	*	*			42	6
PO	2590-801-2355	SWITCH, FOOT DIMMER MS53000-1 (96906)	EA	1	*	*	*	*	*	*			42	7
PO	2590-953-2177	SEAL, RUBBER DISTRIBUTOR BOX 8683543 (19207)	EA	1	*	*	*	*	*	*			42	8
PO	2590-050-8821	FLASHER, TURN INDICATOR 7050005 (19207)	EA	1	*	*	*	*	*	*			42	9
PO	5310-696-5172	SCREW AND LOCK WASHER 8328424 (19207)	EA	2	*	*	*	*	*	*			42	10
PO		RECEPTACLE, POWER OUTLET 8402359 (19207)	EA	1	*	*	*	*	*	*			43	1
			CA											
X20		PLATE, COVER POWER OUTLET 11662679 (19207)	EA	1	*	*	*	*	*	*			43	2
			CA											
PO	5305-883-0628	SCREW, MACHINE, RECEPTACLE MS24617-21 (96906)	EA	2	*	*	*	*	*	*			43	3
			CA											
MFO		WIRE ASSEMBLY RECEPTACLE, GROUND 11657990-1 (19207)	EA	1									43	7
			CA											

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip enrgy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		0608—MISCELLANEOUS ITEMS—Continued												
		WIRE ASSEMBLY RECEPTACLE, GROUND—Continued												
		MANUFACTURE FROM												
PO	5940-143-4780	TERMINAL MS25036-108 (96906)	EA	2	*	*	*	*	*	*			43	4
PF	6145-560-5481	CABLE, 10 IN. LG MIL-C-13486/1-5 (81349)	FT	V	*	*	*	*	*	*			43	5
PO	9905-752-4649	MARKER MS39020-1 (96906)	EA	2	*	*	*	*	*	*			43	6
MFO		WIRE RECEPTACLE FEED 11657990-2 (19207)	EA	1									43	7
		MANUFACTURE FROM:	CA											
PF	5940-143-4780	TERMINAL MS25036-108 (96906)	EA	2	*	*	*	*	*	*			43	4
PF	6145-560-5481	CABLE, 49 IN. LG MIL-C-13486/1-5 (81349)	FT	V	*	*	*	*	*	*			43	5
PF	9905-752-4649	MARKER MS39020-1 (96906)	EA	2	*	*	*	*	*	*			43	6
PO	5305-883-0628	SCREW, MACHINE MS24617-21 (96906)	EA	4	*	*	*	*	*	*			44	1
X20		BUSS BAR, BLOWER SWITCHES 11658185 (19207)	EA	1	*	*	*	*	*	*			44	2
PO	5930-655-1514	SWITCH MS35058-22 (96906)	EA	2	*	*	*	*	*	*			44	3
PO	9905-405-0225	PLATE, EXHAUST BLOWER SWITCH INSTRUMENT 11658573 (19207)	EA	1	*	*	*	*	*	*			44	4
PO	5930-755-0761	SWITCH, STOPLIGHT MS75063-1 (96906)	EA	1	*	*	*	*	*	*			53	6
		0609—LIGHTS												
PO	6220-500-0437	LAMP ASSEMBLY, BLACKOUT PARKING AND SIGNAL, FRONT MS53047-1 (96906)	EA	2	*	*	*	*	*	*			45	1

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) AMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr aw per 100 equip cntgcy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		0609—LIGHTS—Continued												
PO	5306-696-5377	BOLT, LOCK WASHER, BLACKOUT LAMP 3/8-16 x 5/8 9409110 (24617)	EA	4	*	*	*	*	*	*			45	2
X20		BRACKET, PARKING AND SIGNAL MOUNTING, RIGHT FRONT 11657849-2 (19207)	EA	1	*	*	*	*	*	*			45	3
PO	6220-403-9492	BRACKET, PARKING AND SIGNAL MOUNTING, LEFT FRONT 11657849-1 (19207)	EA	1	*	*	*	*	*	*			45	3
PO	5306-042-3569	BOLT AND LOCK WASHER, 3/8-16 x 3/4, BRACKET MOUNTING 423569 (24617)	EA	6	*	*	*	*	*	*			45	4
PO	6240-019-0877	LAMP, INCANDESCENT, BLACKOUT MARKER, 3 CANDLE POWER, 24 VOLT MS15770-1251 (96906)	EA	2	*	*	*	*	*	*			45	5
PO	6240-044-6914	LAMP, INCANDESCENT, TURN SIGNAL, BRAKE, 32 CANDLE POWER, 24 VOLT MS35478-1683 (96906)	EA	1	*	*	*	*	*	*			45	6
PO	5330-297-7106	GASKET, DOOR, PARKING AND SIGNAL MS24621-42 (96906)	EA	2	*	*	*	*	*	*			45	7
PO	6220-752-6030	DOOR ASSEMBLY, PARKING AND SIGNAL 7526030 (19207)	EA	2	*	*	*	*	*	*			45	8
PO	6220-179-5118	DOME LIGHT WITH RED LENS ASSEMBLY 11662550 (19207)	EA CA	1	*	*	*	*	*	*			46	1
PO		SCREW, SELF TAPPING, # 10-24 x 3/4 449627 (24617)	EA CA	2	*	*	*	*	*	*			46	2
PO	6240-019-3141	LAMP, INCANDESCENT, DOMELIGHT MS18005-4530 (96906)	EA CA	1	*	*	*	*	*	*			46	3
PO	6220-669-5623	LIGHT, TAIL AND STOP MS51329-1 (96906)	EA	2	*	*	*	*	*	*			47	1
PO	5306-696-5377	SCREW AND LOCK WASHER, LAMP 9409110 (24617)	EA	4	*	*	*	*	*	*			47	2

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NDS code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty to be unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr adv per equip category	(9) Direct maint adv per equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		0609—LIGHTS—Continued												
PO	6240-019-0877	LAMP, INCANDESCENT, BLACKOUT MARKER, 3 CANDLE POWER, 24 VOLT MS15770-1251 (96906)	EA	2	*	*	*	*	*	*			47	3
PO	6240-044-6914	LAMP, INCANDESCENT, TURN SIGNAL, BRAKE, 32 CANDLE POWER, 24 VOLT MS35478-1663 (96906)	EA	1	*	*	*	*	*	*			47	4
PO	5330-297-7106	GASKET, DOOR, PARKING AND SIGNAL MS24621-42 (96906)	EA	2	*	*	*	*	*	*			47	5
PO	6220-752-6020	DOOR ASSEMBLY, TAIL AND SIGNAL 7526020 (19207)	EA	2	*	*	*	*	*	*			47	6
PO	6220-846-9745	LIGHT, BLACKOUT STOP 8741645 (19207)	EA	1	*	*	*	*	*	*			48	1
PO		SCREW AND LOCK WASHER, BLACKOUT MOUNTING, 5/16-24 x 1/2 9409100 (24617)	EA	2	*	*	*	*	*	*			48	2
PO	6240-019-0877	LAMP, INCANDESCENT, BLACKOUT MARKER, 3 CANDLE POWER, 24 VOLT MS15770-1251 (96906)	EA	1	*	*	*	*	*	*			48	3
PO	6220-678-9047	GASKET, DOOR, BLACKOUT, REAR 864464 (19207)	EA	1	*	*	*	*	*	*			48	4
PO	6220-775-2384	DOOR ASSEMBLY, BLACKOUT STOP 8741646 (19207)	EA	1	*	*	*	*	*	*			48	5
PO	5305-285-3942	SCREW, OVAL HEAD, BLACKOUT STOP 7320691 (19207)	EA	2	*	*	*	*	*	*			48	6
PO	6220-678-9046	HEADLIGHT ASSEMBLY, BLACKOUT MS51318-1 (96906)	EA	1	*	*	*	*	*	*			49	1
X20		WASHER, BEARING, BLACKOUT DRIVING LAMP 5294507 (19207)	EA	1	*	*	*	*	*	*			49	2

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SBR code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 20-day D6 maint. allowance			(7) 20-day G6 maint. allowance			(8) 1-yr air per 100 equip entry	(9) Depot maint air per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0609—LIGHTS—Continued												
PO	5306-042-3562	SCREW AND LOCK WASHER, BLACKOUT SUPPORT, 5/16-18 x 1 423562 (24617)	EA	1	*	*	*	*	*	*			49	3
X20	6220-737-2820	SUPPORT ASSEMBLY, BLACKOUT HEADLAMP 11657844 (19207)	EA	1	*	*	*	*	*	*			49	4
PO	5310-582-5965	WASHER, LOCK, SPRING, BLACKOUT HEADLAMP MOUNTING 3/8 MS35338-44 (96906)	EA	1	*	*	*	*	*	*			49	5
PO	5310-013-4566	NUT, BLACKOUT HEADLIGHT MOUNTING, 3/8-16 134566 (24617)	EA	1	*	*	*	*	*	*			49	6
PO	5310-698-4460	WASHER, FLAT, BLACKOUT LIGHT MOUNTING 664228 (24617)	EA	1	*	*	*	*	*	*			49	7
PO	5310-880-7744	NUT, HEX, BLACKOUT LAMP SUPPORT, 5/16-18 MS51967-5 (96906)	EA	3	*	*	*	*	*	*			49	8
PO	5306-042-3560	SCREW AND LOCK WASHER, BLACKOUT SUPPORT, 5/16-18 x 1/2 423560 (24617)	EA	2	*	*	*	*	*	*			49	9
PO	6220-695-1107	DOOR ASSEMBLY, BLACKOUT HEAD LIGHT WITH SCREWS 7525940 (19207)	EA	1	*	*	*	*	*	*			49	10
PO	6220-819-7028	SEALED UNIT AND WIRING, BLACKOUT DRIVING LIGHT 8747987 (19207)	EA	1	*	*	*	*	*	*			49	11
PO	6220-693-4174	SPRING, SEALED UNIT, RETAINING 7320711 (19207)	EA	3	*	*	*	*	*	*			49	12
PO	6220-933-3990	HEADLIGHT ASSEMBLY 8332127 (19207)	EA	2	*	*	*	*	*	*			50	1
PO	5305-984-6210	SCREW, HEADLAMP GROUND CABLE, 10-24 x 1/2 159920 (24617)	EA	2	*	*	*	*	*	*			50	2
PO	5310-396-7691	WASHER, LOCK, 10 138479 (24617)	EA	8	*	*	*	*	*	*			50	3
PO	5305-068-0523	SCREW, HEADLIGHT TO GRILLE MS24621-42 (96906)	EA	8	*	*	*	*	*	*			50	4
PO	6240-686-4168	LAMP, INCANDESCENT HEADLAMP 8741462 (19207)	EA	2	*	*	*	*	*	*			50	5

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NAC code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Usable on Code	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr slw per 100 equip enrty	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		0609 - LIGHTS - Continued												
PO	6220-695-1107	DOOR HEAD LAMP 7525940 (19207)		EA	2	*	*	*	*	*			50	6
PO	6220-300-9908	DOOR ASSEMBLY, HEADLIGHT 7525936 (19207)		EA	2	*	*	*	*	*			50	7
PO	6220-983-6920	LIGHT ASSEMBLY, SURGICAL 7351549 (19207)	CA	EA	1	*	*	*	*	*			51	1
PO	5305-990-8387	SCREW, SURGICAL LAMP MOUNTING 164430 (24617)	CA	EA	6	*	*	*	*	*			51	2
PO	5930-296-6318	SWITCH, SURGICAL LAMP MS39061-1 (96906)	CA	EA	1	*	*	*	*	*			51	3
PO	6240-295-2421	LAMP, SURGICAL 573141 (19207)	CA	EA	1	*	*	*	*	*			51	4
PO	6220-368-4940	LENS, SURGICAL LIGHT 7353816 (19207)	CA	EA	1	*	*	*	*	*			51	5
PO	6220-846-3445	SPOTLIGHT, ASSEMBLY 11662792 (19207)		EA	1	*	*	*	*	*			52	1
PO	6240-019-3141	LAMP, SPOTLIGHT MS18005-4530 (96906)		EA	1	*	*	*	*	*			52	2
PO	6220-160-0543	SWITCH, SPOTLIGHT 6453F (78977)	CA	EA	1	*	*	*	*	*			52	3
MO		LEAD, ELECTRICAL 11657989-4 (19207)	CA	EA	1	*							52	4
		MANUFACTURE FROM												
PO	6145-560-5481	CABLE, 6.25 LONG M13486/1-5 (08288)		FT	V	*	*	*	*	*				
PO	5975-660-5962	SHELL 8724494 (19207)	CA	EA	1	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMF code	(2) Federal stock Number	(3) Description Reference Number & Milg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D8 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr slw per 100 equip enlgy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0610—SENDING UNITS AND WARNING SWITCHES—Continued												
PO	6680-917-6023	TRANSMITTER, LIQUID QUANTITY, FUEL 7034597 (19207)	EA	1	*	*	*	*	*	*			53	4
PO	2910-737-5146	GASKET, FUEL TRANSMITTER 7375146 (19207)	EA	1	*	*	*	*	*	*			53	5
PO	6685-814-5271	TRANSMITTER, ENGINE TEMP MS24537-1 (96906)	EA	1	*	*	*	*	*	*			53	7
PO	2590-248-0628	0611—HORN CABLE, HORN TERMINAL ASSEMBLY 11657627 (19207)	EA	1	*	*	*	*	*	*			54	1
PO	2920-455-1274	PLATE, TERMINAL CONTACT ASSEMBLY 11640779 (19207)	EA	1	*	*	*	*	*	*			54	2
PO	5305-840-6694	SCREW, HORN CONDUCTOR BRACKET MS24621-29 (96906)	EA	1	*	*	*	*	*	*			54	3
PO	5310-809-8544	WASHER, FLAT, HORN CONDUCTOR MS27183-7 (96906)	EA	1	*	*	*	*	*	*			54	4
X20		BRACKET, HORN CONDUCTOR 11657172 (19207)	EA	1	*	*	*	*	*	*			54	5
X20		HOUSING, HORN BRUSH 11657169 (19207)	EA	1	*	*	*	*	*	*			54	6
PO	5977-182-7529	SHAFT, HORN CONDUCTOR 11657171 (19207)	EA	1	*	*	*	*	*	*			54	7
PO	5360-159-3825	SPRING, HORN SWITCH 11657546 (19207)	EA	1	*	*	*	*	*	*			54	8
PO		INSULATOR, HORN HOUSING 11657170 (19207)	EA	1	*	*	*	*	*	*			54	9
PO	5930-933-3742	SWITCH, HORN ASSEMBLY 11640681 (19207)	EA	1	*	*	*	*	*	*			54	12
PO	5940-453-5100	LEAD, ELECTRICAL HORN 11657555 (19207)	EA	1	*	*	*	*	*	*			54	13

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Units of meas	(5) Qty in unit	(6) 30-day TSM maint allowance			(7) 90-day TSM maint allowance			(8) 1-yr new per 100 equip enclap	(9) 1-yr TSM maint new per 100 equip	(10) Illustration	
					(6) 1-30	(6) 31-60	(6) 61-180	(7) 1-30	(7) 31-60	(7) 61-180			(10) Figure No.	(10) Item No.
		0611—HORN—Continued												
PO	2590-115-0531	FLANGE, BOOT AND CONTACT ASSEMBLY 11637554 (19207)	EA	1	0	0	0	0	0	0			54	14
PO	5330-052-6805	PACKING, PREFORMED, HORN BUTTON 11640771 (19207)	EA	1	0	0	0	0	0	0			54	15
PO	2590-113-0749	BUTTON, HORN ASSEMBLY 11637563 (19207)	EA	1	0	0	0	0	0	0			54	16
PO	3305-042-0454	SCREW, ϕ 6-32 x 3/4 420454 (24617)	EA	3	0	0	0	0	0	0			54	17
PO	5310-082-1404	WASHER, FLAT ϕ 6 MS27183-5 (96906)	EA	3	0	0	0	0	0	0			54	18
PO	5340-178-1445	SPACER, HORN SWITCH 11640999 (19207)	EA	1	0	0	0	0	0	0			54	19
PO	5305-068-0506	BOLT, HORN ATTACHING, 1/4-28 x 3/4 MS90728-6 (96906)	EA	2	0	0	0	0	0	0			54	20
PO	5310-209-0786	WASHER, LOCK, 1/4 MS35335-33 (96906)	EA	2	0	0	0	0	0	0			54	21
PO	2590-628-6140	HORN ASSEMBLY MS51074-1 (96906)	EA	1	0	0	0	0	0	0			54	22
X30		BRACKET, HORN MOUNTING 11637654 (19207)	EA	1	0	0	0	0	0	0			54	23
PO	5306-283-0408	BOLT, HORN MOUNTING BRACKET 9409107 (24617)	EA	2	0	0	0	0	0	0			54	24
		0612—BATTERIES, STORAGE												
PO	2590-933-3299	CABLE ASSEMBLY, BATTERY TO BATTERY 11637802-3 (19207)	EA	1	0	0	0	0	0	0			55	1
PO	5310-732-0558	NUT, PLAIN, HEXAGON BATTERY CABLE MS51967-8 (96906)	EA	3	0	0	0	0	0	0			55	2

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NARS code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty line in unit	(6) 30-day D6 metal allowance			(7) 30-day D8 metal allowance			(8) 1-yr alt per 100 equip category	(9) Dept metal alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		0612-BATTERIES, STORAGE												
PO	5940-105-9943	TERMINAL, NEGATIVE, BATTERY POST 7012172 (19207)	EA	2	*	*	*	*	*	*			55	3
POU	6140-057-2553	BATTERY, STORAGE MS35000-1 (96906)	EA	2	*	*	*	*	*	*			55	4
POU	6140-057-2554	BATTERY, STORAGE, 100 AMP MS35000-3 (96906)	EA	2	*	*	*	*	*	*			55	4
PO	5940-148-5170	TERMINAL, POSITIVE, BATTERY POST 7012171 (19207)	EA	2	*	*	*	*	*	*			55	5
PO	5310-880-7744	NUT, PLAIN, HEXAGON, BATTERY TO GROUND CABLE (1) TERMINAL (4) MS51967-5 (96906)	EA	5	*	*	*	*	*	*			55	6
PO	2590-917-0762	CABLE ASSEMBLY, BATTERY TO GROUND 11657802-2 (19207)	EA	1	*	*	*	*	*	*			55	7
PO	5310-514-6674	BOLT, TERMINAL ATTACHING MS35335-34 (96906)	EA	4	*	*	*	*	*	*			55	8
PO	5310-889-2527	WASHER, LOCK, BATTERY TO GROUND CABLE MS45904-72 (96906)	EA	1	*	*	*	*	*	*			55	9
PO	5306-018-7993	SCREW, ASSEMBLED WASHER, BATTERY TO GROUND CABLE 187993 (24617)	EA	1	*	*	*	*	*	*			55	10
PO	2590-917-5856	CABLE ASSEMBLY, BATTERY TO STARTER SWITCH 11657802-1 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			55	11
MO		CABLE ASSEMBLY, BATTERY TO STARTER SWITCH 125 IN. LONG 11657802-6 (19207) CA	EA	1									55	11
		MANUFACTURE FROM:												
PO	6145-805-3351	CABLE, 125" long 7056675 (19207)	FT	V	*	*	*	*	*	*				
PO	5940-503-6079	TERMINAL 7056723 (19207)	EA	1	*	*	*	*	*	*				
PO	5970-705-6637	SLEEVE 7056637 (19207)	EA	1	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty in unit	(6) 30-day D6 maint. allowance			(7) 30-day G5 maint. allowance			(8) 1-yr alt. per 100 equip catgry	(9) Dept. main alt. per 100 equip	(10) Illustration	
					(a) 1-35	(b) 36-60	(c) 61-100	(a) 1-35	(b) 36-60	(c) 61-100			(a) Figure No.	(b) Item No.
PO	9905-841-4445	0612-BATTERIES, STORAGE-Continued BAND MS39020-2 (96906)	EA	2	*	*	*	*	*	*				
PO	2590-436-4589	LID, BATTERY BOX 11657425 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			56	1
X1		LID ASSEMBLY 11657280 (19207)	EA	1									56	2
PO	5330-159-6280	WEATHERSTRIP, LID, SIDES 8393193-4 (19207)	EA	2	*	*	*	*	*	*			56	3
X20		BRACKET, RETAINER, REAR LID 11657267 (19207)	EA	2	*	*	*	*	*	*			56	4
PO	5305-543-2335	SCREW, ASSEMBLED WASHER, RETAINER BRACKETS 188749 (24617)	EA	8	*	*	*	*	*	*			56	5
X20		BRACKET, RETAINER, FRONT, LID 11657283 (19207)	EA	2	*	*	*	*	*	*			56	6
PO	2540-933-3300	WEATHERSTRIP, LID, FRONT AND REAR 8393193-5 (19207)	EA	2	*	*	*	*	*	*			56	7
PO	2590-490-0774	CLAMP, BATTERY HOLDDOWN 11657333 (19207)	EA	2	*	*	*	*	*	*			56	8
PO	5306-182-9387	ROD, BATTERY HOLDDOWN CLAMP 11657332 (19207)	EA	4	*	*	*	*	*	*			56	9
X20		BOX ASSEMBLY, BATTERY 11657235 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			56	10
X1		BOX ASSEMBLY 11657236 (19207)	EA	1									56	11
PO	5340-158-0223	CLAMP, BATTERY BOX HOOK 11621626 (19207)	EA	2	*	*	*	*	*	*			56	12
PO	5305-543-2335	SCREW, MACHINE, BRACKET AND CLAMP ATTACHING 188749 (24617)	EA	8	*	*	*	*	*	*			56	5
X20		BRACKET, LID, RETAINING 11657267 (19207)	EA	2	*	*	*	*	*	*			56	4

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip entry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			Figure No.	Item No.
PO	5306-018-7527	0612-BATTERY STORAGE-Continued SCREW, ASSEMBLED WASHER BATTERY BOX MOUNTING 187527 (24617) BA, BB, DA, DB, EA, EB	EA	4	*	*	*	*	*	*			56	13
PO	5310-696-5172	NUT, PLAIN, HEXAGON, BATTERY HOLDDOWN CLAMP 8328424 (19207)	EA	4	*	*	*	*	*	*			56	14
PO	5325-147-5275	GROMMET, BATTERY BOX OUTLET CABLE 11640808 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			56	15
PO	4730-908-3193	CLAMP, HOSE, OUTLET TUBE MS35842-12 (96906) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			56	16
PO	4720-930-3142	HOSE, RUBBER, BATTERY BOX OUTLET 8763474-1 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			56	17
X20		COVER, BATTERY BOX 11658412 (19207) CA	EA	1	*	*	*	*	*	*			57	1
PO		WEATHERSTRIP, BATTERY BOX COVER 11658274-2 (19207)	EA	2	*	*	*	*	*	*			57	2
X20		PANEL ASSEMBLY, BATTERY BOX 11658496 (19207) CA	EA	1	*	*	*	*	*	*			57	3
PO	5310-088-1251	NUT, PLAIN, HEXAGON, SIDE PANEL ATTACHING MS51922-1 (96906)	EA	12	*	*	*	*	*	*			57	4
PO	5305-068-0502	SCREW, CAP, HEXAGON HEAD SIDE PANEL ATTACHING MS90725-6 (96906) CA	EA	12	*	*	*	*	*	*			57	5
PO	4730-909-8627	CLAMP, HOSE, BATTERY BOX VENT HOSE MS35842-13 (96906) CA	EA	1	*	*	*	*	*	*			57	6
PO	9330-147-5276	HOSE, BATTERY BOX VENT 11658313 (19207) CA	EA	1	*	*	*	*	*	*			57	7
PO	5340-158-0223	CLAMP, HOOK, BATTERY BOX 11621626 (19207) CA	EA	2	*	*	*	*	*	*			57	8
PO		SCREW, ASSEMBLED WASHER, HOOK CLAMP 191681 (24617) CA	EA	4	*	*	*	*	*	*			57	9
PO		SPACER, BATTERY HOLDDOWN CLAMP 11658594 (19207) CA	EA	4	*	*	*	*	*	*			57	

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMM code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntgty	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		0612- BATTERY, STORAGE-Continued												
PO		WEATHERSTRIP, BATTERY BOX COVER 11658274-1 (19207)	CA	EA	2	*	*	*	*	*	*		57	11
PO		DECAL, BATTERY BOX COVER 11657750 (19207)	CA	EA	1	*	*	*	*	*	*		57	12
		0613-CHASSIS WIRING HARNESS												
PO	5340-454-3640	CLIP, NYLON 11640737 (19207)		EA	9	*	*	*	*	*	*		58	1
X20		STRAP, ENGINE GROUND 7371311 (19207)		EA	1	*	*	*	*	*	*		58	2
PO	5310-061-1258	WASHER, LOCK, ENGINE MOUNTING TO SUPPORT, (2) GROUND STRAP (1) 178551 (24617)		EA	3	*	*	*	*	*	*		58	3
PO	5305-269-3211	BOLT, HEX, GROUND STRAP, 3/8-16 x 1 179839 (24617)		EA	1	*	*	*	*	*	*		58	4
PO	5310-080-6004	WASHER, FLAT, GROUND STRAP, 3/8 120394 (24617)		EA	1	*	*	*	*	*	*		58	5
PO	5310-637-9541	WASHER, LOCK, GROUND STRAP, 3/8 120382 (24617)		EA	1	*	*	*	*	*	*		58	6
PO	5310-732-0558	NUT, GROUND STRAP, 3/8-16 120371 (24617)		EA	1	*	*	*	*	*	*		58	7
PO	5325-574-3954	CLIP, FLANGE 145525 (24617)		EA	8	*	*	*	*	*	*		58	8
PO	5325-507-8701	GROMMET, SPLIT 91A14602 (23040)		EA	2	*	*	*	*	*	*		58	9
PO		CLIP, HARNESS 127754 (24617)		EA	1	*	*	*	*	*	*		58	10
PO	5340-158-0133	CLIP, WIRING FASTENER TO FRAME AND SPLASH APRON 11662726 (19207)		EA	5	*	*	*	*	*	*		58	11

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip enrgy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0613-CHASSIS WIRING HARNESS-Continued												
PO	5325-158-0100	GROMMET, SPLIT, DIRECTIONAL SIGNAL HARNESS 11657799 (19207)	EA	1	*	*	*	*	*	*			58	12
PO	5325-276-6343	GROMMET, SPLIT, IGNITION CABLE THROUGH DASH 11640963-2 (19207)	EA	1	*	*	*	*	*	*			58	13
PO	5340-543-3038	CLIP, BLACKOUT CABLE 432682 (24617)	EA	1	*	*	*	*	*	*			58	14
PO	5310-696-5172	NUT AND LOCK WASHER, GROUND CABLE (1) RELAY (2) 8328424 (19207)	EA	3	*	*	*	*	*	*			58	15
PO	2590-152-2501	TERMINAL, GROUND CABLE 8712354 (19207)	EA	1	*	*	*	*	*	*			58	16
PO	5340-454-3639	STRAP, STARTER SWITCH CABLE 11640773 (19207)	EA	1	*	*	*	*	*	*			58	17
PO	5325-159-3820	GROMMET, SPLIT, BLACKOUT DRIVING CABLE 11657872 (19207)	EA	1	*	*	*	*	*	*			58	18
PO	2590-245-8006	HARNESS, WIRING, LIGHT SWITCH 11662587 (19207)	EA	1	*	*	*	*	*	*			58	19
X20		HARNESS, WIRING FRAME 11657756 (19207)	EA	1	*	*	*	*	*	*			58	20
PO	2590-248-0627	HARNESS, WIRING 11657757 (19207)	EA	1	*	*	*	*	*	*			58	20
MFO		CABLE, FUEL TANK TRANSMITTER 11657914 (19207)	EA	1									58	21
PF	6145-560-5481	MANUFACTURE FROM CABLE (38 IN. REQUIRED) M13486/1-5 (81349)	FT	V	*	*	*	*	*	*				
PF	5970-577-1630	SLEEVE 17-1-1725-76 (19207)	EA	2	*	*	*	*	*	*				
PF	9905-752-4649	BAND MS39020-1 (96906)	EA	1	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NRP code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D8 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr air per 100 equip entgry	(9) Depot maint air per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-180	(a) 1-30	(b) 31-90	(c) 91-180			(a) Figure No.	(b) Item No.
PF	5940-254-5217	0613 CHASSIS WIRING HARNESS—Continued CABLE, FUEL TANK TRANSMITTER—Continued TERMINAL 2109-14-01 (78189)	EA	1	*	*	*	*	*	*				
PF	5340-159-1292	TERMINAL MS77074-3 (96906)	EA	1	*	*	*	*	*	*				
MFO		CABLE, FUEL GAGE 11657851 (19207)	EA	1									38	22
		MANUFACTURE FROM												
PF	6145-560-5481	CABLE (11 IN. REQUIRED) M13486/1-5 (81349)	FT	V	*	*	*	*	*	*				
PF	5975-177-1930	CONDUIT (11 IN. REQUIRED) 5325989 (19207)	FT	V	*	*	*	*	*	*				
PF	5935-572-9180	SHELL 8338566 (19207)	EA	1	*	*	*	*	*	*				
PF	5310-833-8567	WASHER 8338567 (19207)	EA	1	*	*	*	*	*	*				
PF	5940-057-2929	TERMINAL MS27148-2 (96906)	EA	1	*	*	*	*	*	*				
PF	5935-833-8561	SHELL 8338561 (19207)	EA	1	*	*	*	*	*	*				
PF	5970-833-8562	SLEEVE 8338562 (19207)	EA	1	*	*	*	*	*	*				
PF	5935-399-6676	TERMINAL 8338564 (19207)	EA	1	*	*	*	*	*	*				
PF	9905-752-4649	BAND MS39020-1 (96906)	EA	12	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMT code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DB maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip entry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
MFO		0613-CHASSIS WIRING HARNESS -Continued CABLE ASSEMBLY, EXHAUST BLOWER, RIGHT HAND 11657989-3 (19207)	CA	EA	1								59	1
PF	6145-560-5481	MANUFACTURE FROM CABLE (12 IN. REQUIRED) M13486/1-5 (81349)		FT	V	*	*	*	*	*	*			
PF	5935-833-8561	SHELL 8338561 (19207)		EA	1	*	*	*	*	*	*			
PF	5970-833-8562	SLEEVE 8338562 (19207)		EA	1	*	*	*	*	*	*			
PF	5935-399-6676	TERMINAL 8338564 (19207)		EA	1	*	*	*	*	*	*			
PF	5940-143-4780	TERMINAL MS25036-108 (96906)		EA	1	*	*	*	*	*	*			
PF	9905-752-4649	BAND MS39020-1 (96906)		EA	2	*	*	*	*	*	*			
PO		GROMMET, WIRING 68313 (58464)	CA	EA	11	*	*	*	*	*	*		59	2
MFO		CABLE ASSEMBLY, MAIN FEED 11657986 (19207)	CA	EA	1								59	3
PF	6145-705-6678	MANUFACTURE FROM CABLE (122 IN. LG) M13486/1-7 (81349)		FT	V	*	*	*	*	*	*			
PF	5940-143-4794	TERMINAL MS25036-112 (96906)		EA	1	*	*	*	*	*	*			
PF	5940-113-9826	TERMINAL MS25036-114 (96906)		EA	1	*	*	*	*	*	*			
PF	9905-752-4649	BAND MS39020-1 (96906)		EA	1	*	*	*	*	*	*			
PO	2590-152-2491	CABLE ASSEMBLY, HEATER 11658007 (19207)	CA	EA	1	*	*	*	*	*	*		59	4

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day GS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntgty	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-50	(b) 51-100	(c) 101-150	(a) 1-50	(b) 51-100	(c) 101-150			(a) Figure No.	(b) Item No.
		0613-CHASSIS WIRING HARNESS - Continued												
PO		GROMMET, WIRING 232080 (58464) CA	EA	5	*	*	*	*	*	*			59	5
MFO		CABLE ASSEMBLY, HEATER CONTROL BOX FEED 11657989-1 (19207) CA	EA	1									59	6
		MANUFACTURE FROM												
PF	6145-560-5481	CABLE (12 IN. REQUIRED) M13486/1-5 (81349)	FT	V	*	*	*	*	*	*				
PF	5935-833-8561	SHELL 8338561 (19207)	EA	1	*	*	*	*	*	*				
PF	5970-833-8562	SLEEVE 8338562 (19207)	EA	1	*	*	*	*	*	*				
PF	5935-399-6676	TERMINAL 8338564 (19207)	EA	1	*	*	*	*	*	*				
PF	5930-148-4780	TERMINAL MS25036-108 (96906)	EA	1	*	*	*	*	*	*				
PF	9905-752-4649	BAND MS39020-1 (96906)	EA	1	*	*	*	*	*	*				
MFO		CABLE ASSEMBLY, EXHAUST BLOWER, LEFT HAND 11657989-2 (19207) CA	EA	1									59	7
		MANUFACTURE FROM												
PF	6145-560-5481	CABLE (14 IN. REQUIRED) M13486/1-5 (81349)	FT	V	*	*	*	*	*	*				
PF	5935-833-8561	SHELL 8338561 (19207)	EA	1	*	*	*	*	*	*				
PF	5970-833-8562	SLEEVE 8338562 (19207)	EA	1	*	*	*	*	*	*				
PF	5935-399-6676	TERMINAL 8338564 (19207)	EA	1	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip catgry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
PF	5940-143-4780	0613-CHASSIS WIRING HARNESS-Continued CABLE, ASSEMBLY, EXHAUST BLOWER, LEFT HAND-Continued TERMINAL MS25036-108 (96906)	EA	1	*	*	*	*	*	*				
PF	9905-752-4649	BAND MS39020-1 (96906)	EA	2	*	*	*	*	*	*				
MFO		CABLE ASSEMBLY, EXHAUST BLOWER SWITCH 11657991 (19207)	EA	1									59	8
		MANUFACTURE FROM	CA											
PF	6145-560-5481	CABLE (12 IN. REQUIRED) M13486/1-5 (81349)	FT	V	*	*	*	*	*	*				
PF	5930-148-4780	TERMINAL MS25036-108 (96906)	EA	1	*	*	*	*	*	*				
PF	9905-752-4649	BAND MS39020-1 (96906)	EA	1	*	*	*	*	*	*				
MFO		CABLE, SPOTLIGHT 11657989-4 (19207)	EA	1									59	9
		MANUFACTURE FROM	CA											
PF	6145-560-5481	CABLE (67 IN. REQUIRED) M13486/1-5 (81349)	FT	V	*	*	*	*	*	*				
PF	5935-833-8561	SHELL 8338561 (J9207)	EA	1	*	*	*	*	*	*				
PF	5970-833-8562	SLEEVE 8338562 (19207)	EA	1	*	*	*	*	*	*				
PF	5935-399-6626	TERMINAL 8338564 (19207)	EA	1	*	*	*	*	*	*				
PF	5940-143-4780	TERMINAL MS25038-108 (96905)	EA	1	*	*	*	*	*	*				
PF	9905-752-4649	BAND MS39020-1 (96906)	EA	2	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) DSR code	(9) Federal stock number	(9) Description Reference Number & Mfg. Code Usable on Code	(11) Unit of meas	(12) Qty inc in unit	(13) 90 day T&M maint. allowance			(14) 90 day T&M maint. allowance			(15) 1 yr. sto per 100 equip category	(16) Depot maint sto per 100 equip	(17) Illustration	
					(13) 1-90	(13) 91-99	(13) 101-109	(14) 1-90	(14) 91-99	(14) 101-109			(17) Figure No.	(17) Item No.
MFO		0613-CHASSIS WIRING HARNESS - Continued CABLE ASSEMBLY, SURGICAL LAMP 11657987 (19207)	EA	1									59	10
		MANUFACTURE FROM												
PF	6145-560-3481	CABLE (45 IN. REQUIRED) M13486/1-3 (81349)	FT	V	*	*	*	*	*	*				
PF	5935-768-7042	SHELL 573007 (19207)	EA	1	*	*	*	*	*	*				
PF	5975-280-3357	BUSHING 572999 (19207)	EA	1	*	*	*	*	*	*				
PF	3340-629-7273	INSULATOR 753005 (19207)	EA	1	*	*	*	*	*	*				
PF	3310-871-7818	PIN MS27148-2 (96906)	EA	1	*	*	*	*	*	*				
PF	5940-143-4780	TERMINAL MS25036-10R (96906)	EA	1	*	*	*	*	*	*				
PF	9905-732-4649	BAND MS39020-1 (96906)	EA	2	*	*	*	*	*	*				
PC	2590-165-3977	RECEPTACLE AND HARNESS INTERVEHICLE 11657850 (19207)	EA	1	*	*	*	*	*	*			60	1
		BA, BB, DA, DB, EA, EB												
PO	5935-773-1428	COVER, INTERVEHICLE RECEPTACLE 7731428 (19207)	EA	1	*	*	*	*	*	*			60	2
		BA, BB, DA, DB, EA, EB												
PO	5305-044-6609	SCREW AND LOCK WASHER RECEPTACLE MOUNTING 446609 (24617)	EA	4	*	*	*	*	*	*			60	3
		BA, BB, DA, DB, EA, EB												
PO	5310-194-8151	NUT, RECEPTACLE MOUNTING MS51967-2 (96906)	EA	4	*	*	*	*	*	*			60	4
		BA, BB, DA, DB, EA, EB												

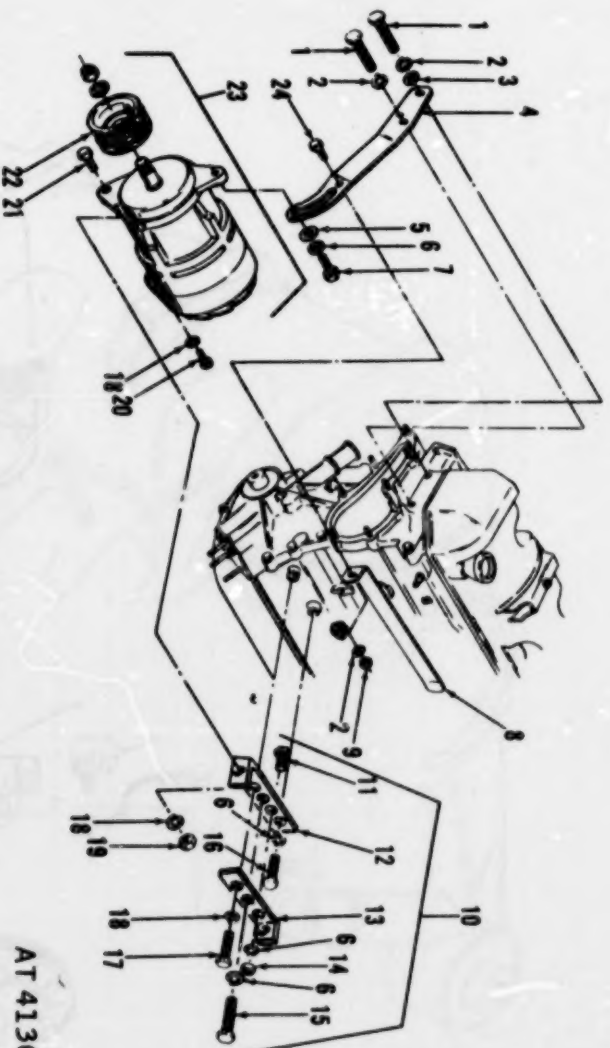


Figure 35. Alternator and Related Parts

AT 41306

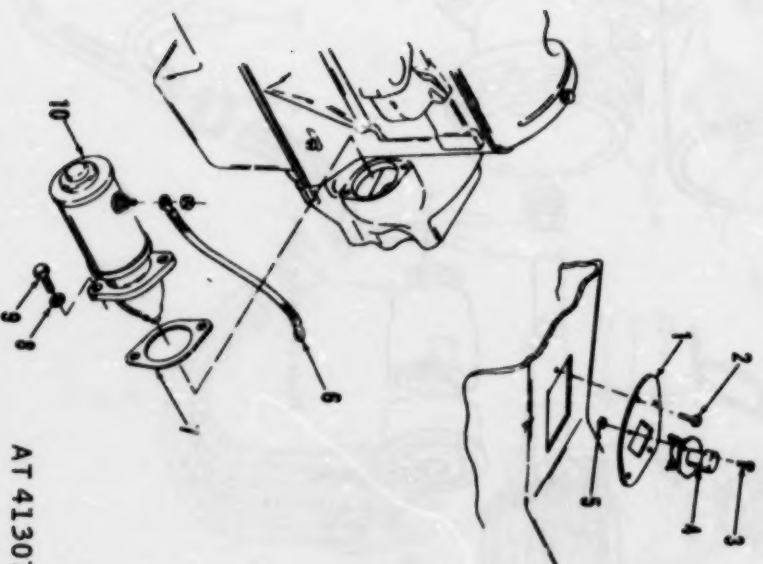


Figure 36. Starting Motor and Switch

AT 41307


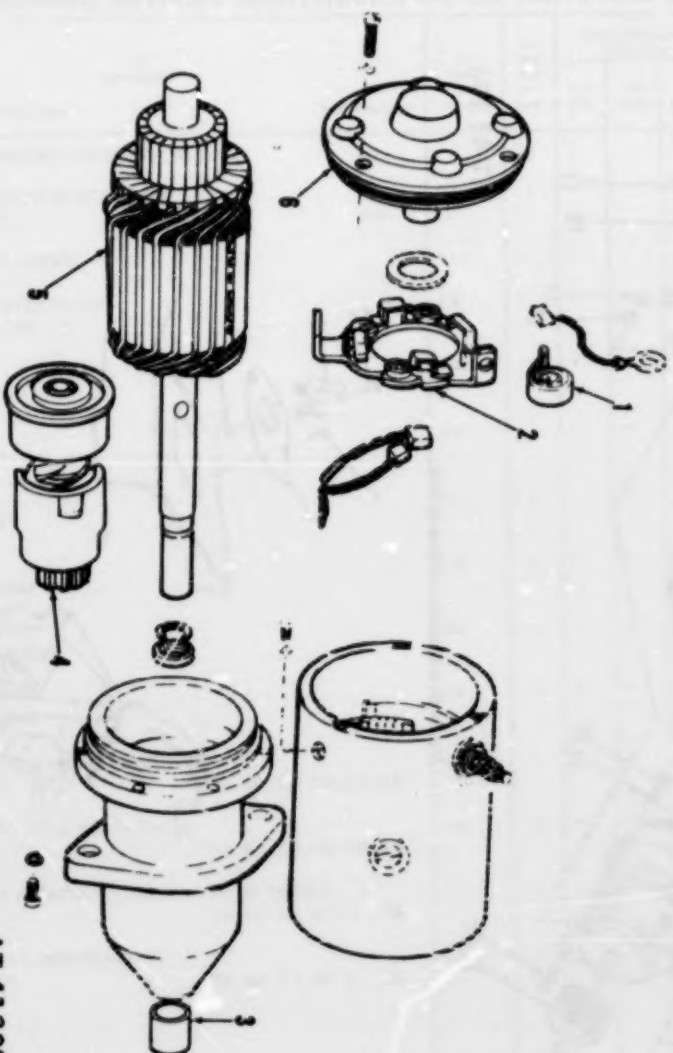


Figure 37. Starting Motor

AT 41308

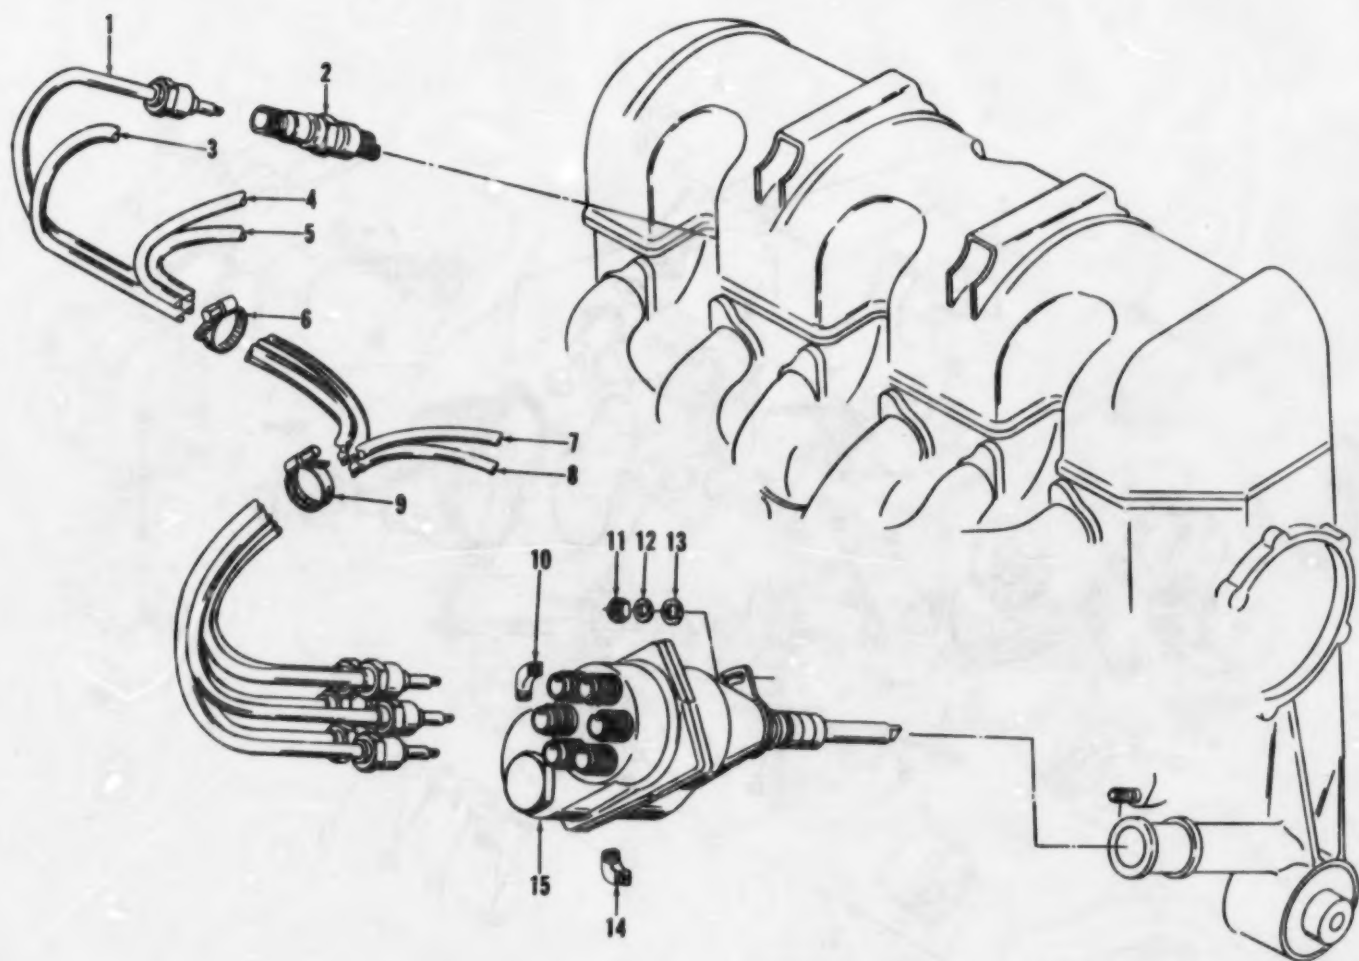

AT 41309

Figure 38. Ignitor, Spark Plugs and Leads


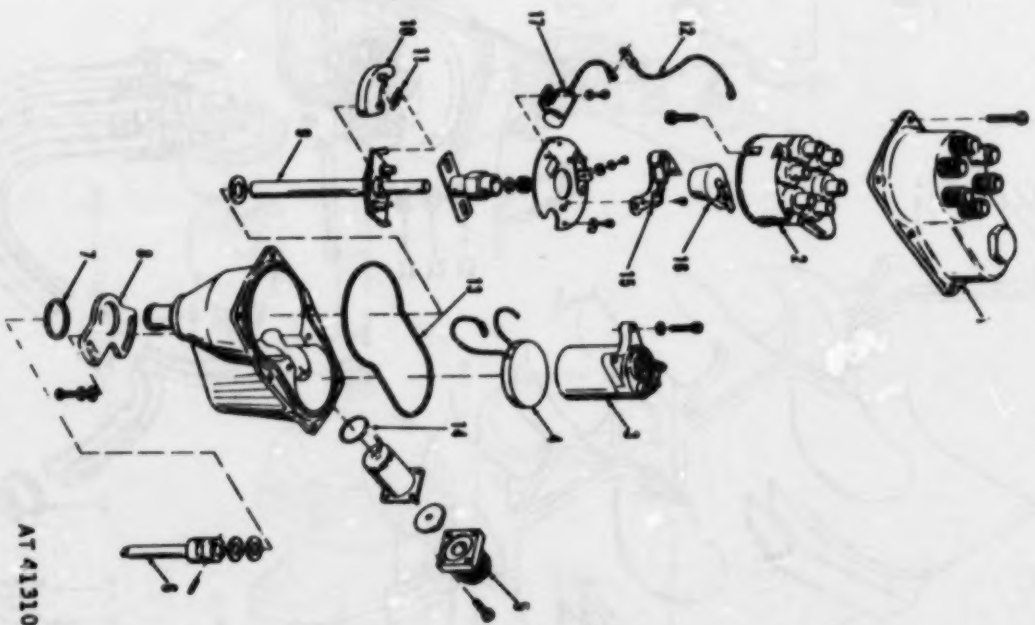


Figure 39. Lamp Assembly

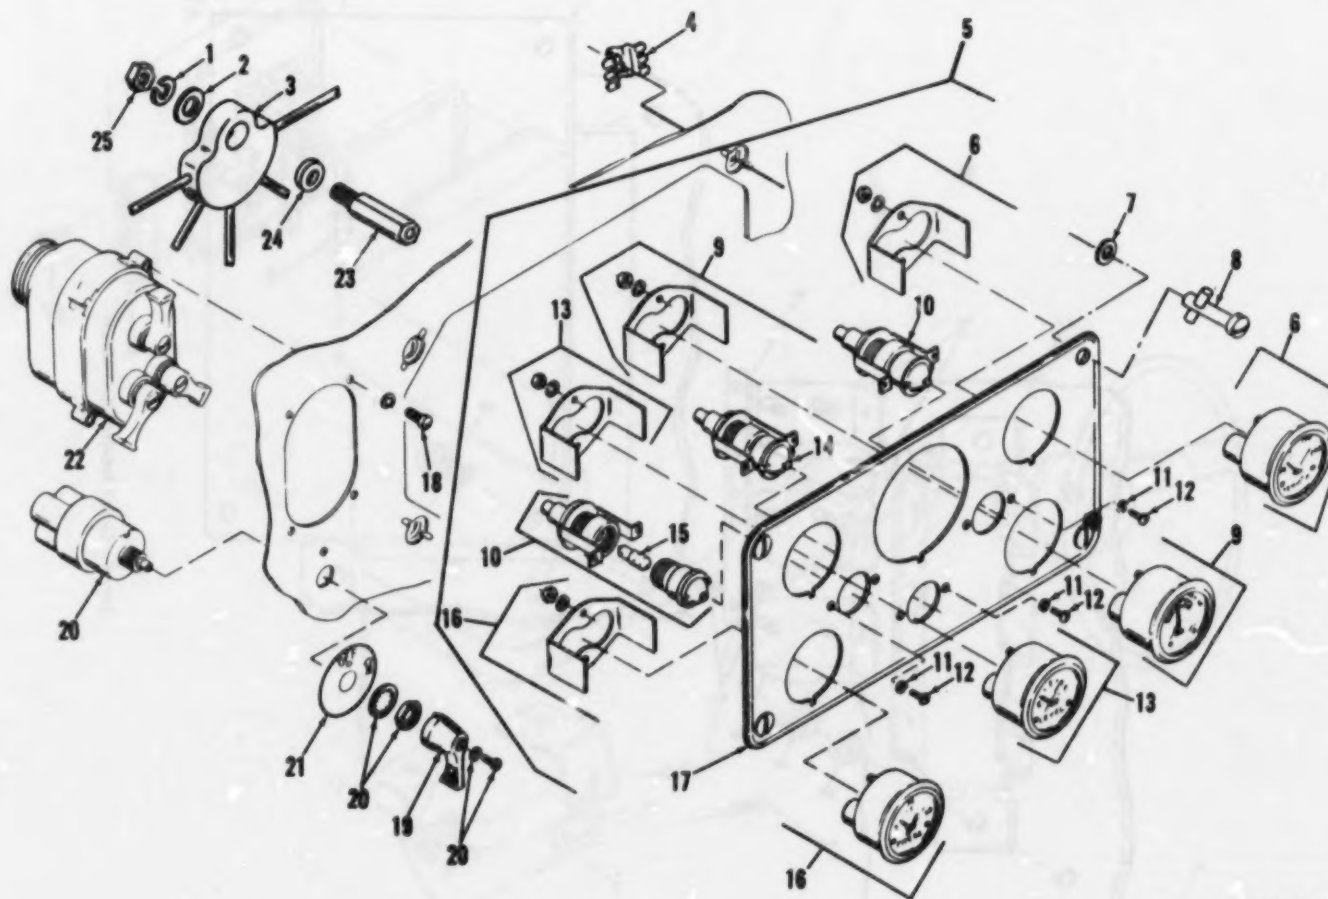

AI 41311

Figure 40. Instrument Cluster, Light Switch and Ignition Switch



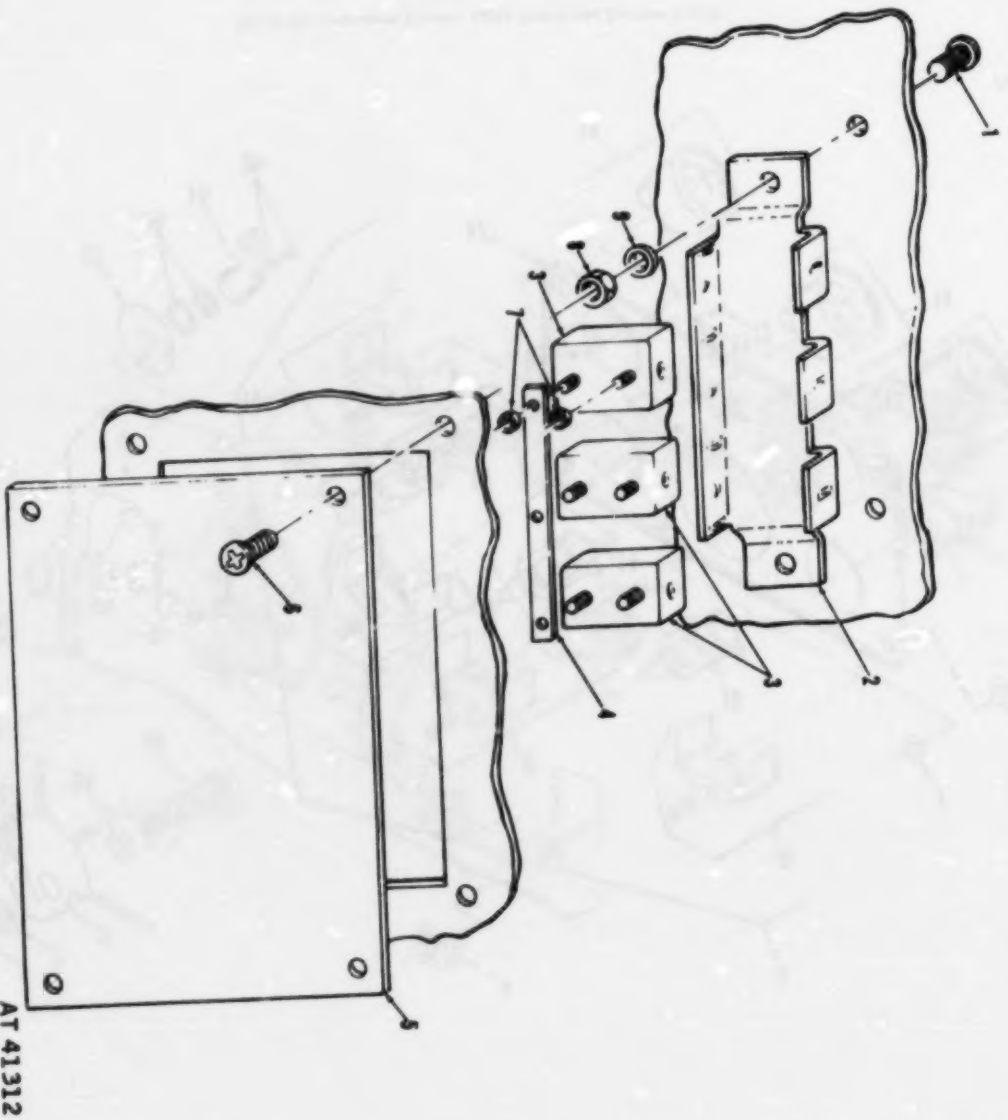


Figure 41. Circuit Breakers (Ambulance)

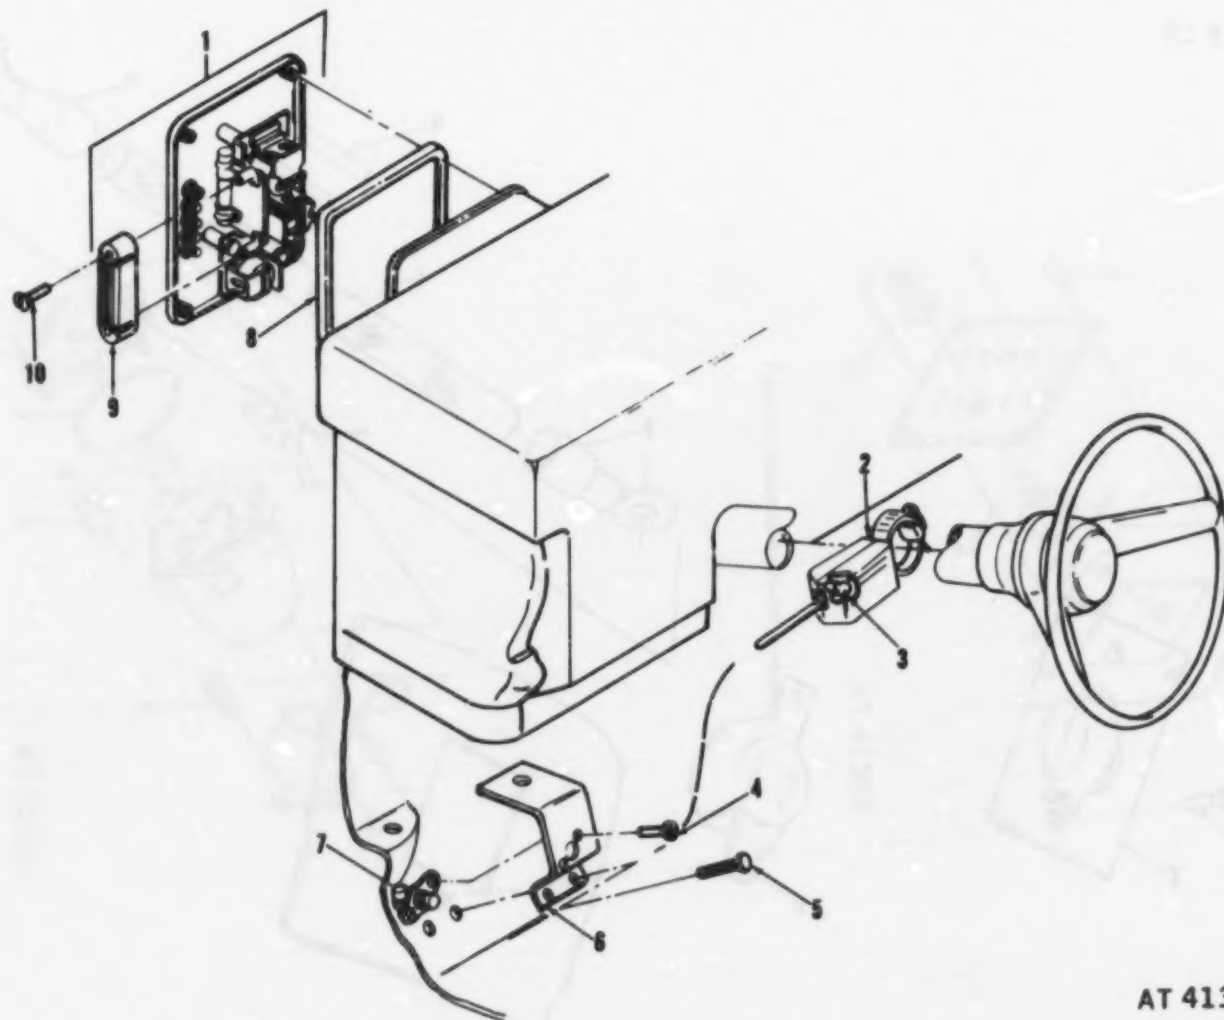

AT 41313

Figure 42. Directional Signal and Dimmer Switch

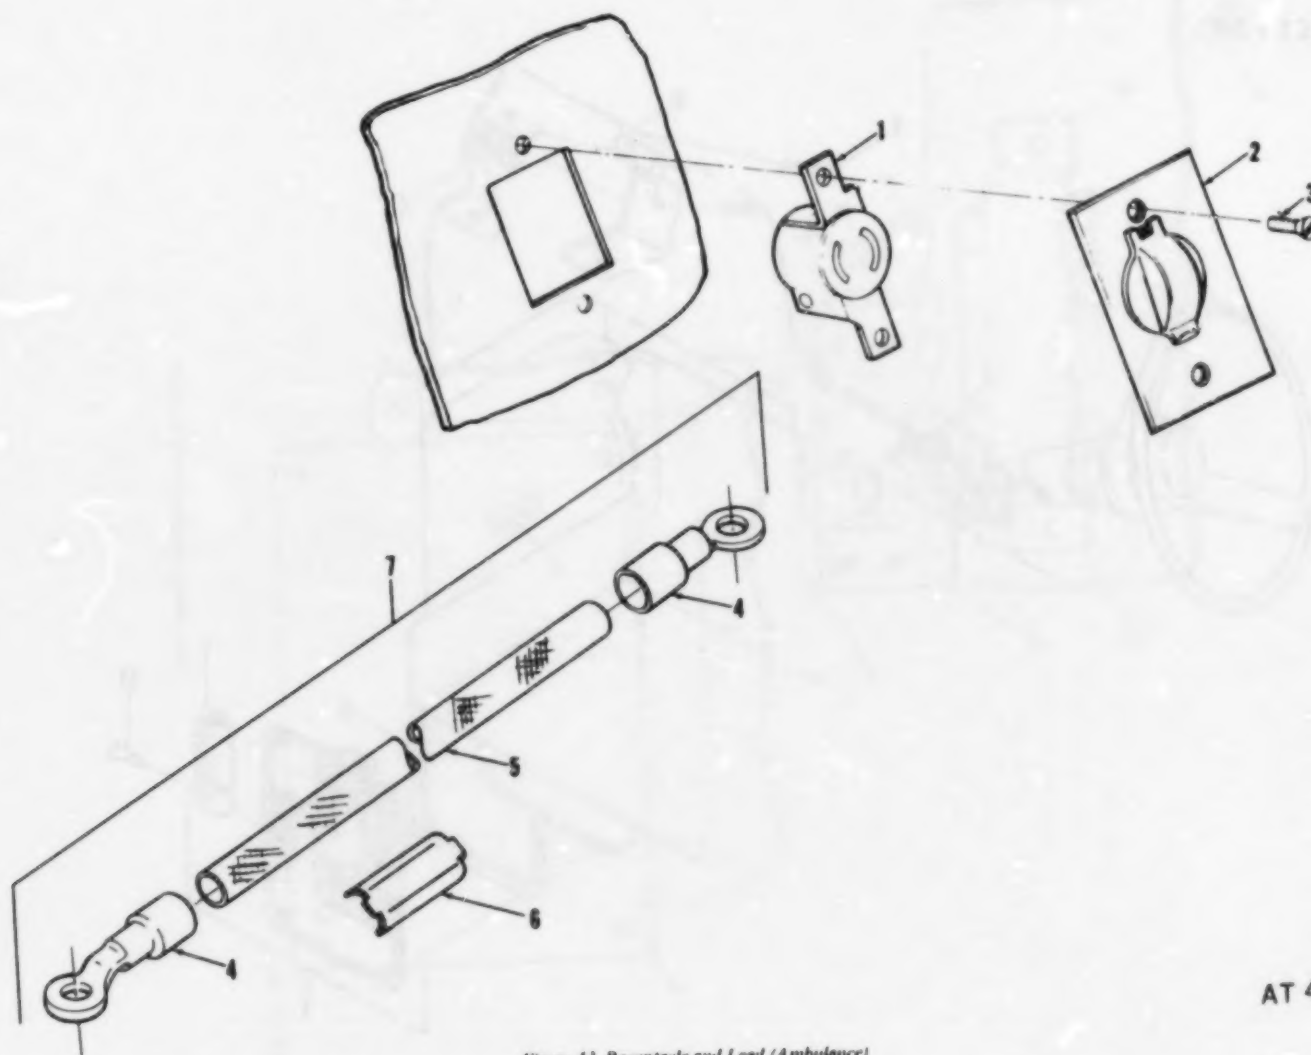


AT 41314

Figure 43. Receptacle and Lead (Ambulance)



AT 41315

Figure 44. Exhaust Blower Switch (A mbulance)

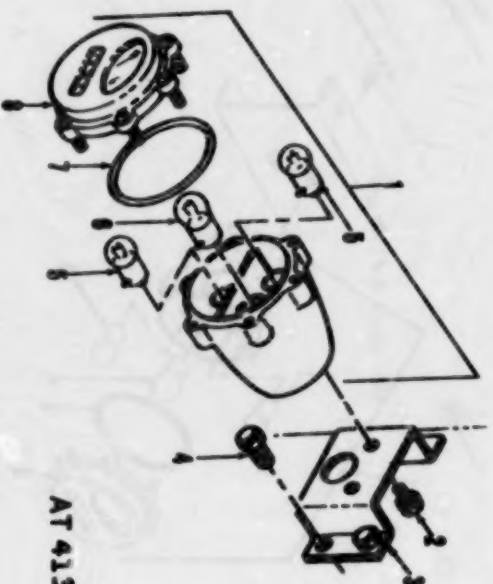

AT 41316

Figure 45. Front Blackout Marker, Directional and Parking Light

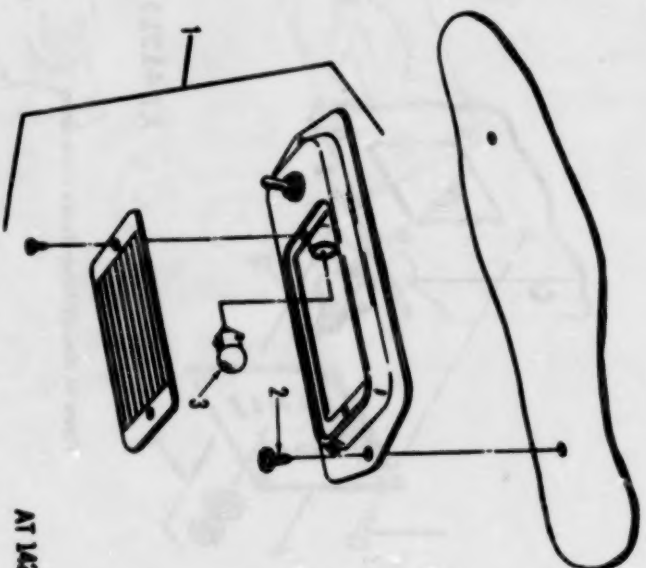


Figure 46. Dome Light (Ambulance)

AT 14276

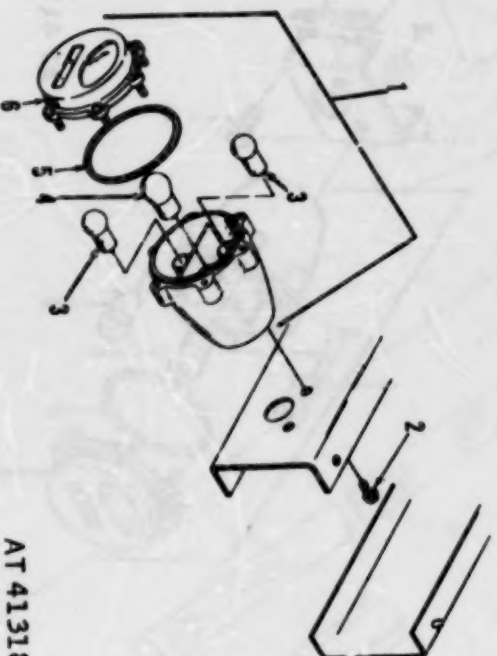


Figure 47. Rear Blackout Marker, Directional and Stop Light

AT 41318


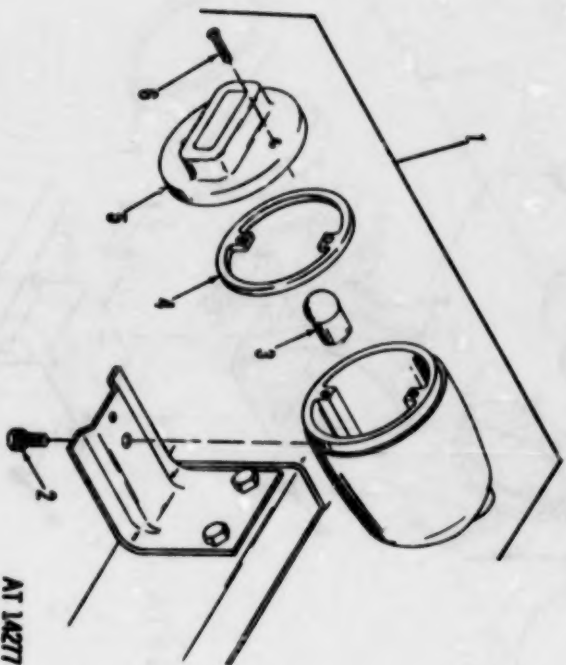


Figure 48. Blackout Stop Light.

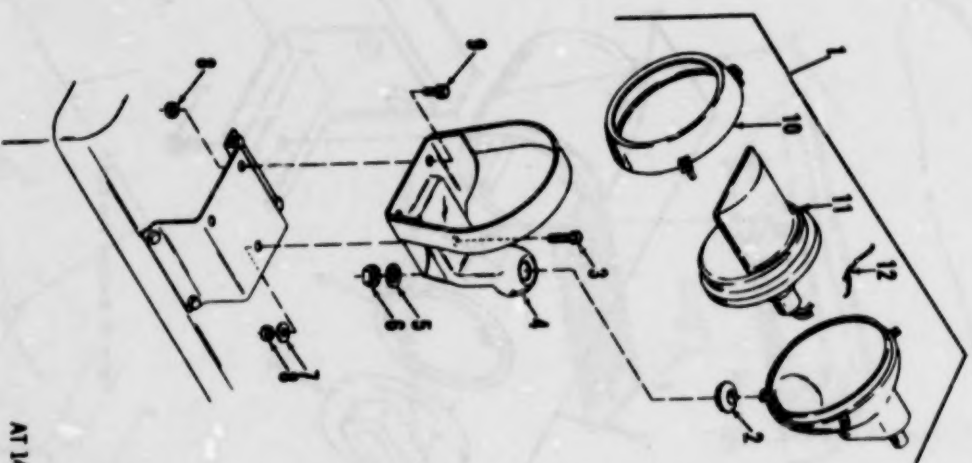

AT 14280

Figure 49, Blackout Driving Light

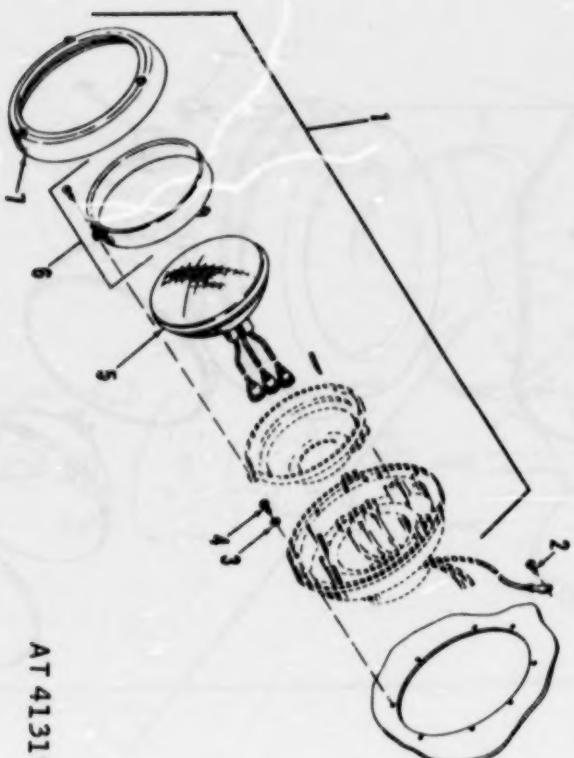


Figure 50. Headlight Assembly

AT 41319

AT 51,320

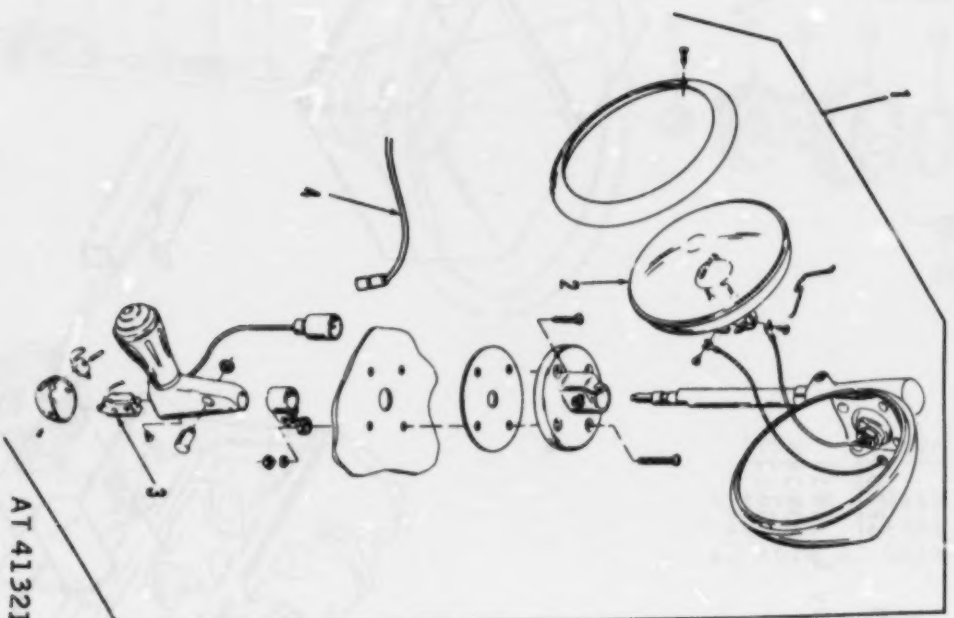


Figure 32. Spotlight Assembly

AT 41321

<u>ITEM</u>	<u>GROUP</u>
1 thru 5	0610
6	0608
7	0610


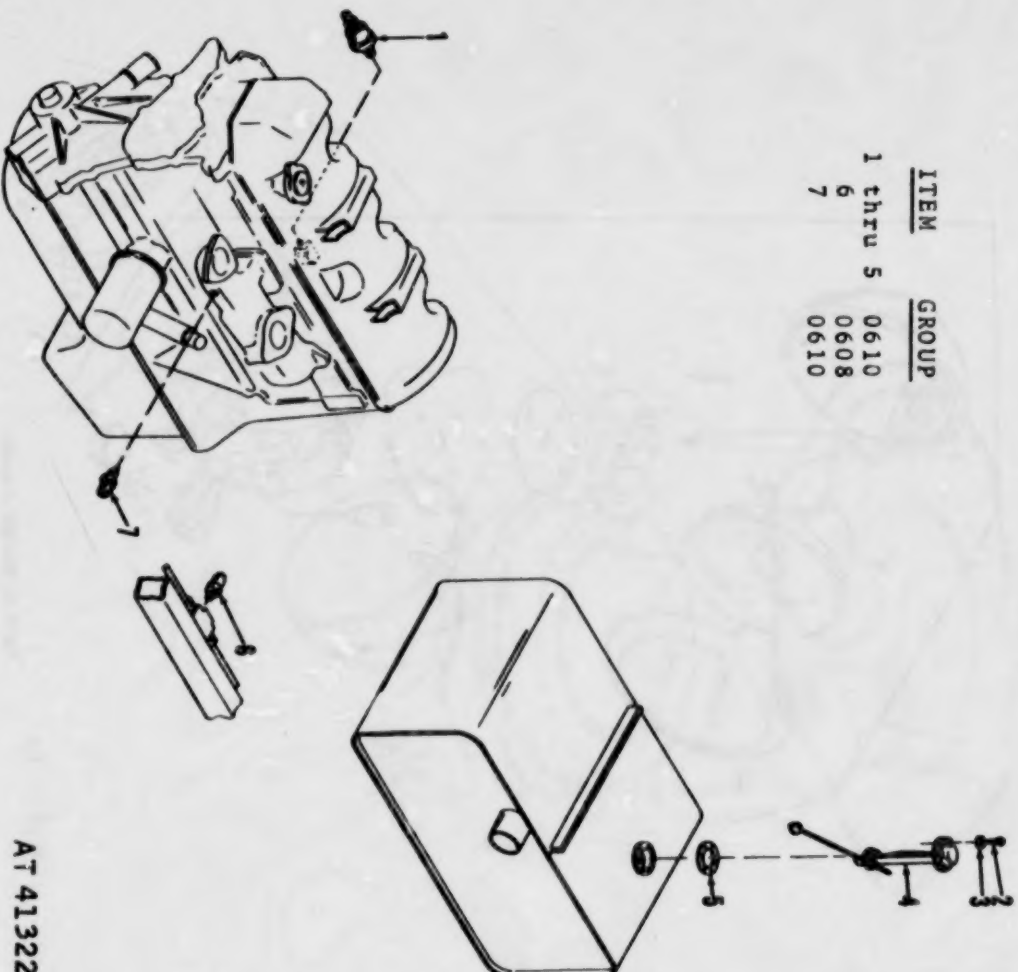


Figure 53. Sending Unit

AT 41322

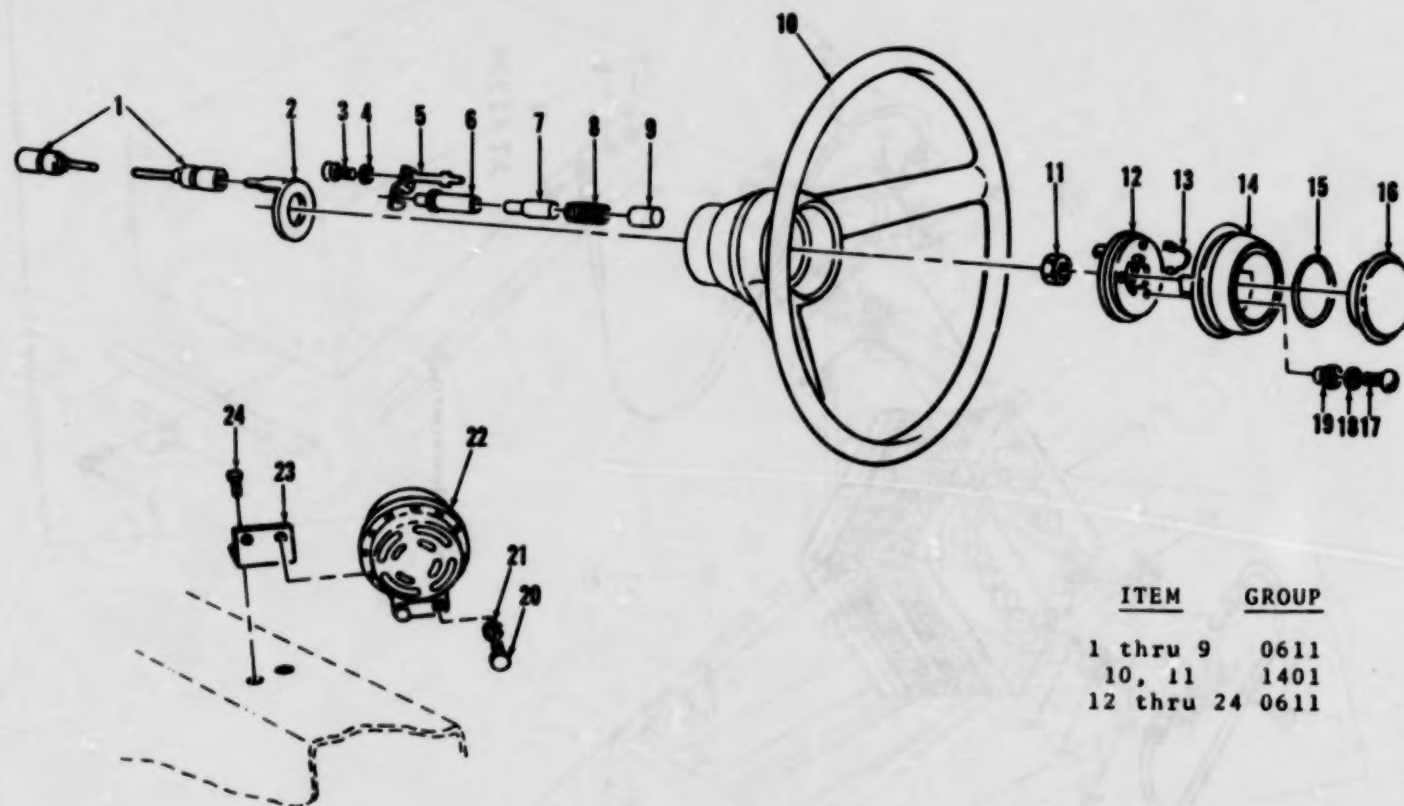

ITEM	GROUP
1 thru 9	0611
10, 11	1401
12 thru 24	0611

AT 41323

Figure 54. Horn, Horn Button and Steering Wheel




Figure 5.5. Batteries and Cables

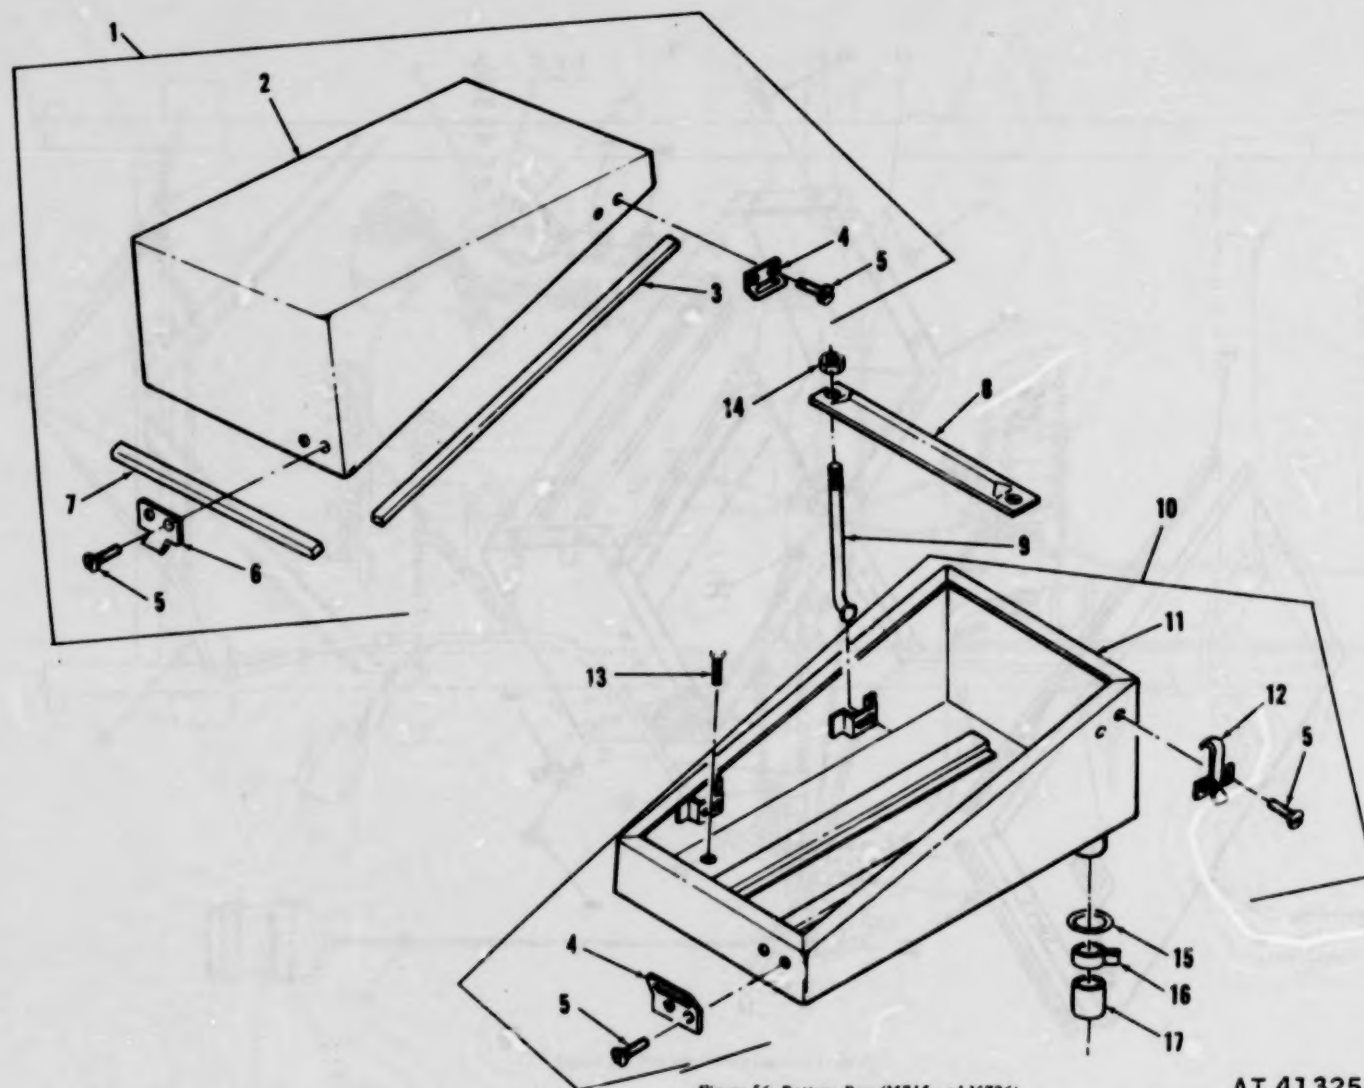


Figure 56. Battery Box (M715 and M726)

AT 41325


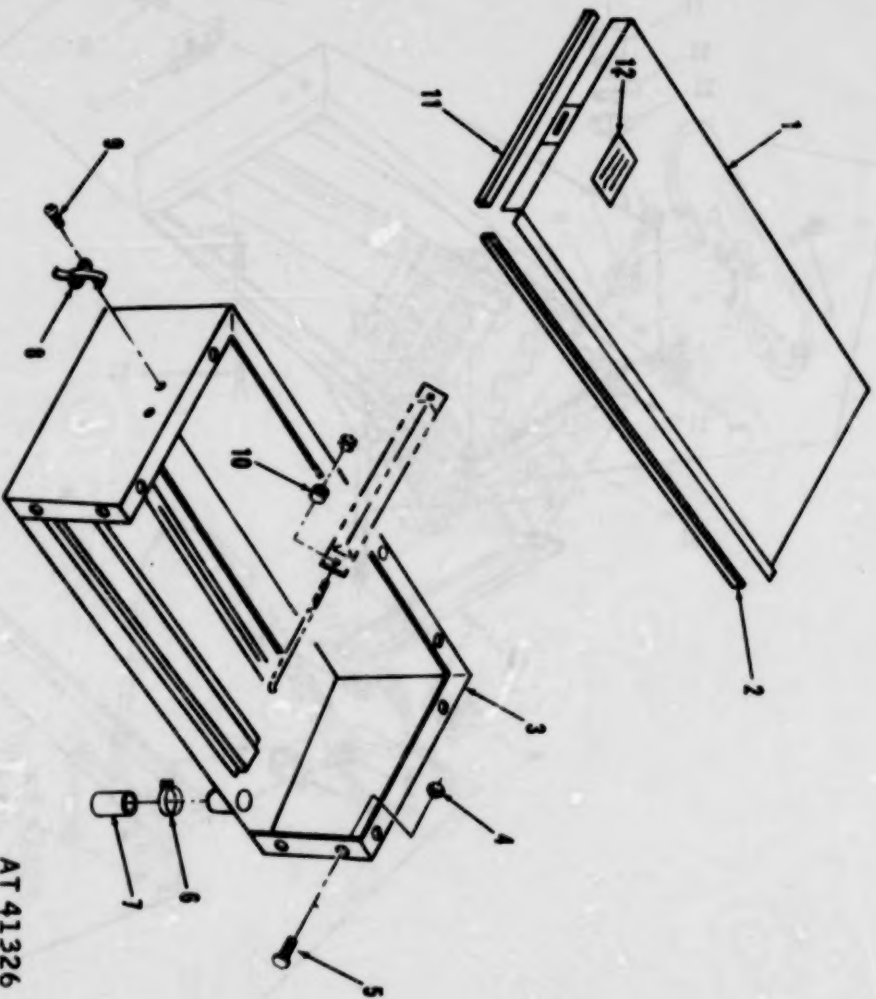


Figure 57. Battery Box (M725)

AT 41326

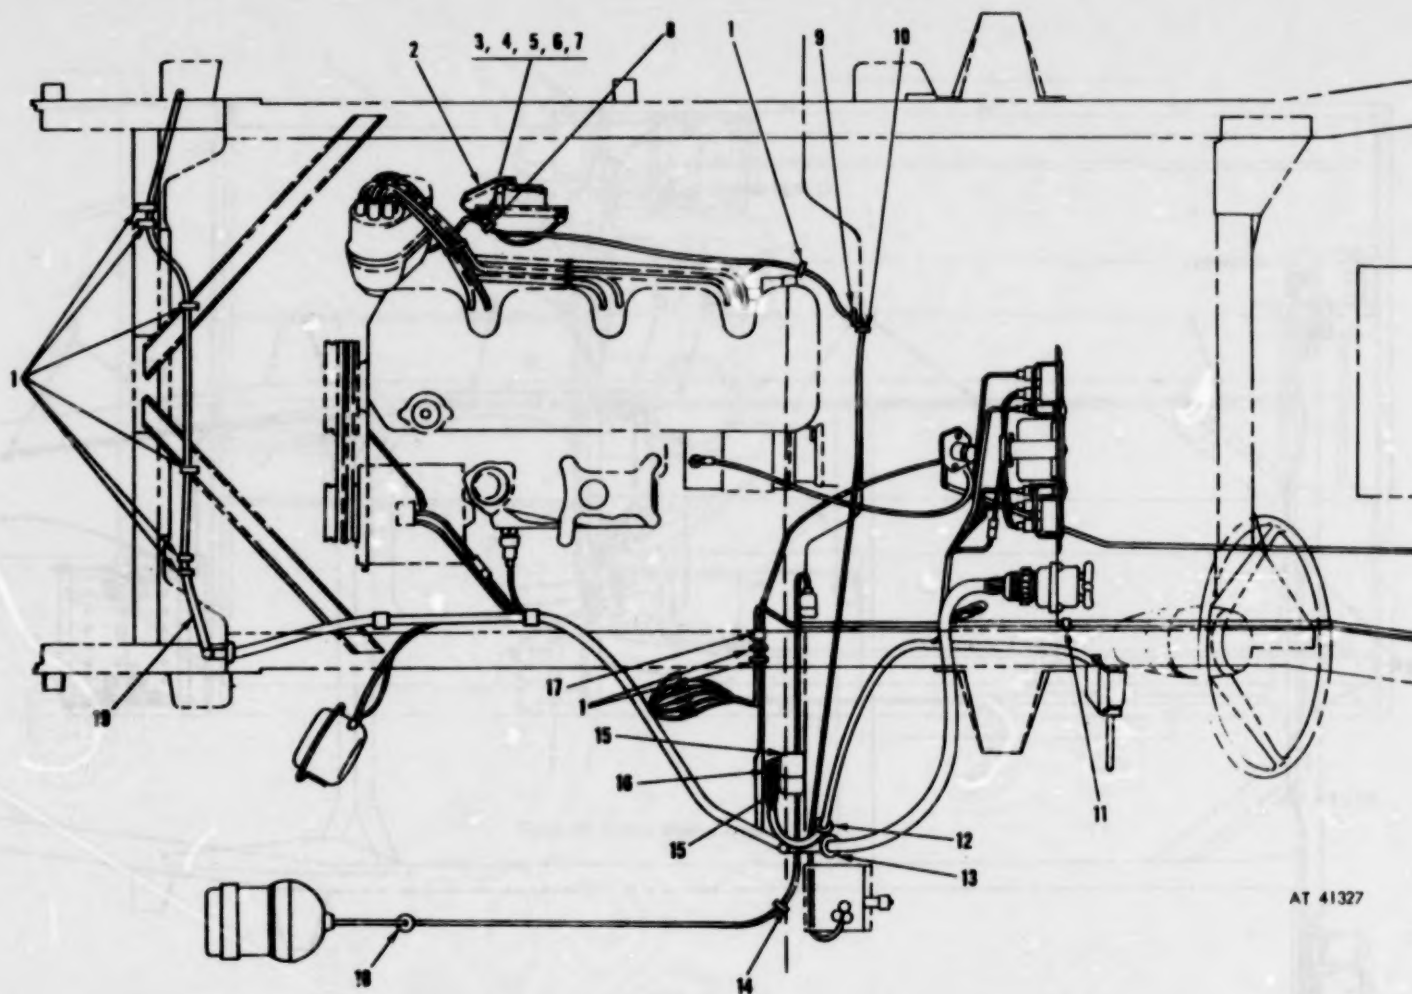

AT 41327

Figure 58. Vehicle Wiring Harness (1 of 2)


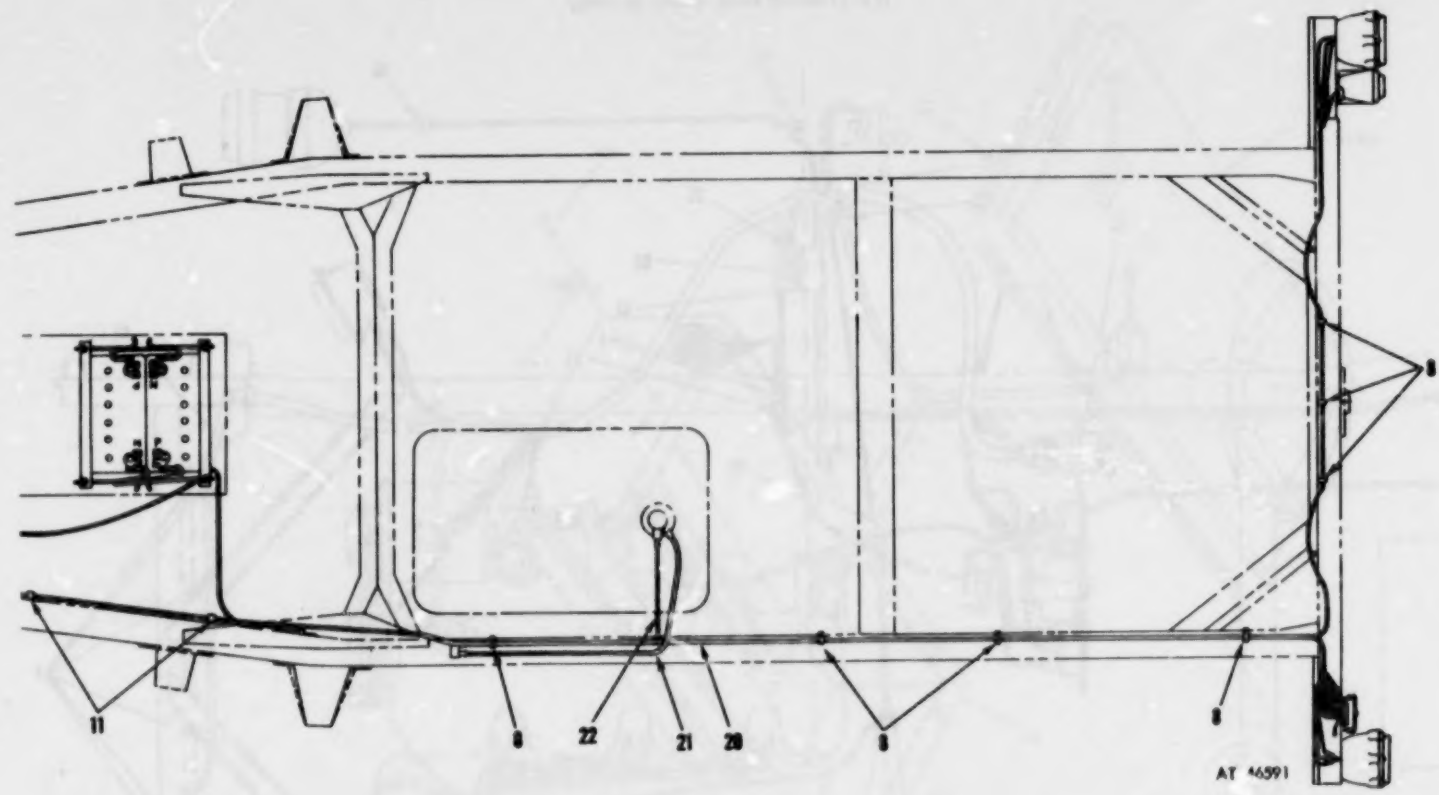


Figure 58. Vehicle Wiring Harness (2 of 2)

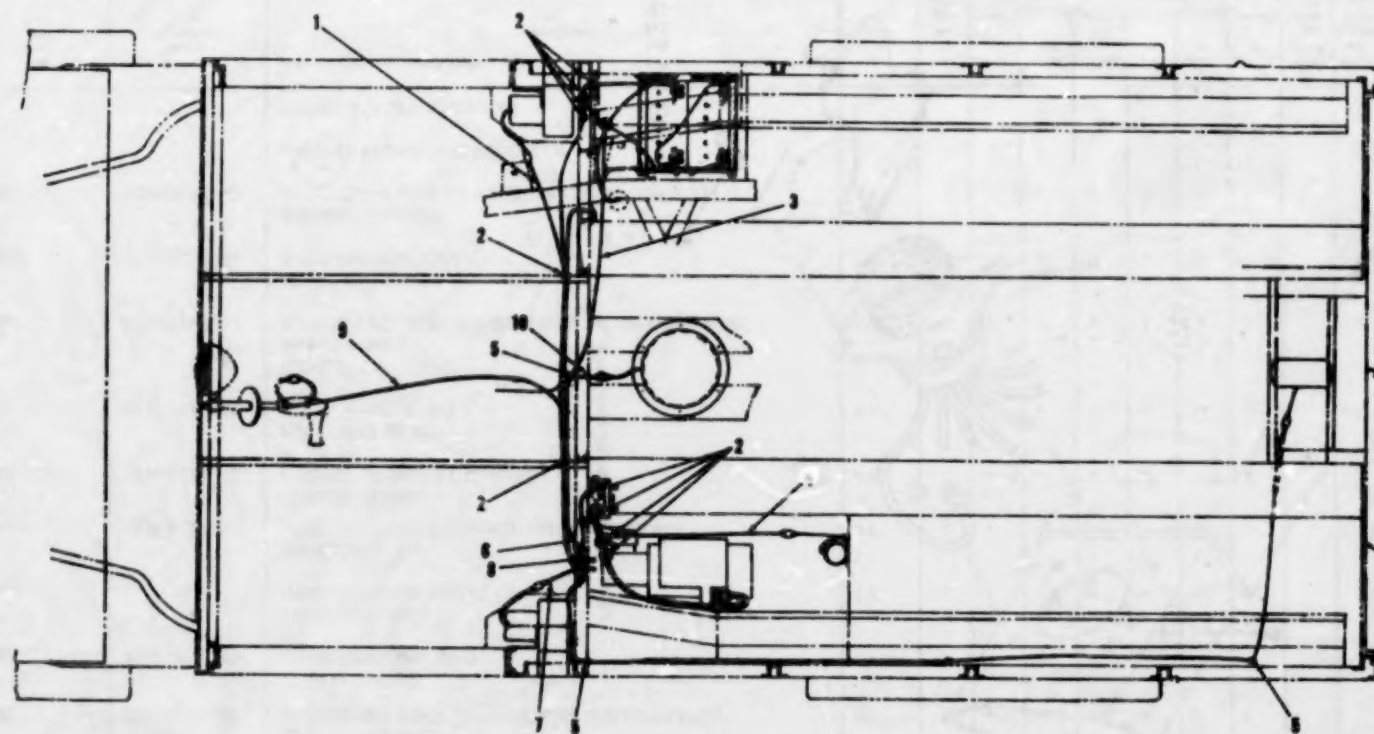

AT 41328

Figure 59. Vehicle Wiring Harness (M725)

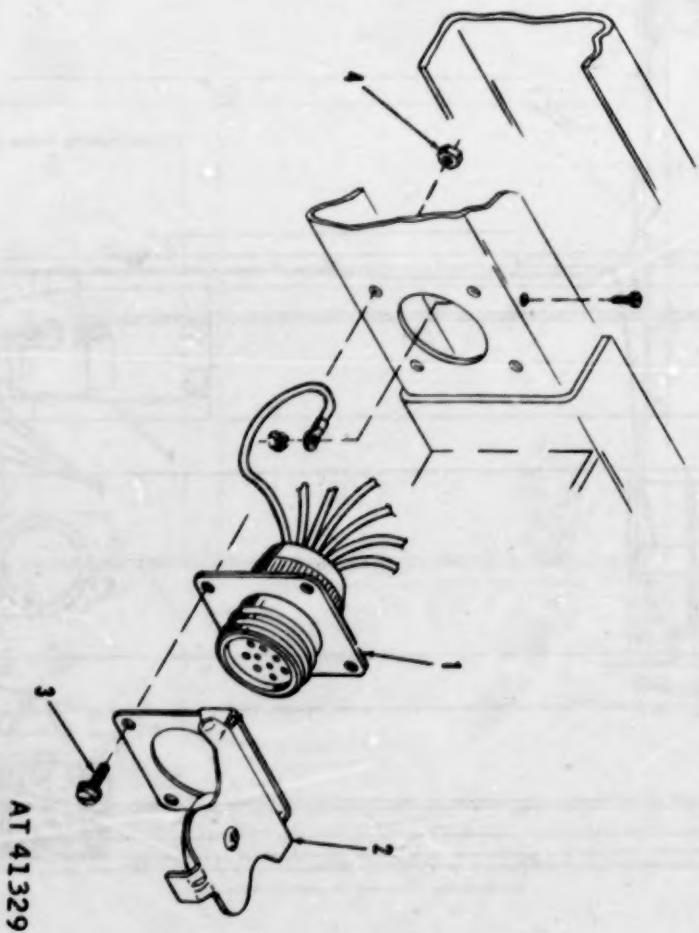


Figure 60. Intervehicular Receiver

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) S&H code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day G6 maint. allowance			(8) 1-yr allow per 100 equip entry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		GROUP 07—TRANSMISSION												
		0700—TRANSMISSION ASSEMBLY												
PO	4730-203-0549	PLUG, 3/4-14, SOCKET HEAD, TRANSMISSION FILL MS49005-16 (96906)	EA	1	*	*	*	*	*	*			61	10
PFT	2520-927-3299	TRANSMISSION ASSEMBLY 11640728 (19207)	EA	1	*	*	*	*	*	*			61	11
PF	5305-724-6771	BOLT, TO ATTACH TRANSMISSION TO LELL HOUSING, 9/16-12 x 1-1/2 MS90726-138 (96906)	EA	4	*	*	*	*	*	*			61	12
PF	5310-167-0680	WASHER, LOCK, 9/16 MS35338-49 (96906)	EA	4	*	*	*	*	*	*			61	13
PF	5330-933-3318	GASKET, FLYWHEEL HOUSING 11656937 (19207)	EA	1	*	*	*	*	*	*			61	14
PO	4730-927-3347	PLUG, 3/4-14 RECESS HEAD, ASSEMBLY DRAIN 11640778 (19207)	EA	1	*	*	*	*	*	*			61	15
PO		GASKET, SIDE OPENING 11656978 (19207)	EA	1	*	*	*	*	*	*			62	6
PO	2520-360-7270	COVER, SIDE OPENING 5250614 (19207)	EA	1	*	*	*	*	*	*			62	7
PO	5305-627-6128	WASHER, 3/8, LOCK WASHER, SIDE COVER ATTACH MS35335-35 (96906)	EA	6	*	*	*	*	*	*			62	8
PO	5305-269-3208	BOLT, SCREW, 3/8-16 x 5/8, SIDE COVER MS90725-57 (96906)	EA	6	*	*	*	*	*	*			62	9
X2H		CASE, TRANSMISSION 11657122 (19207)	EA	1				*	*	*			64	50
		0701—TRANSMISSION SHAFTS												
X2H		MAINSHAFT ASSEMBLY, TRANSMISSION 11657162 (19207)	EA	1				*	*	*			62	5
PH	2520-772-8079	RING, BLOCKING SYNCHRONIZER 11646983 (19207)	EA	1				*	*	*			63	1

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) EMRP code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D8 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr allow per 100 equip enclgy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
PH	3010-661-3300	0701-TRANSMISSION SHAFTS-Continued MAINSHAFT ASSEMBLY TRANSMISSION-Continued SYNCHRONIZER ASSEMBLY, SECOND AND DIRECT 11657168 (19207)	EA	1				*	*	*			63	2
XI		HUB, CLUTCH, INTERMEDIATE HIGH 11657152 (19207)	EA	1									63	3
PH	2520-830-8771	SPRING, SYNCHRONIZER HUB AND PLATE 8376246-1 (19207)	EA	2				*	*	*			63	4
PH	2520-977-2418	PLATE, SHIFTING, CLUTCH HUB 11656982 (19207)	EA	3				*	*	*			63	5
XI		GEAR, TRANSMISSION, SECOND AND DIRECT 11657151 (19207)	EA	1									63	6
PH	2520-929-3567	GEAR ASSEMBLY MAINSHAFT, THIRD SPEED 11641074 (19207)	EA	1				*	*	*			63	7
XI		BUSHING, GEAR 11656984 (19207)	EA	1									63	8
XI		GEAR, THIRD SPEED 11657565 (19207)	EA	1									63	9
PH	5365-222-2061	RING, RETAINING 11657737-2 (19207)	EA	3				*	*	*			63	10
PH	2520-661-3266	WASHER, THRUST, SECOND SPEED GEAR 11656985 (19207)	EA	1				*	*	*			63	11
PH	3110-198-2570	ROLLER, NEEDLE SECOND SPEED GEAR 712412 (19207)	EA	34				*	*	*			63	12
PH	2520-927-3343	GEAR, SECOND SPEED 11657167 (19207)	EA	1				*	*	*			63	13
PH	5365-451-1607	SPACER, SECOND SPEED GEAR 11657097 (19207)	EA	1				*	*	*			63	14
PH	2520-986-5686	MAINSHAFT, TRANSMISSION 11657165 (19207)	EA	1				*	*	*			63	15

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip enrgy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
PH	2520-927-3342	0701 - TRANSMISSION SHAFTS - Continued MAINSHAFT ASSEMBLY, TRANSMISSION - Continued RING, BLOCKING, SECOND SPEED GEAR 11657157 (19207)	EA	1				*	*	*			63	16
PH	2520-374-9464	SYNCHRONIZER ASSEMBLY, LOW AND SECOND 11662590 (19207)	EA	1				*	*	*			63	17
X1		GEAR, LOW AND SECOND 11657162 (19207)	EA	1									63	18
PH	3110-142-6040	BALL, BEARING, SYNCHRONIZER MS19061-11 (96906)	EA	3				*	*	*			63	19
PH	2520-830-8775	SPRING, BALL BEARING 11657014 (19207)	EA	3				*	*	*			63	20
PH	2520-476-6507	PLATE, SHIFTING, SYNCHRONIZER 11657154 (19207)	EA	3				*	*	*			63	21
PH	5310-485-8168	RING, RETAINING, SHIFTING PLATE 11656999 (19207)	EA	1				*	*	*			63	22
X1		HUB, CLUTCH, LOW AND SECOND 11657160 (19207)	EA	1									63	23
PH	5365-221-6523	RING, RETAINING 11657737-1 (19207)	EA	1				*	*	*			63	24
PH	2520-772-8079	RING, BLOCKING, MAINSHAFT SECOND AND DIRECT SYNCHRONIZER 11656983 (19207)	EA	1				*	*	*			63	1
PH	3120-498-2866	WASHER, THRUST, COUNTERSHAFT 11657155 (19207)	EA	1				*	*	*			64	1
PH		SPACER, GEARED COUNTERSHAFT 11656963 (19207)	EA	6				*	*	*			64	2
PH		SPACER, GEARED COUNTERSHAFT 11657153 (19207)	EA	1				*	*	*			64	3
PH	2520-929-3567	COUNTERSHAFT, GEARED 11657161 (19207)	EA	1				*	*	*			64	4

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) DASH code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cost/yr	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		0701-TRANSMISSION SHAFTS-Continued												
PH	3120-498-9859	WASHER, THRUST COUNTERSHAFT INTERMEDIATE 11657032 (19207)	EA	1				*	*	*			64	5
PH	3120-498-2868	WASHER, THRUST COUNTERSHAFT, INTERMEDIATE, REAR 11657094 (19207)	EA	1				*	*	*			64	6
PH	2520-374-9480	GEAR ASSEMBLY, REVERSE IDLER 11657034 (19207)	EA	1				*	*	*			64	7
PH	5365-221-6517	RETAINER, THRUST WASHER 11657414 (19207)	EA	2				*	*	*			64	8
PH	2520-986-5677	WASHER, THRUST, IDLER GEAR 11657012 (19207)	EA	2				*	*	*			64	9
XI		GEAR, REVERSE IDLER 11657096 (19207)	EA	1									64	10
PH	3110-117-0633	ROLLER, IDLER GEAR BEARING MS19065-31 (96906)	EA	24				*	*	*			64	11
XI		SPACER, IDLER GEAR BEARING 11657016 (19207)	EA	1									64	12
XI		SLEEVE, REVERSE IDLER SHAFT 11657095 (19207)	EA	1									64	13
PH		PIVOT, REVERSE SHIFT LEVER 11656979 (19207)	EA	1				*	*	*			64	14
PH	2520-177-8238	PACKING, PREFORMED, SHIFT LEVER MS28775-111 (96906)	EA	1				*	*	*			64	15
PH		SHOE, REVERSE IDLER 11656980 (19207)	EA	1				*	*	*			64	16
PH		LEVER, REVERSE SHIFTING 11657156 (19207)	EA	1				*	*	*			64	17
PH	3820-802-7128	WASHER, "C" REVERSE IDLER SHOE ATTACHING 1165981-1 (19207)	EA	1				*	*	*			64	18

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST -- Continued

(1) SMR code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr depot maint allow per 100 equip catgry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-30	31-90	91-100	1-30	31-90	91-100			Figure No.	Item No.
		0701--TRANSMISSION SHAFTS --Continued												
PF	5310-159-6267	NUT, FLANGE AND GUARD ATTACHING 11657015 (19207)	EA	1	*	*	*	*	*	*			64	19
PF	5310-360-8171	WASHER, FLANGE AND GUARD ATTACHING 7375131 (19207)	EA	1	*	*	*	*	*	*			64	20
PF	2520-152-2512	FLANGE AND GUARD ASSEMBLY 11657050 (19207)	EA	1	*	*	*	*	*	*			64	21
X1		GUARD, OIL SEAL 769479 (19207)	EA	1									64	22
X1		YOKE, PROPELLER SHAFT 11657427 (19207)	EA	1									64	23
PF	5330-179-1237	SEAL, DUST 11657051 (19207)	EA	1	*	*	*	*	*	*			64	24
X2F		RETAINER AND OIL SEAL ASSEMBLY, MAINSHAFT BEARING 11658043 (19207)	EA	1	*	*	*	*	*	*			64	25
PF		RETAINER, MAINSHAFT OIL SEAL 11657005 (19207)	EA	1	*	*	*	*	*	*			64	26
PF	2520-933-7621	SEAL, PLAIN ENCASED, MAINSHAFT 11662551 (19207)	EA	1	*	*	*	*	*	*			64	27
PH	5330-178-8372	GASKET, MAINSHAFT BEARING AND OIL SEAL 11657535 (19207)	EA	1				*	*	*			64	28
PH		SPACER, MAINSHAFT, REAR 11657031 (19207)	EA	1				*	*	*			64	29
PH	5340-467-1987	RING, RETAINING, MAINSHAFT BEARING 11557033 (19207)	EA	1				*	*	*			64	30
PH	3110-155-6173	BEARING, MAINSHAFT 700793 (19207)	EA	1				*	*	*			64	31
PH	5315-188-0180	PIN, STRAIGHT HEADLESS, REVERSE SHIFT LEVER PIVOT M524692-160 (96906)	EA	1				*	*	*			64	32

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBS code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip cntgcy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		0701 - TRANSMISSION SHAFTS—Continued												
PF	5305-269-3211	SCREW, CAP, HEXAGON HEAD, MAINSHAFT RETAINER MS90725-60 (96906)	EA	4	*	*	*	*	*	*			64	33
PF	5310-627-6128	WASHER, FLAT, MAINSHAFT RETAINER MS35335-35 (96906)	EA	5	*	*	*	*	*	*			64	34
PH		LOCKPLATE, COUNTERSHAFT 11657002 (19207)	EA	1				*	*	*			64	35
PH	2520-986-5658	SHAFT, REVERSE IDLER GEAR 11657000 (19207)	EA	1				*	*	*			64	36
PH	2520-404-7083	COUNTERSHAFT, TRANSMISSION 11657001 (19207)	EA	1				*	*	*			64	37
PH	3110-198-2830	ROLLER, MAIN DRIVE GEAR 11662560 (19207)	EA	16				*	*	*			64	38
PH	2520-927-3344	GEAR, MAIN DRIVE 11657166 (19207)	EA	1				*	*	*			64	39
PH	2520-769-7570	WASHER, MAIN DRIVE GEAR BEARING 7697570 (19207)	EA	1				*	*	*			64	40
PH	3110-928-1873	BEARING, MAIN DRIVE GEAR 11641071 (19207)	EA	1				*	*	*			64	41
PH	5340-467-1987	RING, RETAINING, MAIN DRIVE GEAR BEARING 11657033 (19207)	EA	1				*	*	*			64	42
PH	5365-221-6519	RING, RETAINING, MAIN DRIVE GEAR 11657737-3 (19207)	EA	1				*	*	*			64	43
PH	5330-770-9070	GASKET, MAIN DRIVE GEAR RETAINER 11662592-4 (19207)	EA	1				*	*	*			64	44
PH	2805-891-6848	GASKET, MAIN DRIVE GEAR RETAINER 8329873 (19207)	EA	4				*	*	*			64	45
PH	5305-456-5058	SCREW, CAP, HEXAGON HEAD, MAIN DRIVE GEAR RETAINER 11657004 (19207)	EA	4				*	*	*			64	46

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip enigy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0701 - TRANSMISSION SHAFTS - Continued												
PH	2520-152-2510	RETAINER, MAIN DRIVE GEAR 11657003 (19207)	EA	1				*	*	*			64	47
PH	3110-117-0637	ROLLER, GEARED COUNTERSHAFT MS19065-37 (96906)	EA	88				*	*	*			64	48
PF	5305-018-0129	SCREW, CAP, HEXAGON HEAD, MAIN SHAFT RETAINER MS90725-66 (96906)	EA	1	*	*	*	*	*	*			64	49
		0704 - TOP COVER ASSEMBLY												
PO	5355-962-3018	KNOB, SHIFT LEVER 6184279 (19207)	EA	1	*	*	*	*	*	*			61	1
PO	4730-908-3195	CLAMP MS35842-10 (96906)	EA	1	*	*	*	*	*	*			61	2
PO	2520-404-0681	BOOT, SHIFT LEVER 11657836 (19207)	EA	1	*	*	*	*	*	*			61	3
PO		CLAMP, SHIFT LEVER BOOT 451230 (24617)	EA	1	*	*	*	*	*	*			61	4
X20		PLATE, SHIFT LEVER CAP 11640850 (19207)	EA	1	*	*	*	*	*	*			61	5
PO	5310-596-0031	WASHER CONTROL LEVER SPRING 7372448 (19207)	EA	1	*	*	*	*	*	*			61	8
PO	3820-249-3540	SPRING, SHIFT CONTROL LEVER 7374969 (19207)	EA	1	*	*	*	*	*	*			61	9
PO	2520-933-3532	LEVER ASSEMBLY SHIFT CONTROL 11657526 (19207)	EA	1	*	*	*	*	*	*			61	16
PH	2520-589-5684	CONTROL, HOUSING ASSEMBLY 11640752 (19207)	EA	1				*	*	*			62	1
PH	5315-839-5822	PIN, COTTER MS9245-63 (96906)	EA	1				*	*	*			65	1
PH	5360-159-3831	SPRING, POPPET 11656996 (19207)	EA	1				*	*	*			65	2

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D8 maint. allowance			(7) 30-day O8 maint. allowance			(8) 1-yr altw per 100 equip enclgy	(9) Depot maint altw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
PH	3110-151-9125	0704-TOP COVER ASSEMBLY-Continued CONTROL, HOUSING ASSEMBLY-Continued BALL, STEEL 147485 (00000)	EA	1				*	*	*			65	3
PH	3820-802-7129	WASHER "C" REVERSE PLUNGER 11656981-2 (19207)	EA	1				*	*	*			65	4
PH	5340-050-1593	PLUG, EXPANSION MS35648-5 (96906)	EA	6				*	*	*			65	5
PH	4730-221-2136	PLUG, SQUARE HEAD PIPE THREAD MS20913-IS (96906)	EA	1				*	*	*			65	7
PH	2520-499-8876	PLUG, TAPER 7374973 (19207)	EA	1				*	*	*			65	6
X1		HOUSING, SHIFTING CONTROL 11657123 (19207)	EA	1									65	8
PH	2520-152-2511	RAIL, REVERSE SHIFT 11657011 (19207)	EA	1				*	*	*			65	9
X1		SHAFT, INTERLOCK 5250608 (19207)	EA	2									65	10
PH	5315-159-6272	PIN, INTERLOCK 11656995 (19207)	EA	1				*	*	*			65	11
PH	2520-257-0664	RAIL, SHIFT, LOW AND SECOND 11657159 (19207)	EA	1				*	*	*			65	12
PH	2520-268-1265	RAIL, SHIFT, THIRD AND FOURTH 11657528 (19207)	EA	1				*	*	*			65	13
PH	5360-159-3832	SPRING, POPPET 11657013 (19207)	EA	2				*	*	*			65	14
PH	2520-256-7152	SPRING, SHIFTER SHAFT 5250642 (19207)	EA	1				*	*	*			65	15
PH	3110-142-6040	BALL, BEARING MS19061-11 (96906)	EA	3				*	*	*			65	16

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBS code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr alw per 100 equip catgry	(9) Depot maint alw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
PH	2520-589-5688	0704—TOP COVER ASSEMBLY—Continued CONTROL, HOUSING ASSEMBLY—Continued FORK, FIRST AND SECOND SPEED SHIFT 11657312 (19207)	EA	1				*	*	*			65	17
PH	5305-157-8324	SET SCREW, LOCK, SHIFT FORK AND RAIL END 11641072 (19207)	EA	4				*	*	*			65	18
X1		END RAIL, FIRST AND SECOND SPEED 11657091 (19207)	EA	1									65	19
X1		FORK, THIRD AND FOURTH SPEED SHIFT 11657006 (19207)	EA	1									65	20
PH	2520-476-6508	PLUNGER, REVERSE 11657052 (19207)	EA	1				*	*	*			65	21
PH	5340-249-3598	SPRING, REVERSE PLUNGER 11657150 (19207)	EA	1				*	*	*			65	22
PH	2520-152-2513	END RAIL, REVERSE 11657093 (19207)	EA	1				*	*	*			65	23
X20		CAP, TRANSMISSION SHIFTING CONTROL HOUSING 11662552 (19207)	EA	1	*	*	*	*	*	*			61	6
PF		PIN, CONTROL HOUSING 11656997 (19207)	EA	1	*	*	*	*	*	*			61	7
PH	5305-269-3210	SCREW, 3/8-16 x 7/8 MS90725-59 (96906)	EA	6				*	*	*			62	2
PH	5310-627-6128	WASHER, TO ATTACH HOUSING, LOCK, 3/8 MS35335-35 (96906)	EA	6				*	*	*			62	3
PH	2520-589-5684	GASKET, CONTROL HOUSING 11662591 (19207)	EA	1				*	*	*			62	4



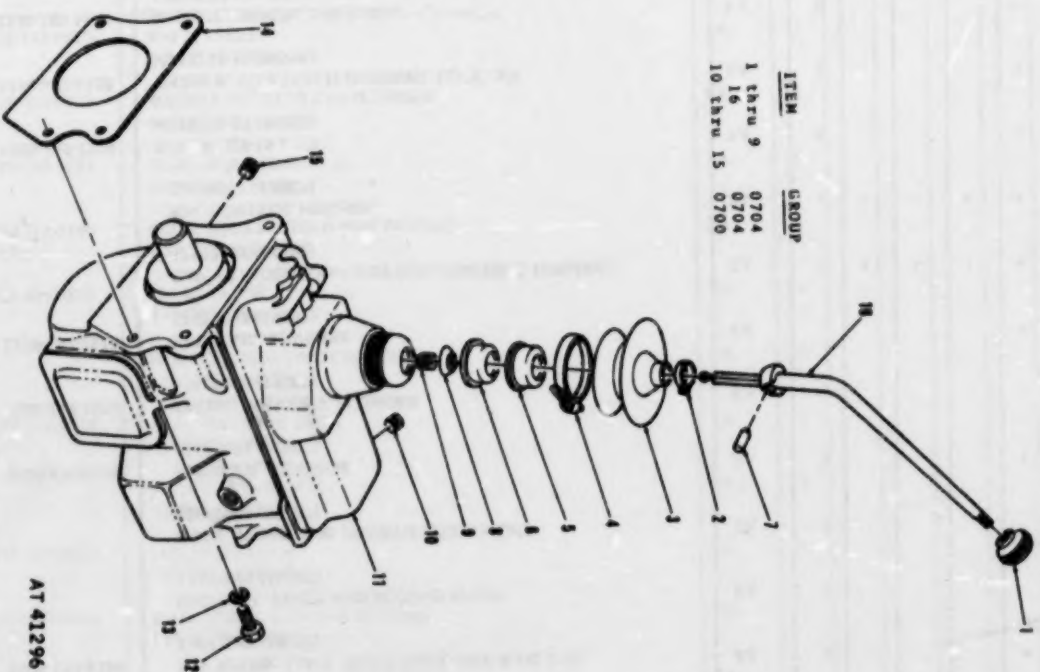


Figure 61. Transmission

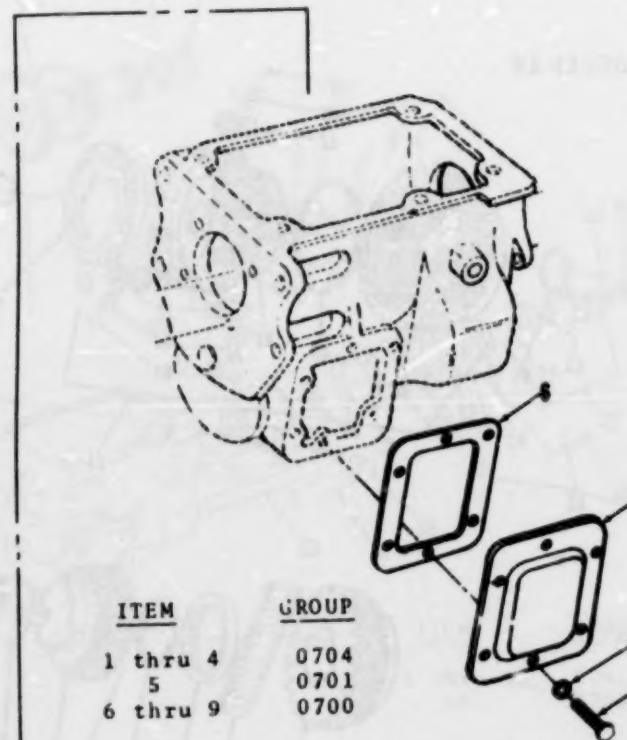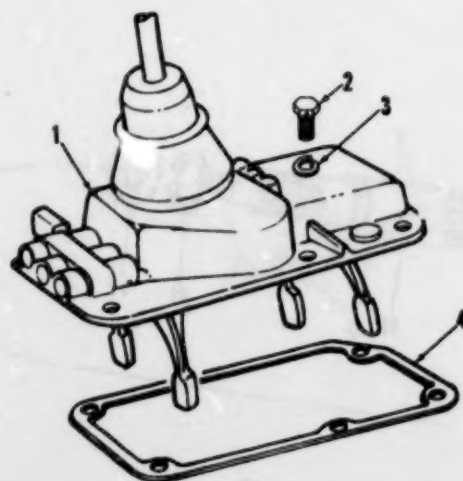


<u>ITEM</u>	<u>GROUP</u>
1 thru 4	0704
5	0701
6 thru 9	0700

AT 41317


Figure 62. Transmission Cover and Mainshaft

162

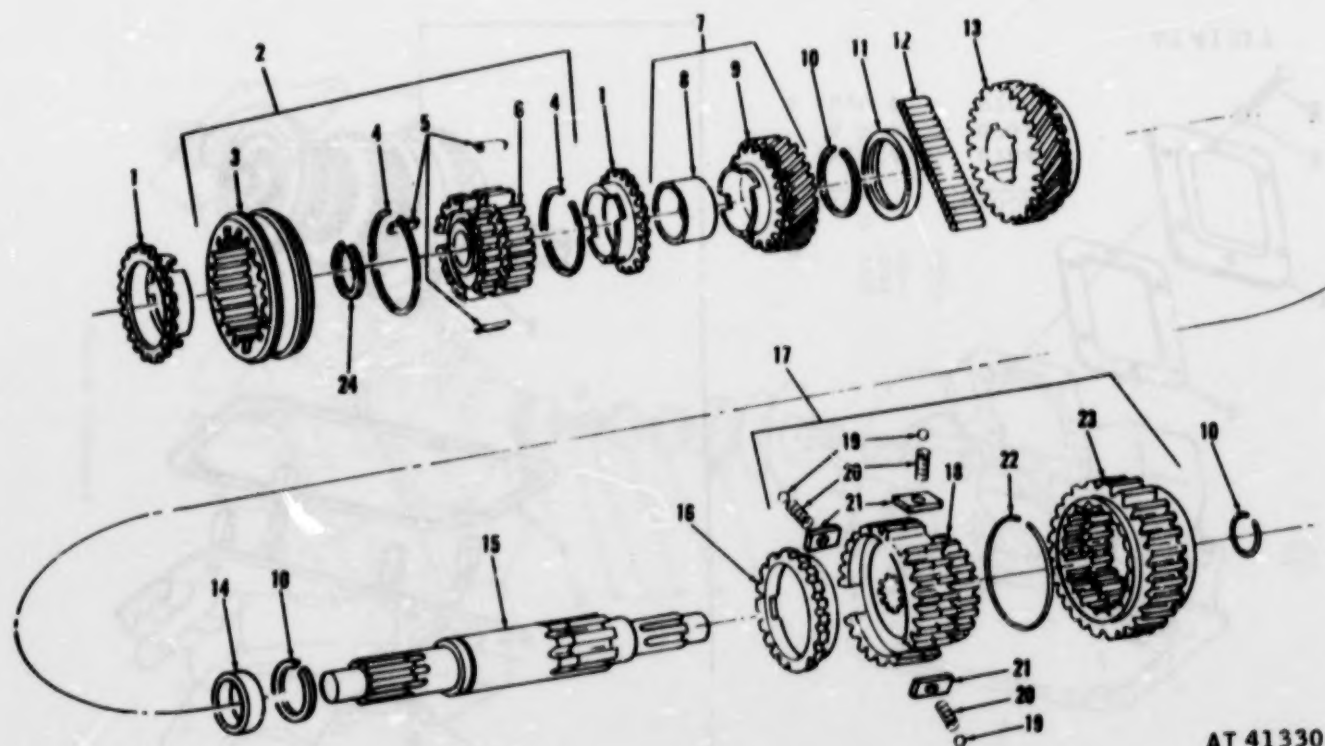

AT 41330


Figure 6.3. Transmission Mainshaft

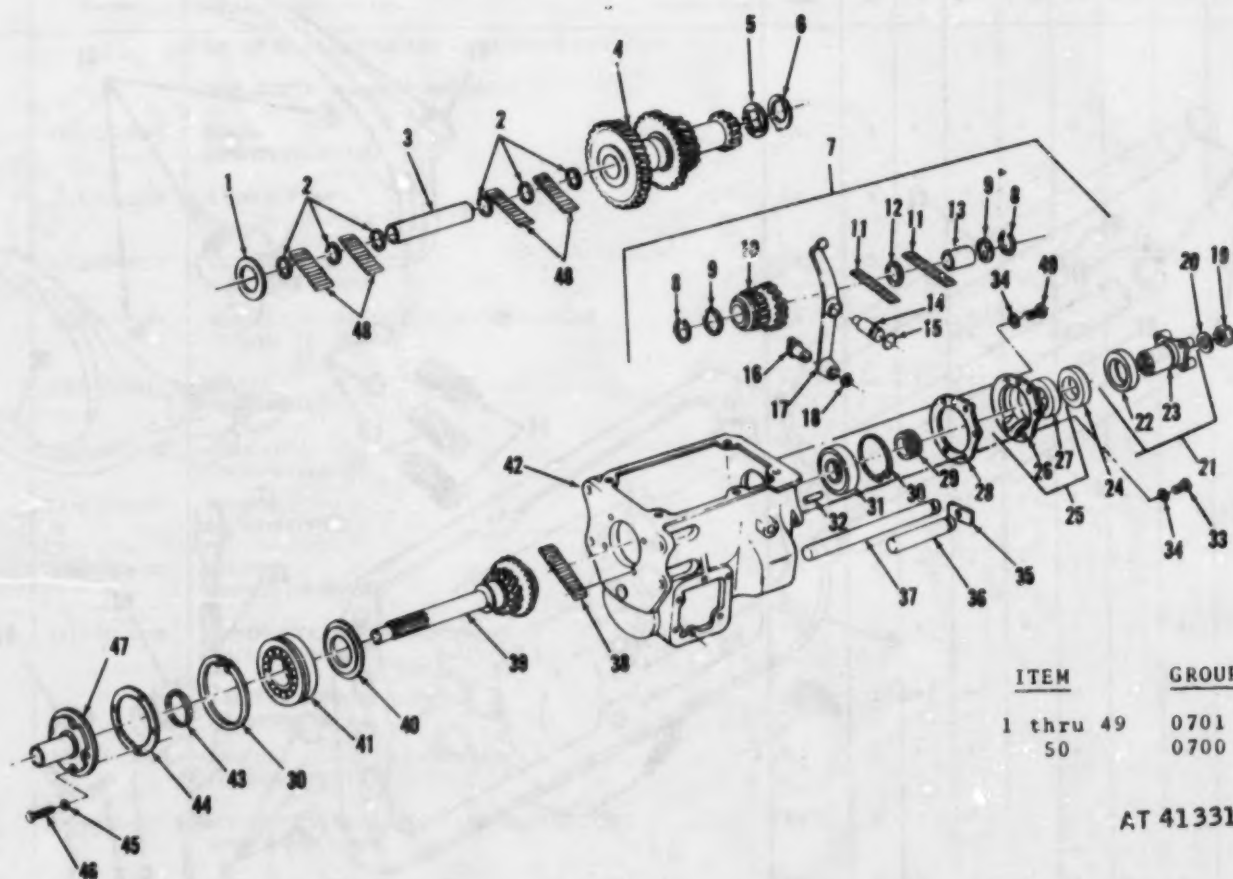

ITEM	GROUP
1 thru 49	0701
50	0700

AT 41331

Figure 64. Transmission Countershaft, Reverse Idler Shaft and Main Drive Gear

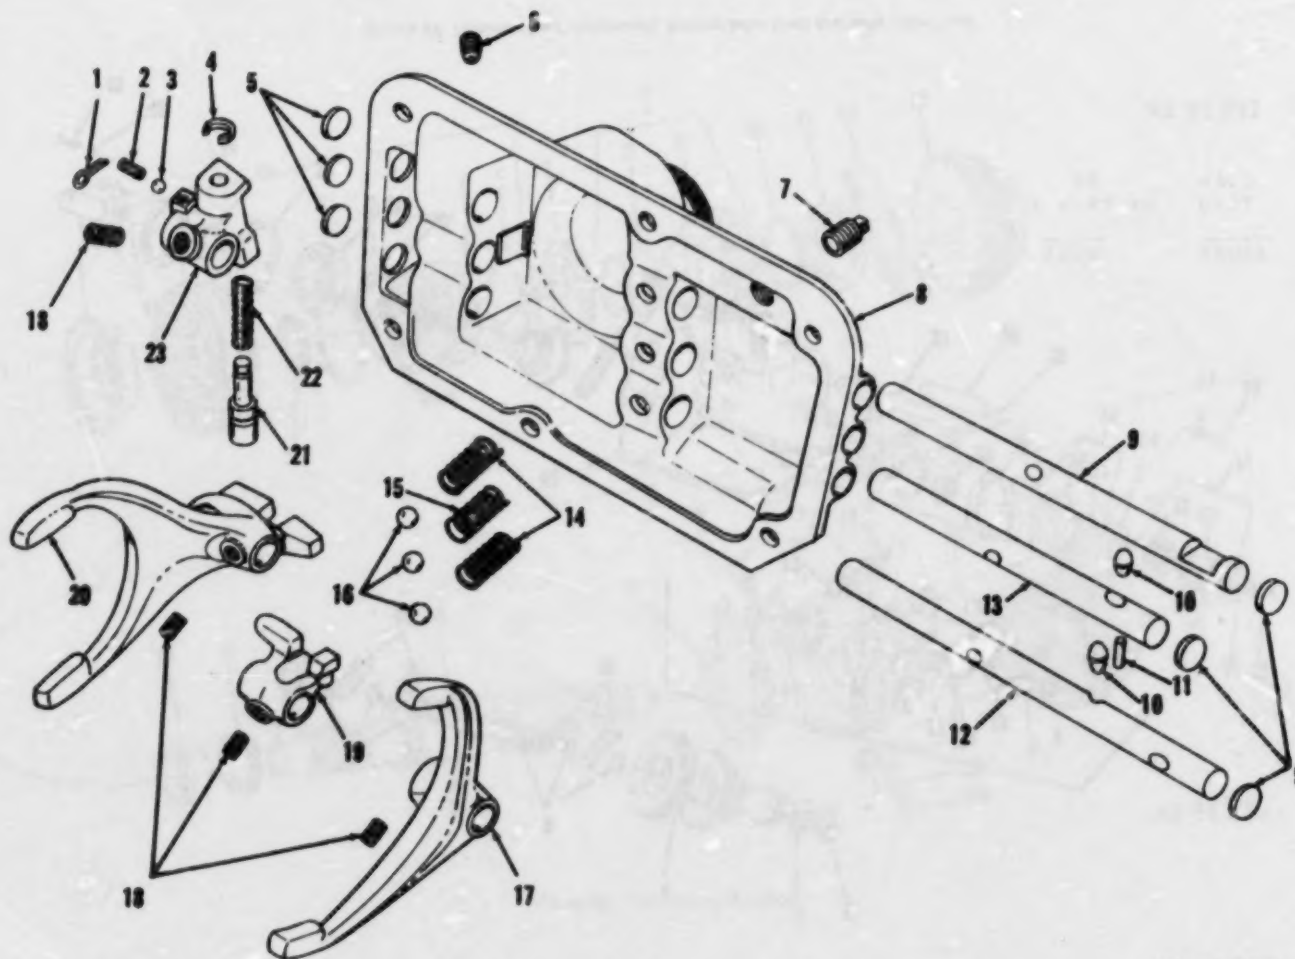

AT 41332

Figure 65. Transmission Top Cover

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SIR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip catgry	(9) Depot mainst slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		GROUP 08—TRANSFER AND FINAL DRIVE ASSEMBLY												
		0801—POWER TRANSFER ASSEMBLY												
PO	5305-782-9495	SCREW MS90725-111 (96906)	EA	4	*	*	*	*	*	*			66	1
PO	5310-809-5998	WASHER, FLAT MS27183-18 (96906)	EA	8	*	*	*	*	*	*			66	2
PO	5310-584-5272	WASHER, LOCK MS35338-48 (96906)	EA	10	*	*	*	*	*	*			66	3
PO	2520-369-8821	BRACKET, TRANSFER CASE, RIGHT SUPPORT 11656935 (19207)	EA	1	*	*	*	*	*	*			66	4
PO	5365-159-6911	SPACER 11656941 (19207)	EA	4	*	*	*	*	*	*			66	5
PO	5310-436-3412	INSULATOR 11656940 (19207)	EA	8	*	*	*	*	*	*			66	6
PO	5310-159-6770	WASHER 11656939 (19207)	EA	4	*	*	*	*	*	*			66	7
PO	5305-716-8183	SCREW MS90725-116 (96906)	EA	4	*	*	*	*	*	*			66	8
PO	2520-491-6759	SUPPORT, TRANSFER CASE, FRONT 11656954-1 (19207)	EA	1	*	*	*	*	*	*			66	9
X20		BRACKET, SUPPORT, LEFT 11656938 (19207)	EA	1	*	*	*	*	*	*			66	10
PO	2520-369-8819	BRACKET, TRANSFER CASE, LEFT 11656936 (19207)	EA	1	*	*	*	*	*	*			66	11
PO	5305-761-4227	SCREW, TO ATTACH FRONT AND REAR SUPPORT MS90726-111 (96906)	EA	6	*	*	*	*	*	*			66	12
PO	5310-935-3750	NUT, SELF-LOCKING MS51943-4 (96906)	EA	4	*	*	*	*	*	*			66	13
PO	5310-732-0560	NUT, PLAIN, HEX MS51968-14 (96906)	EA	6	*	*	*	*	*	*			66	14

16

SECTION F. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST -- Continued

(1) NSN code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30 day (30 maint. allowance			(7) 30 day (30 maint. allowance			(8) 1-yr air per 100 equip enigns	(9) 1-yr air per 100 equip	(10) Illustration	
					(6) 1-30	(6) 31-60	(6) 61-100	(7) 1-30	(7) 31-60	(7) 61-100			(10) Figure No.	(10) Item No.
		0801-POWER TRANSFER ASSEMBLY-Continued												
PO	2520-491-6758	SUPPORT, TRANSFER CASE, REAR 11656954-2 (19207)	EA	1	*	*	*	*	*	*			66	15
POB	2520-917-0837	CASE ASSEMBLY, TRANSFER 11641003 (19207)	EA	1	*	*	*	*	*	*			66	16
PO	4730-138-8196	PLUG, DRAIN 11657517 (19207)	EA	1	*	*	*	*	*	*			66	17
PO	4730-221-2139	PLUG, FILL AND CHECK MS20913-43 (96906)	EA	1	*	*	*	*	*	*			66	18
PF	5315-012-0123	PIN, COTTER, SHAFT NUT MS24665-355 (96906)	EA	3	*	*	*	*	*	*			67	1
PF	5310-159-6278	NUT, HEXAGON, SHAFT 7743652 (19207)	EA	3	*	*	*	*	*	*			67	2
VF	5310-350-5617	WASHER, FLAT, SHAFT NUT 7412534 (19207)	EA	3	*	*	*	*	*	*			67	3
PF	2520-933-3723	YOKE AND GUARD ASSEMBLY 11657437 (19207)	EA	2	*	*	*	*	*	*			67	4
X2F		SEAL AND RETAINER ASSEMBLY, SHAFT 11657438 (19207)	EA	2	*	*	*	*	*	*			67	5
PF	2520-933-3588	SEAL, INPUT AND OUTPUT SHAFT 11657684 (19207)	EA	1	*	*	*	*	*	*			67	6
X1		RETAINER, INPUT AND OUTPUT SHAFT 11657434 (19207)	EA	1									67	7
PF		GASKET, FRONT BEARING RETAINER (1.010 IN THK) 7412051-1 (19207)	EA	V	*	*	*	*	*	*			67	8
PF		GASKET, FRONT BEARING RETAINER (.015 IN THK) 7412052-2 (19207)	EA	V	*	*	*	*	*	*			67	8
PF	3110-159-6013	BALL BEARING AND SNAP RING ASSEMBLY SHAFT 11662548 (19207)	EA	2	*	*	*	*	*	*			67	9
PF		STUD, RETAINER 103217 (24617)	EA	8	*	*	*	*	*	*			67	10

SECTION H. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) Nash code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip category	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0801—POWER TRANSFER ASSEMBLY—Continued												
X1		CASE, TRANSFER 11662521 (19207)		1									67	11
PF	5330-741-1824	GASKET, REAR BEARING RETAINER 7411824 (19207)	EA	2	*	*	*	*	*	*			67	12
PF	5310-285-2170	WASHER, THRUST, UPPER OUTPUT 7994045 (19207)	EA	2	*	*	*	*	*	*			67	13
PF		SHAFT ASSEMBLY, UPPER DRIVE 11657821 (19207)	EA	1	*	*	*	*	*	*			67	14
X2F		GEAR, UPPER DRIVE SHAFT 7980933 (19207)	EA	1	*	*	*	*	*	*			67	15
PF	3110-196-2494	ROLLER, BEARING, GEAR SHIFT 7342864 (19207)	EA	70	*	*	*	*	*	*			67	16
X2F		SPACER, BEARING 7342723 (19207)	EA	1	*	*	*	*	*	*			67	17
PF		WASHER, THRUST, UPPER SHAFT 7994044 (19207)	EA	1	*	*	*	*	*	*			67	18
PF	2520-401-3816	SHAFT, UPPER DRIVE 7351062 (19207)	EA	1	*	*	*	*	*	*			67	19
PF	2520-379-3891	SHAFT, IDLER GEAR 7342505 (19207)	EA	1	*	*	*	*	*	*			67	24
PF	5330-285-3784	GASKET, IDLER SHAFT COVER 7411885 (19207)	EA	1	*	*	*	*	*	*			67	25
PF	2520-734-2649	COVER, IDLER, SHAFT 7342649 (19207)	EA	1	*	*	*	*	*	*			67	26
PF	5306-472-2763	BOLT, ASSEMBLED WASHER, IDLER SHAFT COVER 187993 (24617)	EA	3	*	*	*	*	*	*			67	27

168

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D8 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr alt per 100 equip catgry	(9) Dept maint alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		0801-POWER TRANSFER ASSEMBLY-Continued												
PF		GEAR ASSEMBLY, IDLER 11657428 (19207)	EA	1	*	*	*	*	*	*			67	28
PF		BEARING, ROLLER, IDLER GEAR 703100 (24617)	EA	1	*	*	*	*	*	*			67	29
PF	2520-734-2496	SHIM, BEARING (.004 IN. THK) 7342496-1 (19207)	EA	V	*	*	*	*	*	*			67	30
PF	2520-734-2495	SHIM, BEARING (.005 IN. THK) 7342496-2 (19207)	EA	V	*	*	*	*	*	*			67	31
PF	2520-734-2494	SHIM, BEARING (.0125 IN. THK) 7342496-3 (19207)	EA	V	*	*	*	*	*	*			67	32
PF	2520-734-2811	SHIM, BEARING (.015 IN. THK) 7342496-4 (19207)	EA	V	*	*	*	*	*	*			67	33
PF	3120-734-2500	SPACER, BEARING 7342500 (19207)	EA	1	*	*	*	*	*	*			67	34
X2F		GEAR, IDLER 11657334 (19207)	EA	1	*	*	*	*	*	*			67	35
PF	2520-401-3818	SHAFT, OUTPUT, FRONT AXLE 7351134 (19207)	EA	1	*	*	*	*	*	*			67	37
PF		STUD, BEARING RETAINER 103195 (24617)	EA	4	*	*	*	*	*	*			67	38
PF	5310-010-3322	WASHER, LOCK, BEARING RETAINER MS35338-47 (96906)	EA	8	*	*	*	*	*	*			67	39
PF	5310-624-5755	NUT, PLAIN, HEX, BEARING RETAINER MS51968-11 (96906)	EA	8	*	*	*	*	*	*			67	40
PF		RETAINER ASSEMBLY, BEARING 11657820 (19207)	EA	1	*	*	*	*	*	*			68	
PF	5340-741-1882	RING, OUTPUT GEAR SHAFT ROLLER RETAINING SNAP 7980932 (19207)	EA	1	*	*	*	*	*	*			68	1
PF	3110-929-8365	ROLLER, OUTPUT GEAR SHAFT 11657633 (19207)	EA	15	*	*	*	*	*	*			68	2

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBS code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DB maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip enclgy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
PF	2520-709-1753	0801-POWER TRANSFER ASSEMBLY -Continued RETAINER ASSEMBLY, BEARING -Continued SHAFT, OUTPUT GEAR 7091753 (19207)	EA	1	*	*	*	*	*	*			68	3
PF	3110-100-5937	BEARING, OUTPUT SHAFT, FRONT MS19081-86 (96906)	EA	1	*	*	*	*	*	*			68	4
X1		SPACER, BEARING 7342501 (19207)	EA	1									68	5
PF	2520-734-2496	SHIM, BEARING 7342496-1 (19207)	EA	V	*	*	*	*	*	*			68	6
PF	2520-734-2495	SHIM, BEARING 7342496-2 (19207)	EA	V	*	*	*	*	*	*			68	7
PF	2520-734-2494	SHIM, BEARING 7342496-3 (19207)	EA	V	*	*	*	*	*	*			68	8
PF	2520-734-2811	SHIM, BEARING 7342496-4 (19207)	EA	V	*	*	*	*	*	*			68	9
X1		RETAINER, OUTPUT BEARING 11657288 (19207)		1									68	10
PF		BEARING, OUTPUT SHAFT, REAR 703100 (24617)	EA	1	*	*	*	*	*	*			68	12
PF	2520-933-3588	SEAL, OIL, OUTPUT, SHAFT REAR 11657684 (19207)	EA	1	*	*	*	*	*	*			68	13
PF	2520-933-3723	YOKE AND GUARD ASSEMBLY TRANSFER CASE 11657437 (19207)	EA	1	*	*	*	*	*	*			68	14
PF	5315-017-0123	PIN, COTTER MS24665-355 (96906)	EA	1	*	*	*	*	*	*			68	15
PF	5310-159-6278	NUT 7743652 (19207)	EA	1	*	*	*	*	*	*			68	16
PF	5310-350-5617	WASHER, TO ATTACH YOKE AND GUARD ASSEMBLY 7412534 (19207)	EA	1	*	*	*	*	*	*			68	17

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBSR code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas.	(5) Qty inc in unit	(6) 30-day D8 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr aw per 100 equip entry	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		0801-POWER TRANSFER ASSEMBLY-Continued												
PF	5305-157-8325	SCREW AND LOCK WASHER 11657433 (19207)	EA	6	*	*	*	*	*	*			68	11
PF	5310-732-0559	NUT MS51968-8 (96906)	EA	2	*	*	*	*	*	*			68	18
PF	5310-261-7340	WASHER MS35338-46 (96906)	EA	2	*	*	*	*	*	*			68	19
X2F		SHAFT ASSEMBLY, PARKING BRAKE OUTPUT 11657819 (19207)	EA	1	*	*	*	*	*	*			69	
PF	5340-741-1882	RING, RETAINER, ROLLER BEARING 7980932 (19207)	EA	1	*	*	*	*	*	*			69	1
PF	3110-929-8365	ROLLER, BEARING, OUTPUT SHAFT 11657633 (19207)	EA	15	*	*	*	*	*	*			69	2
PF	2520-709-1753	SHAFT, OUTPUT GEAR 7091753 (19207)	EA	1	*	*	*	*	*	*			69	3
PF		GEAR, SPEEDOMETER DRIVE 7994329 (19207)	EA	1	*	*	*	*	*	*			69	4
PF	2520-734-2499	SPACER, SPEEDOMETER GEAR 7342499 (19207)	EA	1	*	*	*	*	*	*			69	5
PF	5310-261-7340	WASHER MS35338-46 (96906)	EA	2	*	*	*	*	*	*			69	9
PF	5310-732-0559	NUT MS51968-8 (96906)	EA	2	*	*	*	*	*	*			69	10
PF	2520-933-3588	SEAL, OIL OUTPUT SHAFT 11657684 (19207)	EA	1	*	*	*	*	*	*			69	11
X20		FLANGE, OUTPUT SHAFT 11657435 (19207)	EA	1	*	*	*	*	*	*			69	12
PO	5315-012-0123	PIN, COTTER, OUTPUT SHAFT FLANGE MS24665-355 (96906)	EA	1	*	*	*	*	*	*			69	13

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMM code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit c' meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 enclg equip	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-99	(b) 101-999	(c) 1000-9999	(a) 1-99	(b) 101-999	(c) 1000-9999			(a) Figure No.	(b) Item No.
PO	5310-159-6278	0801-POWER TRANSFER ASSEMBLY-Continued SHAFT ASSEMBLY, PARKING BRAKE OUTPUT-Continued NUT, OUTPUT FLANGE 7743652 (19207)	EA	1	*	*	*	*	*	*			69	14
PO		WASHER, OUTPUT FLANGE 7412534 (19207)	EA	1	*	*	*	*	*	*			69	15
PF	5305-157-8325	SCREW AND LOCK WASHER 11657433 (19207)	EA	6	*	*	*	*	*	*			69	16
PF		RETAINER ASSEMBLY, BEARING 7342860 (19207)	EA	1	*	*	*	*	*	*			69	17
PF		BEARING ASSEMBLY, REAR 703100 (24617)	EA	1	*	*	*	*	*	*			69	18
PF		STUD, BRAKE SUPPORT MOUNTING 103195 (24617)	EA	5	*	*	*	*	*	*			69	19
X2F		RETAINER AND BAFFLE ASSEMBLY 11657436 (19207)	EA	1	*	*	*	*	*	*			69	20
PF	3110-100-5937	BEARING ASSEMBLY, FRONT MS19081-85 (96906)	EA	1	*	*	*	*	*	*			69	21
PF	2520-734-2496	SHIM, BEARING (.004 IN THK) 7342496-1 (19207)	EA	V	*	*	*	*	*	*			69	22
PF	2520-734-2495	SHIM, BEARING (.005 IN THK) 7342496-2 (19207)	EA	V	*	*	*	*	*	*			69	23
PF	2520-734-2494	SHIM, BEARING (.0125 IN THK) 7342496-3 (19207)	EA	V	*	*	*	*	*	*			69	24
PF	2520-734-2811	SHIM, BEARING (.015 IN THK) 7342496-4 (19207)	EA	V	*	*	*	*	*	*			69	25
		0803-GEAR SHIFT AND CONTROLS												
PF	2520-741-2043	CLUTCH, SLIDING, HIGH-LOW 7980934 (19207)	EA	1	*	*	*	*	*	*			67	20
PF	2520-709-1754	YOKE-FORK SHIFT 7091754 (19207)	EA	2	*	*	*	*	*	*			67	21

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NMR code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit or meas	(5) Qty inc in unit	(6) 30-day DB maint. allowance			(7) 30-day GB maint. allowance			(8) 1-yr allow per 100 equip outlet	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		0803—GEAR SHIFT AND CONTROLS—Continued												
PF	2520-986-5302	SCREW, YOKE LOCK 7994043 (19207)	EA	2	*	*	*	*	*	*			67	22
PF	2520-737-5412	WIRE, LOCK 22-W-1630 (81349)	EA	2	*	*	*	*	*	*			67	23
PF		GEAR, SLIDING, OUTPUT SHAFT 7980935 (19207)	EA	1	*	*	*	*	*	*			67	36
PF	3110-151-9123	BALL, SHIFT RAIL POPPET MS19059-90 (96906)	EA	2	*	*	*	*	*	*			67	41
PF	2520-735-1126	SPRING, SHIFT RAIL POPPET 7351125 (19207)	EA	2	*	*	*	*	*	*			67	42
PF	2520-923-6128	GASKET, SHIFT RAIL POPPET SCREW 11662559 (19207)	EA	2	*	*	*	*	*	*			67	43
PF	2520-986-5302	SCREW, SHIFT RAIL POPPET 11657411 (19207)	EA	2	*	*	*	*	*	*			67	44
PF	2520-734-2859	RAIL, CLUTCH, SHIFT 734859 (19207)	EA	1	*	*	*	*	*	*			67	45
PF	2520-734-2858	RAIL, TRANSFER CASE, SECOND SPEED SHIFT 7342858 (19207)	EA	1	*	*	*	*	*	*			67	46
PF	5330-250-9946	SEAL, TRANSFER CASE SHIFT RAIL OIL 11657689 (19207)	EA	2	*	*	*	*	*	*			67	47
PO	5315-846-1270	PIN, CLEVIS SHIFT ROD ASSEMBLY MS35810-35 (96906)	EA	2	*	*	*	*	*	*			70	1
PO	5315-842-3014	PIN, COTTER MS24665-383 (96906)	EA	4	*	*	*	*	*	*			70	2
PO	5310-080-6004	WASHER MS27183-14 (96906)	EA	3	*	*	*	*	*	*			70	3
PO		ROD ASSEMBLY, HI-LO SHIFT 11656927 (19207)	EA	1	*	*	*	*	*	*			70	4

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SIR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip catgry	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a) Figure No.	(b) Item No.
		0803- GEAR SHIFT AND CONTROLS - Continued												
X20		ROD ASSEMBLY, HI-LO SHIFT 11656928 (19207)	EA	1	*	*	*	*	*	*			70	7
X20		LEVER ASSEMBLY, TWO WHEEL DRIVE TO FOUR WHEEL DRIVE SHIFT 11656930 (19207)	EA	1	*	*	*	*	*	*			70	8
PO	5305-056-9945	SCREW, TO ATTACH RETAINER MS24621-18 (96906)	EA	3	*	*	*	*	*	*			70	9
PO	2990-455-1276	RETAINER, SHIFT LEVER SEAL 11657302 (19207)	EA	1	*	*	*	*	*	*			70	10
PO	5330-157-6257	SEAL, TRANSFER CASE SHIFT LEVER 11657228 (19207)	EA	1	*	*	*	*	*	*			70	11
MO		TUBING, LEVER HAND GRIP 11656949 (19207)	EA	1									70	12
PO	4720-270-3941	MANUFACTURE FROM: HOSE 3.5 IN LG ANS-3208 ()	IN	V	*	*	*	*	*	*				
X20		LEVER ASSEMBLY, TRANSFER, HI-LO SHIFT 11656932 (19207)	EA	1	*	*	*	*	*	*			70	13
PO	5305-269-4511	SCREW MS90725-63 (96906)	EA	1	*	*	*	*	*	*			70	14
PO	5310-637-9541	WASHER, TO ATTACH BRACKET MS35338-46 (96906)	EA	3	*	*	*	*	*	*			70	15
X20		BRACKET, TRANSFER CASE SHIFT LEVERS AND HANDBRAKE LEVERS SUPPORT 11656948 (19207)	EA	1	*	*	*	*	*	*			70	16
PO	5305-269-3240	SCREW MS90727-46 (96906)	EA	1	*	*	*	*	*	*			70	17
PO	5305-959-2724	SCREW MS35190-320 (96906)	EA	1	*	*	*	*	*	*			70	18

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SUPPLIES														
(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntgry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		0803—GEAR SHIFT AND CONTROLS—Continued												
PO		SPACER 11656950 (19207)	EA	1	*	*	*	*	*	*			70	19
PO		BUSHING 11656952 (19207)	EA	1	*	*	*	*	*	*			70	20
PO		SPACER 11656953 (19207)	EA	1	*	*	*	*	*	*			70	21
PO		WASHER 8687086 (19207)	EA	3	*	*	*	*	*	*			70	22
PO		BUSHING, TRANSFER CASE, HI-LO LEVER ASSEMBLY 11656951 (19207)	EA	1	*	*	*	*	*	*			70	23
PO	5310-059-9264	NUT, SELF LOCKING MS21045-C6 (96906)	EA	1	*	*	*	*	*	*			70	24
PO		ROD ASSEMBLY, TWO WHEEL DRIVE TO FOUR WHEEL DRIVE, COMPLETE 11656924 (19207)	EA	1	*	*	*	*	*	*			70	25
X20		ROD ASSEMBLY 11656925 (19207)	EA	1	*	*	*	*	*	*			70	26
PO	5340-930-1755	CLEVIS, SHIFT ROD MS35812-5 (96906)	EA	1	*	*	*	*	*	*			70	5
PO	5310-880-7745	NUT, CLEVIS MS51968-11 (96906)	EA	1	*	*	*	*	*	*			70	6
		0804—LUBRICATION, COOLING OR HYDRAULIC COMPONENTS												
PO	4730-139-3904	TEE, VENT HOSE 11640795 (19207)	EA	1	*	*	*	*	*	*			71	1
PO	4730-137-9236	CLAMP, HOSE, TRANSFER VENT 11640805-3 (19207)	EA	6	*	*	*	*	*	*			71	2

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBS code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day GS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip cntry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
MO		0804—LUBRICATION, COOLING OF HYDRAULIC COMPONENTS—Continued												
		HOSE, VENT 11657469-8 (19207)	EA	1									71	3
		MANUFACTURE FROM:												
PO	4720-912-3092	HOSE, RUBBER, .204, .236 ID x .348, 472 OD x 35.00 IN. LG., SAE 30R2, TYPE 1	FT	V	*	*	*	*	*	*				
MO		HOSE, VENT, TRANSFER 11657469-2 (19207)	EA	2									71	4
		MANUFACTURE FROM:												
PO	4720-912-3092	HOSE, RUBBER, .204, .236 ID x .348, 472, OD x 3 IN. LG., SAE 30R2, TYPE 1	FT	V	*	*	*	*	*	*				
PO	4710-495-0181	TUBE ASSEMBLY 11657455 (19207)	EA	2	*	*	*	*	*	*			71	5
PO	4730-014-2432	NUT, 7/16-24 142432 (24617)	EA	2	*	*	*	*	*	*			71	6
PO	4730-277-8273	ELBOW, 90° 137421 (24617)	EA	1	*	*	*	*	*	*			71	7






Figure 66. Power Transfer Case and Mounting Parts

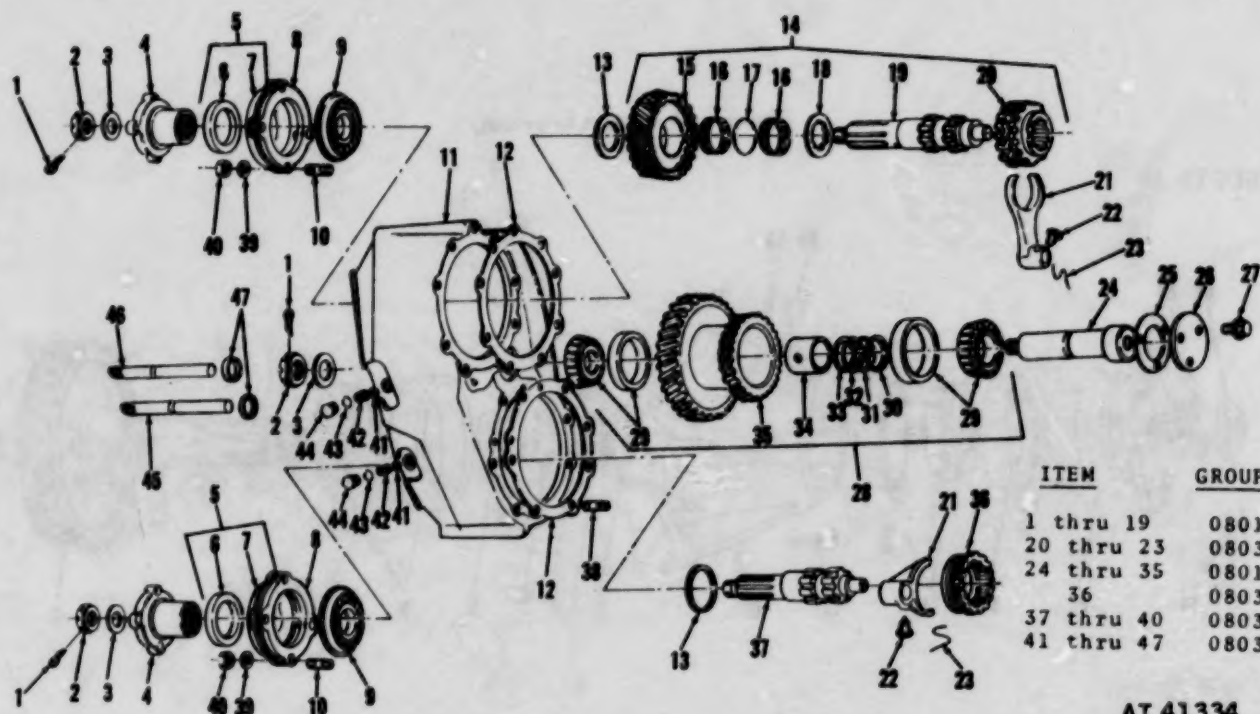

AT 41334

Figure 67. Power Transfer Assembly

178

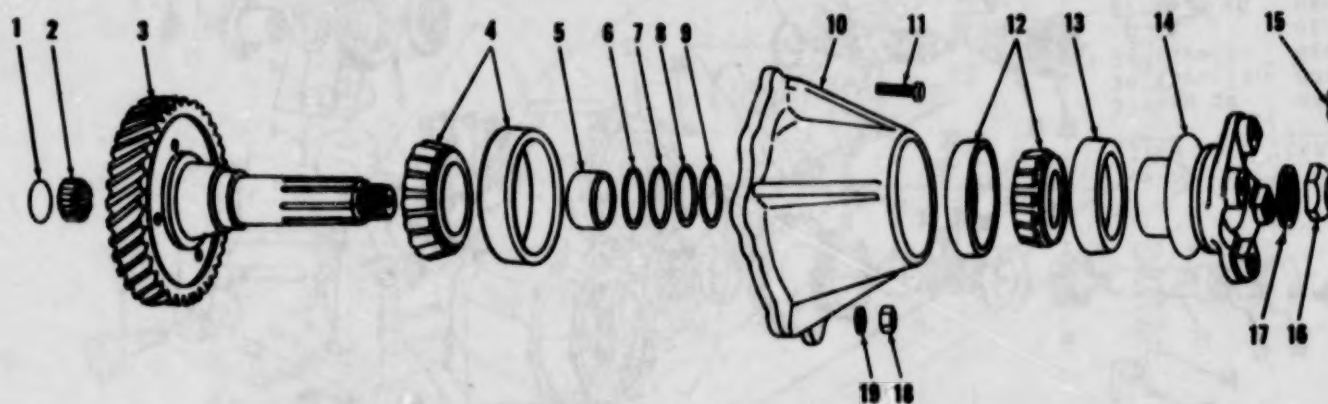

AT 41335

Figure 68. Upper Output Shaft Assembly

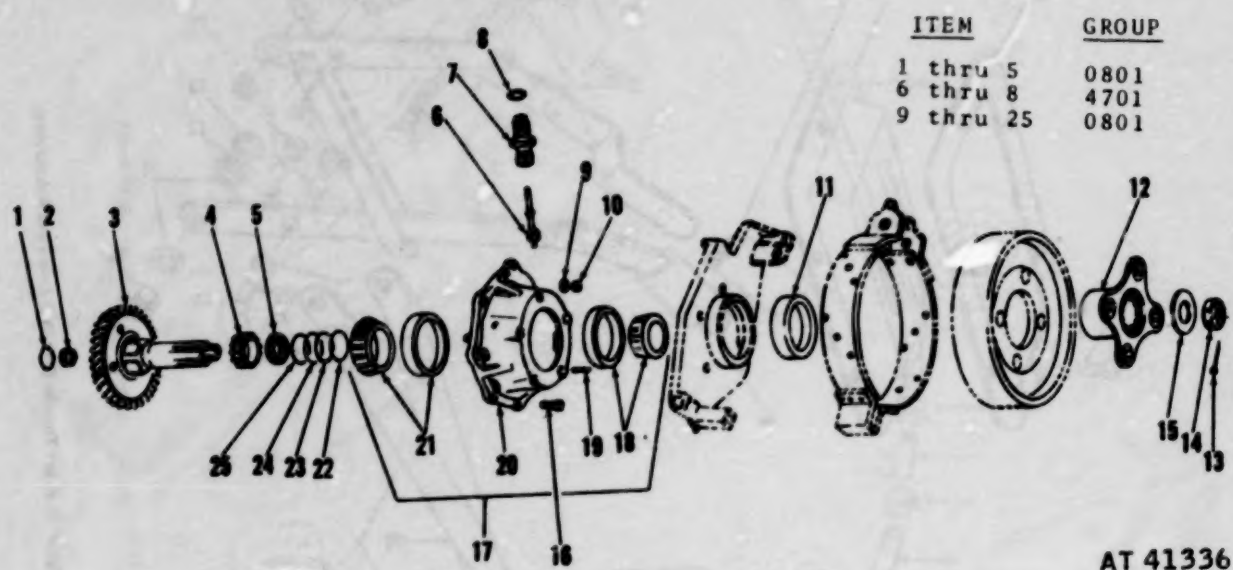


Figure 69. Parking Brake and Output Shaft and Related Parts


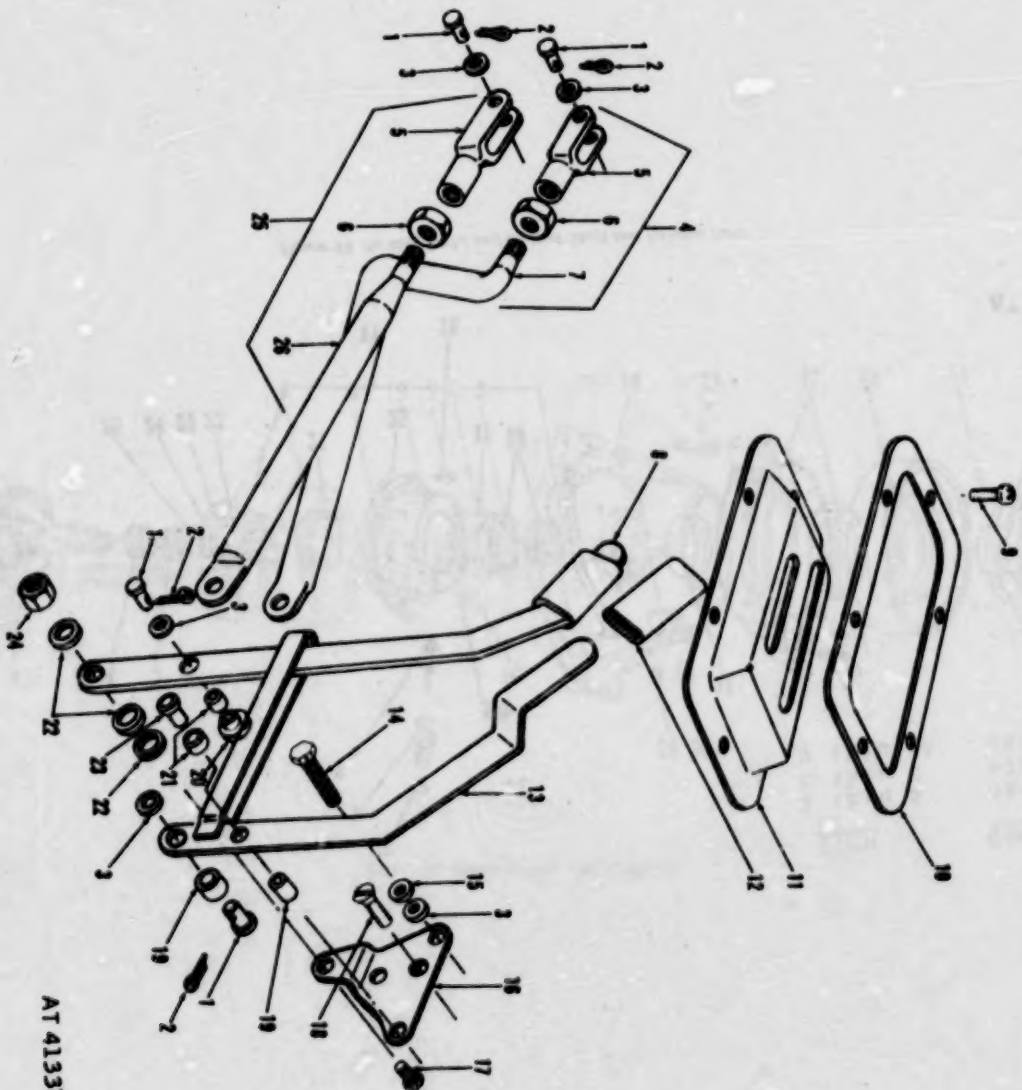


Figure 70. Power Transfer Gear Shift Levers and Related Parts

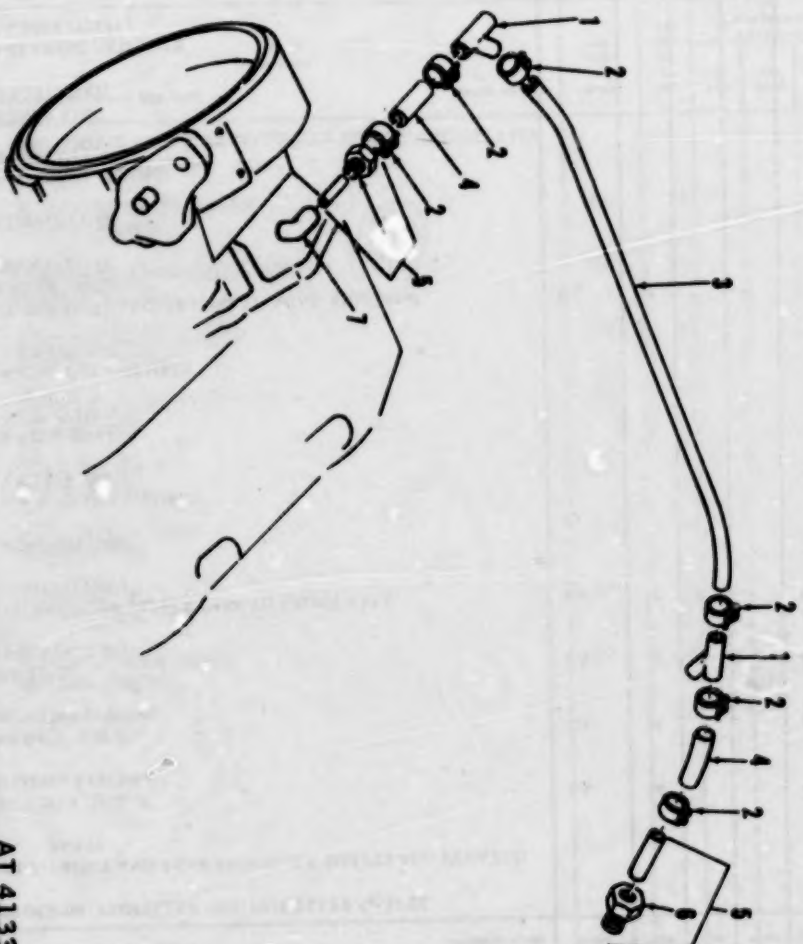

AT 41338

Figure 71. Power Transfer Vent Tubing

SECTION H. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) DMR code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr air per 100 equip category	(9) Depot maint air per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(d) 1-30	(e) 31-60	(f) 61-100			(a) Figure No.	(b) Item No.
		GROUP 09—PROPELLER AND PROPELLER SHAFTS												
		0900—FRONT AND REAR PROPELLER SHAFTS AND RELATED PARTS												
PO	5310-880-7746	NUT, HEX, 5/16-24 MS51968-5 (96906)	EA	24	*	*	*	*	*	*			72	1
PO	5310-407-9566	WASHER, LOCK MS35338-45 (96906)	EA	24	*	*	*	*	*	*			72	2
PO	5306-174-4312	BOLT, "U" 5307299 (19207)	EA	12	*	*	*	*	*	*			72	3
PO	2520-933-3711	KIT, PARTS, TRANSFER CASE TO FRONT AXLE 5704415 (19207)	EA	1	*	*	*	*	*	*			72	7
		COMPOSED OF											72	4
XI		1-JOURNAL ASSEMBLY 2-5-528 (72447)											72	5
XI		4-RING, SNAP 2-7-29 (72447)											72	6
XI		4-BEARING ASSEMBLY 2-938X (72447)											72	7
PO	2520-927-3331	KIT, PARTS, TRANSFER CASE TO REAR AXLE AND TRANSMISSION 5-266X (72477)	EA	1	*	*	*	*	*	*			72	7
		COMPOSED OF											72	4
XI		1-JOURNAL (CROSS) 2-5-368X (72477)											72	5
XI		4-SNAP RING 2-7-29 (72447)											72	6
XI		4-BEARING ASSEMBLY 2-6-948X (72447)											72	6

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) DSM code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr alt per 100 equip catgry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		0900—FRONT AND REAR PROPELLER SHAFTS AND RELATED PARTS—Continued												
PO	2520-933-3288	PROPELLER SHAFT, FRONT 11640964 (19207)	EA	1	*	*	*	*	*	*			72	8
PO	2520-933-3589	PROPELLER SHAFT, INTERMEDIATE 11640987 (19207)	EA	1	*	*	*	*	*	*			72	9
PO	2520-933-3289	PROPELLER SHAFT, REAR 11640965 (19207)	EA	1	*	*	*	*	*	*			72	10
PO	2520-535-0473	CAP, DUST, U-JOINT SLEEVE 3-14-39 (72447)	EA	2	*	*	*	*	*	*			72	11
PO	2520-929-8287	SEAL, SLIP YOKE 2-16-263 (72447)	EA	3	*	*	*	*	*	*			72	12
PO	5310-886-7225	WASHER, YOKE SEAL 3-15-33 (72447)	EA	3	*	*	*	*	*	*			72	13
X20		YOKE, SLEEVE 945727 (65909)	EA	2	*	*	*	*	*	*			72	14
PO	4730-050-4203	FITTING, LUBRICATION MS15001-1 (96906)	EA	6	*	*	*	*	*	*			72	15

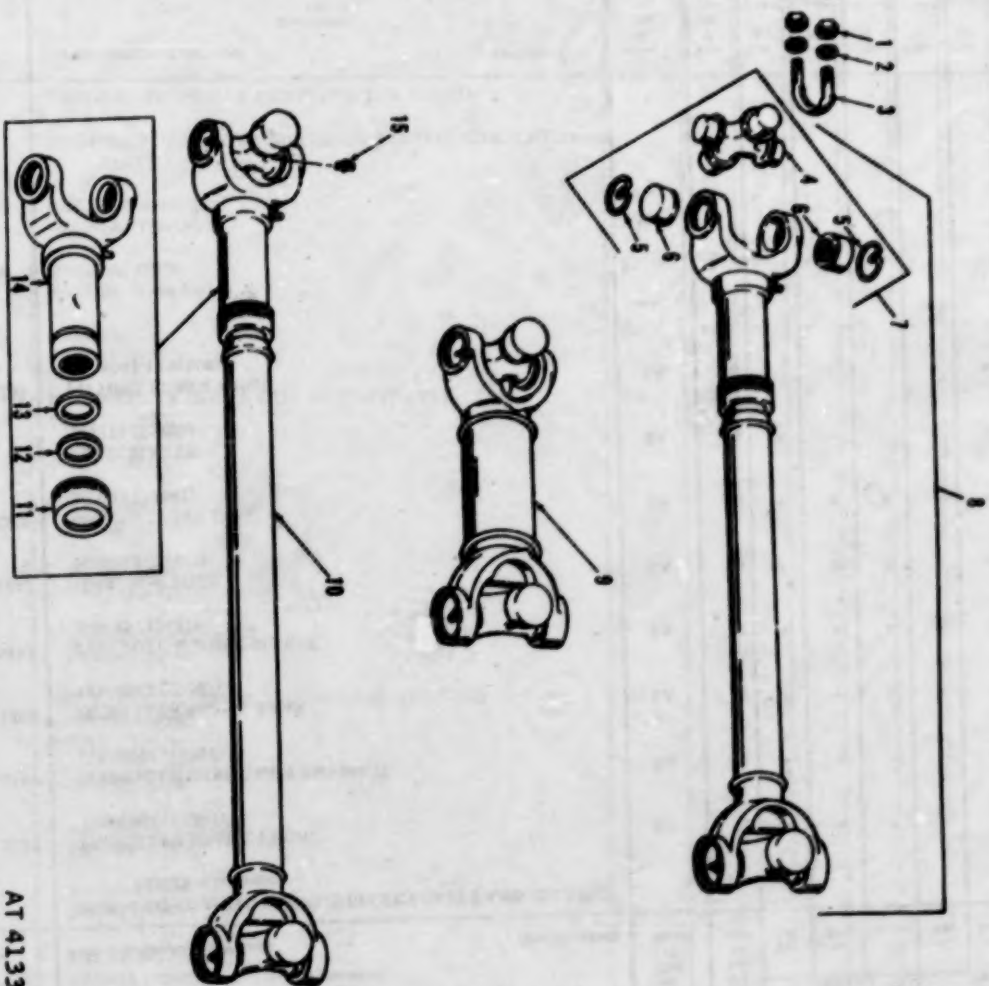


Figure 72. Propeller Shafts

AT 41339

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr altw per 100 equip entry	(9) Depot maint altw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a) Figure No.	(b) Item No.
		GROUP 10—FRONT AXLE												
		1000—FRONT AXLE ASSEMBLY												
PO	4730-137-9236	CLAMP, HOSE FRONT AXLE VENT TUBE 11640805-3 (19207)	EA	2	*	*	*	*	*	*			73	1
MO		HOSE, FRONT AXLE VENT TUBE 11657469-2 (19207)	EA	1									73	2
		MANUFACTURE FROM:												
PO	4720-912-3092	HOSE, RUBBER, .204, .236 ID x .348, .472, OD x 3 IN. LG., SAE J0R2, TYPE 1	FT	V	*	*	*	*	*	*				
PO	2540-461-2758	SPACER, BRACKET 11657453 (19207)	EA	1	*	*	*	*	*	*			73	3
PO	5310-768-0319	NUT, HEX, VENT TUBE CLIP MS51968-2 (96906)	EA	1	*	*	*	*	*	*			73	4
PO	5310-637-9541	WASHER, LOCK VENT TUBE CLIP MS35338-44 (96906)	EA	1	*	*	*	*	*	*			73	5
PO	5310-809-4058	WASHER, FLAT, VENT TUBE CLIP MS27183-10 (96906)	EA	1	*	*	*	*	*	*			73	6
PO	5340-158-0122	CLIP, VENT TUBE TO OIL PAN 11657448 (19207)	EA	1	*	*	*	*	*	*			73	7
X20		BRACKET, VENT TUBE 11657452 (19207)	EA	1	*	*	*	*	*	*			73	8
PO	4720-165-4959	HOSE ASSEMBLY, FRONT AXLE VENT 11662529 (19207)	EA	1	*	*	*	*	*	*			73	9
PO	2920-610-7841	SCREW, VENT TUBE CLIP MS90726-6 (96906)	EA	1	*	*	*	*	*	*			73	10
PO	4720-165-4957	TUBE ASSEMBLY, FRONT AXLE VENT 11657451 (19207)	EA	1	*	*	*	*	*	*			73	11
PO	4730-014-2432	NUT, VENT TUBE 142432 (24617)	EA	1	*	*	*	*	*	*			73	12

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) DA Form code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of issue	(5) Qty inc in unit	(6) 30-day (30 maint allowance			(7) 90-day (90 maint allowance			(8) 1-yr allow per equip category	(9) 1-yr allow per equip category	(10) Illustration	
					(6) 1-30	(6) 31-60	(6) 61-100	(7) 1-30	(7) 31-60	(7) 61-100			(10) Figure No.	(10) Item No.
		1000—FRONT AXLE ASSEMBLY—Continued												
PO	5340-391-3830	CLIP, VENT TUBE SUPPORT 12591-1 (24617)	EA	2	*	*	*	*	*	*			73	13
PVR	2520-133-9634	AXLE ASSEMBLY, FRONT, COMPLETE WITH DRUMS AND HUBS 990148 (65909)	EA	1	*	*	*	*	*	*			74	8
X2F		HOUSING DIFFERENTIAL 25735X (72447)	EA	1	*	*	*	*	*	*			74	9
PF	2530-928-4155	SEAL, AXLE SHAFT, INNER 32542-1 (72447)	EA	2	*	*	*	*	*	*			74	10
PH	2530-928-6156	GUIDE, AXLE SHAFT, INNER 919328 (72447)	EA	2				*	*	*			74	11
PH	2520-080-9858	BUSHING, AXLE SHAFT 30864 (72447)	EA	2				*	*	*			74	12
PH	2530-929-8324	SHAFT, AXLE, RIGHT 902419-1 (72447)	EA	1				*	*	*			74	23
X2F		COVER, CARRIER 25724X (72447)	EA	1	*	*	*	*	*	*			74	24
X2F		COVER, CARRIER 34644 (72447)	EA	1	*	*	*	*	*	*			74	25
PO	4730-050-4208	PLUG, FILLER 103869 (24617)	EA	1	*	*	*	*	*	*			74	26
PF	5310-151-9072	WASHER, COVER BOLTS 500365-26 (72447)	EA	2	*	*	*	*	*	*			74	29
PF		SCREW AND LOCK WASHER, HEX HEAD 423351 (24617)	EA	10	*	*	*	*	*	*			74	30
PF	2530-933-3578	GASKET, SEAL, CARRIER COVER 11640759 (19207)	EA	1	*	*	*	*	*	*			74	42
PO	4730-927-3347	PLUG, DRAIN (MAGNETIC) 11640778 (19207)	EA	1	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty per unit	(6) 30-day GS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip category	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
PH	2530-933-3530	1000-FRONT AXLE ASSEMBLY-Continued SHAFT, AXLE, LEFT 902419-2 (72447)	EA	1				*	*	*			74	43
		1002-DIFFERENTIAL												
PH	5310-931-8182	NUT, PINION DRIVE 30271 (72447)	EA	1				*	*	*			74	1
PH	5310-641-9696	WASHER, DRIVE PINION NUT 30275 (72447)	EA	1				*	*	*			74	2
PH	2580-929-6150	YOKE ASSEMBLY, COMPANION 2-4-3801X (72447)	EA	1				*	*	*			74	3
PH	2530-928-6149	SEAL, OIL PINION DRIVE 35725 (72447)	EA	1				*	*	*			74	4
PH	5310-816-2535	WASHER, FLAT, OIL SLINGER 30273 (72447)	EA	1				*	*	*			74	5
PH	3110-580-3708	CONE AND ROLLERS, PINION BEARING, OUTER 550358 (72447)	EA	1				*	*	*			74	6
PH	3110-580-3709	CUP, PINION BEARING, OUTER 550359 (72447)	EA	1				*	*	*			74	7
X2H		GUARD, OIL PINION BEARINGS, FRONT 30982 (72447)	EA	1				*	*	*			74	13
PH	2530-927-3337	SHIM SET, PINION BEARING ADJUSTING 5704422 (19207)	EA	1				*	*	*			74	
		COMPOSED OF:												
PH	2520-061-6847	2-SHIM (.003) 30272-1 (72447)											74	14
PH	2520-061-6848	2-SHIM (.005) 30272-2 (72447)											74	14
PH	2520-061-6849	2-SHIM (.010) 30272-3 (72447)											74	14

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBSL code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr alt per 100 equip catgry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
PH	5340-062-7200	1002-DIFFERENTIAL—Continued SHIM SET, PINION BEARING ADJUSTING—Continued 2-SHIM (.030) 30272-4 (72447)											74	14
X1		2-SHIM (.003) 30291-1 (95019)											74	15
X1		2-SHIM (.005) 30291-2 (95019)											74	15
X1		2-SHIM (.010) 30291-3 (95019)											74	15
PH	3110-491-2512	CUP, PINION BEARING, INNER 550361 (72447)	EA	1				.	.	.			74	16
PH	3110-491-2511	CONE AND ROLLERS PINION BEARING, INNER 550360 (72447)	EA	1				.	.	.			74	17
X2H		SLINGER, PINION BEARING, OUTER 34643 (72447)	EA	1				.	.	.			74	18
FH	2520-933-3281	GEAR AND PINION 11640757 (19207)	EA	1				.	.	.			74	19
PH	2520-928-6151	SHIM SET, DIFFERENTIAL BEARING ADJUSTMENT 919619 (65909)	EA	1				.	.	.			74	20
X1		COMPOSED OF: 2-SHIM (.003) 30276-1 (95019)												
X1		2-SHIM (.005) 30276-2 (95019)												
X1		3-SHIM (.010) 30276-3 (95019)												
X1		3-SHIM (.030) 30276-4 (95019)												
PH	3110-100-0229	CONE AND ROLLERS, DIFFERENTIAL BEARINGS 705053 (19207)	EA	2				.	.	.			74	21

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued


(1) RMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip enrgy	(9) Depot aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		1002-DIFFERENTIAL-Continued												
PH	3110-722-7488	CUP, DIFFERENTIAL BEARING 550363 (72447)	EA	2				*	*	*			74	22
PHT	2520-933-3579	DIFFERENTIAL, LESS DRIVE GEAR AND PINION 26258X (72447)	EA	1				*	*	*			74	31
PH	2520-927-3288	GEAR KIT, DIFFERENTIAL 5704416 (19207)	EA	1				*	*	*				
		COMPOSED OF:												
X1		2-WASHER, PINION GEAR THRUST 34729 (72447)											74	32
X1		2-GEAR, PINION MATE 34394 (95019)											74	33
X1		2-WASHER, PINION MATE THRUST 34730 (95019)											74	34
X1		2-GEAR DIFFERENTIAL BEVEL PINION 34367 (95019)											74	35
X1		1-PIN, PINION GEAR SHAFT LOCK 500598-21 (95019)											74	36
X1		1-SHAFT, BEVEL PINION GEAR 30263 (95019)											74	37
PH	2520-884-8430	CASE, DIFFERENTIAL 30258 (72447)	EA	1				*	*	*			74	38
PH	5306-685-2523	BOLT, DRIVE GEAR 30266 (72447)	EA	12				*	*	*			74	39
PH	5305-071-1770	SCREW, BEARING CAP HM-803110 (60038)	EA	4				*	*	*			74	40
X2H		CAP, DIFFERENTIAL BEARING 30256 (72447)	EA	2				*	*	*			74	41

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBS code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip entry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1004—STEERING KNUCKLES											75	9
PO	4730-195-6022	PLUG, FILLER, STEERING KNUCKLE 444588 (24617)	EA	2	*	*	*	*	*	*			75	10
PO	2530-928-6157	KNUCKLE, STEERING 34648 (72447)	EA	2	*	*	*	*	*	*			75	11
PO	5307-088-1588	STUD, SPECIAL, ARM TO KNUCKLE 30874 (72447)	EA	8	*	*	*	*	*	*			75	12
PO	2530-034-3436	SEAL, STEERING KNUCKLE, INNER 35261 (72447)	EA	2	*	*	*	*	*	*			75	13
PO	2530-900-3149	CUP, KING PIN, UPPER BEARING 550420 (72447)	EA	2	*	*	*	*	*	*			75	14
PO	2530-034-3442	CONE, SOLID BEARING, UPPER KING PIN 31002 (72447)	EA	2	*	*	*	*	*	*			75	15
PO	2530-927-3336	SHIM SET, KING PIN BEARING ADJUSTMENT 5704043 (19207)	EA	1	*	*	*	*	*	*				
		COMPOSED OF:												
XI		2-SHIM (.003) 31005-4 (95019)												
XI		4-SHIM (.005) 31005-1 (95019)												
XI		4-SHIM (.010) 31005-2 (95019)												
XI		1-SHIM (.030) 31005-3 (95019)											75	16
PO		KEY, WOODRUFF, UPPER KING PIN 500037-12 (72447)	EA	2	*	*	*	*	*	*			75	17
PO	2530-928-6159	ARM AND KING PIN ASSEMBLY, RIGHT 25730X (72447)	EA	1	*	*	*	*	*	*			75	17
PO	2530-928-6158	ARM AND KING PIN ASSEMBLY, LEFT 25731X (72447)	EA	1	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NARS code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr alt per 100 equip catgry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-180	(a) 1-30	(b) 31-60	(c) 61-180			(a) Figure No.	(b) Item No.
		1004-STEERING KNUCKLES-Continued												
PO	5310-246-0187	NUT, SPECIAL 30875 (72447)	EA	8	*	*	*	*	*	*			75	18
PO	5330-929-8371	RETAINER, KNUCKLE OIL SEAL 33663 (72447)	EA	4	*	*	*	*	*	*			75	22
PO	5306-275-1659	BOLT AND LOCK WASHER, SEAL RETAINER 30233-1 (72447)	EA	24	*	*	*	*	*	*			75	23
PO	2520-033-9337	SEAL, STEERING KNUCKLE, OUTER 33662 (72447)	EA	2	*	*	*	*	*	*			75	24
PO	3110-997-6187	CUP, KING PIN, LOWER BEARING 550459 (72447)	EA	2	*	*	*	*	*	*			75	25
PO	3110-931-2246	CONE AND ROLLERS, LOWER KING PIN 550829 (72447)	EA	2	*	*	*	*	*	*			75	26
PO		SCREW, LOWER KING PIN 500412-12 (72447)	EA	8	*	*	*	*	*	*			75	35
PO	5310-671-4109	WASHER, LOCK, LOWER KING PIN 500357-13 (72447)	EA	8	*	*	*	*	*	*			75	36
PO	2530-928-6161	KING PIN 35185 (72447)	EA	2	*	*	*	*	*	*			75	37

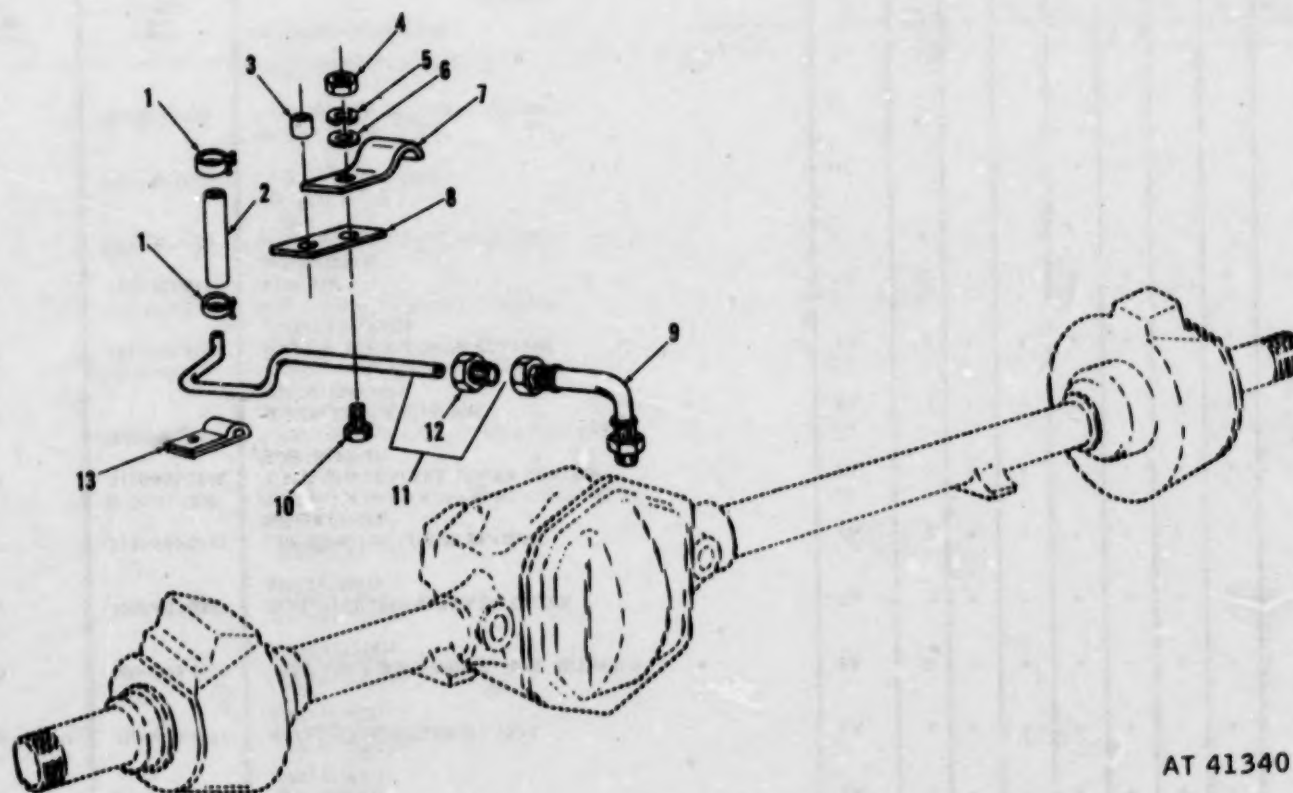

AT 41340

Figure 73. Front Axle Breather Parts

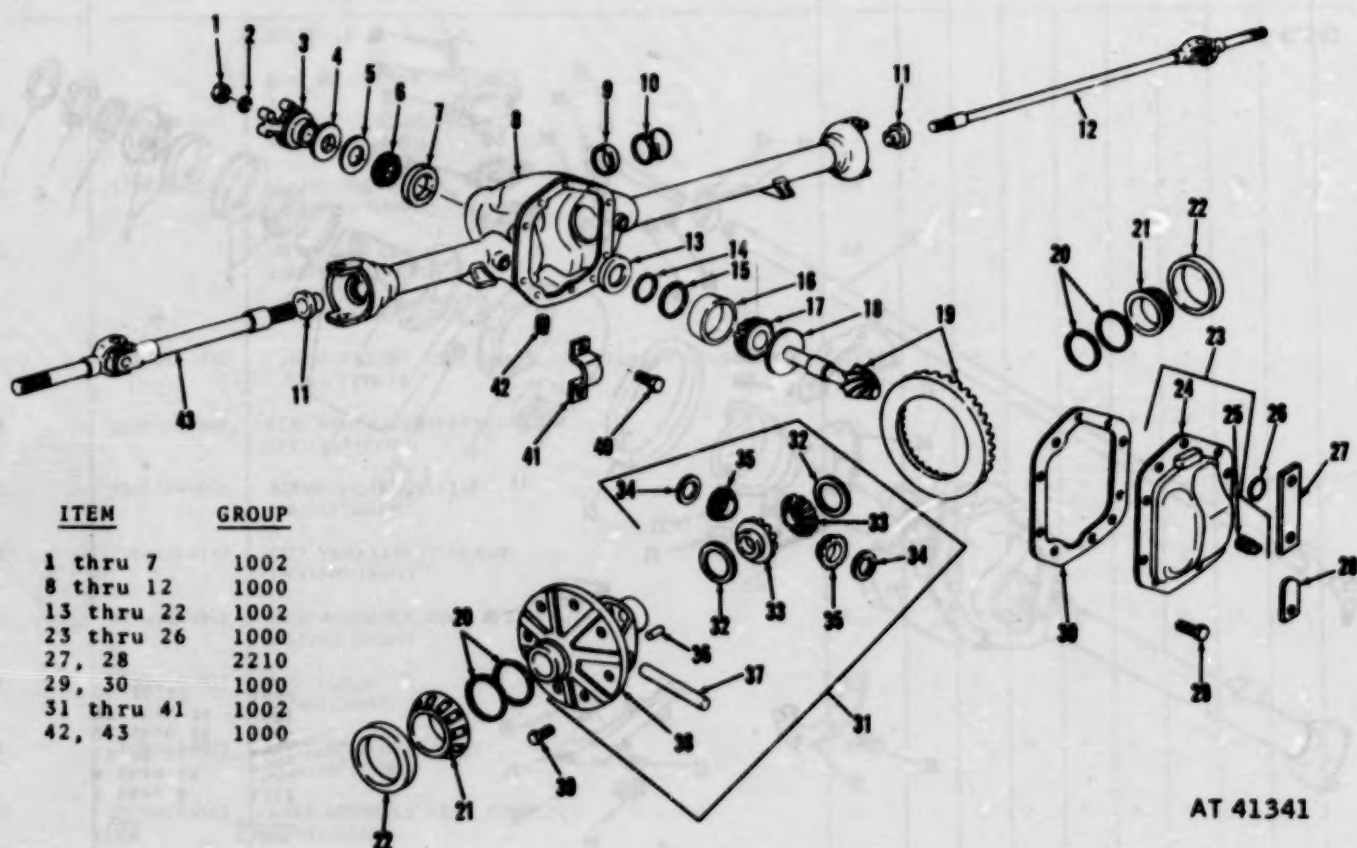


Figure 74. Front Axle Differential and Related Parts

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNR code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DG maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip catgry	(9) 1-yr aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		GROUP 11--REAR AXLE												
		1100--REAR AXLE ASSEMBLY												
PO	4720-130-46	LINE, VENT, REAR AXLE 11662523-2 (19207)	EA	1	*	*	*	*	*	*			76	1
PO	4730-137-9236	CLAMP, HOSE 11640805-3 (19207)	EA	4	*	*	*	*	*	*			76	2
MO		HOSE, VENT LINE 11657469-2 (19207)	EA	2									76	3
		MANUFACTURE FROM:												
PO	4720-912-3092	HOSE, RUBBER, .204, .236 ID x .348, 472, OD x 3 IN. LG., SAE 30R2, TYPE 1	FT	V	*	*	*	*	*	*				
PO	5340-159-3834	CLIP, VENT LINE TO BRAKE CLIP 7375124-1 (19207)	EA	7	*	*	*	*	*	*			76	4
PO	5305-017-1026	SCREW, VENT LINE CLIP 1701026 (24617)	EA	1	*	*	*	*	*	*			76	5
PO	5340-158-0122	CLIP, VENT LINE TO FRAME 11647448 (19207)	EA	1	*	*	*	*	*	*			76	6
PO	4710-165-4961	TUBE ASSEMBLY, REAR AXLE VENT 11657456 (19207)	EA	1	*	*	*	*	*	*			76	7
PO	4730-014-2432	NUT, 7/16-24 142432 (24617)	EA	1	*	*	*	*	*	*			76	8
PO	4720-165-4959	HOSE, REAR AXLE VENT 11662529 (19207)	EA	1	*	*	*	*	*	*			76	9
PFT	2520-917-5582	AXLE ASSEMBLY, REAR, COMPLETE 944572 (65909)	EA	1	*	*	*	*	*	*			77	
X1		AXLE, WITHOUT DRUMS AND HUBS 11662687 (19207)	EA	1									77	30
PO	4730-927-3347	PLUG, DRAIN (MAGNETIC) 11640778 (19207)	EA	1	*	*	*	*	*	*			77	31

106

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMEP code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr aw per 100 equip cntgcy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1100-REAR AXLE ASSEMBLY—Continued												
PO	5330-933-3317	GASKET, AXLE FLANGE 11641093 (19207)	EA	2	*	*	*	*	*	*			77	33
PO	2530-933-3533	SHAFT, AXLE, LEFT 30961-2 (72447)	EA	1	*	*	*	*	*	*			77	34
PO	2520-927-3333	SHAFT, AXLE, RIGHT 30961-1 (72447)	EA	1	*	*	*	*	*	*			77	34
PO	3120-179-7355	BUSHING, AXLE FLANGE STUD 11640734 (19207)	EA	16	*	*	*	*	*	*			77	35
X20		SP/CER, AXLE FLANGE 17656874 (19207)	EA	16	*	*	*	*	*	*			77	36
PO	5310-550-3503	WASHER, LOCK, AXLE FLANGE MS35335-36 (96906)	EA	16	*	*	*	*	*	*			77	37
PO	5310-297-3250	NUT, PLAIN HEX, AXLE FLANGE MS51968-11 (96906)	EA	16	*	*	*	*	*	*			77	38
PF	5306-157-8315	SCREW, COVER 34822 (72447)	EA	10	*	*	*	*	*	*			77	45
X2F		COVER ASSEMBLY, CARRIER 24907X (72447)	EA	1	*	*	*	*	*	*			77	46
PO	4730-050-4208	CARRIER 24907X (72447)	EA	1	*	*	*	*	*	*			77	47
X1		CARRIER 34822 (72447)	EA	1	*	*	*	*	*	*			77	48
PF	5310-151-9074	WASHER, COVER SCREW 500365-24 (M7)	EA	2	*	*	*	*	*	*			77	49
		1102-DIFFERENTIAL												
PH	3110-722-7488	CUP, DIFFERENTIAL BEARING 382-S (60038)	EA	2				*	*	*			77	1
PH	3110-100-0229	CONE AND ROLLERS, DIFFERENTIAL BEARINGS 705053 (19207)	EA	2				*	*	*			77	2

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued


(1) Item code	(2) Federal stock number	(3) Description Reference Number & Milg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day G6 maint. allowance			(8) 1-yr alt per 100 equip entry	(9) Depot alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		1102 DIFFERENTIAL - Continued												
X2H		CASE, DIFFERENTIAL 26400X (72447)	EA	1				•	•	•			77	4
X1		CASE, FLANGE 30784 (72477)	EA	1									77	5
PH	2520-933-3277	DIFFERENTIAL, LESS GEAR AND PINION 26399X (72447)	EA	1				•	•	•			77	6
PH	2520-933-3283	REPAIR KIT, DIFFERENTIAL 5704412 (19207)	EA	1				•	•	•				
X1		2-BEVEL SIDE GEAR THRUST WASHER 30264 (95019)											77	7
X1		2-BEVEL SIDE GEAR 30788 (95019)											77	8
X1		1-SHAFT, PINION BEVEL MATE CROSS 30891 (95019)											77	9
X1		4-BEVEL PINION GEAR 30790 (95019)											77	10
X1		4-BEVEL PINION MATE THRUST WASHER 30842 (95019)											77	11
PH	2530-917-0835	GEAR SET, RING AND PINION 5704434 (72447)	EA	1				•	•	•			77	12
PH	3110-580-3708	CONE AND ROLLERS, PINION BEARING 550358 (72447)	EA	1				•	•	•			77	13
PH	3110-227-4667	CUP, PINION BEARING, INNER 550400 (72447)	EA	1				•	•	•			77	14
PH	5305-071-1770	SCREW, BEARING CAP 179890 (24617)	EA	4				•	•	•			77	15
X2H		CAP, DIFFERENTIAL BEARING 30256 (72447)	EA	2				•	•	•			77	16

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBS code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc to unit	(6) 30-day DS maint. allowance			(7) 30-day OS maint. allowance			(8) 1-yr aw per 100 equip enjoy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		1102-DIFFERENTIAL-Continued												
PH	2520-061-6847	SHIM, OUTER BEARING (.003 THK) 30272-1 (72447)	EA	V				*	*	*			77	17
PH	2520-061-6848	SHIM, OUTER BEARING (.005THK) 30272-2 (72447)	EA	V				*	*	*			77	17
PH	2520-061-6849	SHIM, OUTER BEARING (.010 THK) 30272-3 (72447)	EA	V				*	*	*			77	17
PH	5340-062-7200	SHIM, OUTER BEARING (.030 THK) 30272-4 (72447)	EA	V				*	*	*			77	17
PH	3110-580-3709	CUP, PINION, OUTER 550359 (72447)	EA	I				*	*	*			77	18
PH	3110-606-9576	CONE AND ROLLERS, PINION BEARING, OUTER 550399 (72447)	EA	I				*	*	*			77	19
PF	5310-816-2535	WASHER, FLAT, SLINGER, OIL PINION 30273 (72447)	EA	I	*	*	*	*	*	*			77	20
PF	2530-978-6149	SEAL, OIL DRIVE PINION 34615 (72447)	EA	I	*	*	*	*	*	*			77	21
PF	2520-476-6309	YOKE, END, U/JOINT ASSEMBLY 2-4-3921X (72447)	EA	I	*	*	*	*	*	*			77	22
PF	5310-641-9696	WASHER, PINION NUT 30275 (72447)	EA	I	*	*	*	*	*	*			77	23
PF	5310-931-8182	NUT, DRIVE PINION 30271 (72447)	EA	I	*	*	*	*	*	*			77	24
PH	2520-061-2399	SHIM, INNER BEARING (.010 THK) 30797-3 (72447)	EA	V				*	*	*			77	32
PH	2520-061-2397	SHIM, INNER BEARING (.003 THK) 30797-1 (72447)	EA	V				*	*	*			77	32
PH	2520-061-6846	SHIM, INNER BEARING (.005 THK) 30797-2 (72447)	EA	V				*	*	*			77	32

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBS code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr rate per 100 equip category	(9) Depot maint rate per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		1102-DIFFERENTIAL-Continued												
PH	5305-157-8371	SCREW, CASE 35104-1 (72447)	EA	8				*	*	*			77	40
X1		CASE, BOTTOM 30786 (72447)	EA	1									77	41
PF	2530-933-3715	SHIM SET, GASKET AND DIFFERENTIAL SHIM 5704417 (19207)	EA	1	*	*	*	*	*	*				
		COMPOSED OF:												
PF	2520-033-9341	1-GASKET 34687 (72447)	EA	1	*	*	*	*	*	*			77	42
X1		2-SHIM (.003) 30276-1 (95019)											77	3
X1		2-SHIM (.005) 30276-2 (95019)											77	3
X1		2-SHIM (.010) 30276-3 (95019)											77	3
X1		2-SHIM (.030) 30276-4 (95019)											77	3
PH	5306-685-2523	BOLT, DRIVE GEAR 30266 (72447)	EA	12				*	*	*			77	43

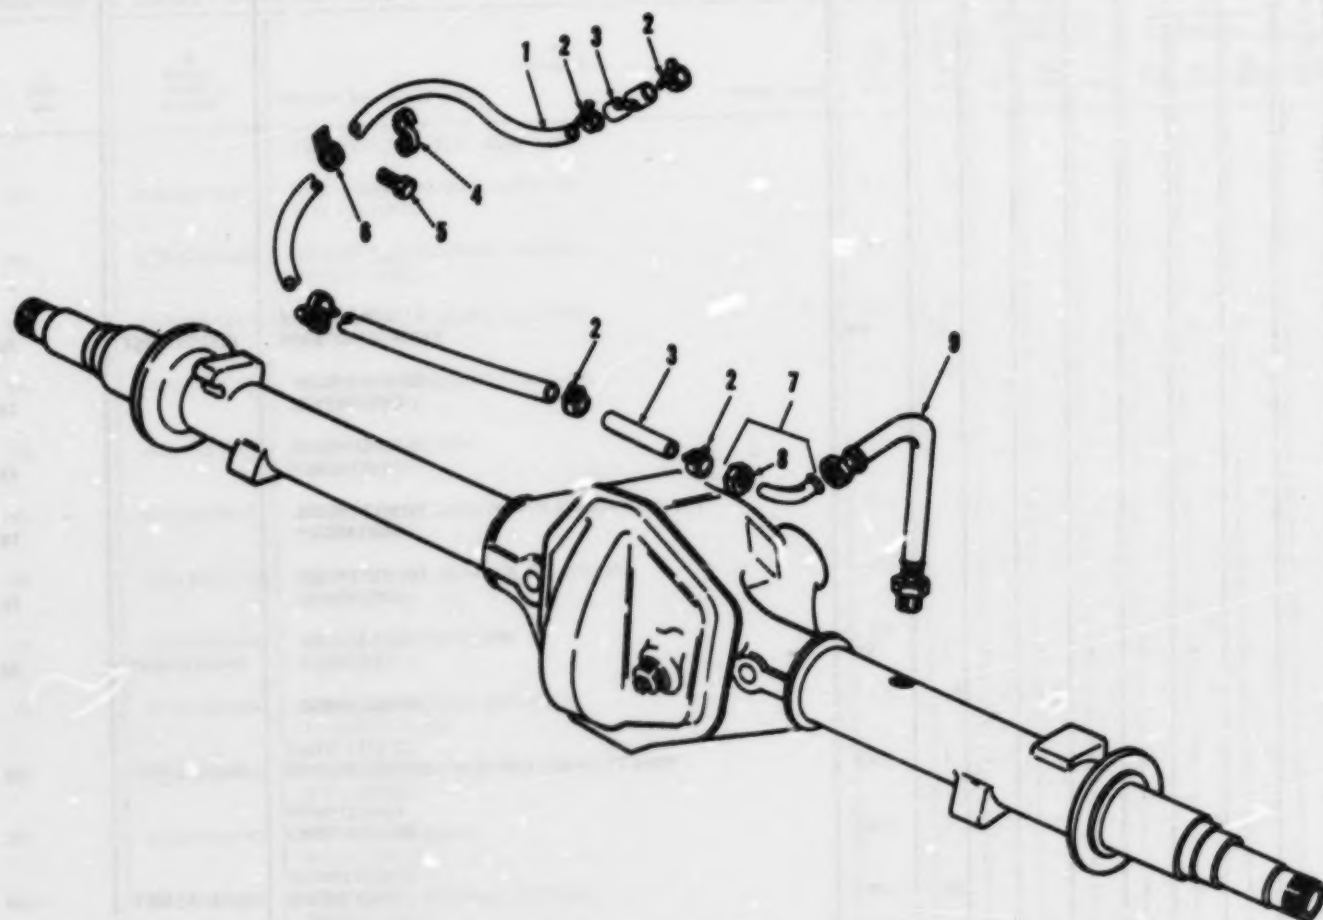

AT 41343

Figure 76. Rear Axle Breather Parts

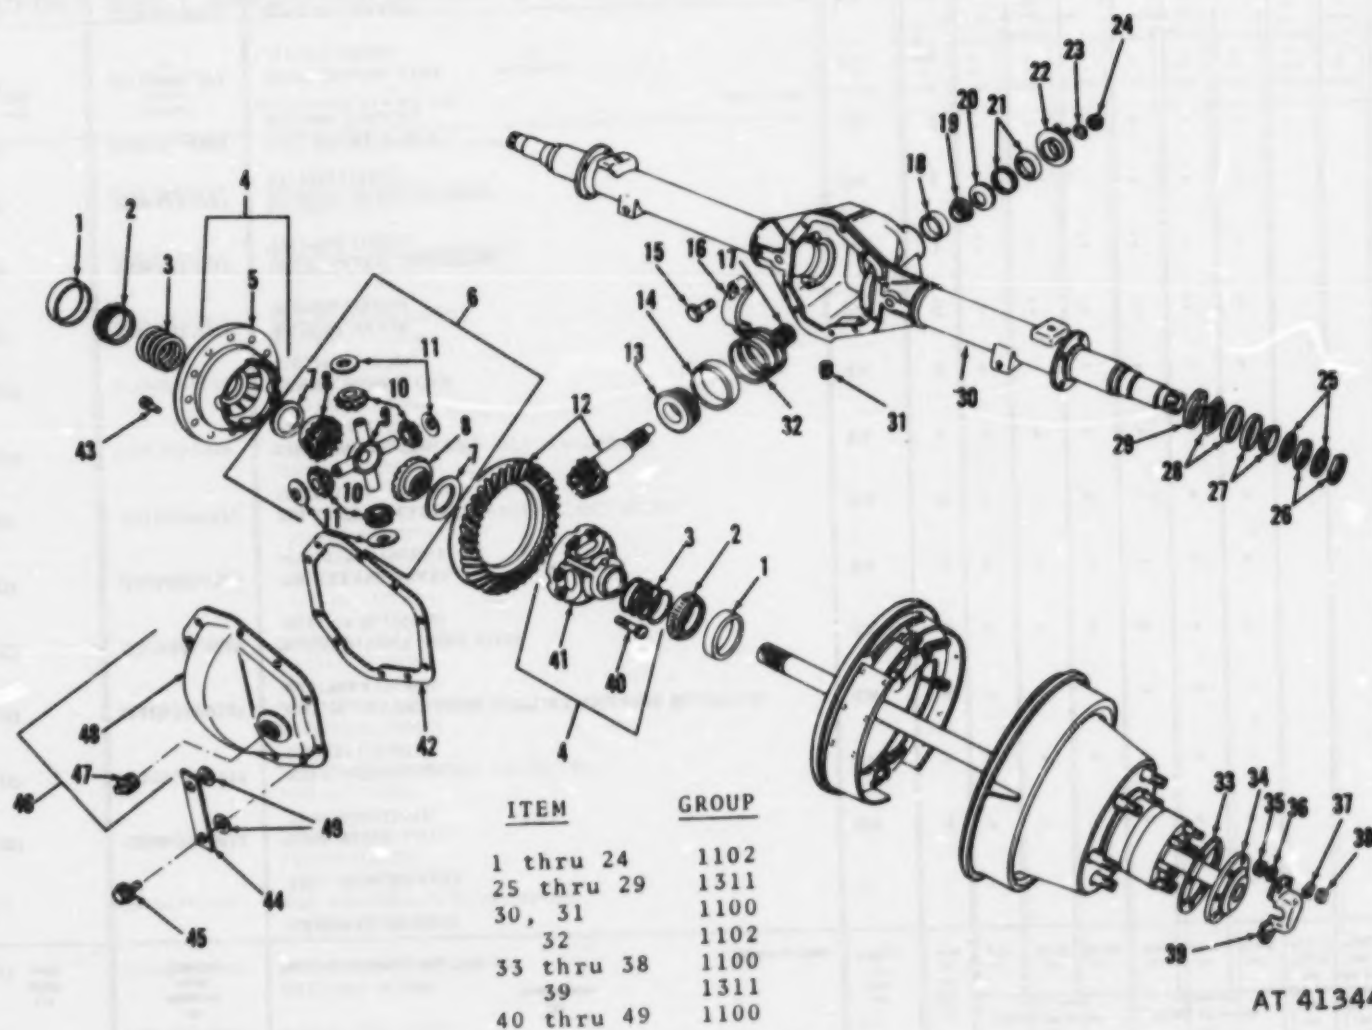


Figure 77. Rear Axle Assembly, Differential and Parts

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMM code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip catgry	(9) DS maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		GROUP 12—BRAKES												
		1201—HANDBRAKES												
PO	2520-737-5412	WIRE, LOCK 22-W-1630 (81349)	EA	1	*	*	*	*	*	*			78	1
PO	5306-281-5137	BOLT, ANCHOR CLIP 7351258 (19207)	EA	1	*	*	*	*	*	*			78	2
PO	5310-732-0559	NUT, PLAIN, HEXAGON, SUPPORT AND LINK MOUNTING MS51968-8 (96906)	EA	6	*	*	*	*	*	*			78	3
PO	5310-261-7340	WASHER, LOCK LINK STUD MS35338-46 (96906)	EA	6	*	*	*	*	*	*			78	4
PO	5315-842-3154	PIN, CLEVIS, BRAKE MS35810-36 (96906)	EA	2	*	*	*	*	*	*			78	5
PO	5315-839-5822	PIN, COTTER, CLEVIS MS24665-353 (96906)	EA	2	*	*	*	*	*	*			78	6
X20		LINK, BRAKE, SPACER 7349219 (19207)	EA	1	*	*	*	*	*	*			78	7
X20		LEVER, BRAKE, CAM 11657426 (19207)	EA	2	*	*	*	*	*	*			78	8
PO	5310-411-3981	WASHER, PLAIN 8687086 (19207)	EA	2	*	*	*	*	*	*			78	9
PO	5316-732-4143	BOLT, BRAKE, ADJUSTING 11657946 (19207)	EA	1	*	*	*	*	*	*			78	10
PO	2530-423-2787	GASKET, BRAKE SUPPORT 7373725 (19207)	EA	1	*	*	*	*	*	*			78	11
PO	5310-761-6882	NUT, BRAKE SCREW MS51967-2 (96906)	EA	2	*	*	*	*	*	*			78	12
PO	5315-741-1872	STUD, SPACER, LINK 7411872 (19207)	EA	1	*	*	*	*	*	*			78	13
PO	2530-454-4819	SUPPORT, BRAKE 7411871 (19207)	EA	1	*	*	*	*	*	*			78	14

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip cat/eqy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		1201—HANDBRAKE—Continued												
PO	5340-359-0959	SPRING, ADJUSTING BOLT 528008 (19207)	EA	2	*	*	*	*	*	*			78	15
PO	5305-457-6961	SCREW, BRAKE, ADJUSTING 11657416 (19207)	EA	1	*	*	*	*	*	*			78	16
PO	5310-880-7745	NUT, PLAIN, HEXAGON MS51968-11 (96906)	EA	2	*	*	*	*	*	*			78	17
PO	5310-809-5997	WASHER, FLAT MS27183-17 (96906)	EA	1	*	*	*	*	*	*			78	18
PO	2530-873-5236	BAND AND LINING ASSEMBLY, HANDBRAKE 7349062 (19207)	EA	1	*	*	*	*	*	*			78	19
PF		RIVET, TO ATTACH TRANSFER CASE LINING 11662549 (19207)	EA	18	*	*	*	*	*	*			78	20
PF	2530-472-4105	BRAKE LINING 11657527 (19207)	EA	1	*	*	*	*	*	*			78	21
PO	2530-461-4091	DRUM, HANDBRAKE 11657410 (19207)	EA	1	*	*	*	*	*	*			78	22
PO	5310-814-0672	NUT, HEX BRAKE DRUM BOLT MS51943-36 (96906)	EA	4	*	*	*	*	*	*			78	23
PO		SPRING, COMPRESSION, ANCHOR BOLT 7745282 (19207)	EA	1	*	*	*	*	*	*			78	24
PO	2530-495-2152	BOLT, BRAKE DRUM 7351254 (19207)	EA	4	*	*	*	*	*	*			78	25
PO	5340-477-3776	ROD, HANDBRAKE TO TRANSFER 11656882 (19207)	EA	1	*	*	*	*	*	*			79	1
PO	5310-880-7746	NUT, HEX, ROD TO CLEVIS MS51968-5 (96906)	EA	2	*	*	*	*	*	*			79	2
PO	5305-269-2809	SCREW, CAP, LEVER MS90726-66 (96906)	EA	1	*	*	*	*	*	*			79	3

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) BMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D8 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr allow per 100 equip cntgcy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		1201 - HANDBRAKE - Continued												
PO		SPACER, HANDBRAKE LEVER (1) LEVER MOUNTING (1) 11656878 (19207)	EA	2	*	*	*	*	*	*			79	4
PO	2530-917-5857	LEVER, HAND 11640719 (19207)	EA	1	*	*	*	*	*	*			79	5
X20		"U" BOLT AND BUMPER ASSEMBLY 11640908 (19207)	EA	1	*	*	*	*	*	*			79	6
PO		BUMPER 11656881 (19207)	EA	1	*	*	*	*	*	*			79	7
X1		"U" BOLT 11656881 (19207)	EA	1									79	8
PO	5310-639-1532	WASHER, PLAIN, "U" BOLT MS27183-211 (96906)	EA	4	*	*	*	*	*	*			79	9
PO	5310-891-1709	NUT, JAM, "U" BOLT MS35691-9 (96906)	EA	4	*	*	*	*	*	*			79	10
PO	5305-269-3244	SCREW, CAP, LEVER MOUNTING MS90727-68 (96906)	EA	1	*	*	*	*	*	*			79	11
PO		SPACER, LEVER MOUNTING 11656950 (19207)	EA	1	*	*	*	*	*	*			79	12
PO	5310-732-0559	NUT, HEX, LEVER 11640719 (19207)	EA	1	*	*	*	*	*	*			79	13
PO	5310-261-7340	WASHER, LOCK, LEVER MS35338-46 (96906)	EA	1	*	*	*	*	*	*			79	14
PO	5310-080-6004	WASHER, PLAIN MS27183-14 (96906)	EA	2	*	*	*	*	*	*			79	15
PO	5340-159-3848	CLEVIS, HANDBRAKE 11656877 (19207)	EA	1	*	*	*	*	*	*			79	16
PO	5315-842-3044	PIN, COTTER MS24665-283 (96906)	EA	2	*	*	*	*	*	*			79	17

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas Usable on Code	(5) Qty inc in unit	(6) 30-day DB maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cat/eqy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1201—HANDBRAKE—Continued												
PO	5315-815-8840	PIN, CLEVIS MS35810-54 (96906)	EA	2	*	*	*	*	*	*			79	18
		1202—SERVICE BRAKES												
PO	5306-436-4819	BOLT, REAR BRAKE MOUNTING 11640735 (19207)	EA	8	*	*	*	*	*	*			80	1
PO	5310-456-9181	NUT, REAR BRAKE MOUNTING MS1922-37 (96906)	EA	8	*	*	*	*	*	*			80	2
PO	2530-126-8391	BRAKE ASSEMBLY, RIGHT FRONT 11640718-1 (19207)	EA	1	*	*	*	*	*	*			80	20
X20		BRAKE ASSEMBLY, LEFT FRONT 11640718-2 (19207)	EA	1	*	*	*	*	*	*			80	20
PO	2530-229-5346	BRAKE ASSEMBLY, RIGHT REAR 11640720-1 (19207)	EA	1	*	*	*	*	*	*			80	20
PO	2530-228-7017	BRAKE ASSEMBLY, LEFT, REAR 11640720-2 (19207)	EA	1	*	*	*	*	*	*			80	20
PO	2530-987-2559	PIN, SHOE GUIDE FC19562 (63477)	EA	2	*	*	*	*	*	*			80	3
X20		PLATE, BACKING, REAR FE55400 (63477)	EA	1	*	*	*	*	*	*			80	5
X20		PLATE, BACKING, FRONT FE59289 (63477)	EA	1	*	*	*	*	*	*			80	5
PO	2530-253-5826	BLOCK, BRAKE SHOE ANCHOR FC18732 (63477)	EA	1	*	*	*	*	*	*			80	6
X20		PLATE, ANCHOR FC18691 (63477)	EA	1	*	*	*	*	*	*			80	7
PO	2530-917-0871	SPRING, BRAKE SHOE FC18708 (63477)	EA	2	*	*	*	*	*	*			80	8
PO	2530-133-9804	GUIDE, BRAKE ADJUSTING SCREW FC18704 (63477)	EA	1	*	*	*	*	*	*			80	13

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) RMR code	(8) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day GS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr equip cost	(9) Equip maint cost per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
X1		1202—SERVICE BRAKES—Continued BRAKE ASSEMBLY, LEFT, REAR—Continued SCREW AND NUT, SHOE ADJUSTING FC18707 (63477)	EA	1									80	14
PO	2530-253-5827	SPRING, BRAKE ADJUSTING SCREW FC15190 (63477)	EA	1	*	*	*	*	*	*			80	15
PO	2530-714-3117	CLIP, SHOE GUIDE PIN FC19561 (63477)	EA	2	*	*	*	*	*	*			80	16
PO	2530-714-3113	PLUG, INSPECTION FC17814 (63477)	EA	1	*	*	*	*	*	*			80	19
PF	2530-898-6434	BRAKE LINING AND RIVET SET 5704423 (19207)	EA	2	*	*	*	*	*	*			80	9
		COMPOSED OF:												
X1		52-RIVET, BRAKE LINING FC10699 (63477)											80	10
X1		2-LINING, SECONDARY BRAKE FD18731 (63477)											80	11
X1		2-LINING, PRIMARY, BRAKE FD18722-001 (63477)											80	17
POB	2530-933-3585	BRAKE SHOE AND LINING SET 5704421 (19207)	EA	2	*	*	*	*	*	*			80	17
		COMPOSED OF:												
X1		2-SHOE AND LINING ASSEMBLY, PRIMARY FD59297 (63477)												
X1		2-SHOE AND LINING ASSEMBLY, SECONDARY FD59299 (63477)												
PO	5305-234-7843	BOLT, FRONT BRAKE MOUNTING 11656914 (19207)	EA	10	*	*	*	*	*	*			80	21
X20		LOCK PLATE, FRONT BRAKE MOUNTING 11656970 (19207)	EA	2	*	*	*	*	*	*			80	22

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip catgry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		1204-HYDRAULIC BRAKE SYSTEM												
PO	5305-407-3738	SCREW ASSEMBLED WASHER, WHEEL CYLINDER MOUNTING 99-92475-100 (63477)	EA	8	*	*	*	*	*	*			80	4
POR	2530-933-3584	CYLINDER ASSEMBLY, LEFT WHEEL 11640755-1 (19207)	EA	2	*	*	*	*	*	*			80	12
POR	2530-927-3316	CYLINDER ASSEMBLY, RIGHT WHEEL 11640755-2 (19207)	EA	2	*	*	*	*	*	*			80	12
PO	4820-477-6174	SCREW, BLEEDER, WHEEL CYLINDER 945755 (65909)	EA	4	*	*	*	*	*	*			80	18
PF	2530-933-3575	KIT, WHEEL CYLINDER 5704429 (19207)	EA	4	*	*	*	*	*	*				
		COMPOSED OF:												
X1		2-CUP, WHEEL CYLINDER FC1219 (63477)												
X1		2-BOOT, WHEEL CYLINDER FC2937 (63477)												
PO	5305-269-3212	SCREW, CAP, MASTER CYLINDER MOUNTING MS90725-61 (96906)	EA	2	*	*	*	*	*	*			81	1
X20		PLATE, MASTER CYLINDER MOUNTING 11657231 (19207)	EA	1	*	*	*	*	*	*			81	2
POR	2530-125-8726	CYLINDER ASSEMBLY, MASTER 11640970 (19207)	EA	1	*	*	*	*	*	*			81	3
PO	2520-443-8018	BOLT, EYE, PISTON FC32604 (63477)	EA	1	*	*	*	*	*	*			81	4
X1		BODY, MASTER CYLINDER FD59288 (63477)		1									81	10
PO	2520-246-2267	GASKET, FILLER CAP 11656891 (19207)	EA	1	*	*	*	*	*	*			81	11
PO		CAP, FILLER, MASTER CYLINDER 7539310 (19207)	EA	1	*	*	*	*	*	*			81	12

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip enclgy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		1204—HYDRAULIC BRAKE SYSTEM—Continued												
PI	2530-871-6841	KIT, MASTER CYLINDER 5704420 (19207)	EA	1	*	*	*	*	*	*			81	
		COMPOSED OF:												
XI		1-BOOT, EYE BOLT FC10901 (63477)											81	5
XI		1-RING, RETAINING FC23597 (63477)											81	6
XI		1-PISTON ASSEMBLY FC37123 (63477)											81	7
XI		1-CUP, PRIMARY FD2108 (63477)											81	8
XI		1-VALVE AND SEAT FC46370 (63477)											81	9
PO	4710-475-0182	TUBE ASSEMBLY, MASTER CYLINDER VENT 11656883 (19207)	EA	1	*	*	*	*	*	*			81	13
PO	4730-270-4609	CONNECTOR, VENT TUBE 145474 (24617)	EA	1	*	*	*	*	*	*			81	14
PO		PLUG, PIPE, MASTER CYLINDER 90-44469-200 (63477)	EA	1	*	*	*	*	*	*			81	15
PO	5310-462-7044	NUT, PLAIN, HEXAGON, MASTER CYLINDER MOUNTING M551922-17 (96906)	EA	2	*	*	*	*	*	*			81	16
PO	2530-917-0802	HOSE ASSEMBLY, FRONT BRAKE 11641037 (19207)	EA	2	*	*	*	*	*	*			82	1
PO	5340-371-4134	CLIP, SPRING LOCK 11657610 (19207)	EA	3	*	*	*	*	*	*			82	2
PO		HOSE, RUBBER, MASTER CYLINDER VENT 11657469-6 (19207)	EA	1	*	*	*	*	*	*			82	3
PO		HOSE, RUBBER, MASTER CYLINDER VENT 11657469-1 (19207)	EA	1	*	*	*	*	*	*			82	4

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip exclgty	(9) Depot maint allow per 100 equip	(10) Illustration	
					(6) 1-30	(6) 31-90	(6) 91-100	(7) 1-30	(7) 31-90	(7) 91-100			(10) Figure No.	(10) Item No.
		1204- HYDRAULIC BRAKE SYSTEM—Continued												
PO	5340-282-7519	CLIP, TUBE, RIGHT REAR BRAKE MS21333-34 (96906)	EA	1	*	*	*	*	*	*			81	5
PO	4710-248-4346	TUBE, TO RIGHT WHEEL CYLINDER 11656886 (19207)	EA	1	*	*	*	*	*	*			82	6
PO	2530-105-8728	HOSE ASSEMBLY, REAR BRAKE 11640894 (19207)	EA	1	*	*	*	*	*	*			82	7
PO	4730-450-9229	TEE, REAR BRAKE TUBE 11640842 (19207)	EA	1	*	*	*	*	*	*			82	8
PO	2530-454-8247	TUBE ASSEMBLY, TO LEFT REAR BRAKE 11656889 (19207)	EA	1	*	*	*	*	*	*			82	9
PO	2530-454-5083	TUBE, TO REAR BRAKE HOSE 11656884 (19207)	EA	1	*	*	*	*	*	*			82	10
PO	4730-278-8885	UNION, INVERTED, TO REAR BRAKE 137412 (24617)	EA	1	*	*	*	*	*	*			82	11
PO	4720-165-4958	TUBE ASSEMBLY, BRAKE 11656887 (19207)	EA	1	*	*	*	*	*	*			82	12
PO	4730-533-4678	TEE, FLUID DISTRIBUTION 11640958 (19207)	EA	1	*	*	*	*	*	*			82	13
PO	4710-165-4944	TUBE ASSEMBLY, TO RIGHT FRONT BRAKE 11656890 (19207)	EA	1	*	*	*	*	*	*			82	14
PO	2530-773-8485	TUBE ASSEMBLY, TO LEFT FRONT BRAKE 11656885 (19207)	EA	1	*	*	*	*	*	*			82	15
PO	5340-344-2754	CLIP, TUBE, RIGHT FRONT BRAKE 432666 (24617)	EA	4	*	*	*	*	*	*			82	16
PO	2810-341-4824	CLIP, TUBE, TO REAR BRAKE 145326 (24617)	EA	2	*	*	*	*	*	*				
PO	5305-225-3839	SCREW, CAP, REAR AXLE TEE MS90725-8 (96906)	EA	1	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D8 maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip calgcy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		1204—HYDRAULIC BRAKE SYSTEM—Continued												
PO	5310-637-9541	WASHER, LOCK, REAR AXLE TEE MS35338-44 (96906)	EA	1	*	*	*	*	*	*				
PO	5310-809-4058	WASHER, FLAT, REAR AXLE TEE MS27183-19 (96906)	EA	1	*	*	*	*	*	*				
PO	5340-597-7932	CLIP, CLOSED, BRAKE TUBE MS21333-33 (96906)	EA	1	*	*	*	*	*	*				
PO	4730-137-9236	CLAMP, VENT HOSE 11640805-3 (19207)	EA	4	*	*	*	*	*	*				
PO	5310-407-9566	WASHER, LOCK, DISTRIBUTION TEE MS35338-45 (96906)	EA	1	*	*	*	*	*	*				
PO	5306-225-9086	BOLT, MACHINE, DISTRIBUTION TEE MS90726-31 (96906)	EA	1	*	*	*	*	*	*				
PO	4710-454-8176	TUBE ASSEMBLY, MASTER CYLINDER TO TEE 11656888 (19207)	EA	1	*	*	*	*	*	*				
PO	5330-495-8677	GASKET, BRAKE HOSE 7372834 (19207)	EA	3	*	*	*	*	*	*				
		1206—MECHANICAL BRAKE SYSTEM												
X20		SUPPORT, BRACKET AND STEERING COLUMN 11656868 (19207)	EA	1	*	*	*	*	*	*			83	1
PO	5306-443-8075	BOLT, BRAKE PEDAL ADJUSTING MS21094-6 (96906)	EA	1	*	*	*	*	*	*			83	2
X20		BRACKET, BRAKE PEDAL 11656869 (19207)	EA	1	*	*	*	*	*	*			83	3
PO	5310-488-3888	NUT, BRAKE PEDAL SHAFT MS51943-40 (96906)	EA	1	*	*	*	*	*	*			83	4
PO	2530-917-0922	SPRING, BRAKE PEDAL RETURN 11656871 (19207)	EA	1	*	*	*	*	*	*			83	5

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip enrgy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a) Figure No.	(b) Item No.
		1206—MECHANICAL BRAKE SYSTEM—Continued												
PO	5316-461-5857	WASHER, FLAT, BRAKE PEDAL PIN 10910174-31 (19207)	EA	1	*	*	*	*	*	*			83	6
PO	2530-125-8727	PAD, PEDAL COVER 11656845 (19207)	EA	1	*	*	*	*	*	*			83	7
X20		PEDAL ASSEMBLY, BRAKE 11656872 (19207)	EA	1	*	*	*	*	*	*			83	8
PO	2530-125-8729	BUSHING, PEDAL 10888013 (19207)	EA	2	*	*	*	*	*	*			83	9
X1		PEDAL, BRAKE 11656873 (19207)	EA	1									83	10
PO	5340-241-0518	BUMPER, PEDAL 11656875 (19207)	EA	1	*	*	*	*	*	*			83	11
PO	5306-042-3564	SCREW, ASSEMBLED WASHER, BRACKET 423564 (24617)	EA	1	*	*	*	*	*	*			83	12
PO	2520-443-8133	SHAFT, BRAKE PEDAL 11656847 (19207)	EA	1	*	*	*	*	*	*			83	13

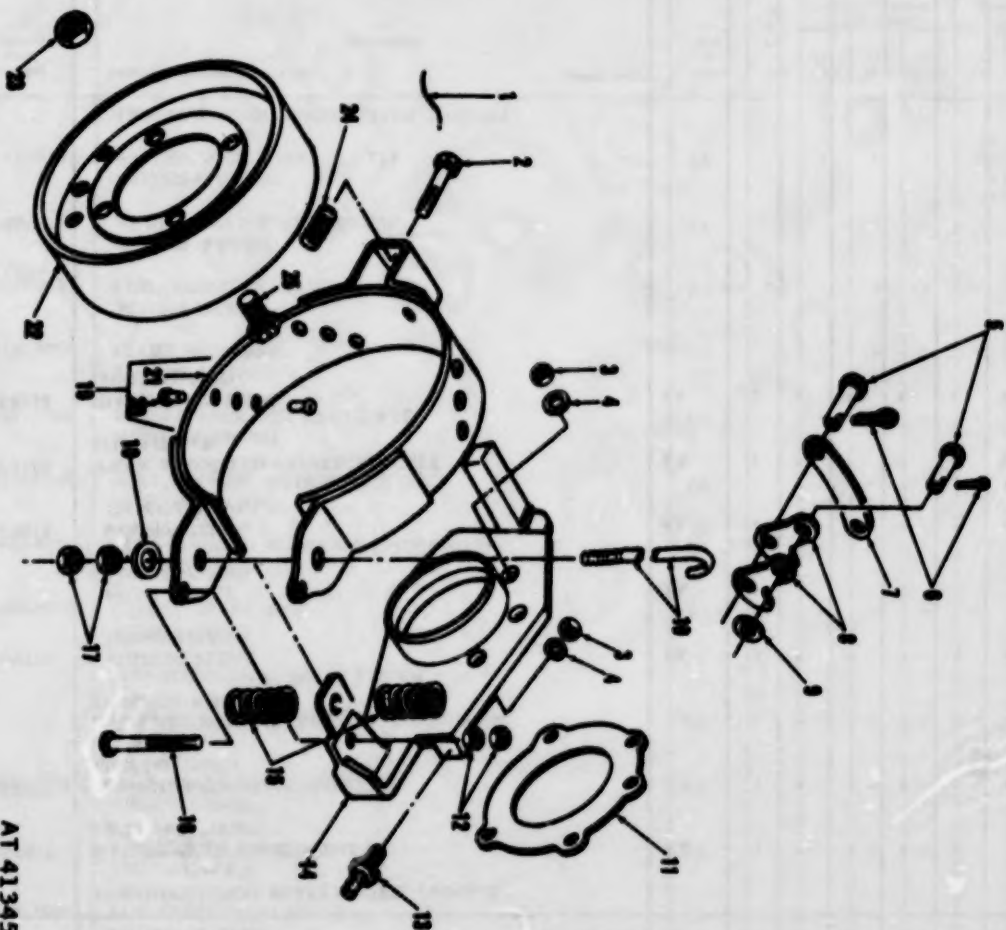


Figure 78. Headstock

AT 41345


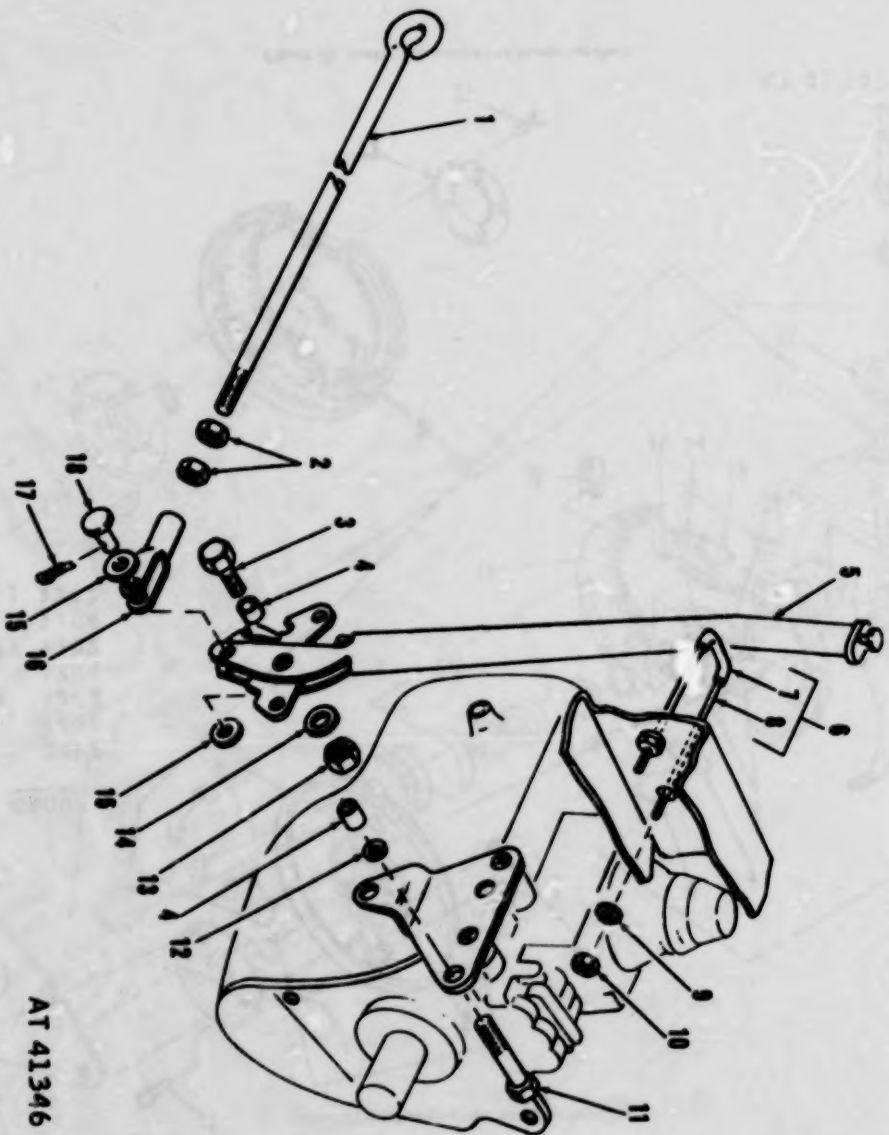


Figure 79. Handbrake Lever and Related Parts

AT 41346

214

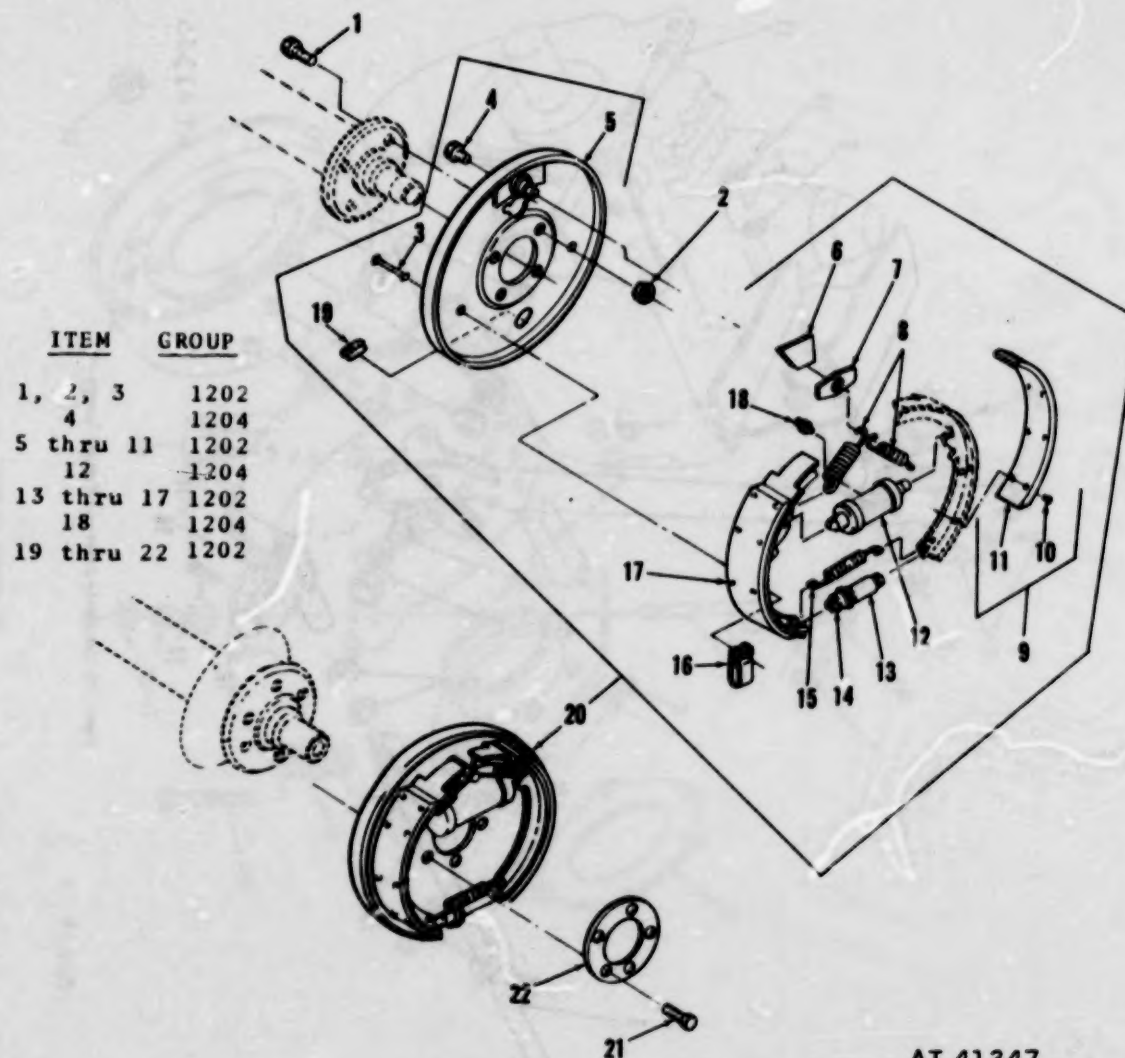

ITEM	GROUP
1, 2, 3	1202
4	1204
5 thru 11	1202
12	1204
13 thru 17	1202
18	1204
19 thru 22	1202

AT 41347

Figure 80. Brake Assemblies and Mounting Parts


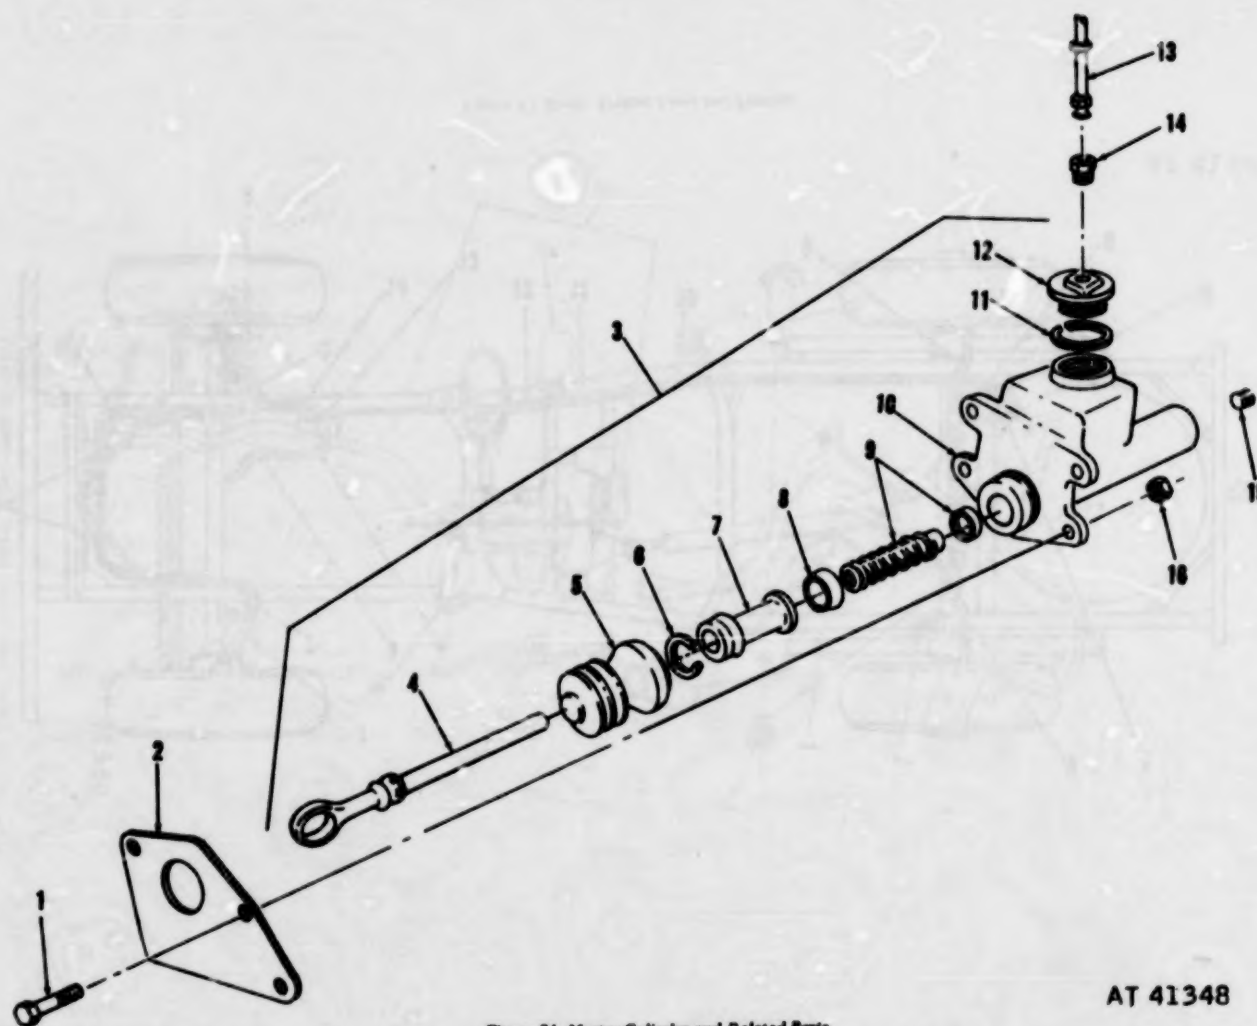



Figure 81. Master Cylinder and Related Parts

AT 41348

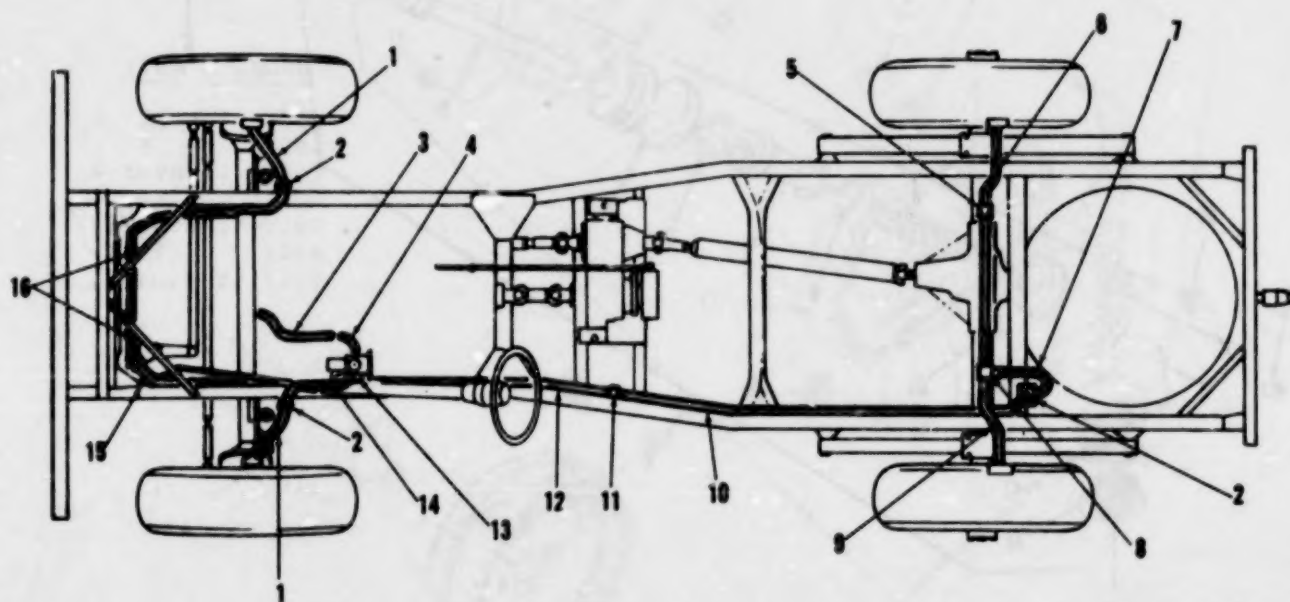

AT 41349

Figure 82. Brake System Lines and Fittings

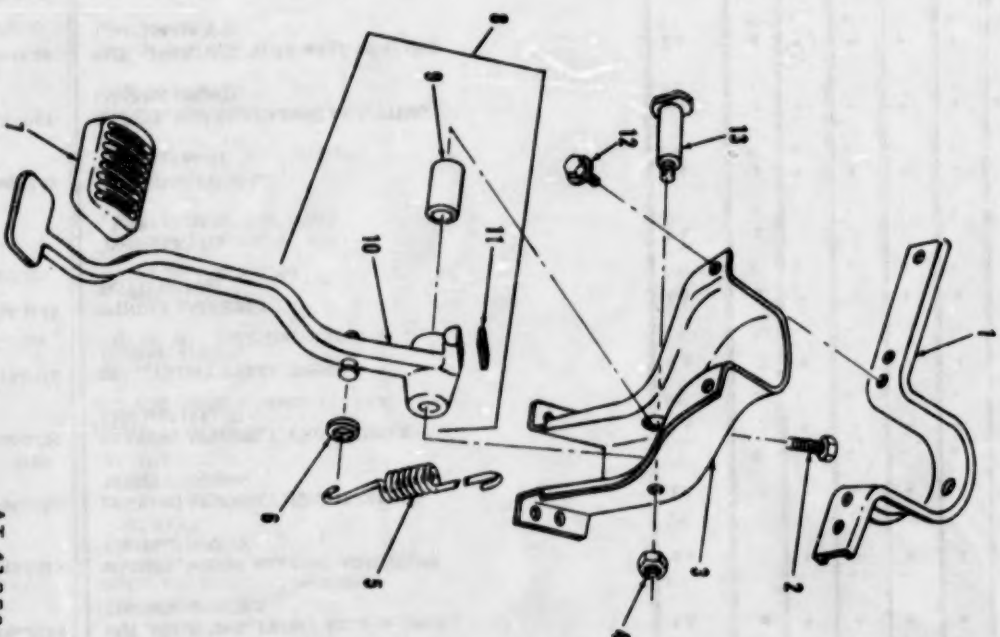

AT 41350

Figure 43. Brake Pedal Support and Related Parts

218

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) Stock code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DE maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr depot maint allow per 100 equip engry	(9) 1-yr depot maint allow per 100 equip	(10) Illustration	
					(6) 1-30	(6) 31-90	(6) 91-180	(7) 1-30	(7) 31-90	(7) 91-180			(10) Figure No.	(10) Item No.
		GROUP 13—WHEELS AND TRACKS												
		1311—WHEEL ASSEMBLY												
PO	5310-246-0188	NUT, ADJUSTING, FRONT AXLE BEARING 11657856 (19207)	EA	4	*	*	*	*	*	*			75	1
PO	5310-115-9047	WASHER, WHEEL BEARING ADJUSTING 11657860 (19207)	EA	2	*	*	*	*	*	*			75	2
PO	3110-100-3529	BEARING ASSEMBLY, FRONT OUTER 703020 (00000)	EA	2	*	*	*	*	*	*			75	3
PO	3110-100-0229	BEARING ASSEMBLY, FRONT INNER 11662689 (19207)	EA	2	*	*	*	*	*	*			75	4
PO	2530-917-0818	SEAL, FRONT WHEEL, INNER 11640817 (19207)	EA	2	*	*	*	*	*	*			75	5
PO	2530-034-3443	SPINDLE ASSEMBLY 945731 (63909)	EA	2	*	*	*	*	*	*			75	6
XI		SPINDLE 30999 (72447)	EA	1									75	7
PO	3120-080-9858	BUSHING, SPINDLE 30864 (72447)	EA	1	*	*	*	*	*	*			75	8
PO	5310-115-9047	WASHER, WHEEL BEARING ADJUSTING 11657860 (19207)	EA	2	*	*	*	*	*	*			77	25
PO	5310-246-0188	NUT, ADJUSTING, REAR AXLE BEARING 11657856 (19207)	EA	4	*	*	*	*	*	*			77	26
PO	3110-100-0219	BEARING ASSEMBLY, REAR, OUTER 705785 (00000)	EA	2	*	*	*	*	*	*			77	27
PO	3110-100-0251	BEARING ASSEMBLY, REAR, INNER 713097 (00000)	EA	2	*	*	*	*	*	*			77	28
PO	5330-864-5774	SEAL, REAR WHEEL, INNER 11640818 (19207)	EA	2	*	*	*	*	*	*			77	29
PO	2530-410-2275	BRACKET, LIFTING, REAR 11656909 (19207)	EA	2	*	*	*	*	*	*			77	39


SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr alw per 100 equip cntgcy	(9) Depot maint alw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1311—WHEEL ASSEMBLY—Continued												
X20		HUB AND DRUM ASSEMBLY, FRONT 11641020 (19207)	EA	2	*	*	*	*	*	*			84	1
PO	2530-933-3580	STUD, WHEEL 11640680 (19207)	EA	6	*	*	*	*	*	*			84	2
X1		HUB, FRONT 11640973 (19207)	EA	1									84	3
PO		STUD, FLANGE, 2-1/2 IN. LONG 11640937-1 (19207)	EA	4	*	*	*	*	*	*			84	4
PO		STUD, FLANGE, 2 IN. LONG 11640937-2 (19207)	EA	2	*	*	*	*	*	*			84	5
PO	2530-933-3581	DRUM, BRAKE, FRONT 11640839 (19207)	EA	1	*	*	*	*	*	*			84	6
PO	5305-823-5744	SCREW, MACHINE, DRUM TO HUB 11657855 (19207)	EA	3	*	*	*	*	*	*			84	7
X20		HUB AND DRUM ASSEMBLY, REAR 11641021 (19207)	EA	2	*	*	*	*	*	*			84	1
PO	2530-933-3580	STUD, WHEEL 11640680 (19207)	EA	6	*	*	*	*	*	*			84	2
X1		HUB, REAR 11640721 (19207)	EA	1									84	3
PO	5307-159-6231	STUD, FLANGE, 2-1/2 IN. LONG 11640937-1 (19207)	EA	4	*	*	*	*	*	*			84	4
PO	5307-159-6232	STUD, FLANGE, 2 IN. LONG 11640937-2 (19207)	EA	4	*	*	*	*	*	*			84	5
PO	2530-933-3726	DRUM, BRAKE, REAR 11640991 (19207)	EA	1	*	*	*	*	*	*			84	6
PO	5305-823-5744	SCREW, MACHINE, DRUM TO HUB 11657855 (19207)	EA	3	*	*	*	*	*	*			84	7
PO	5330-087-8929	GASKET, AXLE FLANGE 11657211 (19207)	EA	2	*	*	*	*	*	*			84	8

SECTION H. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued


Reproduced from poor document.

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip catgeg	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		1311—WHEEL ASSEMBLY—Continued												
PO	2520-033-9336	FLANGE, AXLE SHAFT 945749 (65909)	EA	2	*	*	*	*	*	*			84	9
PO	3120-179-7355	BUSHING, AXLE FLANGE STUD 11640734 (19207)	EA	12	*	*	*	*	*	*			84	10
PO		SPACER, LIFTING BRACKET 11656874 (19207)	EA	16	*	*	*	*	*	*			84	11
PO	2530-410-2275	BRACKET, LIFTING, FRONT 11656909 (19207)	EA	2	*	*	*	*	*	*			84	12
PO	5310-550-3503	WASHER, LOCK, FLANGE MS35335-36 (96906)	EA	12	*	*	*	*	*	*			84	13
PO	5310-297-3250	NUT, PLAIN, HEXAGON, FLANGE MS31968-11 (96906)	EA	12	*	*	*	*	*	*			84	14
PO	5310-792-3588	NUT, WHEEL, LUG 11657800 (19207)	EA	24	*	*	*	*	*	*			84	15
PO	2530-927-3291	WHEEL ASSEMBLY, RIM AND DISK (16 IN. x 6.50 IN.) 11641032 (19207)	EA	5	*	*	*	*	*	*			85	3
XI		RIM, WHEEL 11657865 (19207)	EA	4									85	4
XI		RING, SIDE 11657862 (19207)	EA	1									85	5
		1313—TIRES, TUBES												
FOR	2610-540-4719	TIRE, CASING, 900-16, 8 PLY (NNDT) MS35388-11 (96906)	EA	5	*	*	*	*	*	*			85	1
PO	2610-051-9266	TUBE MS35390-10 (96906)	EA	5	*	*	*	*	*	*			85	2
PO	2640-052-0944	CAP, VALVE, TUBE 501235 (19207)	EA	4	*	*	*	*	*	*			85	6

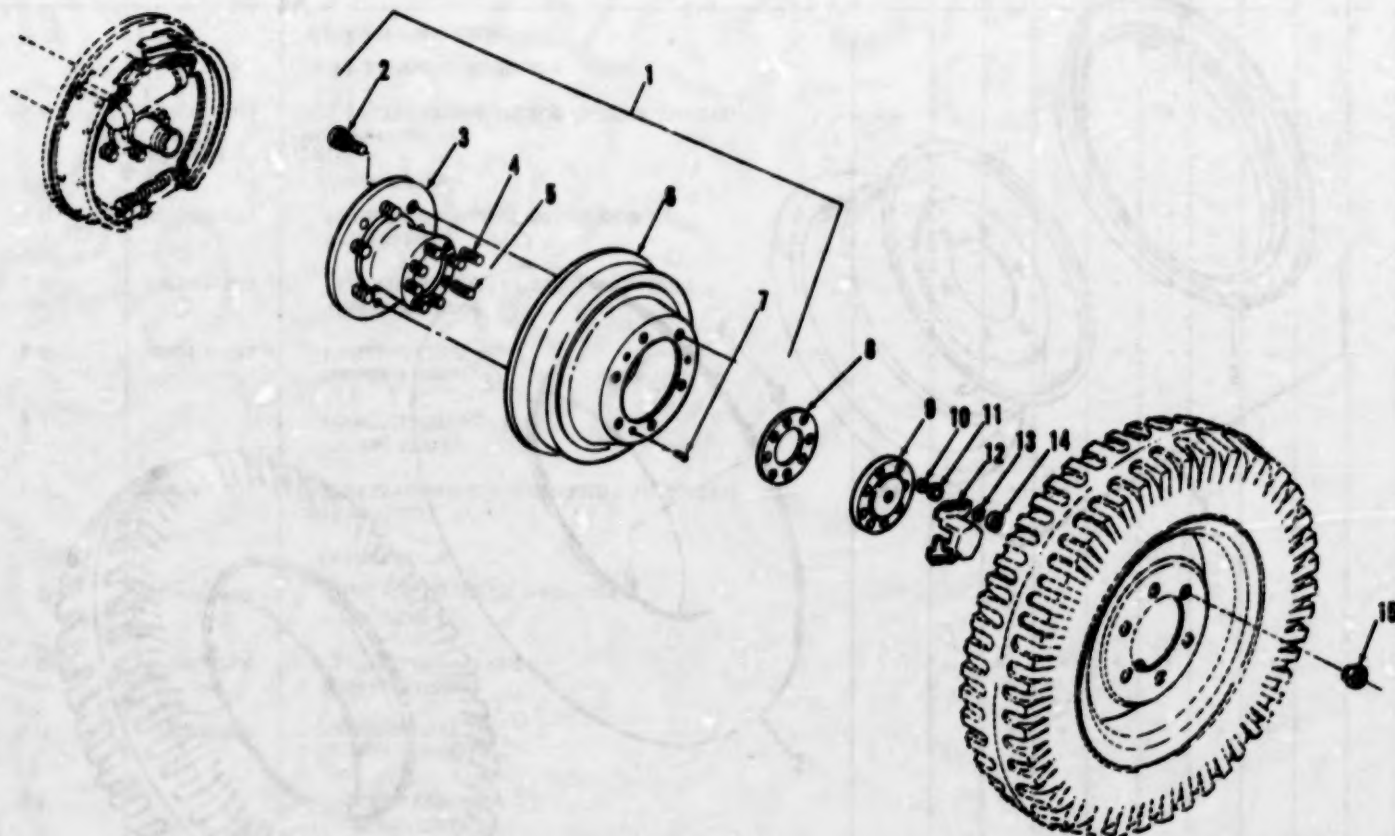

AT 41351

Figure 84. Hub and Drum Assemblies and Related Parts

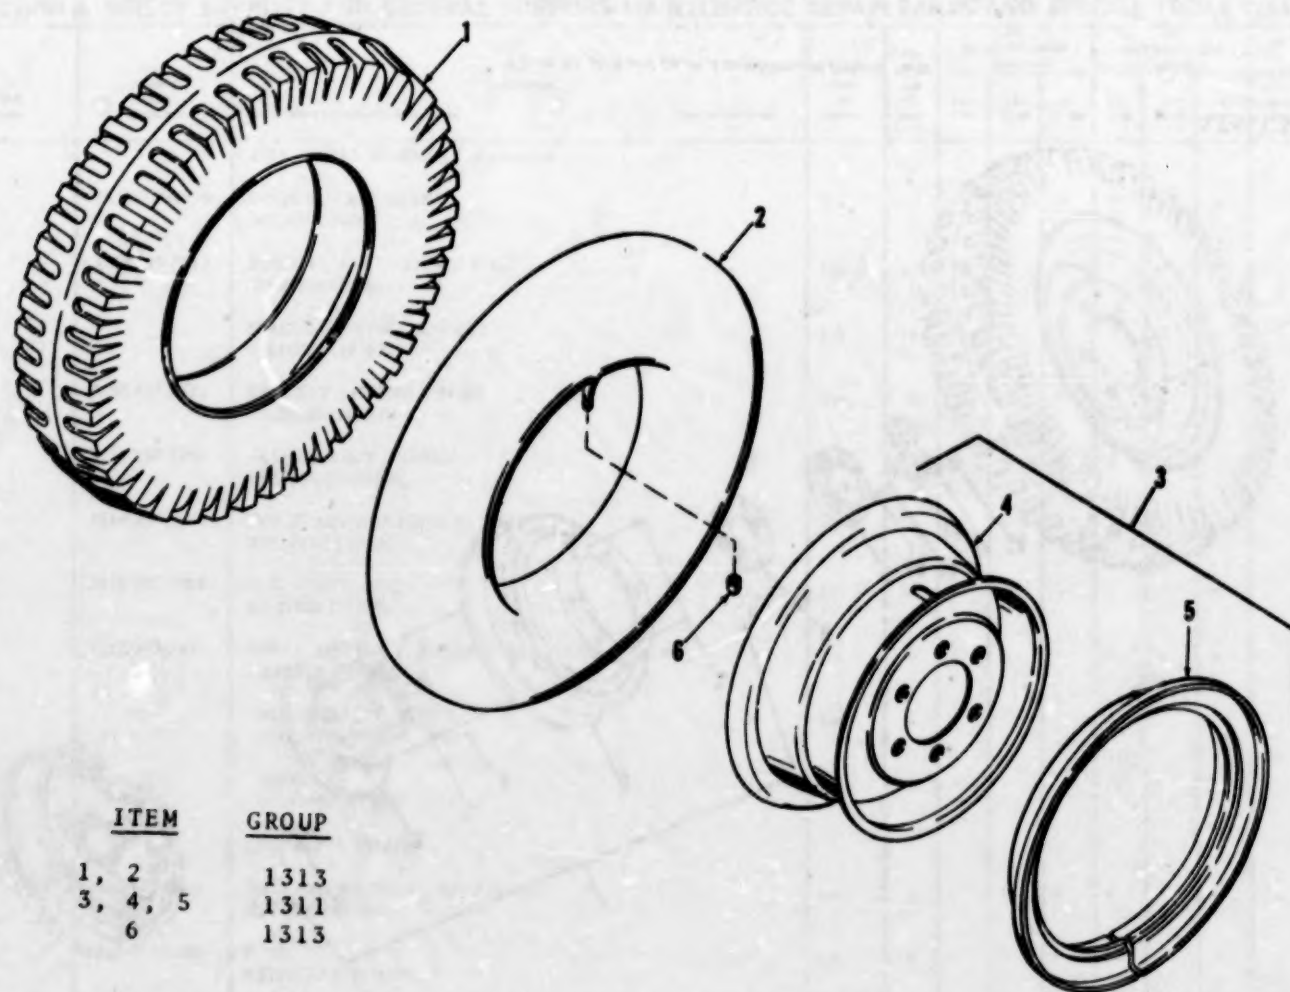

<u>ITEM</u>	<u>GROUP</u>
1, 2	1313
3, 4, 5	1311
6	1313

Figure 85. Tires, Tubes and Rims

AT 14299

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day C8 maint. allowance			(8) 1-yr slw per 100 equip entgcy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		GROUP 14 — STEERING												
		1401 — STEERING ASSEMBLY												
P O	2530-933-3714	KIT, REPLACEMENT, TIE ROD END L. H. THREAD 5704399 (19207)	EA	1	*	*	*	*	*	*			75	
		COMPOSED OF:												
P O	5310-045-1339	2-NUT, HEX, SLOTTED, 5/8 (SOCKET) 451339 (24617)			*	*	*	*	*	*			75	19
P O	5315-839-5822	1-PIN, COTTER, 1/8 x 1-1/2 MS24665-353 (96906)			*	*	*	*	*	*			75	20
P O	4730-050-4203	1-FITTING LUBE MS15001-1 (96906)			*	*	*	*	*	*			75	32
X 1		1-SOCKET ASSEMBLY 11640995-1 (19207)											75	33
P O	2530-933-3713	KIT, REPLACEMENT, TIE ROD END R. H. THREAD 5704400 (19207)	EA	1	*	*	*	*	*	*			75	
		COMPOSED OF:												
P O	5310-045-1339	2-NUT, HEX, SLOTTED, 5/8 (SOCKET) 451339 (24617)			*	*	*	*	*	*			75	19
P O	5315-839-5822	1-PIN, COTTER, 1/8 x 1-1/2 MS24665-353 (96906)			*	*	*	*	*	*			75	20
P O	4730-050-4203	1-FITTING LUBE MS15001-1 (96906)			*	*	*	*	*	*			75	32
X 1		1-SOCKET ASSEMBLY 11640995-2 (19207)											75	33
X20		WASHER, SPACER, TIE ROD-TO-STEERING ARM 35243 (72447)	EA	2	*	*	*	*	*	*			75	21
X20		ROD, TIE 11641070 (19207)	EA	1	*	*	*	*	*	*			75	27

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 90-day DS maint allowance			(8) 1-yr alt per 100 equip category	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No	(b) Item No.
		1401 — STEERING ASSEMBLY — Continued												
P O	5305-716-5183	SCREW, TIE ROD CLAMP, 1/2-20 x 2.25 MS90726-116 (96906)	EA	2	*	*	*	*	*	*			75	28
P O	5340-081-6573	CLAMP, TIE ROD 11601614 (19207)	EA	2	*	*	*	*	*	*			75	29
P O	5810-584-5272	WASHER, LOCK, TIE ROD CLAMP, 1/2 120384 (24617)	EA	2	*	*	*	*	*	*			75	30
P O	5810-732-0560	NUT, HEX, TIE ROD CLAMP, 1/20-20 MS35690-825 (96906)	EA	2	*	*	*	*	*	*			75	31
P O	2580-928-6117	SEAL, DUST, TIE ROD END 11640996 (19207)	EA	2	*	*	*	*	*	*			75	34
MT	2580-933-3531	GEAR ASSEMBLY, STEERING 11640716 (19207)	EA	1				*	*	*			86	
P F	4820-726-4719	VENT, ASSEMBLY STEERING GEAR 519687 (19207)	EA	1	*	*	*	*	*	*			86	1
P H	5306-217-9861	BOLT, HOUSING 38940 (77640)	EA	4				*	*	*			86	2
P H		COVER AND BUSHING 35DF23 (77640)	EA	1				*	*	*			86	3
P H	5310-470-2961	NUT, STEERING GEAR ADJUSTING SCREW 3100 (77640)	EA	1				*	*	*			86	24
P H	4730-617-6576	BUSHING, REDUCE, 1/2 - 1/8 144214 (24617)	EA	1				*	*	*			86	25
P H	2590-933-3539	KIT, REPAIR, STEERING GEAR 5704418 (19207)	EA	1				*	*	*				
X 1		1-GASKET 6DF75 (77640)											86	4

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr aw per 100 equip enlgy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1401 — STEERING ASSEMBLY — Continued												
		KIT, REPAIR, STEERING GEAR — Continued												
X 1		1-BEARING 3602 (77640)											86	9
X 1		1-SHIELD 402296 (77640)											86	10
X 1		1-SEAL, FRONT COLUMN 402296 (77640)											86	11
X 1		1-SEAL, SHAFT FRONT 032164 (77640)											86	13
P H	5340-298-6572	RING, RETAINING 3405 (77640)	EA	1				*	*	*			86	5
P H	5310-880-6004	WASHER, THRUST 4DF03 (77640)	EA	1				*	*	*			86	6
P H	2530-044-2240	SCREW, STEERING GEAR ADJUSTING 3020 (77640)	EA	1				*	*	*			86	7
P H		SHAFT AND ROLLER YDF257 (77640)	EA	1				*	*	*			86	8
X2H		HOUSING, STEERING GEAR 35JC14 (77640)	EA	1			*	*	*				86	12
P F	2530-177-9325	ARM, PITMAN 11657310 (19207)	EA	1	*	*	*	*	*	*			86	14
P H	5310-234-4936	WASHER, LOCK, SHAFT 19382 (77640)	EA	1				*	*	*			86	15
P H	5310-637-0592	NUT, SHAFT 1630 (77640)	EA	1				*	*	*			86	16
P H	2530-477-1801	COLUMN AND WORM ASSEMBLY 5JM49 (77640)	EA	1				*	*	*			86	17

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

1. SMN code	2. Federal stock Number	3. Description Reference Number & Mfg. Code	4. Unit of meas	5. Qty inc in unit	6. 30-day DS maint allowance			7. 30-day GS maint allowance			8. 1-yr slw per 100 equip enclgy	9. Depot maint slw per 100 equip	10. Illustration	
					a. 1-20	b. 21-50	c. 51-100	a. 1-20	b. 21-50	c. 51-100			a. Figure No.	b. Item No.
		1401 — STEERING ASSEMBLY — Continued												
P H		BALL AND CAGE ASSEMBLY BEARING 400079A1 (77640)	EA	2				*	*	*			86	18
X1	3110-227-2201	BALL 400014 (77640)	EA	10										
X1		CAGE 400079 (77640)	EA	1										
P H		CUP, LOWER BEARING 400083 (77640)	EA	1				*	*	*			86	19
P H	5365-658-3815	SHIM, HOUSING TO COVER .002 THK 35DC07 (77640)	EA	2				*	*	*			86	20
P H	5365-658-3816	SHIM, HOUSING TO COVER .005 THK 35DC08 (77640)	EA	1				*	*	*			86	20
P H		SHIM, HOUSING TO COVER .010 THK 35DC09 (77640)	EA	1				*	*	*			86	20
X2H	2530-481-2550	COVER, WORM GEAR 33772 (77640)	EA	1				*	*	*			86	21
P H	5305-227-8029	SCREW, COVER TO HOUSING 1202 (77640)	EA	4				*	*	*			86	22
P H		CUP, BEARING, UPPER 400084 (77640)	EA	1				*	*	*			86	23
P F	5305-048-5574	SCREW, STEERING GEAR MS90725-86 (96906)	EA	2	*	*	*	*	*	*			87	1
P F	5310-209-0965	WASHER, LOCK MS35338-47 (96906)	EA	3	*	*	*	*	*	*			87	2
P F	5310-722-4849	WASHER, FLAT, STEERING GEAR MS27183-77 (96906)	EA	3	*	*	*	*	*	*			87	3

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint allowance			(7) 30-day G5 maint allowance			(8) 1-yr altw per 100 equip cmty	(9) Depot maint altw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		1401 — STEERING ASSEMBLY — Continued												
P F	5310-159-6319	WASHER, SPACER, STEERING GEAR 11657548 (19207)	EA	2	*	*	*	*	*	*			87	7
P F	2530-917-0927	DRAG LINK, STEERING 11657985 (19207)	EA	1	*	*	*	*	*	*			87	9
		COMPOSED OF:												
P F	5310-045-1339	2-NUT, HEXAGON HEAD, SLOTTED 451339 (24617)			*	*	*	*	*	*			87	4
P F		2-PIN, COTTER 137204 (24617)			*	*	*	*	*	*			87	5
X1		1-DRAG LINK ASSEMBLY 11662515 (19207)											87	6
P F	4730-050-4203	2-FITTING MS15001-1 (96906)			*	*	*	*	*	*			87	8
P F	5305-069-5582	BOLT, STEERING GEAR MS90725-98 (96906)	EA	1	*	*	*	*	*	*			87	10
X20		STEERING COLUMN ASSEMBLY 11640825 (19207)	EA	1	*	*	*	*	*	*			88	1
P O		BEARING, JACKET, LOWER 11657661 (19207)	EA	1	*	*	*	*	*	*			88	2
X1		PLATE, SUPPORT 11640971 (19207)	EA	1									88	3
P O		COLUMN ASSEMBLY 11657628 (19207)	EA	1	*	*	*	*	*	*			88	4
P O	2530-406-9273	BEARING 11662518 (19207)	EA	1	*	*	*	*	*	*			88	5
P O	3110-165-6052	RETAINER 11640830 (19207)	EA	1	*	*	*	*	*	*			88	6

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr allow per 100 equip enclges	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
P O		1401 — STEERING ASSEMBLY — Continued STEERING COLUMN ASSEMBLY — Continued SCREW AND LOCK WASHER 11657685 (19207)	EA	2	*	*	*	*	*	*			88	15
X20		SLEEVE, COLUMN BEARING, UPPER 7979485 (19207)	EA	1	*	*	*	*	*	*			88	9
P O	5360-150-3876	SPRING, STEERING COLUMN BEARING 11657588 (19207)	EA	1	*	*	*	*	*	*			88	10
P O	2530-235-4754	CLAMP, STEERING COLUMN 11657137 (19207)	EA	1	*	*	*	*	*	*			88	11
P O	5306-042-3564	BOLT, CLAMP TO PANEL, 5/16-18 x 1-1/4 423564 (24617)	EA	1	*	*	*	*	*	*			88	12
P O	5306-042-3561	SCREW, CAP, SUPPORT PLATE TO PANEL 423561 (24617)	EA	2	*	*	*	*	*	*			88	13
P O		SEAL, LOWER SUPPORT 11641014 (19207)	EA	1	*	*	*	*	*	*			88	14
P O	5305-978-9396	SCREW, CAP, COUPLING CLAMP, SOCKET HEAD MS10997-101 (96906)	EA	1	*	*	*	*	*	*			88	16
P O	5310-637-9541	WASHER, LOCK, COUPLING CLAMP SCREW MS35338-44 (96906)	EA	1	*	*	*	*	*	*			88	17
P O	5310-696-5177	NUT AND LOCK WASHER 8328482 (19207)	EA	1	*	*	*	*	*	*			88	18
P O	5310-297-3250	NUT, HEX, SHAFT "U" JOINT CLAMP MS51908-11 (96906)	EA	1	*	*	*	*	*	*			88	19
P O	5310-209-0965	WASHER, LOCK, 7/16 MS35338-47 (96906)	EA	1	*	*	*	*	*	*			88	20
P O	2540-301-7423	NUT, SHAFT CLAMP BOLT, 5/16-24 8328392 (19207)	EA	2	*	*	*	*	*	*			88	24

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint. allowance			(8) 1-yr altw per 100 equip enrgy	(9) Depot main altw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1401 — STEERING ASSEMBLY — Continued												
P O	5340-163-0303	CLAMP, SHAFT, LOWER 11657547 (19207)	EA	1	*	*	*	*	*	*			88	25
P O	5306-050-1239	VOLT, SHAFT CLAMP, 5/16-24 x 1-1/2 MS90727-38 (96906)	EA	1	*	*	*	*	*	*			88	26
P O	5305-710-4196	SCREW, STEERING CLAMP, 7/16-20 x 2 MS90726-91 (96906)	EA	1	*	*	*	*	*	*			88	31
P O	5310-145-1027	WASHER, SPECIAL STEERING COLUMN SHAFT CLAMP 11657534 (19207)	EA	1	*	*	*	*	*	*			88	32
P O	5340-159-3838	CLAMP, SHAFT, U-JOINT 11657575 (19207)	EA	1	*	*	*	*	*	*			88	33
P O	2530-454-5083	SHAFT AND FLANGE, LOWER ASSEMBLY 11640916 (19207)	EA	1	*	*	*	*	*	*			88	34
P O	2530-125-6638	COUPLING ASSEMBLY WITH FLANGE MOUNTING 11640997 (19207)	EA	1	*	*	*	*	*	*			88	35
P O	2530-124-9752	SHAFT, ASSEMBLY STEERING, UPPER 11640797 (19207)	EA	1	*	*	*	*	*	*			88	36
X 1		COUPLING 11657569 (19207)	EA	1									88	21
X 1		BEARING 11657578 (19207)	EA	2									88	22
X 1		SPRING 11657573 (19207)	EA	1									88	23
X 1		SHAFT 11657572 (19207)	EA	1									88	27
P O	5330-147-8446	SEAL 11657577 (19207)	EA	1	*	*	*	*	*	*			88	28

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr slw per 100 equip catgry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		1401 — STEERING ASSEMBLY — Continued												
		SHAFT, ASSEMBLY STEERING, UPPER — Continued												
X 1		WASHER 11667570 (19207)	EA	1									88	29
P O		RETAINER 11667 940 (19207)	EA	1	*	*	*	*	*	*			88	30
X20		WHEEL, STEERING ASSEMBLY 11641067 (19207)	EA	1	*	*	*	*	*	*			54	10
P O	2530-917-5009	WHEEL, STEERING 11641065 (19207)	EA	1	*	*	*	*	*	*			54	10
P O	5330-157-6302	SEAL, STEERING WHEEL 11640631 (19207)	EA	1	*	*	*	*	*	*			88	7
X 1		RETAINER 11641066 (19207)	EA	1									88	8
P O	5310-112-1358	NUT, PLAIN, HEXAGON, STEERING WHEEL 121358 (24617)	EA	1	*	*	*	*	*	*			54	11

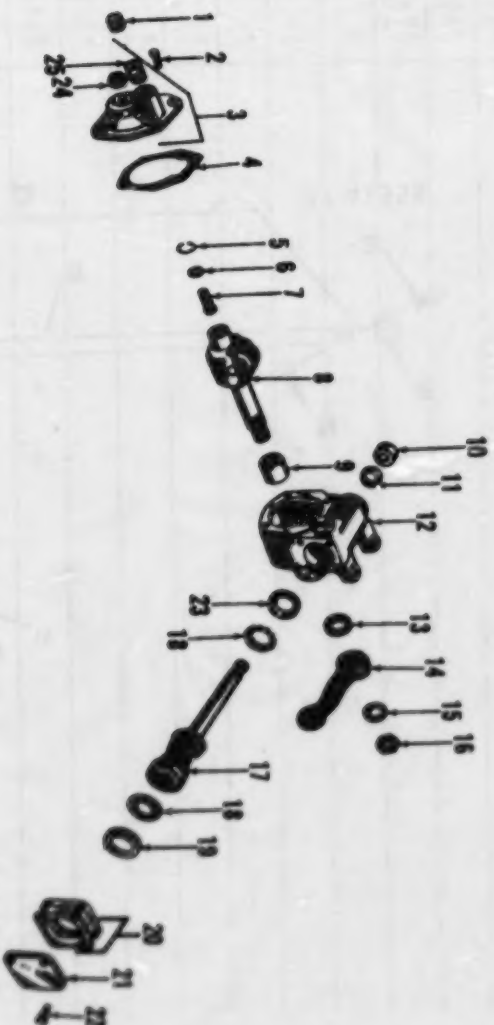


Figure 86. Steering Gear

AT 41353



Figure 87. Drag Link Assembly and Steering Gear Mounting Parts

AT 41354

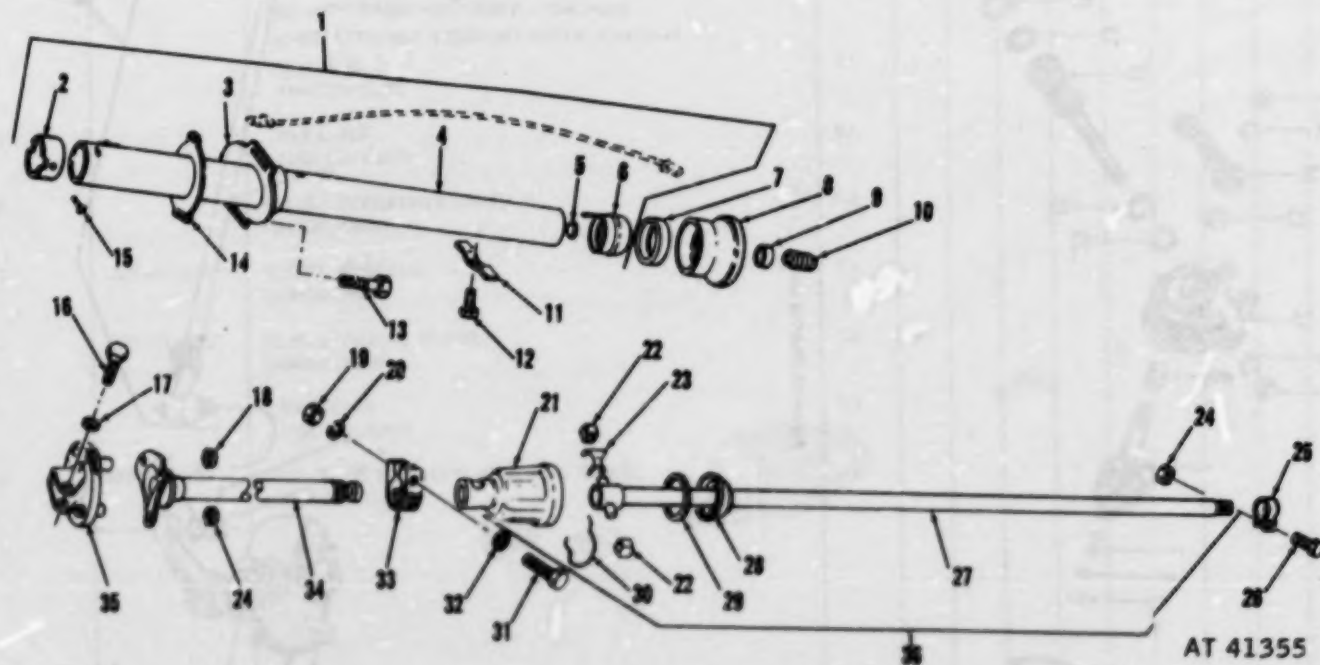


Figure 88. Steering Column and Related Parts

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip enigy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		GROUP 15 — FRAME, TOWING ATTACHMENTS, DRAWBARS AND ARTICULATION SYSTEM												
		1501 — FRAME ASSEMBLY												
X2H		FRAME ASSEMBLY, CHASSIS 11656675-2 (19307)	EA	1				*	*	*			89	
			CA											
X2H		FRAME ASSEMBLY 11656675-1 (19307)	EA	1				*	*	*			89	
		FA, BB, DA, DB, EA, EB												
X2H		BRACKET, FRONT BODY HOLDDOWN 11656704 (19307)	EA	2				*	*	*			89	1
X2H		OUTRIGGER, FRONT, BODY HOLDDOWN 11656725 (19307)	EA	2				*	*	*			89	2
X2H		RAIL ASSEMBLY, L. H., INNER 11656734-1 (19307)	EA	1				*	*	*			89	3
			CA											
X2H		RAIL ASSEMBLY, R. H., INNER 11656734-2 (19307)	EA	1				*	*	*			89	3
			CA											
P H	2510-731-4797	CROSSMEMBER ASSEMBLY, REAR ENGINE SUPPORT 11656885 (19307)	EA	1				*	*	*			89	4
X2H		OUTRIGGER, FRONT BODY HOLDDOWN 11656726 (19307)	EA	1				*	*	*			89	5
X2H		OUTRIGGER, BODY HOLDDOWN, REAR CENTER 11656737 (19307)	EA	1				*	*	*			89	6
		BA, BB, DA, DB, EA, EB												
X2H		BRACKET, REAR, CENTER BODY HOLDDOWN 11656719-2 (19307)	EA	1				*	*	*			89	7
X2H		CROSSMEMBER, FRAME, FRONT CENTER 11656708 (19307)	EA	1				*	*	*			89	8

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr slw per 100 equip cntgty	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No	(b) Item No
		1501 — FRAME ASSEMBLY — Continued												
X2H		CROSSMEMBER ASSEMBLY, REAR, CENTER 11656709 (19207)	EA	1				*	*	*			89	9
X2H		CROSSMEMBER ASSEMBLY, REAR 11656681-1 (19207)	EA	1				*	*	*			89	10
X2H		HANGER ASSEMBLY, REAR SPRING 11656483 (19207)	EA	2				*	*	*			89	11
X2H		BRACKET, REAR, CENTER BODY HOLDDOWN 115667-9-1 (19207)	EA	1				*	*	*			89	12
X2H		BRACKET, INNER AND OUTER SPRING HANGER 11656692 (19207)	EA	4				*	*	*			89	13
P H		RIVET, RAIL ASSEMBLY MS35743-14 (90806)	EA	4				*	*	*				
			CA											
P H	5305-380-3802	SCREW, CAP, HEXAGON HEAD, REAR ENGINE CROSSMEMBER MS90726-50 (90806)	EA	8				*	*	*				
P H	5310-437-9541	WASHER, LOCK, REAR ENGINE CROSSMEMBER MS35328-46 (90806)	EA	8				*	*	*				
P H	5310-732-0650	NUT, PLAIN, HEXAGON, REAR ENGINE CROSSMEMBER MS51908-8 (90806)	EA	8				*	*	*				
P O	9540-455-1270	BUMPER, FRONT 11604010 (19207)	EA	1	*	*	*	*	*	*			90	1
			BA, CA, DA, EA											
P O	5315-381-7743	CLIP, CHAIN AND PIN 7718236 (19207)	EA	4	*	*	*	*	*	*			90	2
P O	5315-455-6884	PIN, SHACKLE 8428575 (19207)	EA	4	*	*	*	*	*	*			90	3
P O	5305-718-8186	SCREW, CAP, HEXAGON HEAD, FRONT BUMPER MS90726-110 (90806)	EA	4	*	*	*	*	*	*			90	4
			BA, CA, DA, EA											

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty per unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr depot maint allowance per equip entry	(9) 1-yr depot maint allowance per equip entry	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1501 — FRAME ASSEMBLY — Continued												
P O	5305-716-8186	SCREW, CAP, HEXAGON HEAD, FRONT BUMPER MS90726-110 (96906)	EA	6	*	*	*	*	*	*			90	4
		BB, DB, EB												
P O	5310-880-7745	NUT, FRONT BUMPER SUPPORT MS51968-11 (96906)	EA	4	*	*	*	*	*	*			90	5
P O	5310-209-0965	WASHER, FRONT BUMPER SUPPORT MS35338-47 (96906)	EA	4	*	*	*	*	*	*			90	6
P O	5310-488-3888	NUT, PLAIN HEXAGON, FRONT BUMPER MS51943-40 (96906)	EA	4	*	*	*	*	*	*			90	7
		BA, CA, DA, EA												
P O	5310-488-3888	NUT, PLAIN HEXAGON, FRONT BUMPER MS51943-40 (96906)	EA	6	*	*	*	*	*	*			90	7
		BB, DB, EB												
X20		SUPPORT, FRONT BUMPER, L. H. 11656901-1 (19207)	EA	1	*	*	*	*	*	*			90	8
X20		SUPPORT, FRONT BUMPER, R. H. 11656901-2 (19207)	EA	1	*	*	*	*	*	*			90	8
P O	5310-809-4085	WASHER, FRONT BUMPER SUPPORT MS27183-16 (96906)	EA	4	*	*	*	*	*	*			90	9
P O	5305-710-4191	SCREW, CAP, HEXAGON HEAD, BUMPER SUPPORT MS90726-86 (96906)	EA	4	*	*	*	*	*	*			90	10
P O	5310-880-8789	NUT, FRONT BUMPER SUPPORT MS51967-11 (96906)	EA	4	*	*	*	*	*	*			90	11
P O		BOLT, FRONT BUMPER SUPPORT 126426 (19207)	EA	4	*	*	*	*	*	*			90	12
X20		BUMPER, FRONT, L. H. 11667018 (19207)	EA	1	*	*	*	*	*	*			90	13
		BB, DB, EB												
P O	5310-488-3888	NUT, FRONT BUMPER ATTACHING MS51943-40 (96906)	EA	6	*	*	*	*	*	*			90	14
		BB, DB, EB												

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc to unit	(6) 30-day DB maint allowance			(7) 30-day GS maint allowance			(8) 1 yr alt per 100 equip catry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(A) 1-20	(B) 21-50	(C) 51-100	(D) 1-20	(E) 21-50	(F) 51-100			(A) Figure No.	(B) Item No.
		1501 — FRAME ASSEMBLY — Continued												
P O	5310-808-2088	WASHER, FRONT BUMPER M27183-18 (94906)	BB, DB, EB	EA	6	*	*	*	*	*			90	15
P O	5305-716-5184	SCREW, CAP, HEXAGON HEAD, FRONT BUMPER MS90726-112 (94906)	BB, DB, EB	EA	6	*	*	*	*	*			90	16
X20		BUMPER, FRONT, R. H. 11657019 (19807)	BB, DB, EB	EA	1	*	*	*	*	*			90	17
P O	4010-185-9088	CHAIN, SHACKLE 6 IN. LONG RR-C-27LA (91349)		FT	V	*	*	*	*	*			90	18
P O	5510-253-1086	SHACKLE, TOWING AND TIEDOWN S438579 (19807)		EA	4	*	*	*	*	*			90	19
P O	5305-175-3230	SCREW, DRIVE, CHAIN MS21318-14 (94906)		EA	4	*	*	*	*	*			90	20
P O	5305-710-4192	SCREW, CAP, HEXAGON HEAD BUMPERETTE AND TOWING SHACKLE MS90726-97 (94906)		EA	18	*	*	*	*	*			91	1
P O	5520-410-2275	BRACKET, TOWING SHACKLE 11654806 (19807)		EA	2	*	*	*	*	*			91	2
X20		EXTENSION, L. H. REAR 11654804 (19807)		EA	1	*	*	*	*	*			91	3
P O	5310-397-3220	NUT, FLAIN, HEXAGON, BUMPERETTE, TOWING SHACKLE BRACKET EXTENSION MS31948-11 (94906)		EA	16	*	*	*	*	*			91	4
P O	5310-399-0945	WASHER, LOCK, BUMPERETTE, TOWING SHACKLE BRACKET EXTENSION MS35128-47 (94906)		EA	16	*	*	*	*	*			91	5
P O	5310-409-4285	WASHER, FLAT, EXTENSION MS27183-16 (94906)		EA	4	*	*	*	*	*			91	6
P O	5305-710-4189	SCREW, CAP, HEXAGON HEAD, EXTENSION MS90726-94 (94906)		EA	4	*	*	*	*	*			91	7

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued


(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr slw per 100 equip cnigcy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1501 — FRAME ASSEMBLY — Continued												
P O	5305-044-4153	SCREW, CAP, HEXAGON HEAD, EXTENSION MS90725-109 (96906)	EA	2	*	*	*	*	*	*			91	8
P O	5310-880-7746	NUT, PLAIN, HEXAGON, BLACKOUT LIGHT BRACKET MS51968-5 (96906)	EA	4	*	*	*	*	*	*			91	9
P O	5310-514-8948	WASHER, LOCK, BLACKOUT LIGHT BRACKET MS35337-45 (96906)	EA	4	*	*	*	*	*	*			91	10
X20		EXTENSION, R. H. 11658905 (19207)	EA	1	*	*	*	*	*	*			91	11
P O	5310-584-5272	WASHER, LOCK, EXTENSION MS35338-48 (96906)	EA	2	*	*	*	*	*	*			91	12
P O	5310-768-0318	NUT, PLAIN, HEXAGON, EXTENSION MS51967-14 (96906)	EA	2	*	*	*	*	*	*			91	13
P O	5306-225-9086	BOLT, MACHINE, BLACKOUT LIGHT BRACKET MS90726-31 (96906)	EA	4	*	*	*	*	*	*			91	14
P O	6220-447-9835	BRACKET, BLACKOUT LIGHT 11656908 (19207)	EA	1	*	*	*	*	*	*			91	15
P O	2540-455-1275	BUMPERETTE, REAR 11656907 (19207)	EA	2	*	*	*	*	*	*			91	16
X20		SPACER, TOWING SHACKLE BRACKET 11656874 (19207)	EA	4	*	*	*	*	*	*			91	17
P H	5320-816-5801	RIVET, OUTRIGGER, CROSSMEMBER MS35743-74 (96906)	EA	18				*	*	*				
P H	5320-067-9840	RIVET, CROSSMEMBER MS20613-12P14 (96906)	EA	14				*	*	*				
P H	5320-067-9841	RIVET, CROSSMEMBER MS20613-12P16 (96906)	EA	2				*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DB maint allowance			(7) 30-day GS maint allowance			(8) 1-yr allow per 100 equip catgry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(6) 1-20	(6) 21-50	(6) 51-100	(7) 1-20	(7) 21-50	(7) 51-100			(10) Figure No.	(10) Item No.
		1501 — FRAME ASSEMBLY — Continued												
P H		RIVET, HANGER BRACKET MS35743-78 (96906)	EA	8				*	*	*				
P H	5320-067-5846	RIVET, BRACKET MS20613-10P14 (96906)	EA	4				*	*	*				
P H		RIVET, CROSSMEMBER MS35743-75 (96906)	EA	8				*	*	*				
		1503 — PINTLE AND TOWING ATTACHMENTS												
P O	2540-078-6633	PINTLE ASSEMBLY, LIGHT DUTY 8380199 (19207)	EA	1	*	*	*	*	*	*			92	
		BA, BB, DA, DB, EA, EB												
P O	5315-243-1169	PIN, COTTER PINTLE LOCK MS24665-640 (96906)	EA	1	*	*	*	*	*	*			92	1
P O	4030-916-2141	HOOK AND PINTLE LOCK MS87006-53 (96906)	EA	1	*	*	*	*	*	*			92	2
P O	4010-129-3221	CHAIN, 6 IN. LG 42C15120-205 (10001)	PT	V	*	*	*	*	*	*			92	3
P O	4730-050-4203	FITTING, LUBRICATION MS15001-1 (96906)	EA	2	*	*	*	*	*	*			92	4
P O	5340-803-7301	RING, RETAINING, LATCH MS16624-1050 (96906)	EA	4	*	*	*	*	*	*			92	5
P O	5315-752-4316	PIN, LATCH 7524316 (19207)	EA	1	*	*	*	*	*	*			92	6
P O		PIN, PINTLE 7524315 (19207)	EA	1	*	*	*	*	*	*			92	7
P O	5310-659-9110	NUT, PINTLE 556824 (19207)	EA	1	*	*	*	*	*	*			92	8
P O	5315-846-0126	PIN, COTTER, PINTLE MS24665-628 (96906)	EA	1	*	*	*	*	*	*			92	9


SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr slw per 100 equip enjoy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1503 — PINTLE AND TOWING ATTACHMENTS — Continued												
P O	5305-253-5626	SCREW, CHAIN ATTACHING MS21318-49 (96906)	EA	1	*	*	*	*	*	*			92	10
X20		HOOK, PINTLE 7355390 (19207)	EA	1	*	*	*	*	*	*			92	11
X20		LOCK, PINTLE 8765721 (19207)	EA	1	*	*	*	*	*	*			92	12
P O	2540-704-4253	SPRING, LATCH 7044253 (19207)	EA	1	*	*	*	*	*	*			92	13
X20		LATCH, LOCKING 8380196 (19207)	EA	1	*	*	*	*	*	*			92	14
		1504 — SPARE WHEEL CARRIER AND TIRE LOCK												
P O	5315-842-3044	PIN, COTTER, CONNECTING LINK MS24665-283 (96906)	EA	2	*	*	*	*	*	*			93	1
X20		STRAP, SPARE WHEEL MOUNTING 11657199 (19207)	EA	1	*	*	*	*	*	*			93	2
P O		SPRING, LINK 11657760 (19207)	EA	2	*	*	*	*	*	*			93	3
X20		LINK ASSEMBLY, CONNECTING 11657741 (19207)	EA	1	*	*	*	*	*	*			93	4
P O		BOLT, TIRE BRACKET HOLDDOWN 11641025 (19207)	EA	1	*	*	*	*	*	*			93	5
X20		BAR ASSEMBLY, SPARE TIRE MOUNTING 11657742 (19207)	EA	1	*	*	*	*	*	*			93	6
P O	5310-080-6004	WASHER, FLAT, CONNECTING LINK MS27183-14 (96906)	EA	2	*	*	*	*	*	*			93	7

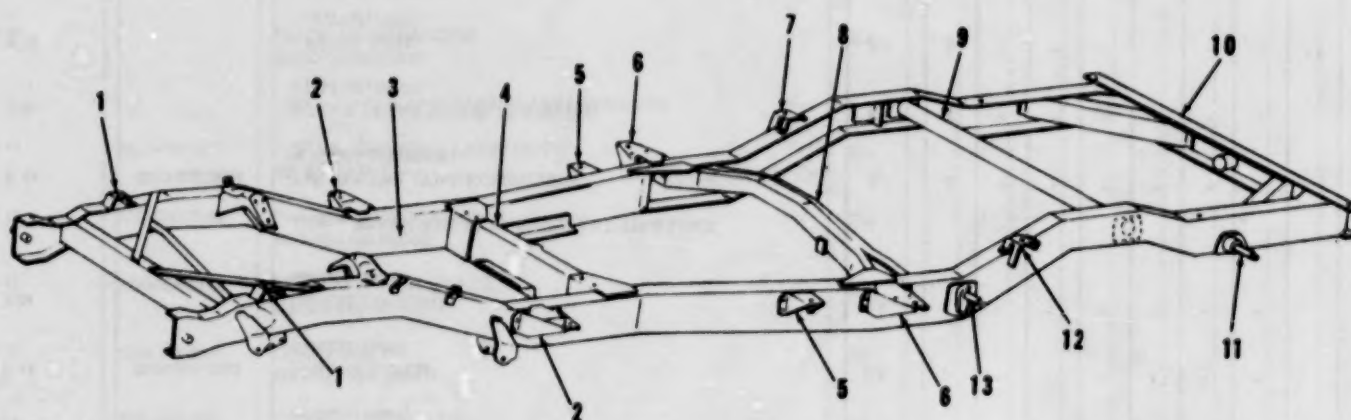

AT 41356

Figure 88. Frame Assembly

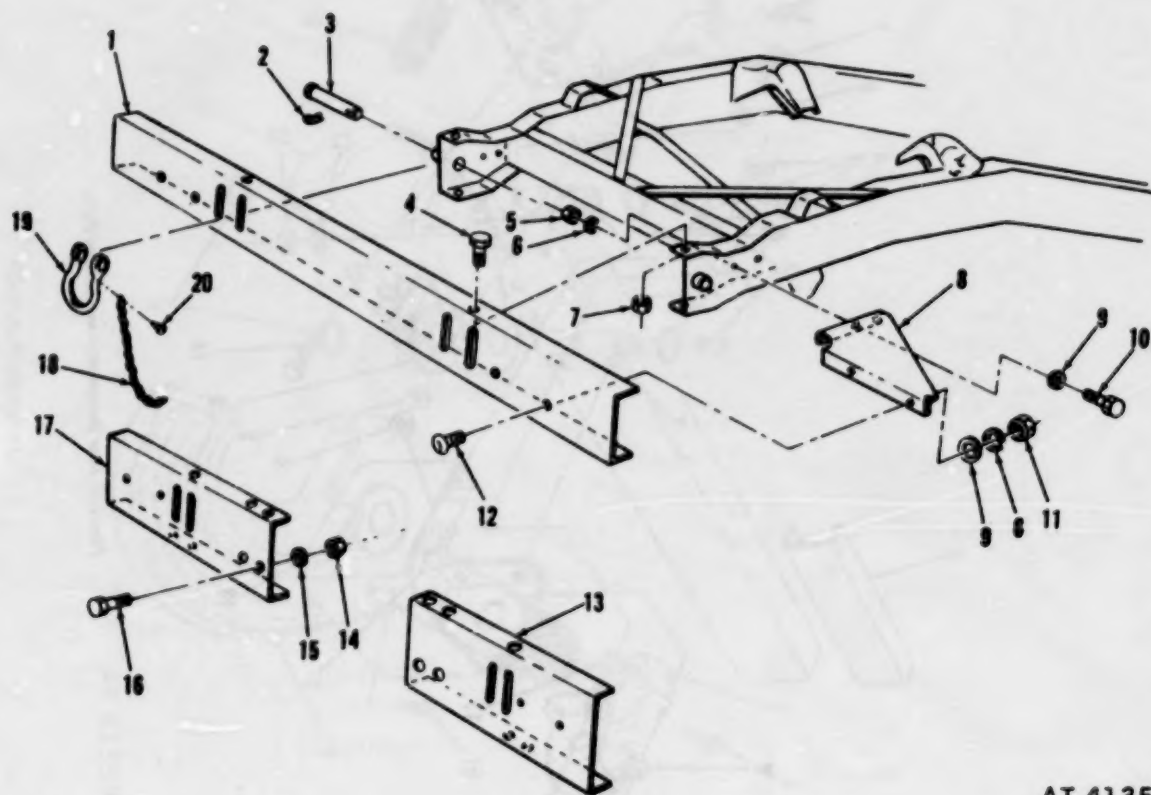

AT 41357

Figure 90. Front Bumper

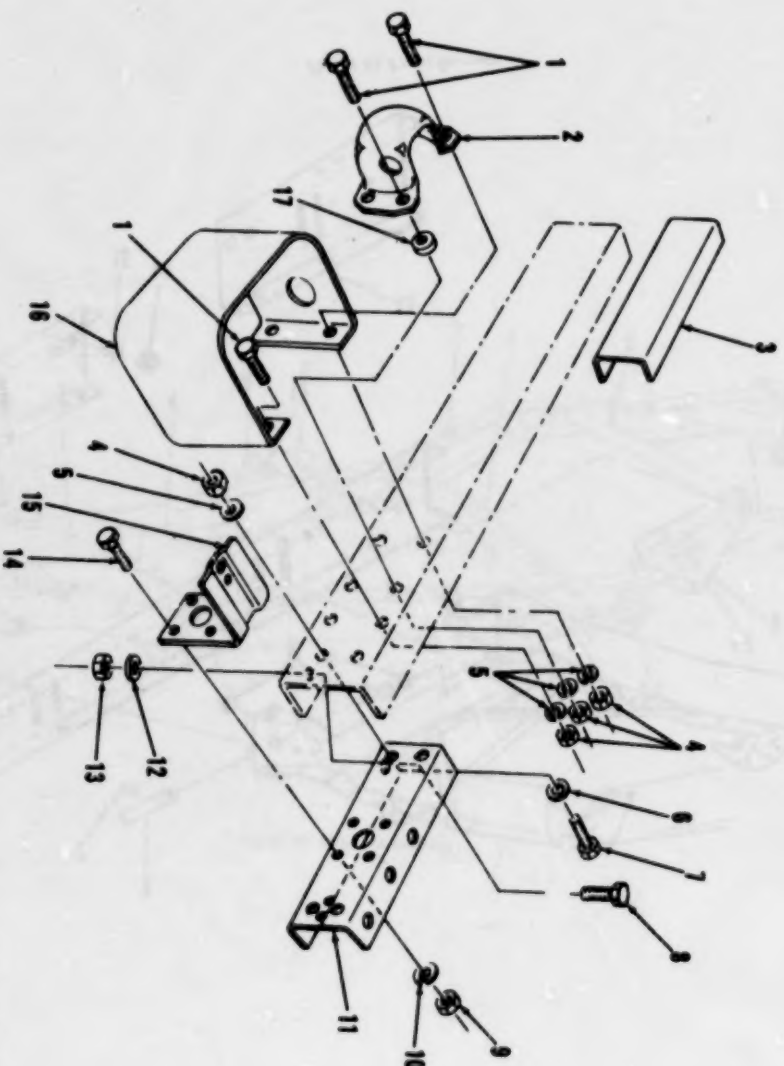


Figure 91. Rear Bumperettes and Related Parts

AT 41358


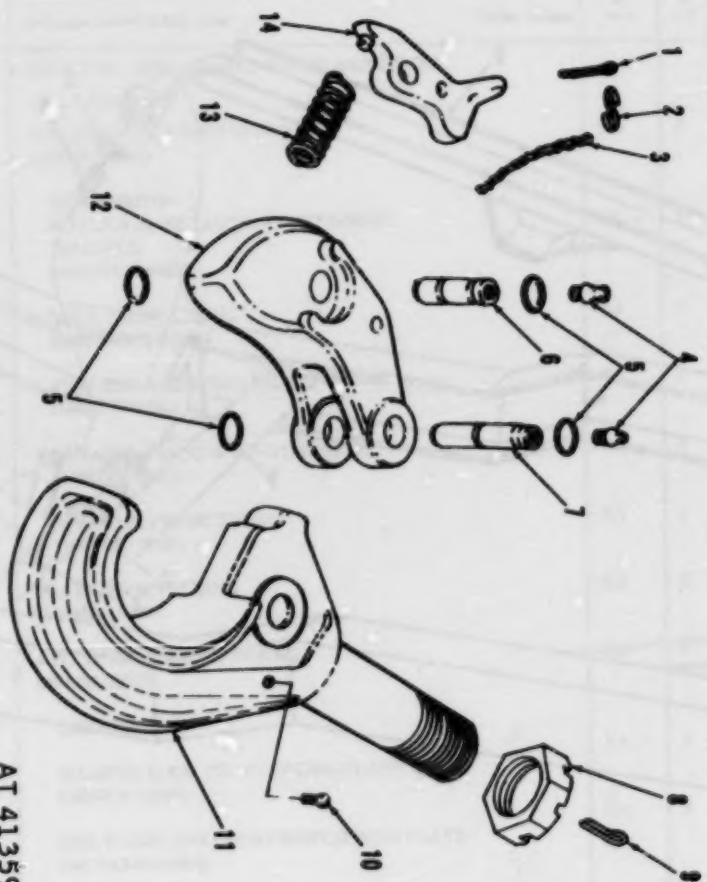


Figure 92. Piston Assembly

AT 41359

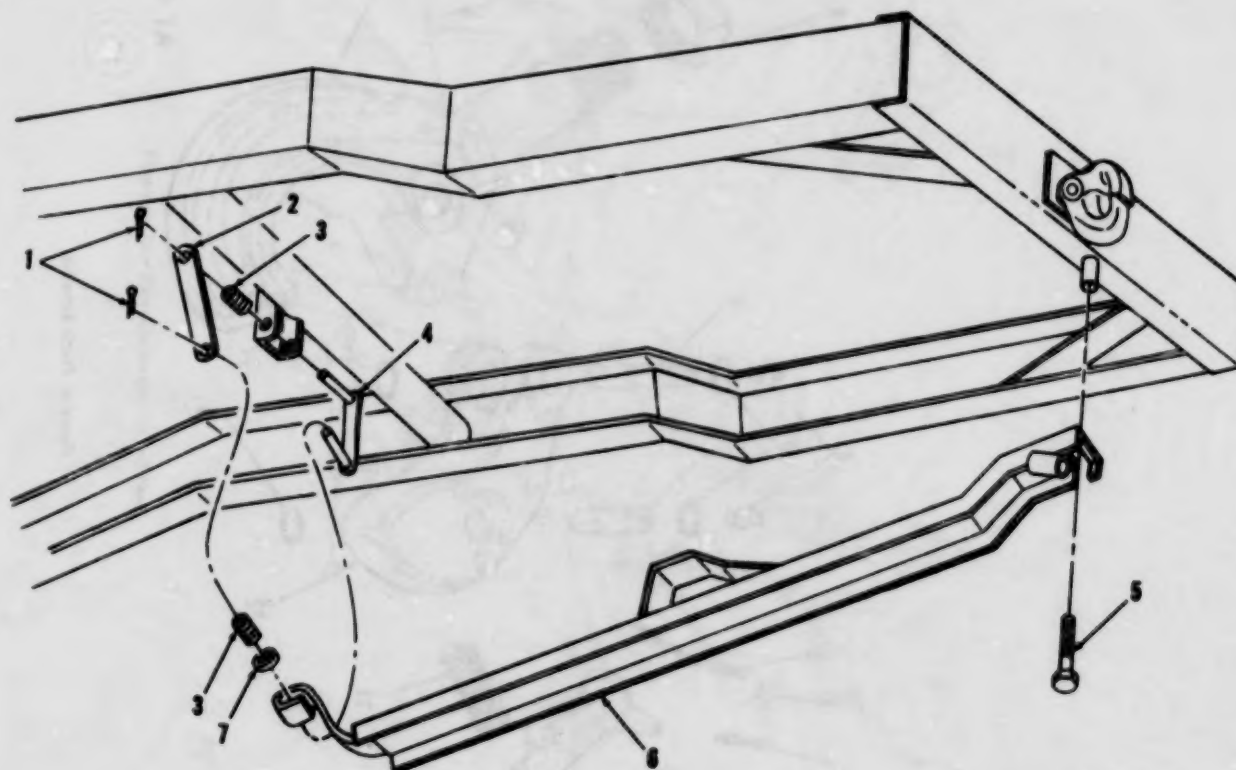

AT 41360

Figure 93. Spare Tire Mounting Parts

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip enlgy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-30	31-50	51-100	1-30	31-50	51-100			Figure No.	Item No.
		GROUP 16 — SPRINGS AND SHOCK ABSORBERS												
		1601 — SPRINGS												
P O	2510-917-0882	KIT, SHACKLE, FRONT SPRING 5704407 (19207)	EA	2	*	*	*	*	*	*				
		COMPOSED OF:												
P O	5310-897-5940	NUT, PLAIN, HEXAGON, FRONT SPRING SHACKLE MS51922-45 (96906)	EA	2	*	*	*	*	*	*			94	12
P O	5305-724-6836	BOLT, FRONT SPRING MS89726-148 (96906)	EA	2	*	*	*	*	*	*			94	13
X30		SHACKLE ASSEMBLY, FRONT SPRING 11656519 (19207)	EA	1	*	*	*	*	*	*			94	14
P O	5340-165-7796	BUSHING, FRONT SPRING SHACKLE 11640742 (19207)	EA	1	*	*	*	*	*	*			94	15
X20		SHACKLE, FRONT SPRING 11656830 (19207)	EA	1	*	*	*	*	*	*			94	16
X20		PLATE, FRONT SPRING 11656825 (19207)	EA	2	*	*	*	*	*	*			94	18
P O	2510-933-4434	KIT, "U" BOLT, FRONT SPRING 5704433 (19207)	EA	4	*	*	*	*	*	*				
		COMPOSED OF:												
P O	5310-253-2610	WASHER, LOCK, FRONT SPRING PLATE 11657418 (19207)	EA	2	*	*	*	*	*	*			94	19
P O	5310-488-3888	NUT, PLAIN, HEXAGON FRONT SPRING PLATE MS51943-40 (96906)	EA	2	*	*	*	*	*	*			94	20
X 1		BOLT, "U", FRONT SPRING 8673395-2 (19207)	EA	1	*	*	*	*	*	*			94	21
X20		PLATE, REAR SPRING 11656822 (19207)	EA	2	*	*	*	*	*	*			96	12

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

[illegible]

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr alt per 100 equip catgry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1601 — SPRINGS — Continued												
P O	2510-917-0887	KIT, SHACKLE, REAR SPRING 5704404 (19207)	EA	2	*	*	*	*	*	*				
		COMPOSED OF:												
P O	5310-909-8533	WASHER, FLAT, SHACKLE MS27183-23 (96906)	EA	1	*	*	*	*	*	*			95	13
P O	5310-225-6408	NUT, PLAIN, HEXAGON, SHACKLE MS51922-53 (96906)	EA	1	*	*	*	*	*	*			95	14
P O	5306-456-9162	BOLT, REAR SPRING SHACKLE 11657419 (19207)	EA	1	*	*	*	*	*	*			95	20
X20		SHACKLE ASSEMBLY, REAR SPRING 11656817 (19207)	EA	1	*	*	*	*	*	*			95	21
X20		SHACKLE 11656818 (19207)	EA	1	*	*	*	*	*	*			95	22
P O	2510-962-3065	BUSHING, REAR SPRING SHACKLE 11657405 (19207)	EA	1	*	*	*	*	*	*			95	23
P OR	2510-933-3710	SPRING ASSEMBLY, REAR 11657403 (19207)	EA	2	*	*	*	*	*	*			96	
P F		BUSHING, REAR SPRING 11657976-2 (19207)	EA	2	*	*	*	*	*	*			96	1
P F	5310-732-0659	NUT, PLAIN, HEXAGON, REAR SPRINGS MS51908-8 (96906)	EA	2	*	*	*	*	*	*			96	2
P F	2510-933-3278	LEAF, SPRING, REAR MAIN 11657403-1 (19207)	EA	2	*	*	*	*	*	*			96	3
P F		BUSHING, REAR SPRING 11657676-1 (19207)	EA	2	*	*	*	*	*	*			96	4
P F	2510-933-3280	LEAF, SPRING, NO. 2 11657403-2 (19207)	EA	2	*	*	*	*	*	*			96	5

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day G6 maint. allowance			(8) 1-yr stwr per 100 equip cntgry	(9) Depot maint stwr per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1601 — SPRINGS — Continued												
P O	2510-917-0887	KIT, SHACKLE, REAR SPRING 5704404 (19207)	EA	2	*	*	*	*	*	*				
		COMPOSED OF:												
P O	5310-809-8533	WASHER, FLAT, SHACKLE MS27183-23 (96906)	EA	1	*	*	*	*	*	*			95	13
P O	5310-225-6408	NUT, PLAIN, HEXAGON, SHACKLE MS51922-53 (96906)	EA	1	*	*	*	*	*	*			95	14
P O	5306-456-9162	BOLT, REAR SPRING SHACKLE 11657419 (19207)	EA	1	*	*	*	*	*	*			95	20
X20		SHACKLE ASSEMBLY, REAR SPRING 11656817 (19207)	EA	1	*	*	*	*	*	*			95	21
X20		SHACKLE 11656818 (19207)	EA	1	*	*	*	*	*	*			95	22
P O	2510-962-3065	BUSHING, REAR SPRING SHACKLE 11657405 (19207)	EA	1	*	*	*	*	*	*			96	23
P OR	2510-933-3710	SPRING ASSEMBLY, REAR 11657403 (19207)	EA	2	*	*	*	*	*	*			96	
P F		BUSHING, REAR SPRING 11657976-2 (19207)	EA	2	*	*	*	*	*	*			96	1
P F	5310-732-0559	NUT, PLAIN, HEXAGON, REAR SPRINGS MS51968-8 (96906)	EA	2	*	*	*	*	*	*			96	2
P F	2510-933-3278	LEAF, SPRING, REAR MAIN 11657403-1 (19207)	EA	2	*	*	*	*	*	*			96	3
P F		BUSHING, REAR SPRING 11657676-1 (19207)	EA	2	*	*	*	*	*	*			96	4
P F	2510-933-3280	LEAF, SPRING, NO. 2 11657403-2 (19207)	EA	2	*	*	*	*	*	*			96	5

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr allow per 100 equip catgry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-180	(a) 1-30	(b) 31-90	(c) 91-180			(a) Figure No.	(b) Item No.
		1601 — SPRINGS — Continued												
P F		RIVET, OUTER SPRING LEAF CLIP 11658039 (19207)	EA	4	*	*	*	*	*	*			96	6
P F	2510-933-3279	LEAF, SPRING, NO. 3 11657403-3 (19207)	EA	2	*	*	*	*	*	*			96	7
P F	5310-012-0377	NUT, PLAIN, HEXAGON, OUTER SPRING LEAF CLIP MS35600-606 (19207)	EA	6	*	*	*	*	*	*			96	8
P F		SPACER, OUTER SPRING LEAF CLIP 11658033 (19207)	EA	6	*	*	*	*	*	*			96	9
P F		BOLT, SPRING LEAF CLIP 11658042 (19207)	EA	6	*	*	*	*	*	*			96	10
P F		CLIP, SPRING LEAF 11658030-1 (19207)	EA	4	*	*	*	*	*	*			96	11
P F		BOLT, SPRING LEAVES 11652878 (19207)	EA	2	*	*	*	*	*	*			96	12
P F		CLIP, SPRING LEAF 11658030-2 (19207)	EA	2	*	*	*	*	*	*			96	13
POR	2510-124-1312	SPRING ASSEMBLY, FRONT 11657401 (19207)	EA	2	*	*	*	*	*	*			96	
P F	5340-165-7799	BUSHING, SPRING, FRONT 11640834 (19207)	EA	2	*	*	*	*	*	*			96	14
P F	5340-165-7798	BUSHING, SPRING, FRONT 11640742 (19207)	EA	2	*	*	*	*	*	*			96	16
P F	2510-933-4436	LEAF, MAIN, FRONT SPRING 11657410-1 (19207)	EA	2	*	*	*	*	*	*			96	17
P F	2510-933-3538	LEAF, SPRING, NO. 2 11657401-2 (19207)	EA	2	*	*	*	*	*	*			96	18

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued


(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr aw per 100 equip catgry	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
P F		1601 — SPRINGS — Continued	EA	8	*	*	*	*	*	*			96	19
P F	2510-906-5089	RIVET, SPRING LEAF CLIP 11658004 (19207)	EA	2	*	*	*	*	*	*			96	20
P F		LEAF, SPRING NO. 3 11657401-3 (19207)	EA	8	*	*	*	*	*	*			96	21
P F	5310-891-1709	NUT, PLAIN, HEXAGON, SPRING CLIP MS35091-9 (96906)	EA	8	*	*	*	*	*	*			96	22
P F		TUBE, SPRING CLIP 11662677 (19207)	EA	8	*	*	*	*	*	*			96	23
P F	5306-225-8509	SCREW, CAP, HEXAGON HEAD, REAR SPRING CLIP MS90725-45 (96906)	EA	8	*	*	*	*	*	*			96	24
P F		CLIP, SPRING, FRONT OUTER 11662676-1 (19207)	EA	4	*	*	*	*	*	*			96	26
P F		CLIP, SPRING, FRONT INNER 11662676-2 (19207)	EA	4	*	*	*	*	*	*			96	26
P F	5305-933-3077	KIT, BOLT, FRONT SPRING CENTER 5704431 (19207)	EA	2	*	*	*	*	*	*				
		COMPOSED OF:											96	25
X I		SCREW, CAP, HEXAGON HEAD, SPRING LEAVES 11662678 (19207)	EA	1	*	*	*	*	*	*			96	15
P F	5310-880-7746	NUT, PLAIN, HEXAGON, FRONT SPRING LEAVES MS51968-5 (96906)	EA	1	*	*	*	*	*	*				
		1604 — SHOCK ABSORBERS											94	1
P O	5310-857-5561	NUT, PLAIN, HEXAGON, SHOCK ABSORBER, FRONT MS21045-C7 (96906)	EA	4	*	*	*	*	*	*			94	2
P O	5310-823-8803	WASHER FLAT, SHOCK ABSORBER, FRONT MS27183-21 (96906)	EA	2	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable as Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip enigy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1604 — SHOCK ABSORBERS — Continued												
P O	5340-311-4306	BUSHING, FRONT SHOCK 7343032 (19207)	EA	8	*	*	*	*	*	*			94	3
P O	2540-933-3587	ABSORBER, FRONT SHOCK 11640910 (19207)	EA	2	*	*	*	*	*	*			94	4
P O	5310-913-5476	NUT, PLAIN, HEXAGON, FRONT SHOCK ABSORBER, BRACKET (3), BUMPER (2) MS51908-8 (96906)	EA	10	*	*	*	*	*	*			94	5
P O	5310-637-9541	WASHER, LOCK, FRONT SHOCK ABSORBER BRACKET (6), SUPPORT (4), BUMPER (4) MS35335-46 (96906)	EA	14	*	*	*	*	*	*			94	6
P O	2540-455-1319	BRACKET, FRONT SHOCK ABSORBER, L. H. 11656788-1 (19207)	EA	1	*	*	*	*	*	*			94	7
P O	2540-455-1320	BRACKET, FRONT SHOCK ABSORBER, R. H. 11656788-2 (19207)	EA	1	*	*	*	*	*	*			94	7
I 20		SUPPORT BUMPER, FRONT SHOCK ABSORBER 11657262 (19207)	EA	2	*	*	*	*	*	*			94	8
P O	5305-269-2815	SCREW, CAP, HEXAGON HEAD, FRONT SHOCK ABSORBER BRACKET MS90726-71 (96906)	EA	6	*	*	*	*	*	*			94	9
I 20		BUMPER, FRONT AXLE 11657735 (19207)	EA	2	*	*	*	*	*	*			94	10
P O	5305-269-7903	SCREW, CAP, HEXAGON HEAD, BUMPER SUPPORT (4), BUMPER (4) MS90726-80 (96906)	EA	8	*	*	*	*	*	*			94	11
P O	5310-897-5340	NUT, PLAIN, HEXAGON, FRONT SHOCK ABSORBER, LOWER PIN MS51922-45 (96906)	EA	2	*	*	*	*	*	*			94	17
P O	5310-809-5997	WASHER, FLAT, FRONT SHOCK ABSORBER, LOWER MS27183-17 (96906)	EA	4	*	*	*	*	*	*			94	22

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued


(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip catgry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1604 — SHOCK ABSORBERS — Continued												
P O	2540-456-9163	PIN, LOWER SHOCK ABSORBER MOUNTING 11641024 (19207)	EA	2	*	*	*	*	*	*			94	23
P O	5310-857-5561	NUT, PLAIN, HEXAGON, REAR SHOCK ABSORBER, UPPER MS21045-C7 (96906)	EA	2	*	*	*	*	*	*			95	1
P O	5310-823-8803	WASHER, FLAT, REAR SHOCK ABSORBER, UPPER MS27183-21 (96906)	EA	2	*	*	*	*	*	*			95	2
P O	5340-311-4306	BUSHING, REAR SHOCK ABSORBER 7343032 (19207)	EA	4	*	*	*	*	*	*			95	3
P O	2540-124-1313	ABSORBER, SHOCK, REAR 11641010 (19207)	EA	2	*	*	*	*	*	*			95	4
P O	5310-913-5476	NUT, PLAIN, HEXAGON, REAR BUMPER MS51968-8 (96906)	EA	4	*	*	*	*	*	*			95	5
P O	5310-637-9541	WASHER, LOCK, REAR BUMPER MS35338-46 (96906)	EA	4	*	*	*	*	*	*			95	6
X20		SPACER, REAR BUMPER 11657341 (19207)	EA	2	*	*	*	*	*	*			95	7
X20		BUMPER, REAR AXLE 11657735 (19207)	EA	2	*	*	*	*	*	*			95	8
P O	5305-269-2815	SCREW, CAP, HEXAGON, HEAD REAR AXLE BUMPER MS90726-71 (96906)	EA	4	*	*	*	*	*	*			95	9
P O	5305-716-8182	SCREW, CAP, HEXAGON HEAD, SHOCK ABSORBER, LOWER MS90726-117 (96906)	EA	2	*	*	*	*	*	*			95	16
P O	5310-488-3888	NUT, PLAIN, HEXAGON, REAR SHOCK ABSORBER, LOWER MS51943-40 (96906)	EA	2	*	*	*	*	*	*			95	24
P O	5310-809-5997	WASHER, FLAT, REAR SHOCK ABSORBER, LOWER MS27183-17 (96906)	EA	2	*	*	*	*	*	*			95	25

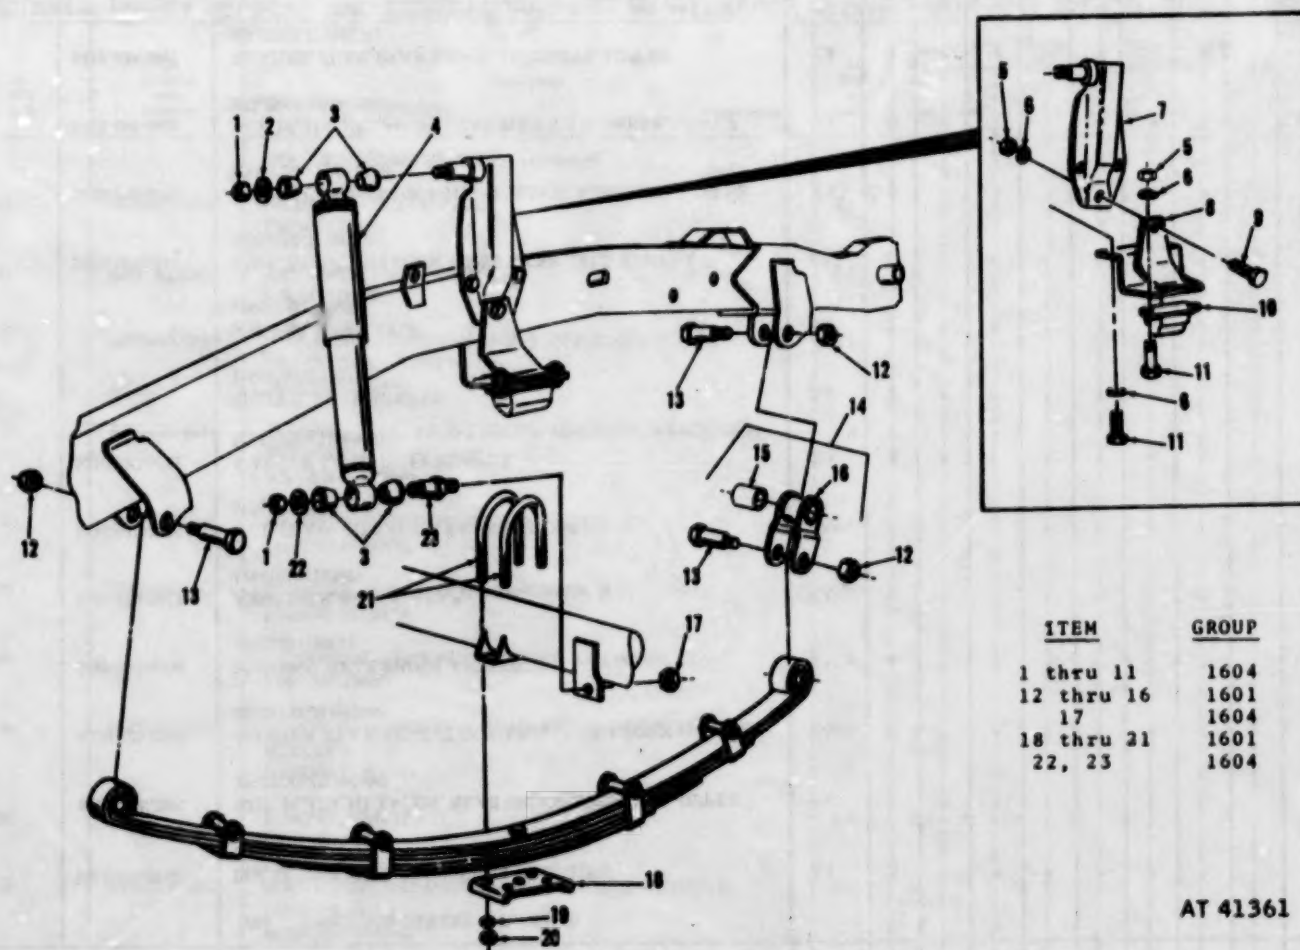ITEMGROUP

1 thru 11	1604
12 thru 16	1601
17	1604
18 thru 21	1601
22, 23	1604


AT 41361

Figure 91. Front Springs and Shock Absorbers

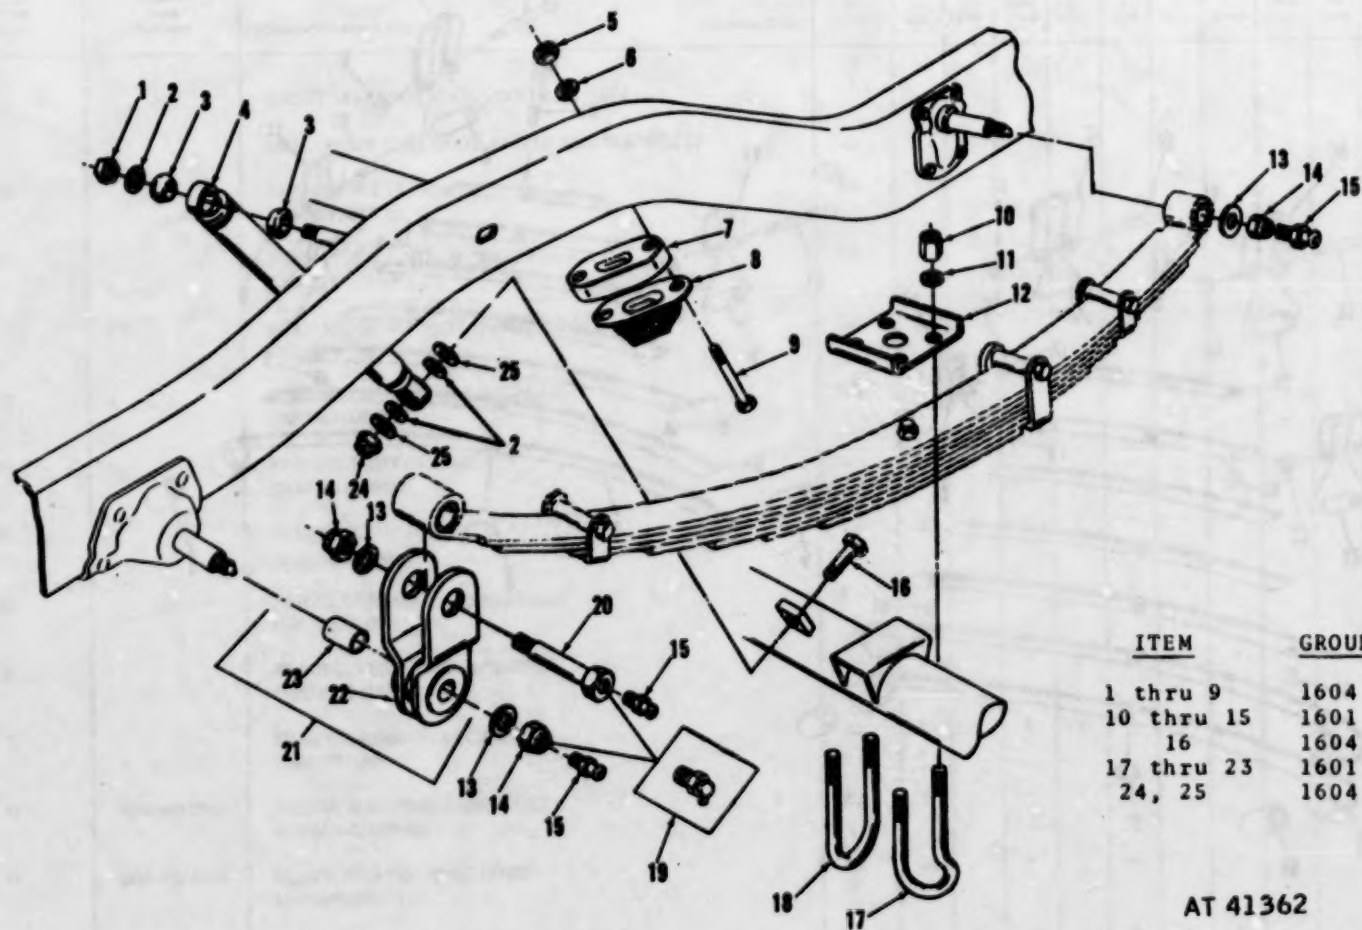

AT 41362

Figure 95. Rear Springs and Shock Absorbers

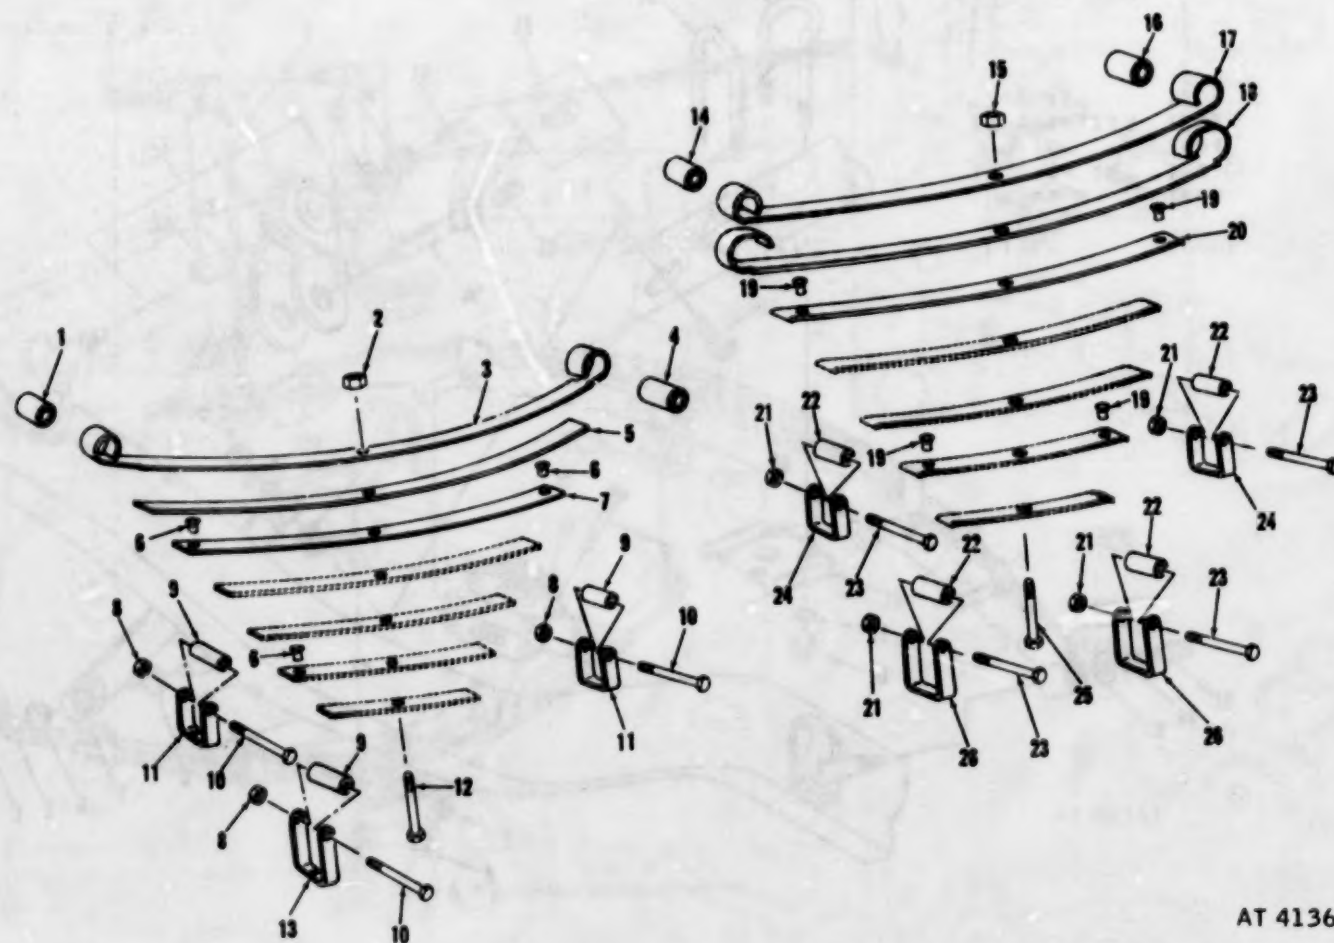

AT 41363

Figure 96. Front and Rear Springs

SECTION H. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D8 maint allowance			(7) 30-day G8 maint allowance			(8) 1-yr allow per 100 equip cntgcy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		GROUP 18 — BODY, CAB, HOOD AND HULL												
		1801 — BODY, CAB, HOOD AND HULL ASSEMBLIES												
P O		PINCH WELT 74.1 IN. LG. 11657983 (19207)	EA	1	*	*	*	*	*	*			97	1
P O		SEAL ASSEMBLY, L. H. DOOR PILLAR 11657474-1 (19207)	EA	1	*	*	*	*	*	*			97	2
P O		SEAL ASSEMBLY, R. H. DOOR PILLAR 11657474-2 (19207)	EA	1	*	*	*	*	*	*			97	2
P O		SCREW, MACHINE, DOOR PILLAR 11657619 (19207)	EA	4	*	*	*	*	*	*			97	3
X20		SPACER, VENT GRILLE 11657475-3 (19207)	EA	2	*	*	*	*	*	*			97	4
X20		SPACER, VENT GRILLE 11547475-2 (19207)	EA	2	*	*	*	*	*	*			97	5
X20		PANEL ASSEMBLY, VENT GRILLE 11657498 (19207)	EA	1	*	*	*	*	*	*			97	6
X20		SPACER, VENT GRILLE CENTER 11657475-1 (19207)	EA	5	*	*	*	*	*	*			97	7
P O		BUMPER, HOOD STABILIZER 11657222 (19207)	EA	1	*	*	*	*	*	*			97	8
P O	5305-879-7941	SCREW, MACHINE, VENT GRILLE MS24617-31 (94906)	EA	7	*	*	*	*	*	*			97	9
P O	2540-472-4412	PLATE, HEATER HOLE COVER 11657290 (19207)	EA	1	*	*	*	*	*	*			97	10
P O	5310-582-5965	WASHER, LOCK, HEATER HOLE COVER MS35335-44 (94906)	EA	8	*	*	*	*	*	*			97	11

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr altw per 100 equip enrgy	(9) Depot maint altw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1801— BODY, CAB, HOOD AND HULL ASSEMBLIES—Continued												
P O	5305-950-4150	SCREW, CAP, HEXAGON HEAD, HEATER HOLE COVER 189094 (24614)	EA	8	*	*	*	*	*	*			97	12
X20		PLATE, HEATER HOLE COVER 11657292 (19207)	EA	1	*	*	*	*	*	*			97	13
X20		PLUG BUTTON, FIREWALL 10885431-1 (19207)	EA	4	*	*	*	*	*	*			97	14
P O	5306-225-8496	SCREW, CAP, HEXAGON HEAD FENDER MOUNTING BRACKET MS90725-31 (96906)	EA	4	*	*	*	*	*	*			97	15
P O	5310-407-9566	WASHER, LOCK, FENDER MOUNTING BRACKET MS35338-45 (96906)	EA	4	*	*	*	*	*	*			97	16
P O	5310-453-8856	WASHER, FLAT, FENDER MOUNTING BRACKET MS27183-12 (96906)	EA	4	*	*	*	*	*	*			97	17
X20		BRACKET, MOUNTING, FRONT FENDER 11657233 (19207)	EA	2	*	*	*	*	*	*			97	18
P O	5340-454-5317	PLUG BUTTON 432449 (24617)	EA	2	*	*	*	*	*	*			97	19
P O	5305-993-2400	SCREW ASSEMBLY, L. H. AND R. H. MS35207-282 (96906)	EA	6	*	*	*	*	*	*			97	20
P O	5310-209-0786	WASHER, LOCK, STRIKER ASSEMBLY MS35235-33 (96906)	EA	6	*	*	*	*	*	*			97	21
P O	2590-761-5596	STRIKER ASSEMBLY, L. H. DOOR LOCK 11640935-1 (19207)	EA	1	*	*	*	*	*	*			97	22
P O	2590-493-0253	STRIKER ASSEMBLY, R. H. DOOR LOCK 11640933-2 (19207)	EA	1	*	*	*	*	*	*			97	22
X20		SHIM, DOOR LOCK STRIKERS 11657471 (19207)	EA	V	*	*	*	*	*	*			97	23

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip cntry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
X2P		1801—BODY, CAB, HOOD AND HULL ASSEMBLIES—Continued CAB ASSEMBLY 11657917 (19207)	EA	1	*	*	*	*	*	*			97	24
P O	5340-614-9772	BUMPER, DOOR 11640775 (19207)	EA	2	*	*	*	*	*	*			97	25
P O	5305-753-7078	SCREW, BUMPER TO CAB MS24821-31 (96906)	EA	2	*	*	*	*	*	*			97	26
P O	2540-476-5497	GUIPE ASSEMBLY, FRONT WINDOWS 11640983 (19207)	EA	2	*	*	*	*	*	*			98	1
P O	2540-933-3540	KIT, WEATHERSTRIP, DOOR BELT OUTER 5704439 (19207)	EA	1	*	*	*	*	*	*				
P O	5330-157-6190	WEATHERSTRIP, DOOR, OUTER, LEFT 11640932-2 (19207)	EA	1	*	*	*	*	*	*			98	2
P O	5330-157-6187	WEATHERSTRIP, DOOR, OUTER, RIGHT 11640932-1 (19207)	EA	1	*	*	*	*	*	*			98	2
P O	3020-460-0166	SCREW, MACHINE, WINDOW CHANNEL (6) WINDOW GUIDE (4) GLASS STOP (4) 454542 (29617)	EA	14	*	*	*	*	*	*			98	3
X20		CHANNEL ASSEMBLY, FRONT WINDOW, R. H. 11640984-2 (19207)	EA	1	*	*	*	*	*	*			98	4
P O	2540-476-5496	CHANNEL ASSEMBLY, FRONT WINDOW, L. H. 11640984-1 (19207)	EA	1	*	*	*	*	*	*			98	4
P O	5680-411-5700	WEATHERSTRIP, DOOR, LOWER 11657805 (19207)	EA	2	*	*	*	*	*	*			98	5
P O		CLIP, WEATHERSTRIP 11657801 (19207)	EA	8	*	*	*	*	*	*			98	6
P F	2510-961-2889	HINGE ASSEMBLY, L. H. DOOR, UPPER 11641080-1 (19207)	EA	1	*	*	*	*	*	*			98	7

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cat/eqy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		1001—BODY, CAB, HOOD AND HULL ASSEMBLIES—Continued												
X2F		HINGE ASSEMBLY, R. H. DOOR, UPPER 11641080-2 (19207)	EA	1	*	*	*	*	*	*			98	7
P F		BOLT AND LOCK WASHER, HINGE TO DOOR 11640875 (19207)	EA	24	*	*	*	*	*	*			98	8
P F		SCREW, ASSEMBLED WASHER, WINDOW GUIDE 11662524 (19207)	EA	6	*	*	*	*	*	*			98	9
P F	7510-461-2890	HINGE ASSEMBLY, L. H. DOOR, LOWER 11641080-3 (19207)	EA	1	*	*	*	*	*	*			98	10
X2F		HINGE ASSEMBLY, R. H. DOOR, LOWER 11641080-4 (19207)	EA	1	*	*	*	*	*	*			98	10
X2F		BRACKET, FRONT DOOR WINDOW GUIDE SUPPORT 11657213 (19207)	EA	2	*	*	*	*	*	*			98	11
P F	2510-454-8105	DOOR ASSEMBLY, L. H. FRONT 11656912-1 (19207)	EA	1	*	*	*	*	*	*			98	12
P F	2510-247-6783	DOOR ASSEMBLY, R. H. FRONT 11656912-2 (19207)	EA	1	*	*	*	*	*	*			98	12
X2F		CONTROL ASSEMBLY, R. H. DOOR LOCK 11640892-2 (19207)	EA	1	*	*	*	*	*	*			98	13
X2F		CONTROL ASSEMBLY, L. H. DOOR LOCK 11640892-1 (19207)	EA	1	*	*	*	*	*	*			98	13
P O		SCREW ASSEMBLED WASHER, DOOR CONTROL ASSEMBLY (6) REGULATOR (8) 271113 (24617)	EA	14	*	*	*	*	*	*			98	14
P F	2540-917-5899	REGULATOR ASSEMBLY, WINDOW R. H. 11640895-2 (19207)	EA	1	*	*	*	*	*	*			98	15
P F	2540-917-5800	REGULATOR ASSEMBLY, WINDOW L. H. 11640895-1 (19207)	EA	1	*	*	*	*	*	*			98	15

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr altw per 100 equip cnlgy	(9) Depot maint altw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			Figure No.	Item No.
		1801—BODY, CAB, HOOD AND HULL ASSEMBLIES—Continued												
P O	2540-226-1666	LOCK ASSEMBLY, L. H. DOOR 11641008 (19207)	EA	1	*	*	*	*	*	*			98	16
P O	2540-226-1674	LOCK ASSEMBLY, R. H. DOOR 11641009-2 (19207)	EA	1	*	*	*	*	*	*			98	16
P O	2510-455-1316	PANEL, DOOR LINING 11657532 (19207)	EA	2	*	*	*	*	*	*			98	17
P O	5340-158-0035	PIN, ESCUTCHEON, DOOR HANDLE 11640988 (19207)	EA	4	*	*	*	*	*	*			98	18
P O	2540-917-5892	HANDLE, DOOR 11657824 (19207)	EA	2	*	*	*	*	*	*			98	19
P O	2540-147-2080	HANDLE ASSEMBLY, WINDOW 11641008 (19207)	EA	2	*	*	*	*	*	*			98	20
P O	5305-157-8284	SCREW, DOOR AND WINDOW HANDLE 11641008 (19207)	EA	4	*	*	*	*	*	*			98	21
P O	5305-879-7941	SCREW, INNER DOOR PANEL MS24617-31 (94906)	EA	4	*	*	*	*	*	*			98	22
P O	5340-158-0068	CLIP, TRIM DOOR, INNER DOOR RAIL 7066424 (19207)	EA	20	*	*	*	*	*	*			98	23
P O		SCREW ASSEMBLED WASHER, DOOR LOCK ASSEMBLY 445638 (24617)	EA	6	*	*	*	*	*	*			98	24
P O	2540-933-3546	WEATHERSTRIP, L. H. DOOR 11657543-1 (19207)	EA	1	*	*	*	*	*	*			98	25
P O	2510-522-2489	WEATHERSTRIP, R. H. DOOR 11657543-2 (19207)	EA	1	*	*	*	*	*	*			98	25
P O	2510-451-8124	BRACKET ASSEMBLY, FRONT WINDOW STOP 11657771 (19207)	EA	2	*	*	*	*	*	*			98	26

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) ASR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr alt per 100 equip origuy	(9) 1-yr alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		1801—BODY, CAB, HOOD AND HULL ASSEMBLIES—Continued												
X30		BRACKET, GLASS STOP 11667529 (19307)	EA	2	*	*	*	*	*	*			98	27
P O		BUMPER, RUBBER, GLASS STOP 11667770 (19307)	EA	2	*	*	*	*	*	*			95	26
P O	2510-152-2506	WINDOW ASSEMBLY, L. H. STATIONARY 11640905-1 (19307)	EA	1	*	*	*	*	*	*			99	
P O	2510-152-2506	WINDOW ASSEMBLY, R. H. STATIONARY 11640905-2 (19307)	EA	1	*	*	*	*	*	*			99	
P O	5320-157-4626	WEATHERSTRIP STATIONARY WINDOW 11667867 (19307)	EA	1	*	*	*	*	*	*			99	1
X30		FRAME ASSEMBLY, R. H. STATIONARY WINDOW 11667925-2 (19307)	EA	1	*	*	*	*	*	*			99	3
X30		FRAME ASSEMBLY, L. H. STATIONARY WINDOW 11667925-1 (19307)	EA	1	*	*	*	*	*	*			99	3
X30		RAIL, STATIONARY WINDOW FRAME 11667785 (19307)	EA	2	*	*	*	*	*	*			99	8
P O	5305-157-5282	SCREW, ASSEMBLED WASHER STATIONARY WINDOW, BOTTOM RAIL 7538302 (19307)	EA	2	*	*	*	*	*	*			99	9
P O		SCREW ASSEMBLED WASHER, STATIONARY WINDOW BOTTOM RAIL 11662524 (19307)	EA	2	*	*	*	*	*	*			99	10
P O	5310-033-4310	NUT, PLAIN, HEXAGON, STATIONARY WINDOW 7906483 (19307)	EA	4	*	*	*	*	*	*			99	4
P O	5310-081-4219	WASHER, FLAT, STATIONARY WINDOW MS27183-12 (96906)	EA	2	*	*	*	*	*	*			99	5
P O	5310-514-6074	WASHER, LOCK, STATIONARY WINDOW MS35335-34 (96906)	EA	4	*	*	*	*	*	*			99	6

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D8 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr air per 100 equip enrgy	(9) Depot maint air per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1801—BODY, CAB, HOOD AND HULL ASSEMBLIES—Continued												
P O	5305-984-5680	SCREW, CAP, HEXAGON HEAD, STATIONARY WINDOW MS35205-300 (96906)	EA	4	*	*	*	*	*	*			99	7
P O	5305-157-8285	SCREW, ASSEMBLED WASHER, STATIONARY WINDOW 11650871 (19207)	EA	2	*	*	*	*	*	*			99	11
P O	2510-152-2504	WINDOW AND FRAME ASSEMBLY, DOOR, L. H. 11640998-1 (19207)	EA	1	*	*	*	*	*	*			100	
P O	2510-152-2503	WINDOW AND FRAME ASSEMBLY, DOOR, R. H. 11640998-2 (19207)	EA	1	*	*	*	*	*	*			100	
P F	9390-136-9204	SEAL, FRONT WINDOW 11657751 (19207)	EA	2	*	*	*	*	*	*			100	2
X2F		FRAME ASSEMBLY R. H. DOOR WINDOW 11657743-2 (19207)	EA	1	*	*	*	*	*	*			100	3
X2F		FRAME ASSEMBLY, L. H. DOOR 11657743-1 (19207)	EA	1	*	*	*	*	*	*			100	3
P F		WEATHERSTRIP, WINDOW GUIDE RAIL 11657763 (19207)	EA	2	*	*	*	*	*	*			100	4
P F		SEAL, LIFT CHANNEL 11657761 (19207)	EA	2	*	*	*	*	*	*			100	5
P F	5305-948-7237	SCREW, WEATHERSTRIP MS24627-22 (96906)	EA	8	*	*	*	*	*	*			100	6
X2F		CHANNEL ASSEMBLY, WINDOW LIFT 11657745 (19207)	EA	2	*	*	*	*	*	*			100	7
P F	5305-052-6913	SCREW, MACHINE, LIFT CHANNEL MS24629-33 (96906)	EA	6	*	*	*	*	*	*			100	8
P F	5305-052-6905	SCREW, MACHINE, WINDOW LIFT CHANNEL MS24627-31 (96906)	EA	6	*	*	*	*	*	*			100	9

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day C-1 maint allowance			(7) 30-day G-5 maint. allowance			(8) 1-yr allow per 100 equip cntgty	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
P F	2510-461-2871	1801—BODY, CAB, HOOD AND HULL ASSEMBLIES—Continued RETAINER, WINDOW REGULATOR STUD 11640877 (19207)	EA	2	*	*	*	*	*	*			100	10
P O	5325-700-0997	GROMMET, WIPER HOSE 800802 (19207)	EA	1	*	*	*	*	*	*			101	1
P O	2510-737-5317	WINDSHIELD CLAMP CATCH 7375312 (19207)	EA	2	*	*	*	*	*	*			101	2
P O	5305-958-5246	SCREW, SELF TAPPING, WINDSHIELD CATCH MS35190-289 (96906)	EA	4	*	*	*	*	*	*			101	3
P O		SCREW, MACHINE, DOOR SEAL 11657619 (19207)	EA	4	*	*	*	*	*	*			101	4
P O		SEAL ASSEMBLY, L. H. DOOR 11657264-1 (19207)	EA	1	*	*	*	*	*	*			101	5
P O		SEAL, R. H. DOOR, UPPER 11657264-2 (19207)	EA	1	*	*	*	*	*	*			101	5
P O	5330-157-4637	SHIM, DOOR SEAL, L. H. 11657470-1 (19207)	EA	1	*	*	*	*	*	*			101	6
P O		SHIM, DOOR SEAL, R. H. 11657470-2 (19207)	EA	1	*	*	*	*	*	*			101	6
X2F		PANEL ASSEMBLY, INSTRUMENT 11656862 (19207)	EA	1	*	*	*	*	*	*			101	7
P O	5306-283-0407	SCREW, MACHINE, HAND RAIL 9409106 (24617)	EA	2	*	*	*	*	*	*			102	1
P O	2540-159-8767	RAIL, PASSENGER HAND SAFETY 11657385 (19207)	EA	1	*	*	*	*	*	*			102	2
X20		GLOVE BOX ASSEMBLY 11647494 (19207)	EA	1	*	*	*	*	*	*			102	3
X20		STRIKER GLOVE BOX LOCK 11657482 (19207)	EA	1	*	*	*	*	*	*			102	4

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS															
(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr air per 100 equip enrgy	(9) Depot maint air per 100 equip	(10) Illustration	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1901—BODY, CAB, HOOD AND HULL ASSEMBLIES—Continued													
P O	5305-543-2335	SCREW MACHINE, GLOVE BOX 188749 (24617)		EA	2	*	*	*	*	*	*			102	5
P O	5305-879-7941	SCREW, SELF TAPPING, GLOVE BOX MS24617-31 (96906)		EA	8	*	*	*	*	*	*			102	6
P O	2510-150-8768	DOOR ASSEMBLY, GLOVE BOX 11657488 (19207)		EA	1	*	*	*	*	*	*			102	7
P O	2540-737-5399	LOCK ASSEMBLY, GLOVE BOX 7325399 (19207)		EA	1	*	*	*	*	*	*			102	8
X30		DOOR AND HINGE ASSEMBLY, GLOVE BOX 11667485 (19207)		EA	1	*	*	*	*	*	*			102	9
P O	2510-040-2522	WEATHERSTRIP, GLOVE BOX DOOR 8329654 (19207)		EA	1	*	*	*	*	*	*			102	10
P O	5305-543-2394	SCREW, MACHINE, LOCK AND CUP 131885 (24617)		EA	1	*	*	*	*	*	*			102	11
P O	2510-737-5356	CUP, LOCK RETAINING 7375368 (19207)		EA	1	*	*	*	*	*	*			102	12
P O	5310-585-6509	WASHER, FLAT, GLOVE BOX DOOR MS27183-42 (96906)		EA	3	*	*	*	*	*	*			102	13
P O	5306-042-3644	SCREW, GLOVE BOX DOOR 423544 (24617)		EA	3	*	*	*	*	*	*			102	14
P F	5306-018-6493	SCREW ASSEMBLED WASHER, INSTRUMENT PANEL 186493 (24617)		EA	11	*	*	*	*	*	*			102	15
P F	5310-809-3078	WASHER, FLAT, INSTRUMENT PANEL MS27183-11 (96906)		EA	4	*	*	*	*	*	*			102	16
P O		SCREW, MACHINE, TRANSMISSION ACCESS COVER 272475 (24617)		EA	12	*	*	*	*	*	*			103	1
X30		PANEL, ACCESS TRANSMISSION 11657173 (19207)		EA	1	*	*	*	*	*	*			103	2

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMM code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint. allowance			(8) 1 yr alt per 100 equip cmty	(9) Depot maint alt per 100 equip	(10) Illustration	
					(6) 1-30	(6) 31-60	(6) 61-100	(7) 1-30	(7) 31-60	(7) 61-100			(10) Figure No.	(10) Item No.
		1801—BODY, CAB, HOOD AND HULL ASSEMBLIES—Continued												
P O	5310-809-4008	WASHER, FLAT, TRANSMISSION ACCESS COVER MS27185-10 (96006)	EA	12	*	*	*	*	*	*			103	3
P O	2640-917-9906	HANDLE, DOOR OUTSIDE, LEFT 11662945-1 (19207)	EA	1	*	*	*	*	*	*			104	1
P O	5340-456-1315	HANDLE ASSEMBLY, DOOR OUTSIDE, RIGHT 11662945-2 (19207)	EA	1	*	*	*	*	*	*			104	1
P O	5305-855-0961	SCREW, RETAINER TO DOOR MS24625-35 (96006)	EA	1	*	*	*	*	*	*			104	2
X 1		RETAINER ASSEMBLY 11640753 (19207)	EA	1									104	3
X 1		SPRING 11640757 (19207)	EA	1									104	4
X 1		PUSH, BUTTON ASSEMBLY 11640762 (19207)	EA	1									104	5
P O	5330-579-3106	SEAL, RING MS28775-116 (96006)	EA	1	*	*	*	*	*	*			104	6
X 1		HANDLE, DOOR 11657542-1 (19207)	EA	1									104	7
P O	5330-437-8764	GASKET, DOOR HANDLE, LEFT FRONT 11657590-1 (19207)	EA	1	*	*	*	*	*	*			104	8
P O		GASKET, DOOR HANDLE, RIGHT FRONT 11657590-2 (19207)	EA	1	*	*	*	*	*	*			104	8
P O	5330-461-5767	GASKET, DOOR HANDLE, LEFT REAR 11657906-1 (19207)	EA	1	*	*	*	*	*	*			104	9
P O	5330-461-5768	GASKET, DOOR HANDLE, RIGHT REAR 11657906-2 (19207)	EA	1	*	*	*	*	*	*			104	9

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr slw per 100 equip enclgy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		1901—BODY, CAB, HOOD AND HULL ASSEMBLIES—Continued												
P O	5305-285-5263	SCREW, MACHINE, FRONT HALF DOOR HANDLE GASKETS 453046 (00000)	EA	4	*	*	*	*	*	*			104	10
P O	2510-159-8783	SUPPORT ASSEMBLY, RADIATOR BAFFLE 11657067 (19207)	EA	1	*	*	*	*	*	*			105	1
X 1		BAFFLE, SIDE RADIATOR TO FENDER 11657072 (19207)	EA	2									105	15
P O	5315-151-9003	STAPLE TACKER, BAFFLES ATTACHING 8764887 (19207)	EA	12	*	*	*	*	*	*			105	9
X 1		BAFFLE LOWER, RADIATOR 11657402 (19207)	EA	2									105	17
P O	5310-891-1733	NUT, PLAIN, HEXAGON, HOOD LATCH MS35691-38 (96906)	EA	1	*	*	*	*	*	*			105	2
P O	2510-467-2882	BOLT, HOOD LATCH 11640876 (19207)	EA	1	*	*	*	*	*	*			105	3
P O	5310-493-6234	WASHER, FLAT, HOOD LATCH 11657375-9 (19207)	EA	1	*	*	*	*	*	*			105	4
P O	2510-461-2879	BUMPER, FENDER TO HOOD 11657638 (19207)	EA	2	*	*	*	*	*	*			105	5
X2F		WHEEL WELL ASSEMBLY, R. H. 11657536-2 (19207)	EA	1	*	*	*	*	*	*			105	6
P O	5310-595-6326	WASHER, FLAT, SUPPORT ASSEMBLY (20) BRUSH GUARD (6) GUSSET (12) MS27183-13 (96906)	EA	38	*	*	*	*	*	*			105	7
P O	5306-018-7993	BOLT, MACHINE, SUPPORT ASSEMBLY (16) BRUSH GUARD (6) GUSSET (8) 187993 (24617)	EA	30	*	*	*	*	*	*			105	8
P O	5315-151-9003	STAPLE, TACKER, SEAL 8764887 (19207)	EA	14	*	*	*	*	*	*			105	9

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day OS maint. allowance			(8) 1-yr slw per 100 equip entry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a) Figure No.	(b) Item No.
					1-30	31-30	31-100	1-30	31-30	31-100				
P O		1901—BODY, CAB, HOOD AND HULL ASSEMBLIES—Continued WIRE STITCHING, SEAL 9679549 (19207)	EA	14	*	*	*	*	*	*			105	10
P O	5330-157-6237	SEAL, FRONT FENDER APRON 11657373 (19207)	EA	2	*	*	*	*	*	*			105	11
X2F		WHEEL WELL ASSEMBLY, L. H. 11657536-1 (19207)	EA	1	*	*	*	*	*	*			105	12
P O	5340-429-1650	BUMPER, HOOD 11662555 (19207)	EA	2	*	*	*	*	*	*			105	13
P O	5310-151-8998	NUT, PLAIN, HEXAGON, HOOD BUMPER 11640878 (19207)	EA	2	*	*	*	*	*	*			105	14
X20		PANEL ASSEMBLY, GRILLE FACE 11657378 (19207)	EA	1	*	*	*	*	*	*			105	16
P O	5310-829-9981	NUT, PLAIN, HEXAGON, SUPPORT ASSEMBLY AND GUSSET TO FENDER MS35649-2312 (96906)	EA	20	*	*	*	*	*	*			105	18
P O	5310-461-2880	NUT, PLAIN, HEXAGON HOOD LATCH 11640791 (19207)	EA	1	*	*	*	*	*	*			105	19
P F	2590-455-1318	GUARD ASSEMBLY, BRUSH 11656893 (19207)	EA	1	*	*	*	*	*	*			105	20
X20		GUSSET, R. H. FRONT FENDER 11656779-2 (19207)	EA	1	*	*	*	*	*	*			105	21
X20		GUSSET, L. H. FRONT FENDER 1165779-1 (19207)	EA	1	*	*	*	*	*	*			105	21
X20		BRACKET, BLACKOUT LAMP 11657248 (19207)	EA	1	*	*	*	*	*	*			105	1
P O	5305-068-0500	SCREW, CAP, HEXAGON HEAD BLACKOUT LAMP BRACKET MS90725-3 (96906)	EA	4	*	*	*	*	*	*			105	2

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of measure	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip enrgy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		1801—BODY, CAB, HOOD AND HULL ASSEMBLIES—Continued												
P O	5340-653-7275	FOOTMAN LOOP HOOD 7697591 (19207)	EA	1	*	*	*	*	*	*			106	3
		BA, BB, EA, EB												
P O	5305-954-3487	SCREW, FOOTMAN LOOP TO HOOD MS35190-271 (96906)	EA	2	*	*	*	*	*	*			106	4
		BA, BB, EA, EB												
P O	2510-461-2776	HINGE ASSEMBLY, HOOD, RIGHT 1164724-2 (19207)	EA	1	*	*	*	*	*	*			106	5
P O	5307-150-6250	STUD, HOOD HINGE 11657360 (19207)	EA	4	*	*	*	*	*	*			106	6
P O	5310-829-9981	NUT, PLAIN, HEXAGON, HOOD HINGE MS35549-2112 (96906)	EA	6	*	*	*	*	*	*			106	7
P O	5310-595-6326	WASHER, FLAT, HOOD HINGE AND DIAGONAL MS27183-13 (96906)	EA	18	*	*	*	*	*	*			106	8
P O	5310-407-9566	WASHER, LOCK, HOOD HINGE AND DIAGONAL MS35338-45 (96906)	EA	12	*	*	*	*	*	*			106	9
P O	5305-225-8497	SCREW, CAP, HEXAGON HEAD, HOOD HINGE MS90725-32 (96906)	EA	4	*	*	*	*	*	*			106	10
P O		SPRING, HINGE 11662603 (19207)	EA	2	*	*	*	*	*	*			106	11
P O	5310-899-2527	WASHER, LOCK, HOOD HINGE MS45804-72 (96906)	EA	4	*	*	*	*	*	*			106	12
P O	5306-018-7993	BOLT, MACHINE, HOOD HINGE 187593 (24617)	EA	2	*	*	*	*	*	*			106	13
P O	2510-461-2775	HINGE ASSEMBLY, HOOD, LEFT 11640724-1 (19207)	EA	1	*	*	*	*	*	*			106	14
P O	5305-008-0601	SCREW, CAP, HEXAGON HEAD, HOOD BRACE MS90725-5 (96906)	EA	8	*	*	*	*	*	*			106	15
X20		BRACE, HOOD DIAGONAL 11657358 (19207)	EA	2	*	*	*	*	*	*			106	16

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) EMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1 yr slw per 100 equip cntry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		1801—BODY, CAB, HOOD AND HULL ASSEMBLIES—Continued												
X20		REINFORCEMENT, FOOTMAN LOOP 11657362 (19207)	EA	1	*	*	*	*	*	*			106	17
P O	5310-696-5172	NUT, PLAIN, HEXAGON, BLACKOUT LAMP BRACKET 8328424 (19207)	EA	4	*	*	*	*	*	*			106	18
P O	5310-761-6882	NUT, PLAIN, HEXAGON, HOOD CATCH MS51967-2 (96906)	EA	8	*	*	*	*	*	*			106	19
P O	5306-285-5286	SCREW, MACHINE, HOOD CATCH (8) BRACKET (4) 191565 (24617)	EA	12	*	*	*	*	*	*			106	20
P O	2510-933-3296	CATCH ASSEMBLY, HOOD 753197-1 (19207)	EA	2	*	*	*	*	*	*			106	21
P O	5310-802-4701	WASHER, FLAT HOOD DIAGONAL MS15795-813 (96906)	EA	8	*	*	*	*	*	*			106	22
X20		BRACKET, HOOD CATCH 8359965 (19207)	EA	2	*	*	*	*	*	*			106	23
X2F		HOOD ASSEMBLY 11657337 (19207)	EA	1	*	*	*	*	*	*			106	24
P O	5306-151-6247	BOLT, RADIATOR SUPPORT HOLDDOWN 11640936 (19207)	EA	2	*	*	*	*	*	*			107	1
P O	5310-159-6222	WASHER, FLAT, RADIATOR SUPPORT HOLDDOWN 11657375-1 (19207)	EA	6	*	*	*	*	*	*			107	2
P O	2590-453-8854	SPRING, RADIATOR SUPPORT HOLDDOWN 11657374 (19207)	EA	2	*	*	*	*	*	*			107	3
P O	2510-760-7514	LINER, BODY HOLDDOWN 7607514 (19207)	EA	4	*	*	*	*	*	*			107	4
P O	5310-809-5997	WASHER, FLAT, BODY HOLDDOWN MS27183-17 (96906)	EA	2	*	*	*	*	*	*			107	5

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr allow per equip catgry	(9) Depot maint allow per equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1801—BODY, CAB, HOOD AND HULL ASSEMBLIES—Continued												
P O	5310-857-5561	NUT, LOCK, BODY HOLDDOWN MS21045-C7 (96906)	EA	2	*	*	*	*	*	*			107	6
P O	5305-260-2811	SCREW, CAP, HEXAGON HEAD BODY HOLDDOWN MS90726-67 (96906)	EA	2	*	*	*	*	*	*			107	7
X20		WASHER, SPECIAL, BODY HOLDDOWN #1 11657375-3 (19207)	EA	4	*	*	*	*	*	*			107	8
P O	5310-150-6299	SPACER, BODY, HOLDDOWN #1 11657550 (19207)	EA	4	*	*	*	*	*	*			107	9
P O	5310-514-0078	WASHER, SPECIAL, BODY HOLDDOWN #1 11657375-5 (19207)	EA	2	*	*	*	*	*	*			107	10
X20		WASHER AND TUBE, BODY HOLDDOWN NO. 1 11657828 (19207)	EA	2	*	*	*	*	*	*			107	11
X20		WASHER, SPECIAL NO. 2 BODY HOLDDOWN 11657827 (19207)	EA	8	*	*	*	*	*	*			107	12
P O		BOLT, HEXAGON HEAD, BODY HOLDDOWN NO. 2 107268 (24617)	EA	2	*	*	*	*	*	*			107	13
P O	5310-456-9146	WASHER, FLAT, BODY HOLDDOWN NO. 2 11657375-2 (19207)	EA	2	*	*	*	*	*	*			107	14
P O	2510-456-9151	SPRING, BODY HOLDDOWN NO. 2 11657962 (19207)	EA	2	*	*	*	*	*	*			107	15
P O		SPACER, BODY HOLDDOWN NO. 2 11657559 (19207)	EA	2	*	*	*	*	*	*			107	16
P O	5310-461-2888	WASHER, FLAT, BODY HOLDDOWN NO. 2 7407151 (19207)	EA	2	*	*	*	*	*	*			107	17
P O	5310-456-9180	NUT, BODY HOLDDOWN NO. 1 MS51922-17 (96906)	EA	4	*	*	*	*	*	*			107	18

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint allowance			(7) 30-day G5 maint allowance			(8) 1-yr allow per 100 equip cntgcy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1802—FENDERS, RUNNING BOARDS, WINDSHIELD AND GLASS												
P O	5306-018-7993	SCREW, ASSEMBLED WASHER FRONT FENDER 187993 (24617)	EA	16	*	*	*	*	*	*			108	1
P O	5310-802-4701	WASHER, FLAT, FRONT FENDER MS15795-813 (96906)	EA	10	*	*	*	*	*	*			108	2
P F	2510-159-8772	FENDER ASSEMBLY, FRONT, R. H. 11657379-2 (19207)	EA	1	*	*	*	*	*	*			108	3
P F	2510-159-8769	FENDER ASSEMBLY, FRONT, L. H. 11657379-1 (19207)	EA	1	*	*	*	*	*	*			108	3
P O	5310-889-2577	WASHER, LOCK, FRONT FENDER MS45904-72 (96906)	EA	14	*	*	*	*	*	*			108	4
P O	5310-829-9981	NUT, HEXAGON, FRONT FENDER MS35649-2312 (96906)	EA	14	*	*	*	*	*	*			108	5
P O		FASTENER, LOWER WEATHERSTRIP 11640707 (19207)	EA	2	*	*	*	*	*	*			109	1
X2F		WINDSHIELD ASSEMBLY 11657496 (19207)	EA	1	*	*	*	*	*	*			109	2
		BA, BB, DA, DB, EA, EB												
P F	9340-179-7248	GLASS, WINDSHIELD 11640957 (19207)	EA	1	*	*	*	*	*	*			109	3
X2F		FRAME ASSEMBLY, WINDSHIELD 11657497 (19207)	EA	1	*	*	*	*	*	*			109	4
P F	2540-477-8277	WEATHERSTRIP ASSEMBLY, WINDSHIELD 11657716 (19207)	EA	1	*	*	*	*	*	*			109	5
P F	2540-933-3541	WEATHERSTRIP, WINDSHIELD 11640934 (19207)	EA	1	*	*	*	*	*	*			109	6
P F	5305-157-8141	SCREW, ASSEMBLED WASHER 11640792 (19207)	EA	15	*	*	*	*	*	*			109	7
		BA, BB, DA, DB, EA, EB												

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty line in unit	(6) 30-day L/S maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntgcy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-30	31-50	51-100	1-30	31-50	51-100			Figure No.	Item No.
P O	5340-321-6432	1802—FENDERS, RUNNING BOARDS, WINDSHIELD AND GLASS— Continued BUMPER ASSEMBLY, WINDSHIELD, RIGHT 8328465 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			109	8
P O	2510-152-2529	LINER, WEATHERSTRIP 8707837 (19207)	EA	1	*	*	*	*	*	*				
P O		RIVET, LINER ATTACHING MS35684-12 (96906)	EA	4	*	*	*	*	*	*				
P O	5310-733-6451	WASHER, BUMPER 7336451 (19207) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			109	9
P O	5306-043-1953	SCREW ASSEMBLED WASHER BUMPER 431953 (24617) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			109	10
P O	5306-042-5323	BOLT AND WASHER, BUMPER 425323 (24617) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			109	11
P O	5340-321-6431	BUMPER ASSEMBLY, WINDSHIELD, LEFT 8328464 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			109	12
P O	5306-145-2196	BOLT, WINDSHIELD 11657640 (19207) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			109	13
M F		GLASS, STATIONARY WINDOW 11657875 (19207) BA, BB, EA, EB	EA	2									99	2
		MANUFACTURE FROM:												
P F	9340-285-6774	GLASS, LAMINATED, CLASS II, MIL-G-3787, 205-230 THK, 12.97 x 16.17	IN	V	*	*	*	*	*	*			100	1
M F		GLASS, FRONT DOOR 11657746 (19207) BA, BB, EA, EB	EA	2										
		MANUFACTURE FROM:												
P F	9340-285-6774	GLASS, LAMINATED, CLASS II MIL-G-3787, 205-230 THK, 16.372 x 20.115	IN	V	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr slw per 100 equip ctgry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
P O	5340-321-6432	1802—FENDERS, RUNNING BOARDS, WINDSHIELD AND GLASS— Continued BUMPER ASSEMBLY, WINDSHIELD, RIGHT 8328465 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			109	8
P O	2510-152-2529	LINER, WEATHERSTRIP 8707837 (19207)	EA	1	*	*	*	*	*	*				
P O		RIVET, LINER ATTACHING MS35684-12 (96906)	EA	4	*	*	*	*	*	*				
P O	5310-733-6451	WASHER, BUMPER 7336451 (19207) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			109	9
P O	5306-043-1953	SCREW ASSEMBLED WASHER BUMPER 431953 (24617) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			109	10
P O	5306-042-5323	BOLT AND WASHER, BUMPER 425323 (24617) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			109	11
P O	5340-321-6431	BUMPER ASSEMBLY, WINDSHIELD, LEFT 8328464 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			109	12
P O	5306-145-2196	BOLT, WINDSHIELD 11657640 (19207) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			109	13
M F		GLASS, STATIONARY WINDOW 11657875 (19207) BA, BB, EA, EB	EA	2									99	2
		MANUFACTURE FROM:												
P F	9340-285-6774	GLASS, LAMINATED, CLASS II, MIL-G-3787, .205-.230 THK, 12.97 x 16.17	IN	V	*	*	*	*	*	*			100	1
M F		GLASS, FRONT DOOR 11657746 (19207) BA, BB, EA, EB	EA	2										
		MANUFACTURE FROM:												
P F	9340-285-6774	GLASS LAMINATED, CLASS II MIL-G-3787, .205-.230 THK, 16.372 x 20.115	IN	V	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr aw per 100 equip cntrcs	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1806 — SEATS												
X20		SEAT ASSEMBLY, DRIVER 11658557 (19207)	EA	1	*	*	*	*	*	*			110	
P O	2540-420-5001	CUSHION ASSEMBLY, SEAT 11658558 (19207)	EA	1	*	*	*	*	*	*			110	1
P O	2540-461-3939	COVER ASSEMBLY, SEAT CUSHION 11658565 (19207)	EA	1	*	*	*	*	*	*			110	2
P O		LACING, SEAT COVER 11658555-2 (19207)	EA	1	*	*	*	*	*	*			110	22
X20		FRAME, SEAT BACK 11658494 (19207)	EA	1	*	*	*	*	*	*			110	3
P O	2540-420-5006	CUSHION ASSEMBLY, BACK 380084 (58464)	EA	1	*	*	*	*	*	*			110	4
P O		LACING, BACK COVER 11658555-1 (19207)	EA	2	*	*	*	*	*	*			110	5
P O	5305-068-0500	SCREW, CAP, ADJUSTER MOUNTING MS90726-3 (96906)	EA	2	*	*	*	*	*	*			110	6
X20		FRAME, DRIVER'S SEAT 11658493 (19207)	EA	1	*	*	*	*	*	*			110	7
X20		ADJUSTER, SEAT SLIDE 11658320 (19207)	EA	1	*	*	*	*	*	*			110	8
P O	5310-935-9022	NUT, SELF-LOCKING, HEXAGON, FRAME AND PEDESTAL MS51943-32 (96906)	EA	6	*	*	*	*	*	*			110	9
P O	5315-839-5820	PIN, PAWL MOUNTING MS35810-33 (96906)	EA	1	*	*	*	*	*	*			110	10
X20		PEDESTAL ASSEMBLY, DRIVER'S SEAT 11548495 (19207)	EA	1	*	*	*	*	*	*			110	15

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntgcy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		1806—SEATS—Continued												
		SEAT ASSEMBLY, DRIVER—Continued												
P O	5310-809-3078	WASHER, FLAT, FRAME AND PEDESTAL MS27183-11 (96906)	EA	13	*	*	*	*	*	*			110	16
P O	5306-775-5201	BOLT, MACHINE, CUSHION MOUNTING MS90726-32 (96906)	EA	2	*	*	*	*	*	*			110	18
X20		PAWL, SEAT ADJUSTING 11658527 (19207)	EA	1	*	*	*	*	*	*			110	19
P O		SPRING, PAWL TENSION 11658289 (19207)	EA	1	*	*	*	*	*	*			110	20
P O	5315-842-3044	PIN, COTTER, PAWL MOUNTING MS24665-283 (96906)	EA	1	*	*	*	*	*	*			110	21
X20		SEAT ASSEMBLY, PASSENGER 11641077 (19207)	EA	1	*	*	*	*	*	*			110	
P O	2540-420-5001	CUSHION ASSEMBLY, SEAT 11658558 (19207)	EA	1	*	*	*	*	*	*			110	1
P O	2540-461-3939	COVER ASSEMBLY, SEAT CUSHION 11658565 (19207)	EA	1	*	*	*	*	*	*			110	2
P O		LACING, SEAT COVER 11658555-2 (19207)	EA	1	*	*	*	*	*	*			110	22
X20		FRAME, BACK 11658494 (19207)	EA	1	*	*	*	*	*	*			110	3
P O	2540-420-5006	CUSHION ASSEMBLY, BACK 380084 (58564)	EA	1	*	*	*	*	*	*			110	4
P O		LACING, BACK COVER 11658555-1 (19207)	EA	2	*	*	*	*	*	*			110	5
X20		PEDESTAL ASSEMBLY 11658555-1 (19207)	EA	1	*	*	*	*	*	*			110	14

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST -- Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr slw per 100 equip cntry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a) Figure No.	(b) Item No.
		1806--SEATS--Continued												
		SEAT ASSEMBLY, PASSENGER--Continued												
P O	5306-775-5201	BOLT, MACHINE, FRAME TO PEDESTAL MS90726-32 (19207)	EA	2	*	*	*	*	*	*			110	18
P O	5310-952-4912	NUT, SELF-LOCKING, HEXAGON, FRAME TO PEDESTAL MS51943-34 (96906)	EA	2	*	*	*	*	*	*			110	23
P O	5306-269-3217	SCREW, CAP, SEAT MOUNTING MS90725-67 (96906)	EA	2	*	*	*	*	*	*			110	11
P O	5310-637-9541	WASHER, LOCK, SEAT MOUNTING MS35338-46 (96906)	EA	2	*	*	*	*	*	*			110	12
P O	5310-809-4061	WASHER, FLAT, SEAT MOUNTING MS27183-15 (96906)	EA	8	*	*	*	*	*	*			110	13
P O	5306-042-3569	SCREW ASSEMBLED WASHER, SEAT MOUNTING 423569 (24617)	EA	6	*	*	*	*	*	*			110	17
		1808 -- STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS, ETC.												
MFO		STRAP ASSEMBLY, PICK HEAD AXE AND PICK HANDLE, TOP BOWS 9690467 (19207)	EA	3									111	4
		MANUFACTURE FROM: BA, BB												
P F	5346-057-6056	BUCKLE MS51929-2 (96906)	EA	1	*	*	*	*	*	*			111	1
P F	5340-791-5361	WEBBING (1 INCH WIDE), 20 INCHES LONG 27-W-918 (80244)	RL	V	*	*	*	*	*	*			111	2
P F	5340-078-7029	CLIP MS51929-3 (96906)	EA	1	*	*	*	*	*	*			111	3

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mig. Code	(4) Unit of meas	(5) Qty me in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr allow per 100 equip cntgcy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
MFO		1808—STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS, ETC.—Continued STRAP ASSEMBLY, AXE AND PICK HANDLE AND SHOVEL STOWAGE 8690473 (19207) BA, BB	EA	2									111	5
P F	5340-057-6956	MANUFACTURE FROM: BUCKLE MS51929-2 (96906)	EA	1	*	*	*	*	*	*			111	1
P F	5340-791-5351	WEBBING (1 INCH WIDE), 36 INCHES LG 27-W-918 (80244)	RL	V	*	*	*	*	*	*			111	2
P F	5340-078-7029	CLIP, END MS51926-3 (96906)	EA	1	*	*	*	*	*	*			111	3
MFO		STRAP ASSEMBLY, GASOLINE CAN STOWAGE 8690528 (19207) BA, BB	EA	1									111	6
P F	5340-057-6956	MANUFACTURE FROM: BUCKLE MS51929-2 (96906)	EA	1	*	*	*	*	*	*			111	1
P F	8305-263-2475	WEBBING, (1-1/2 IN: WH E) 57 INCHES LONG 27-W-921 (80244)	RL	V	*	*	*	*	*	*			111	2
P F	5340-078-7029	CLIP, END MS51926-3 (96906)	EA	1	*	*	*	*	*	*			111	3
X20		BRACKET, TOOL BAG STOWAGE 11657269 (19207) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			111	7
P O	5340-543-7110	STRAP ASSEMBLY, FRAME STOWAGE 8690470 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			111	8
P O	5340-543-3155	STRAP ASSEMBLY, TOOL BAG AND FRAME STOWAGE 8690476 (19207) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			111	9
P O	5340-339-3768	STRAP ASSEMBLY, FRAME STOWAGE 8690475 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			111	10

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip enclgy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-30	31-50	51-100	1-30	31-50	51-100			Figure No.	Item No.
		1806—STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS, ETC.—Continued												
P O	5340-543-3321	STRAP ASSEMBLY, FRAME STOWAGE 8690474 (19207) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			111	11
P O	2540-052-9481	STRAP ASSEMBLY, BOW STOWAGE 8690467 (19207) BA, BB, DA, DB, EA, EB	EA	1									111	12
P O	5306-018-7527	SCREW, TOOL BAG BRACKET ATTACHING 187527 (19207) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			111	13
P O	2590-045-9610	CATCH ASSEMBLY, RIFLE 8712411 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			112	1
X20		BRACKET, CATCH MOUNTING 8712408 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			112	2
P O		SCREW ASSEMBLED WASHER 272475 (24617) BA, BB, DA, DB, EA, EB	EA	8	*	*	*	*	*	*			112	3
X20		SUPPORT, RIFLE MOUNTING BRACKET 11657935 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			112	4
P O	5310-761-6882	NUT, HEXAGON, BRACKET MOUNTING (6) SUPPORT MOUNT- ING (6) MS51967-2 (96906) BA, BB, DA, DB, EA, EB	EA	6	*	*	*	*	*	*			112	5
P O		NUT, HEXAGON, SUPPORT MOUNTING 11621344 (19207) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			112	6
P O		SCREW ASSEMBLED WASHER, SUPPORT MOUNTING 455344 (24617) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			112	7
X20		BRACKET, RIFLE MOUNTING 8712409 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			112	8
		1810 — CARGO BODY												
X20		BOX ASSEMBLY, CARGO 11656739 (19207) BA, BB	EA	1	*	*	*	*	*	*			113	1

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) AMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr alt per 100 equip catgry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		1810—CARGO BODY—Continued												
P O	2510-134-8314	TAILGATE ASSEMBLY 11656781 (19207)	BA, BB	EA	1	*	*	*	*	*	*		113	2
P O	5305-630-7911	SCREW, BUMPER MS35206-29 (96906)	BA, BB	EA	2	*	*	*	*	*	*		113	3
P O	5340-158-0043	BUMPER, TAILGATE 11640798 (19207)	BA, BB	EA	2	*	*	*	*	*	*		113	4
P O	5310-061-4219	WASHER, FLAT, BUMPER MS27183-12 (96906)	BA, BB	EA	2	*	*	*	*	*	*		113	5
P O	5310-933-4310	NUT, PLAIN, HEXAGON, AND LOCK WASHER BUMPER 7996483 (19207)	BA, BB	EA	2	*	*	*	*	*	*		113	6
P O	5305-081-6676	SCREW, REFLECTOR ATTACHING MS35266-80 (96906)	BA, BB	EA	4	*	*	*	*	*	*		113	7
P O	9905-205-2795	REFLECTOR, TAILGATE MS35387-1 (96906)	BA, BB	EA	2	*	*	*	*	*	*		113	8
P O	5306-317-3096	SCREW, HINGE ATTACHING 596453 (00000)	BA, BB	EA	8	*	*	*	*	*	*		113	9
P O	5310-184-8973	WASHER, FLAT, HINGE ATTACHING MS9320-13 (96906)	BA, BB	EA	8	*	*	*	*	*	*		113	10
P O	5315-842-3044	PIN, COTTER, TAILGATE HINGE PIN MS24665 (96906)	BA, BB	EA	4	*	*	*	*	*	*		113	11
X20		PIN, TAILGATE HINGE 11640799 (19207)	BA, BB	EA	4	*	*	*	*	*	*		113	12
X20		HINGE, TAILGATE, BODY HALF 11656780 (19207)	BA, BB	EA	1	*	*	*	*	*	*		113	13
P O	5310-732-0558	NUT, PLAIN, HEXAGON, HINGE ATTACHING MS51967-8 (96906)	BA, BB	EA	8	*	*	*	*	*	*		113	14

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip- entgry	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
P O	4010-158-1966	1810—CARGO BODY—Continued CHAIN ASSEMBLY, TAILGATE, L. H. 11657797-1 (19207)	EA	1	*	*	*	*	*	*			113	15
X1		HOOK, CHAIN 11657798-3 (19207)	EA	1									113	16
X1		CHAIN ASSEMBLY 11657798-1 (19207)	EA	1									113	17
X1		COVER, CHAIN 11656766 (19207)	EA	1									113	18
P O	2510-152-2483	CHAIN ASSEMBLY, TAILGATE R. H. 11657797-2 (19207)	EA	1	*	*	*	*	*	*			113	15
X1		HOOK, CHAIN 11657798-3 (19207)	EA	1									113	16
X1		CHAIN ASSEMBLY 11657798-2 (19207)	EA	1									113	17
X1		COVER, CHAIN 11656766 (19207)	EA	1									113	18
P O	4010-116-1604	LINK, TAILGATE CHAIN RR-C-271 (81349)	EA	2	*	*	*	*	*	*			113	19
P O	9906-202-3639	REFLECTOR, TAILGATE MS35387-2 (96906)	EA	2	*	*	*	*	*	*			113	20
P O		NUT, PLAIN, HEXAGON AND LOCK WASHER BRACKET 8328485 (19207)	EA	4	*	*	*	*	*	*			114	1
P O	5310-809-4061	WASHER, PLAT, BRACKET MS27183-15 (96906)	EA	4	*	*	*	*	*	*			114	2
P O	2590-473-6331	BRACKET ASSEMBLY, 5 GAL. CONTAINER 6566675 (19207)	EA	1	*	*	*	*	*	*			114	3

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) EQUIP code	(2) Federal stock number	(3) Description Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr alt per 100 equip catgeg	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
P O	5306-389-3211	1810—CARGO BODY—Continued SCREW, CAP, HEXAGON HEAD BRACKET MS90725-80 (90806)	BA, BB	EA	4	*	*	*	*	*			114	4
P O	5306-157-8283	SCREW, HOOK ATTACHING 11657645 (19207)	BA, BB	EA	2	*	*	*	*	*			114	5
P O	5340-158-0072	HOOK, TOOL BOX 11650849 (19207)	BA, BB	EA	2	*	*	*	*	*			114	6
P O	5310-527-4698	WASHER, HOOK ATTACHING 25164 (14351)	BA, BB	EA	2	*	*	*	*	*			114	7
P O	5310-060-3282	NUT, HOOK ATTACHING 503262 (24617)	BA, BB	EA	2	*	*	*	*	*			114	8
P O	5310-006-5172	NUT, PLAIN, HEXAGON AND LOCK WASHER, BUMPER PAD 8325424 (19207)	BA, BB	EA	4	*	*	*	*	*			115	1
P O	5306-071-1773	SCREW, CAP, HEXAGON HEAD, CARGO BOX MOUNTING MS90725-120 (90806)	BA, BB	EA	8	*	*	*	*	*			115	2
P O		WASHER, CARGO BOX MOUNTING 11657375-7 (19207)	BA, BB	EA	16	*	*	*	*	*			115	3
X20		SPACER, CARGO BOX MOUNTING 11657044-1 (19207)	BA, BB	EA	8	*	*	*	*	*			115	4
P O	5310-159-8288	WASHER, CARGO BOX MOUNTING 11657375-6 (19207)	BA, BB	EA	10	*	*	*	*	*			115	5
P O	5365-159-0802	SPACER, CARGO BOX 11650883 (19207)	BA, BB	EA	8	*	*	*	*	*			115	6
X20		SPACER, CARGO BOX MOUNTING 11657876-1 (19207)	BA, BB	EA	8	*	*	*	*	*			115	7
P O	5310-514-9078	WASHER, CARGO BOX MOUNTING 11657375-5 (19207)	BA, BB	EA	8	*	*	*	*	*			115	8
P O	5310-834-8732	NUT, PLAIN, HEXAGON, CARGO BOX MOUNTING MS35091-33 (90806)	BA, BB	EA	8	*	*	*	*	*			115	9

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day Dtl maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip entry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1810—CARGO BODY—Continued												
P O	5310-021-9434	NUT, CARGO BOX MOUNTING 219434 (24617)	EA	8	*	*	*	*	*	*			115	10
		BA, BB												
X20		SHIM, CARGO BOX MOUNTING 11657066-1 (19207)	EA	4	*	*	*	*	*	*			115	11
		BA, BB												
X20		SHIM, CARGO BOX MOUNTING 11657066-2 (19207)	EA	4	*	*	*	*	*	*			115	11
		BA, BB												
P O	5305-984-6211	SCREW, BUMPER PAD MS35206-264 (96906)	EA	4	*	*	*	*	*	*			115	12
		BA, BB												
P O	5310-014-5850	WASHER, FLAT, BUMPER PAD MS27183-42 (96906)	EA	4	*	*	*	*	*	*			115	13
		BA, BB												
X20		PAD, CARGO BOX BUMPER 11666762 (19207)	EA	2	*	*	*	*	*	*			115	14
		BA, BB												
X20		RACK AND TROOP SEAT ASSEMBLY, R. H. 11657782-2 (19207)	EA	1	*	*	*	*	*	*			116	23
		BA, BB												
X20		RACK AND TROOP SEAT ASSEMBLY, L. H. 11657782-1 (19207)	EA	1	*	*	*	*	*	*			116	23
		BA, BB												
P O	2540-502-5548	RACK ASSEMBLY 11657792-1 (19207)	EA	1	*	*	*	*	*	*			116	24
		BA, BB												
X20		SLAT, RACK SIDE, UPPER 7397994-1 (19207)	EA	1	*	*	*	*	*	*			116	1
		BA, BB												
X20		POCKET ASSEMBLY, BOW END 7397996-2 (19207)	EA	1	*	*	*	*	*	*			116	2
		BA, BB												
P O	2510-106-2200	POCKET ASSEMBLY, BOW CENTER 73740384 (19207)	EA	1	*	*	*	*	*	*			116	3
		BA, BB												
P O	5310-021-3513	NUT, PLAIN, HEXAGON 213513 (24617)	EA	10	*	*	*	*	*	*			116	4
		BA, BB												

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr aw per 100 equip cntg	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
X20		1810—CARGO BODY—Continued RACK AND TROOP SEAT ASSEMBLY, L. H.—Continued RACK ASSEMBLY—Continued POCKET ASSEMBLY, BOW END 7397997-1 (19207)	EA, BB	1	*	*	*	*	*	*			116	5
X20		SLAT, RACK SIDE, LOW R 7397995-1 (19207)	EA, BB	1	*	*	*	*	*	*			116	6
P O	5306-911-5005	BOLT, POCKET ASSEMBLY ATTACHING MS35751-42 (96906)	EA, BB	8	*	*	*	*	*	*			116	7
P O	5305-995-3437	SCREW RETAINER MS35206-300 (96906)	EA, BB	2	*	*	*	*	*	*			116	8
P O	5310-081-4219	WASHER, FLAT, RETAINER MS27183-12 (96906)	EA, BB	2	*	*	*	*	*	*			116	9
P O	2510-737-2788	RETAINER, TROOP SEAT 7322788 (19207)	EA, BB	2	*	*	*	*	*	*			116	10
P O	5310-732-0559	NUT, PLAIN, HEXAGON, RACK ASSEMBLY ATTACHING MS51968-8 (96906)	EA, BB	3	*	*	*	*	*	*			116	13
P O	5305-289-2811	SCREW, CAP, HEXAGON HEAD RACK ASSEMBLY ATTACHING MS90726-67 (96906)	EA, BB	3	*	*	*	*	*	*			116	14
X20		SEAT ASSEMBLY, TROOP 11687662 (19207)	EA, BB	1	*	*	*	*	*	*			116	15
P O	5306-911-5005	BOLT, SLAT, CHANNEL AND HINGE ATTACHING MS35751-42 (96906)	EA, BB	6	*	*	*	*	*	*			116	7
P O	5306-753-6996	BOLT, SLAT CHANNEL AND HINGE ATTACHING MS35751-43 (96906)	EA, BB	6	*	*	*	*	*	*			116	12
P O	2540-521-6179	HINGE, TROOP SEAT 7061094-1 (19207)	EA, BB	3	*	*	*	*	*	*			116	16
P O	5310-880-7744	NUT, PLAIN, HEXAGON SLAT CHANNEL AND HINGE ATTACHING MS51967-5 (96906)	EA, BB	12	*	*	*	*	*	*			116	17

282

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr aw per 100 equip cntry	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1810—CARGO BODY—Continued												
		RACK AND TROOP SEAT ASSEMBLY, L. H.—Continued												
		SEAT ASSEMBLY, TROOP—Continued												
P O	5305-269-2810	BOLT, LEG ATTACHING MS90725-08 (96906)	BA, BB	EA	3	*	*	*	*	*			116	18
X20		LEG, TROOP SEAT, OUTER 7372790-1 (19207)	BA, BB	EA	2	*	*	*	*	*			116	19
P O	2540-592-1823	CHANNEL, TROOP SEAT 7061093 (19207)	BA, BB	EA	3	*	*	*	*	*			116	20
P O	5310-722-0559	NUT, PLAIN, HEXAGON LEG ATTACHING MS51968-8 (96906)		EA	3	*	*	*	*	*			116	13
X20		LEG, TROOP SEAT, CENTER 7372790-2 (19207)	BA, BB	EA	1	*	*	*	*	*			116	21
X20		SLAT, SEAT 7061092-1 (19207)	BA, BB	EA	4	*	*	*	*	*			116	22
P O	2540-933-4438	STRAP ASSEMBLY SAFETY 8724383 (19207)	BA, BB	EA	1	*	*	*	*	*			116	11
		1812 — SPECIAL PURPOSE BODY MAINTENANCE												
		BODY ASSEMBLY, MAINTENANCE TRUCK 11658064 (19207)	EA, EB	EA	1	*	*	*	*	*				
X2F		FLOOR ASSEMBLY C6009 (04768)		EA	1	*	*	*	*	*				
X2F		PANEL, RECESS, FUEL TANK FILLER 11658572 (19207)		EA	1	*	*	*	*	*				
P F	2910-119-0851	BRACKET, SUPPORT, FUEL TANK STRAP 11657384 (19207)		EA	1	*	*	*	*	*				
X2F		DRAWER ASSEMBLY B6064 (04768)		EA	2	*	*	*	*	*				
P O		BAND, RUBBER A6484 (25472)		EA	6	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip enlgy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1812—SPECIAL PURPOSE BODY MAINTENANCE—Continued												
		BODY ASSEMBLY, MAINTENANCE TRUCK—Continued												
		DRAWER ASSEMBLY—Continued												
P O	4030-916-2141	HOOK, S MS87006-53 (96906)	EA	6	*	*	*	*	*	*				
X20		LATCH 908002 (65909)	EA	1	*	*	*	*	*	*				
X 1		HANDLE 908652 (65909)	EA	1										
M O		PAD, RUBBER MANUFACTURE FROM:	EA	1										
P O		RUBBER (29-1/2 IN. REQUIRED) MIL-R-3065 (80244)	RL	V	*	*	*	*	*	*				
X20		DRAWER B6065 (04768)	EA	1	*	*	*	*	*	*				
X20		DRAWER B 6069 (04768)	EA	1	*	*	*	*	*	*				
X20		DRAWER B6067 (04768)	EA	1	*	*	*	*	*	*				
X20		HOLDER ASSEMBLY B6040 (04768)	EA	1	*	*	*	*	*	*				
P O	5310-080-8496	NUT, WING MS35425-39 (96906)	EA	1	*	*	*	*	*	*				
P O	5306-926-1784	BOLT, EYE MS51937-1 (96906)	EA	1	*	*	*	*	*	*				
P O	5315-990-2081	PIN, STRAIGHT, HEADLESS MS16556-49 (96906)	EA	1	*	*	*	*	*	*				
X20		BELT A6041 (04768)	EA	1	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE TRUCKS														
(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip cntry	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-180	(a) 1-30	(b) 31-90	(c) 91-180			(a) Figure No.	(b) Item No.
		1812—SPECIAL PURPOSE BODY-MAINTENANCE—Continued												
		BODY ASSEMBLY, MAINTENANCE TRUCK—Continued												
X20		HOLDER ASSEMBLY A6044 (04708)	EA	1	*	*	*	*	*	*				
X20		TAILGATE B663 (04768)	EA	1	*	*	*	*	*	*				
P O	4010-158-1906	CHAIN ASSEMBLY 11657797-1 (19207)	EA	1	*	*	*	*	*	*				
X1		CHAIN, TAILGATE 11657798-1 (19207)	EA	1										
X1		HOOK, CHAIN 11657798-3 (19207)	EA	1										
X1		COVER, CHAIN 11656766 (19207)	EA	1										
P O	2510-152-2483	CHAIN ASSEMBLY 11657797-2 (19207)	EA	1	*	*	*	*	*	*				
X1		CHAIN, TAILGATE 11657798-2 (19207)	EA	1										
X1		HOOK, CHAIN 11657798-3 (19207)	EA	1										
X1		COVER, CHAIN 11656766 (19207)	EA	1										
P O	5305-071-2241	SCREW, CAP, HEXAGON HEAD, TAILGATE ATTACHING MS90725-10 (96906)	EA	2	*	*	*	*	*	*				
P O	5305-048-0502	SCREW, CAP, HEXAGON, HEAD TAILGATE ATTACHING MS 90725-6 (96906)	EA	6	*	*	*	*	*	*				
P O	5310-823-8804	WASHER, FLAT, TAILGATE ATTACHING MS27183-9 (96906)	EA	8	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip entry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
P O	5310-905-0762	1812—SPECIAL PURPOSE BODY-MAINTENANCE—Continued BODY ASSEMBLY, MAINTENANCE TRUCK—Continued NUT, PLAIN, HEXAGON, TAILGATE ATTACHING MS51967-3 (96906)	EA	8	*	*	*	*	*	*				
X20		HOLDER, WIRE REEL B695 (04768)	EA	1	*	*	*	*	*	*				
X20		RACK, LADDER C6077 (04768)	EA	1	*	*	*	*	*	*				
P O	5306-225-8497	SCREW, CAP, HEXAGON HEAD, LADDER RACK ATTACHING MS90725-32 (96906)	EA	36	*	*	*	*	*	*				
P O	5310-931-8167	NUT, PLAIN, HEXAGON, LADDER RACK ATTACHING MS51967-6 (96906)	EA	36	*	*	*	*	*	*				
X20		REEL, WIRE 901507 (65909)	EA	1	*	*	*	*	*	*				
P O	2925-366-0269	LOCK, DOOR, LESS CYLINDER 744 (04768)	EA	8	*	*	*	*	*	*				
P O	2510-287-5700	LOOP, FOOTMAN, GASOLINE CAN 908203 (65909)	EA	1	*	*	*	*	*	*				
X20		LOOP, FOOTMAN, WATER CASK AND STOWAGE 908201 (65909)	EA	11	*	*	*	*	*	*				
P O	5305-984-6210	SCREW, MACHINE, FOOTMAN LOOP MS35206-263 (96906)	EA	24	*	*	*	*	*	*				
P O		NUT, PLAIN, HEXAGON, FOOTMAN LOOP B328424 (19207)	EA	24	*	*	*	*	*	*				
P O		CASK, WATER 901778 (65909)	EA	1	*	*	*	*	*	*				
P O	4030-948-7315	HOOKE, "S", WATER CASK MS87006-33 (96906)	EA	4	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) EMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr alt per 100 equip cntry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
X20		1812—SPECIAL PURPOSE BODY-MAINTENANCE—Continued BODY ASSEMBLY, MAINTENANCE TRUCK—Continued BRACKET, CAN 656675 (65809)	EA	1	*	*	*	*	*	*				
M F		STRAP ASSEMBLY, ACETYLENE TANK B6096 (04768)	EA	2										
		MANUFACTURE FROM												
P F	5340-791-5361	WEBBING (8 IN. REQUIRED) 27W918 (81349)	FT	V	*	*	*	*	*	*				
P F	5340-078-7029	CLIP, END MS51926-3 (96906)	EA	1	*	*	*	*	*	*				
P F	5340-057-6956	* BUCKLE MS51928-2 (WC) (96906)	EA	1	*	*	*	*	*	*				
M F		STRAP ASSEMBLY, ACETYLENE TANK B6097 (04768)	EA	1										
		MANUFACTURE FROM												
P F	5340-791-5361	WEBBING (13-1/1 IN REQUIRED) 27W918 (81349)	FT	V	*	*	*	*	*	*				
P F	5340-078-7029	CLIP, END MS51926-3 (96906)	EA	1	*	*	*	*	*	*				
P F	5340-057-6956	BUCKLE MS51928-2 (96906)	EA	1	*	*	*	*	*	*				
M F		STRAP ASSEMBLY, CABLE SPLICER PLATFORM B6098 (04768)	EA	1										
		MANUFACTURE FROM												
P F	5340-791-5361	WEBBING (38 IN. REQUIRED) 27W918 (81349)	FT	V	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr altw per 100 equip enrgy	(9) Depot maint altw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		1812—SPECIAL PURPOSE BODY-MAINTENANCE—Continued												
		BODY ASSEMBLY, MAINTENANCE TRUCK Continued												
P F	5340-078-7029	STRAP ASSEMBLY, CABLE SPLICER PLATFORM - Continued	EA	1	*	*	*	*	*	*				
		CLIP, END												
		MS51926-3 (96906)												
P F	5340-057-6956	BUCKLE	EA	1	*	*	*	*	*	*				
		MS51929-2 (WC) (96906)												
M F		STRAP ASSEMBLY, CABLE SPLICER PLATFORM	EA	1										
		B6099 (04768)												
		MANUFACTURE FROM												
P F	5340-791-5361	WEBBING (36 IN. REQUIRED)	FT	V	*	*	*	*	*	*				
		27W918 (81349)												
P F	5340-078-7029	CLIP, END	EA	1	*	*	*	*	*	*				
		MS51926-3 (96906)												
P F	5340-057-6956	BUCKLE	EA	1	*	*	*	*	*	*				
		MS51929-2 (WC) (96906)												
X20		STRIKER, DOOR	EA	4	*	*	*	*	*	*				
		B3538 (04768)												
X20		STRIKER, DOOR	EA	4	*	*	*	*	*	*				
		B3539 (04768)												
X20		HINGE, TOP VERTICAL	EA	2	*	*	*	*	*	*				
		B133 (04768)												
X20		HINGE, TOP VERTICAL	EA	2	*	*	*	*	*	*				
		B130 (04768)												
P O	2520-425-7019	HINGE, DOOR	EA	6	*	*	*	*	*	*				
		A241 (04768)												
P O	2920-536-9952	HINGE, DOOR	EA	2	*	*	*	*	*	*				
		A242 (04768)												
P O	5305-988-1725	SCREW, MACHINE, DOOR HINGE	EA	16	*	*	*	*	*	*				
		MS35206-281 (96906)												

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip cntry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		1812—SPECIAL PURPOSE BODY MAINTENANCE—Continued												
		BODY ASSEMBLY, MAINTENANCE TRUCK—Continued												
P O	5310-905-0762	NUT, PLAIN, HEXAGON, DOOR HINGE MS51967-3 (96906)	EA	16	*	*	*	*	*	*				
P O	5310-823-8803	WASHER, FLAT, DOOR HINGE MS27183-21 (96906)	EA	24	*	*	*	*	*	*				
P O	5305-068-0501	SCREW, CAP, HEXAGON HEAD, STRIKER MS90725-5 (96906)	EA	8	*	*	*	*	*	*				
P O	5310-905-0762	NUT, PLAIN, HEXAGON, STRIKER MS51967-3 (96906)	EA	8	*	*	*	*	*	*				
P O		PAD, BUMPER, BODY 1165762 (19207)	EA, EB	2	*	*	*	*	*	*				
P O	5305-984-8211	SCREW, CAP, HEXAGON HEAD PAD ATTACHING MS35206-264 (96906)	EA, EB	4	*	*	*	*	*	*				
P O	5310-014-5850	WASHER, FLAT, PAD ATTACHING MS27183-42 (96906)	EA, EB	4	*	*	*	*	*	*				
P O		NUT, PLAIN HEXAGON, PAD ATTACHING 8328424 (19207)	EA	4	*	*	*	*	*	*				
P O	5305-071-1773	SCREW, CAP, HEXAGON HEAD, BODY MOUNTING MS90725-120 (96906)	EA, EB	8	*	*	*	*	*	*				
P O		WASHER, BODY MOUNTING 11657375-6 (19207)	EA, EB	10	*	*	*	*	*	*				
X20		SPACER, BODY MOUNTING 11657676-1 (19207)	EA, EB	8	*	*	*	*	*	*				
P O	5305-159-6902	SPACER, BODY MOUNTING 11640883 (19207)	EA, EB	8	*	*	*	*	*	*				
P O		WASHER, BODY MOUNTING 11657375-7 (19207)	EA, EB	16	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE														
(1) SBR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr allow per 100 equip enclty	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
X20		1812—SPECIAL PURPOSE BODY MAINTENANCE—Continued SPACER, BODY MOUNTING 11657064-1 (19207) EA, EB	EA	8	*	*	*	*	*	*				
P O	5310-834-8732	NUT, PLAIN, HEXAGON, BODY MOUNTING MS35091-33 (96906) EA, EB	EA	8	*	*	*	*	*	*				
P O	5310-021-9434	NUT, BODY MOUNTING 219434 (24617) EA, EB	EA	8	*	*	*	*	*	*				
X20		SHIM, BODY MOUNTING 11657066-1 (19207) EA, EB	EA	4	*	*	*	*	*	*				
X20		SHIM, BODY MOUNTING 11657066-2 (19207) EA, EB	EA	4	*	*	*	*	*	*				
P O	5305-052-6917	1812—SPECIAL PURPOSE BODY-AMBULANCE SCREW, SELF-TAPPING, FRONT DOOR STOP BRACKET AND SLIDE MS24629-50 (96906)	EA	10	*	*	*	*	*	*			117	1
P O	5310-596-7691	WASHER, LOCK, UPPER AND LOWER PANEL MS35355-32 (96906)	EA	50	*	*	*	*	*	*			117	2
X20		BRACKET, FRONT DOOR STOP 11656371 (19207)	EA	2	*	*	*	*	*	*			117	3
P O	5310-550-2379	WASHER, FLAT, STOP ROD MS99320-13 (96906)	EA	6	*	*	*	*	*	*			117	4
X20		ROD, FRONT DOOR STOP 11656316 (19207)	EA	2	*	*	*	*	*	*			117	5
P O	5315-844-3966	PIN, SPRING, STOP ROD MS16562-49 (96906)	EA	6	*	*	*	*	*	*			117	6
P O	5305-057-7161	SCREW, SELF-TAPPING, CHANNEL MS24615-4 (96906)	EA	8	*	*	*	*	*	*			117	7
X20		CHANNEL, UPPER, FRONT DOOR 11662594-1 (19207)	EA	2	*	*	*	*	*	*			117	8

SECTION H. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SBR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty for unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr altw per 100 equip entry	(9) Depot maint altw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued												
X20		DOOR ASSEMBLY, FRONT L. H. 11658044-1 (19207)	EA	1	*	*	*	*	*	*			117	9
X20		DOOR ASSEMBLY, FRONT, R. H. 11658044-2 (19207)	EA	1	*	*	*	*	*	*			117	9
P O	5330-157-4618	WEATHERSTRIP, LOWER, FRONT DOOR GLASS 11662561 (19207)	EA	4	*	*	*	*	*	*			117	10
X20		BRACKET, WINDOW STOP 11668251 (19207)	EA	4	*	*	*	*	*	*			117	11
P O	5310-015-1245	NUT, SELF-LOCKING, STOP BRACKET MS51922-1 (96906)	EA	4	*	*	*	*	*	*			117	12
P O	5305-071-2242	SCREW, CAP, STOP BRACKET MS90725-9 (96906)	EA	4	*	*	*	*	*	*			117	13
X20		PANEL ASSEMBLY, L. H. DOOR 11658591-1 (19207)	EA	1	*	*	*	*	*	*			117	14
X20		PANEL ASSEMBLY, R. H. DOOR 11658591-2 (19207)	EA	1	*	*	*	*	*	*			117	14
P O	5305-855-0964	SCREW, SELF-TAPPING, UPPER AND LOWER PANEL MS24629-45 (96906)	EA	40	*	*	*	*	*	*			117	15
X20		PANEL, DOOR, LOWER 11658625 (19207)	EA	2	*	*	*	*	*	*			117	16
P O	5305-015-5358	SCREW, MACHINE, WINDOW HANDLE 155358 (24617)	EA	2	*	*	*	*	*	*			117	17
P O	5310-582-5965	WASHER, LOCK, DOOR AND WINDOW HANDLE MS35328-44 (96906)	EA	4	*	*	*	*	*	*			117	18
P O	2540-737-3304	HANDLE, WINDOW 7975807 (19207)	EA	2	*	*	*	*	*	*			117	19
P O	5305-958-1725	SCREW, MACHINE, DOOR HANDLE 155348 (24617)	EA	2	*	*	*	*	*	*			117	20

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip enrgy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			Figure No.	Item No.
		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued												
P O	2540-797-5609	HANDLE, FRONT DOOR, INSIDE 7075609 (19207)	EA	2	*	*	*	*	*	*			117	21
X20		CHANNEL, SIDE, FRONT DOOR 11662594-2 (19207)	EA	4	*	*	*	*	*	*			117	22
P O		SPACER, HINGE 11658232 (19207)	EA	V	*	*	*	*	*	*			117	23
P O		HINGE ASSEMBLY, FRONT DOOR 11641035 (19207)	EA	4	*	*	*	*	*	*			117	24
P O	5306-042-5589	SCREW, CAP, HINGE MOUNTING 425589 (24617)	EA	24	*	*	*	*	*	*			117	25
X20		SLIDE, FRONT DOOR STOP 11658240 (19207)	EA	2	*	*	*	*	*	*			117	26
P O	2510-221-8913	WEATHERSTRIP, FRONT DOOR 11662746 (19207)	EA	2	*	*	*	*	*	*			118	1
P O		SCREW, MACHINE, DOOR HANDLE 173044 (24617)	EA	4	*	*	*	*	*	*			118	2
P O	2540-917-6903	HANDLE, FRONT DOOR, OUTSIDE 7410715 (19207)	EA	2	*	*	*	*	*	*			118	3
P O	2510-411-8313	GLASS, DOOR 11658535 (19207)	EA	2	*	*	*	*	*	*			118	4
P O		TAPE, GLASS 11658072 (19207)	EA	2	*	*	*	*	*	*			118	5
P O	5340-158-0095	RETAINER, REGULATOR ARM AND CHANNEL 11662604 (19207)	EA	4	*	*	*	*	*	*			118	6
X20		CHANNEL ASSEMBLY, LIFT L. H. 11658564-1 (19207)	EA	1	*	*	*	*	*	*			118	7

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 90-day DS maint allowance			(8) 1-yr altw per 100 equip cntgcy	(9) Depot maint altw per 100 equip	(10) Illustration	
					(11) 1-30	(12) 31-60	(13) 61-100	(14) 1-30	(15) 31-60	(16) 61-100			(17) Figure No.	(18) Item No.
		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued												
X20		CHANNEL ASSEMBLY, LIFT R. H. 11658564-2 (19207)	EA	1	*	*	*	*	*	*			118	7
P O	2540-693-0603	REGULATOR ASSEMBLY, WINDOW, R. H. 7373290 (19207)	EA	1	*	*	*	*	*	*			118	8
P O	2540-693-0602	REGULATOR ASSEMBLY, WINDOW, L. H. 7373289 (19207)	EA	1	*	*	*	*	*	*			118	8
P O	2540-177-9333	SPRING REGULATOR AND ACTUATING ARM 7531444 (19207)	EA	3	*	*	*	*	*	*			118	9
X1		WASHER, ACTUATING ARM SPRING 7034601 (19207)	EA	1									118	10
X1		STUD, ACTUATING ARM 7034618 (19207)	EA	1									118	11
X1		WASHER, REGULATOR AND ACTUATING ARM 7531445 (19207)	EA	2									118	12
X1		STUD, REGULATOR AND ACTUATING ARM 7034617 (19207)	EA	2									118	13
P O	2540-737-3276	LOCK ASSEMBLY, FRONT DOOR, L.H. 7373276 (19207)	EA	1	*	*	*	*	*	*			119	
X1		STRAP, LOCK 10871960 (19207)	EA	1									119	1
X1		WASHER, SPRING 10871987 (19207)	EA	2									119	2
X1		LOCK ASSEMBLY, DOOR 7748500 (19207)	EA	1									119	3
P O	5320-242-1545	RIVET, TUBULAR, STRAP MS16535-300 (96906)	EA	2	*	*	*	*	*	*			119	4

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr alt per 100 equip enigy	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued LOCK ASSEMBLY, FRONT DOOR, L. H.—Continued												
X1		PLATE ASSEMBLY, REMOTE 7748506 (19207)		1									119	6
P O	2540-737-3277	LOCK ASSEMBLY, FRONT DOOR, R. H. 7373277 (19207)	EA	1	*	*	*	*	*	*			119	
X1		LOCK ASSEMBLY, DOOR 8739189 (19207)	EA	1									119	3
X1		PLATE ASSEMBLY, REMOTE 7748506 (19207)	EA	1									119	6
P O	5305-080-5430	SCREW, MACHINE, DOOR LOCK AND WINDOW REGULATOR MOUNTING 271484 (24617)	EA	30	*	*	*	*	*	*			119	5
P O	5305-854-4680	SCREW, SELF-TAPPING RETAINER MS24617-34 (94806)	EA	3	*	*	*	*	*	*			120	1
X20		RETAINER, WINDOW CURTAIN 11058549-1 (19207)	EA	1	*	*	*	*	*	*			120	2
X20		STRAP ASSEMBLY, CURTAIN 9742136-1 (19207)	EA	2	*	*	*	*	*	*			120	4
M O		TAPE, FASTENER, CURTAIN HOLDDOWN (2 PIECES 11 IN. LG, 1 PIECE 18 IN. LG)											120	5
		MANUFACTURE FROM												
P V		TAPE, FASTENER, NYLON TYPE II (40 IN. REQUIRED) MIL-F21840 TYPE II (81349)	FT	V	*	*	*	*	*	*				
P O	2501-735-0355	SEAL, GUIDE PARTITION DOOR 7350355 (19207)	EA	1	*	*	*	*	*	*			120	12
P O	5305-855-0973	SCREW, SELF-TAPPING, SEAL MS24629-34 (94806)	EA	3	*	*	*	*	*	*			120	13

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMH code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip cntry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
X20		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued LOCK ASSEMBLY, FRONT DOOR, L. H. —Continued DOOR ASSEMBLY, PARTITION 11658028 (19207)	EA	1	*	*	*	*	*	*			120	
P O	5305-854-6088	SCREW SELF-TAPPING, WINDOW PANEL MS24617-34 (96906)	EA	8	*	*	*	*	*	*			120	1
P O	9390-505-6594	FILLER, SEAL, DOOR GLASS 8328272 (19207)	EA	1	*	*	*	*	*	*			120	6
M F		GLASS, PARTITION DOOR 11658407 (19207)	EA	1									120	7
		MANUFACTURE FROM:												
P F	9340-285-6774	GLASS 1875 TO 2968 THK MIL-G-1875 (81349)	IN	V	*	*	*	*	*	*				
P O		SEAL, DOOR GLASS 11662612 (19207)	EA	1	*	*	*	*	*	*			120	8
X20		PANEL, WINDOW MOUNTING 11657999 (19207)	EA	1	*	*	*	*	*	*			120	9
P O	2540-917-5903	HANDLE, DOOR, CAB SIDE 7410715 (19207)	EA	1	*	*	*	*	*	*			120	10
X20		REINFORCEMENT, DOOR EDGE 11658357 (19207)	EA	1	*	*	*	*	*	*			120	11
X20		PANEL, PARTITION DOOR 11658405 (19207)	EA	1	*	*	*	*	*	*			120	14
P O	5310-012-1743	NUT, HANDLE MOUNTING 121743 (24617)	EA	2	*	*	*	*	*	*			120	15
X20		SPACER, DOOR LOCK 11658346 (19207)	EA	1	*	*	*	*	*	*			120	16
P O	5305-145-0783	SCREW, ASSEMBLED PILLAR LOCK MOUNTING 11662685 (19207)	EA	2	*	*	*	*	*	*			120	17
P O	2540-152-2498	LOCK, DOOR 11662580 (19207)	EA	1	*	*	*	*	*	*			120	18

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(3) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30 day DS maint allowance			(7) 30 day GS maint allowance			(8) 1-yr depot maint allowance per 100 equip cntry	(9) 1-yr depot maint allowance per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued												
P O	5305-724-5813	LOCK ASSEMBLY, FRONT DOOR, L. H.—Continued	EA	1	*	*	*	*	*	*			120	19
		DOOR ASSEMBLY, PARTITION—Continued												
		SCREW, MACHINE, HANDLE MOUNTING												
		MS51964-66 (96906)	EA	1	*	*	*	*	*	*			120	20
P O	2540-460-6914	HANDLE, DOOR, AMBULANCE SIDE	EA	1	*	*	*	*	*	*			120	21
		11658071 (19207)												
P O		SEAL, LIGHT, VERTICAL	EA	1	*	*	*	*	*	*			120	22
		11658548 (19207)												
P O	5310-088-1251	NUT, SELF-LOCKING ROLLER AND VENT	EA	12	*	*	*	*	*	*			120	23
		MS51922-1 (96906)												
P O	5305-988-1727	SCREW MACHINE, VENT MOUNTING	EA	4	*	*	*	*	*	*			120	24
		MS35206-283 (96906)												
P O	5340-157-7559	RETAINER, VERTICAL SEAL	EA	1	*	*	*	*	*	*			120	25
		11658295 (19207)												
P O	5305-052-8238	SCREW SELF-TAPPING, RETAINER AND REINFORCE- MENT MOUNTING	EA	20	*	*	*	*	*	*			120	26
		MS24617-42 (96906)												
P O	2510-152-2496	RETAINER, BOTTOM SEAL	EA	1	*	*	*	*	*	*			120	27
		11658345 (19207)												
P O		SEAL, LIGHT BOTTOM	EA	1	*	*	*	*	*	*			120	28
		11658598 (19207)												
P O	5305-988-1170	SCREW MACHINE, ROLLER MOUNTING	EA	4	*	*	*	*	*	*			120	29
		MS35206-284 (96906)												
X1		WASHER, FLAT, ROLLER MOUNTING	EA	4	*	*	*	*	*	*			120	30
		8396496 (19207)												
X20		ROLLER ASSEMBLY, DOOR	EA	2	*	*	*	*	*	*			120	31
		11658511 (19207)												
X1		RIVET, ROLLER	EA	1	*	*	*	*	*	*			120	32
		11658515 (19207)												

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty per unit	(6) 30 day (38 maint allowance			(7) 30 day (38 maint allowance			(8) 1 yr stor per 100 equip catego	(9) Depot maint stor per 100 equip	(10) Illustration	
					(a) 1-99	(b) 101-99	(c) 101-99	(a) 1-99	(b) 101-99	(c) 101-99			(a) Figure No.	(b) Item No.
		1812—SPECIAL PURPOSE BODY AMBULANCE—Continued												
		LOCK ASSEMBLY, FRONT DOOR, L. H.—Continued												
		DOOR ASSEMBLY, PARTITION—Continued												
X1		ROLLER, DOOR SLIDE 11658513 (19207)	EA	1									120	32
X1		PLATE, ROLLER 11658512 (19207)	EA	1									120	33
P O	5310-823-0004	WASHER, FLAT, ROLLER AND VENT MS27183-9 (96806)	EA	7	*	*	*	*	*	*			120	34
X20		VENT ASSEMBLY, DOOR 11658510 (19207)	EA	1	*	*	*	*	*	*			120	35
X1		KNOB, VENT SLIDING 11658201 (19207)	EA	2									120	36
X1		STUD, VENT SLIDING 11658331 (19207)	EA	1									120	37
X1		VENT, DOOR STATIONARY 11658406 (19207)	EA	1									120	38
X1		VENT, DOOR, SLIDING 11658408 (19207)	EA	1									120	39
X1		RIVET, SLIDING VENT 11658519 (19207)	EA	4									120	40
X1		WASHER, SPRING, SLIDING, VENT 8762055 (19207)	EA	4									120	41
P O	5305-012-4396	SCREW, MACHINE, HANDLE 156125 (24617)	EA	2	*	*	*	*	*	*			120	42
P O	5305-989-1729	SCREW, MACHINE, DOOR LOCK MS35206-287 (96806)	EA	4	*	*	*	*	*	*			120	43
P O	2540-917-5002	LOCK, PILLAR, PARTITION DOOR 11652086 (19207)	EA	1	*	*	*	*	*	*	*		120	44

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr alw per 100 equip cntgcy	(9) Depot maint alw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
X20		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued LOCK ASSEMBLY, FRONT DOOR, L. H.—Continued DOOR ASSEMBLY, L. H. REAR 11658046 (19207)	EA	1	*	*	*	*	*	*			121	1
X20		SPACER, DOVETAIL 11658228 (19207)	EA	2	*	*	*	*	*	*			121	2
X20		DOVETAIL, MALE 7540419 (19207)	EA	2	*	*	*	*	*	*			121	3
P O	5306-696-5287	SCREW, MACHINE, DOVETAIL 455167 (24617)	EA	4	*	*	*	*	*	*			121	4
X20		CASE ASSEMBLY, L.H. REAR DOOR 534004 (19207)	EA	1	*	*	*	*	*	*			121	5
P O	5305-052-7492	SCREW, MACHINE, REAR DOOR CASE ASSEMBLIES, R.H. AND L.H. MS24629-61 (96906)	EA	8	*	*	*	*	*	*			121	6
P O	5305-292-7947	SCREW, MACHINE, GRAB HANDLE MS24627-66 (9690C)	EA	8	*	*	*	*	*	*			121	7
X20		HANDLE, GRAB, REAR DOOR 7387853 (19207)	EA	2	*	*	*	*	*	*			121	8
P O	5305-724-5813	SETSCREW, DOOR HANDLE MS51964-66 (96906)	EA	2	*	*	*	*	*	*			121	9
P O	2540-460-6014	HANDLE, REAR DOOR, INNER 11658071 (19207)	EA	2	*	*	*	*	*	*			121	10
X20		DOOR ASSEMBLY, R. H. REAR 11658047 (19207)	EA	1	*	*	*	*	*	*			121	11
M O		TAPE FASTENER, CURTAIN HOLDDOWN (4 PIECES, 4 IN. LG, 2 PIECES 25.7 IN. LG) MANUFACTURE FROM											121	12
P O		TAPE, FASTENER, NYLON (67.4 IN. REQUIRED) MIL-F-21840, TYPE II (81349)	FT	V	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cat/eq	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-30	31-50	51-100	1-30	31-50	51-100			Figure No.	Item No.
		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued												
X20		BUMPER, DOOR CHECK ARM 11658575 (19207)	EA	2	*	*	*	*	*	*			121	13
X20		BRACKET ASSEMBLY, DOOR CHECK, L. H. 11658546-1 (19207)	EA	1	*	*	*	*	*	*			121	14
P O		RIVET, CLIP MOUNTING MS30743-14 (94906)	EA	1	*	*	*	*	*	*			121	15
X 1		RETAINER, DOOR CHECK 11658271 (19207)	EA	1									121	16
X20		CLIP, DOOR CHECK 11658338 (19207)	EA	1	*	*	*	*	*	*			121	17
X20		BRACKET ASSEMBLY, DOOR CHECK, R. H. 11658546-2 (19207)	EA	1	*	*	*	*	*	*			121	14
X20		ARM, REAR DOOR CHECK 11658464 (19207)	EA	1	*	*	*	*	*	*			121	18
X20		WASHER, FLAT, ARM RETAINING 11658908 (19207)	EA	1	*	*	*	*	*	*			121	19
P O	5315-816-1794	PIN, COTTER, CHECK ARM MS24665-385 (94906)	EA	10	*	*	*	*	*	*			121	20
X20		ROLLER, DOOR CHECK ARM 11658278 (19207)	EA	2	*	*	*	*	*	*			121	21
P O	5306-042-5589	SCREW, MACHINE, BRACKET MOUNTING 425589 (24617)	EA	4	*	*	*	*	*	*			121	22
P O		STRAP ASSEMBLY, CURTAIN 8742136-1 (19207)	EA	4	*	*	*	*	*	*			121	23
X20		RETAINER, CURTAIN 11658549-2 (19207)	EA	2	*	*	*	*	*	*			121	25
P O	5305-879-7941	SCREW, MACHINE, CURTAIN RETAINER MS24617-31 (94906)	EA	6	*	*	*	*	*	*			121	26

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr aw per 100 equip cntry	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued												
P O	5305-052-7500	SCREW, MACHINE, BUMPER MOUNTING MS24617-46 (96906)	EA	4	*	*	*	*	*	*			121	27
P O	5310-809-3078	WASHER, FLAT, BUMPER MOUNTING MS27183-11 (96906)	EA	4	*	*	*	*	*	*			121	28
X20		BUMPER, PROTECTION, REAR DOOR 11658551 (19207)	EA	4	*	*	*	*	*	*			121	29
X20		HINGE, REAR DOOR 11658539 (19207)	EA	4	*	*	*	*	*	*			121	30
P O		SCREW, ASSEMBLED WASHER, HINGE 11662744 (19207)	EA	24	*	*	*	*	*	*			121	31
P O	5306-042-5589	SCREW, MACHINE, BRACKET 425589 (24617)	EA	8	*	*	*	*	*	*			121	32
P O	5340-229-0340	LOOP, FOOTMAN, FUEL CAN STRAP MS51939-3 (96906)	EA	2	*	*	*	*	*	*			121	33
P O	5305-052-6874	SCREW, MACHINE, LOOP MOUNTING MS24627-50 (96906)	EA	4	*	*	*	*	*	*			121	34
P O	2540-917-5902	LOCK, PILLAR, REAR DOOR 11662686 (19207)	EA	1	*	*	*	*	*	*			121	35
P O	5305-145-0783	SCREW, ASSEMBLED WASHER, LOCK 11662685 (19207)	EA	2	*	*	*	*	*	*			121	36
X20		STRIKER, REAR DOOR 11658307 (19207)	EA	2	*	*	*	*	*	*			121	37
P O	5310-088-1251	NUT, SELF-LOCKING, HEXAGON, LOWER STRIKE MOUNTING MS51922-1 (96906)	EA	4	*	*	*	*	*	*			121	38
P O	5305-988-1727	SCREW, MACHINE, STRIKER MS35206-283 (96906)	EA	8	*	*	*	*	*	*			121	39

306

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip cnlgy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued												
P F		SEAL, REAR GLASS 11641004-1 (19207)	EA	2	*	*	*	*	*	*			121	40
P F	9340-462-3304	GLASS, REAR DOOR 11658347 (19207)	EA	2	*	*	*	*	*	*			121	41
P F	9390-505-6594	SEAL, FILLER, REAR GLASS 8328272 (19207)	EA	2	*	*	*	*	*	*			121	42
P O	2590-473-6331	BRACKET ASSEMBLY, LIQUID CONTAINER 6566675 (19207)	EA	1	*	*	*	*	*	*			121	43
P O	2540-933-3542	KIT, WEATHERSTRIP, REAR DOOR 5704442 (19207)	EA	1	*	*	*	*	*	*				
		CONSIST OF												
X1		1-WEATHERSTRIP, PERIMETER 11662745-1 (19207)											128	26
X1		1-WEATHERSTRIP, SLAM 11662745-2 (19207)											121	44
X20		ARM, DOOR LOCK 11662681 (19207)	EA	4	*	*	*	*	*	*			121	45
X20		COVER, LOCK ARM 11658260 (19207)	EA	4	*	*	*	*	*	*			121	46
P O	5315-618-1464	PIN, DOOR HANDLE, L. H. 11658534 (19207)	EA	1	*	*	*	*	*	*			121	47
X1		RIVET, BLIND, COVER MOUNTING MIL-R-24243/1A604 (81349)	EA	16									121	48
X20		CASE ASSEMBLY, TUMBLER, R. H. DOOR 10900337 (19207)	EA	1	*	*	*	*	*	*			121	49
P O	2540-917-5903	HANDLE, REAR DOOR, OUTSIDE 7410715 (19207)	EA	1	*	*	*	*	*	*			121	50

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) RMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr alt per 100 equip cnlgy	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued												
P O		SCREW, MACHINE, OUTSIDE HANDLE 172044 (24617)	EA	2	*	*	*	*	*	*			121	51
X20		SPACER, SLIDE BOLT 11658543 (19207)	EA	4	*	*	*	*	*	*			121	52
X20		BOLT ASSEMBLY, SLIDE 11662579 (19207)	EA	4	*	*	*	*	*	*			121	53
P O	5305-052-0017	SCREW, MACHINE, SLIDE BOLT MS24629-50 (96906)	EA	16	*	*	*	*	*	*			121	54
P O	5305-042-0089	SCREW, ASSEMBLED WASHER, ARM TO SLIDE BOLT 420989 (24617)	EA	4	*	*	*	*	*	*			121	55
X20		STEP AND SEAT ASSEMBLY, REAR 11658057 (19207)	EA	1	*	*	*	*	*	*			122	1
X20		SEAT ASSEMBLY, ATTENDANT 11658003 (19207)	EA	1	*	*	*	*	*	*			122	2
P O	5310-088-1251	NUT, SELF-LOCKING, HEXAGON, UPPER AND LOWER STEP MS51922-1 (96906)	EA	8	*	*	*	*	*	*			122	3
X20		STEP, LOWER 11658465-1 (19207)	EA	1	*	*	*	*	*	*			122	4
P O	5310-809-4058	WASHER, FLAT, SEAT AND STEP MOUNTING MS27183-10 (96906)	EA	12	*	*	*	*	*	*			122	5
P O	5305-988-1727	SCREW, MACHINE, SEAT AND STEP MS35206-283 (96906)	EA	12	*	*	*	*	*	*			122	6
P O	5310-934-9747	NUT, PLAIN, HEXAGON, BUMPER MS35649-262 (96906)	EA	2	*	*	*	*	*	*			122	7
P O	5310-579-0079	WASHER, FLAT, BUMPER MS35333-37 (96906)	EA	2	*	*	*	*	*	*			122	8

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D8 maint allowance			(7) 30-day G8 maint allowance			(8) 1-yr alt per 100 equip origes	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-50	(b) 51-100	(c) 101-150	(a) 1-50	(b) 51-100	(c) 101-150			(a) Figure No.	(b) Item No.
X20		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued STEP AND SEAT ASSEMBLY, REAR—Continued BUMPER, RUBBER 11662003 (19207)	EA	2	*	*	*	*	*	*			122	9
P O	5305-084-4992	SCREW, MACHINE, BUMPER MS325006-232 (96906)	EA	2	*	*	*	*	*	*			122	10
X20		STEP AND SEAT ASSEMBLY 11668054 (19207)	EA	1	*	*	*	*	*	*			122	11
X20		STEP, UPPER 11668465-2 (19207)	EA	1	*	*	*	*	*	*			122	12
P O	5305-052-8228	SCREW, MACHINE, STEP AND SEAT MOUNTING MS34617-42 (96906)	EA	8	*	*	*	*	*	*			122	13
X20		COVER, HINGE 11668430 (19207)	EA	2	*	*	*	*	*	*			122	14
P O	5310-081-4219	WASHER, FLAT, STEP AND SEAT MOUNTING MS27183-12 (96906)	EA	8	*	*	*	*	*	*			122	15
P O	5306-042-5594	SCREW, MACHINE, STEP AND SEAT MOUNTING 425604 (24617)	EA	8	*	*	*	*	*	*			122	16
X20		SPACER, FLOOR BOARD 11668330 (19207)	EA	2	*	*	*	*	*	*			122	17
P O	5310-084-3807	NUT, SELF-LOCKING, HEXAGON, STEP AND SEAT MOUNTING MS51922-13 (96906)	EA	8	*	*	*	*	*	*			122	18
X20		COVER, FLOOR BOARD, REAR OUTER 11668177 (19207)	EA	2	*	*	*	*	*	*			123	1
X20		MOULDING, FLOOR BOARD SIDE 11668308 (19207)	EA	2	*	*	*	*	*	*			123	2
P O	5305-052-8228	SCREW, MACHINE, OUTER COVER AND MOULDING MOUNTING MS24617-42 (96906)	EA	24	*	*	*	*	*	*			123	3

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr allow per 100 equip catgry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued												
P O	5305-052-6918	SCREW, SELF-TAPPING CENTER COVER MS24629-51 (96906)	EA	3	*	*	*	*	*	*			123	4
X20		COVER, FLOOR BOARD, REAR CENTER 11658298 (19207)	EA	1	*	*	*	*	*	*			123	5
P O	5340-229-0340	LOOP, FOOTMAN, LITTER STRAP MS51939-3 (96906)	EA	16	*	*	*	*	*	*			123	6
P O	5305-995-0436	SCREW, MACHINE, FOOTMAN LOOP MS51959-63 (96906)	EA	32	*	*	*	*	*	*			123	7
P O	5310-045-3296	WASHER, LOCK, FOOTMAN LOOP MS35338-43 (96906)	EA	32	*	*	*	*	*	*			123	8
P O	5310-934-9758	NUT, PLAIN, HEX, FOOTMAN LOOP MS35649-202 (96906)	EA	32	*	*	*	*	*	*			123	9
X20		FLOOR BOARD, REAR COMPARTMENT 11658427 (19207)	EA	1	*	*	*	*	*	*			123	10
P O	5305-052-6876	SCREW, MACHINE, FLOOR BOARD AND COVER MOUNTING MS24627-52 (96906)	EA	64	*	*	*	*	*	*			123	11
X20		COVER, FLOOR BOARD 11658428 (19207)	EA	1	*	*	*	*	*	*			123	12
P O	5305-879-7941	SCREW, MACHINE, BLOWER, MOUNTING MS24617-31 (96906)	EA	6	*	*	*	*	*	*			124	1
P O	5310-807-4795	WASHER, LOCK, BLOWER MOUNTING MS35335-42 (96906)	EA	6	*	*	*	*	*	*			124	2
P O		SEAL, EXHAUST GRILLE 11658590 (19207)	EA	2	*	*	*	*	*	*			124	3
X20		SCREEN, EXHAUST GRILLE 11658269 (19207)	EA	2	*	*	*	*	*	*			124	4
X20		GRILLE, EXHAUST 11658310 (19207)	EA	2	*	*	*	*	*	*			124	5

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr allow per 100 equip entgcy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued												
P O	5305-052-8238	SCREW, MACHINE, EXHAUST GRILLE AND PANEL MS24617-42 (96906)	EA	24	*	*	*	*	*	*			124	6
P O		SCREW, MACHINE, BLOWER MOUNTING 167214 (24617)	EA	4	*	*	*	*	*	*			124	7
X20		PANEL, EXHAUST BLOWER, L. H. COVER 11658423 (19207)	EA	1	*	*	*	*	*	*			124	8
X20		PANEL, EXHAUST BLOWER, R.H. COVER 11658424 (19207)	EA	1	*	*	*	*	*	*			124	8
X20		DUCT, AIR INTAKE 11658460 (19207)	EA	2	*	*	*	*	*	*			125	1
P O	5305-052-8238	SCREW, MACHINE, INTAKE DUCT AND COVER MS24617-42 (96906)	EA	46	*	*	*	*	*	*			125	2
X20		COVER ASSEMBLY, EXHAUST BLOWER, R. H. REAR 11658502-2 (19207)	EA	1	*	*	*	*	*	*			125	3
X1		RIVET, AIR FLOW COVER 11658519 (19207)	EA	1									125	4
X1		WASHER, SPRING, AIR FLOW COVER 8762055-1 (19207)	EA	1									125	5
X1		COVER, ASSEMBLY, AIR FLOW 11658517 (19207)	EA	1									125	6
X1		COVER, EXHAUST BLOWER 11658503-2 (19207)	EA	1									125	7
X20		COVER ASSEMBLY, EXHAUST BLOWER L. H. REAR 11658502-1 (19207)	EA	1	*	*	*	*	*	*			125	3
X1		COVER, EXHAUST BLOWER 11658503-1 (19207)	EA	1									125	7

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1 yr alt per 100 equip catry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued												
X20		DUCT, INTAKE, EXHAUST BLOWER 11658484 (19207)	EA	2	*	*	*	*	*	*			125	8
X20		BUMPER, LITTER HANDLE 11658551 (19207)	EA	4	*	*	*	*	*	*			125	9
P O	5310-809-3078	WASHER, FLAT, BUMPER MS27183-11 (96906)	EA	4	*	*	*	*	*	*			125	10
P O	5305-855-0841	SCREW, MACHINE, BUMPER MS24617-35 (96906)	EA	4	*	*	*	*	*	*			125	11
P O	2540-152-2499	MOTOR ASSEMBLY, BLOWER 11662737 (19207)	EA	1	*	*	*	*	*	*			126	1
P O	5305-836-3308	SCREW, MACHINE, GROUND STRAP MS24649-33 (96906)	EA	6	*	*	*	*	*	*			126	2
P O	5310-061-0004	WASHER, GROUND STRAP MS45904-57 (96906)	EA	6	*	*	*	*	*	*			126	3
X20		STRAP, GROUND, MOTOR 8359746 (19207)	EA	3	*	*	*	*	*	*			126	4
P O	5310-934-9751	NUT, PLAIN, PLATE AND BRACKET MS35650-302 (96906)	EA	3	*	*	*	*	*	*			126	5
P O	5310-809-4058	WASHER, FLAT, PLATE AND BRACKET MS27183-10 (96906)	EA	3	*	*	*	*	*	*			126	6
X20		GROMMET, RUBBER, PLATE AND BRACKET 11662702 (19207)	EA	3	*	*	*	*	*	*			126	7
X20		PLATE, MOUNTING, BLOWER MOTOR 11658009 (19207)	EA	1	*	*	*	*	*	*			126	8
X20		SPACER, PLATE AND BRACKET 11662701 (19207)	EA	3	*	*	*	*	*	*			126	9

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1 yr alt per 100 equip cntry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1.30	(b) 21.50	(c) 51.100	(a) 1.30	(b) 21.50	(c) 51.100			(a) Figure No	(b) Item No
		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued												
X20		HOUSING ASSEMBLY, MOTOR 11658041 (19207)	EA	1	*	*	*	*	*	*			126	10
X1		WHEEL, BLOWER 7954919 (19207)	EA	1									126	11
X20		CUTOFF, BLOWER 11658026 (19207)	EA	1	*	*	*	*	*	*			126	12
P O	5310-934-9757	NUT, PLAIN, CUTOFF MS35649-282 (96906)	EA	2	*	*	*	*	*	*			126	13
P O	5305-883-0628	SCREW, MACHINE, EXHAUST MS24617-21 (96906)	EA	3	*	*	*	*	*	*			126	14
P O	5310-596-7693	WASHER, LOCK, EXHAUST MS35335-31 (96906)	EA	3	*	*	*	*	*	*			126	15
X20		EXHAUST ASSEMBLY, BLOWER L.H. 11658369 (19207)	EA	1	*	*	*	*	*	*			126	16
P O	5305-889-3002	SCREW, MACHINE, BLOWER MOTOR MS35206-242 (96906)	EA	4	*	*	*	*	*	*			126	17
P O	5310-982-6580	WASHER, FLAT, CUTOFF MS27183-1 (96906)	EA	2	*	*	*	*	*	*			126	18
P O	5305-984-6193	SCREW, MACHINE, CUTOFF MS35206-245 (96906)	EA	2	*	*	*	*	*	*			126	19
X20		BRACKET, MOTOR SUPPORT L.H. 11658453-1 (19207)	EA	1	*	*	*	*	*	*			126	20
P O		DECAL, WARNING 11662700 (19207)	EA	1	*	*	*	*	*	*			126	
X20		EXHAUST ASSEMBLY, R. H. 11658368 (19207)	EA	1	*	*	*	*	*	*			126	16
X20		BRACKET, MOTOR SUPPORT R.H. 11658453-2 (19207)	EA	1	*	*	*	*	*	*			126	20

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS														
(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr slw per 100 equip ctgncy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued												
P O	5305-052-8238	SCREW, MACHINE, COVER MS24617-42 (96906)	EA	16	*	*	*	*	*	*			127	1
X20		COVER, FILLER NECK 11658530 (19207)	EA	1	*	*	*	*	*	*			127	2
X20		FILLER, FUEL TANK CONNECTOR 11658572 (19207)	EA	1	*	*	*	*	*	*			127	3
P O	5305-855-0957	SCREW, MACHINE, REFLECTOR MS24629-46 (96906)	EA	12	*	*	*	*	*	*			127	4
P O	9905-202-3639	REFLECTOR, BODY, FRONT (AMBER) MS35387-2 (96906)	EA	2	*	*	*	*	*	*			127	5
P O	5310-768-0319	NUT, PLAIN, HEX, BRACKET MS51968-2 (96906)	EA	5	*	*	*	*	*	*			127	6
X20		BRACE, SUPPORT 11658238 (19207)	EA	1	*	*	*	*	*	*			127	7
X20		BRACKET, CATCH MOUNTING 8721408 (19207)	EA	1	*	*	*	*	*	*			127	8
P O	2590-045-9610	CATCH ASSEMBLY, M14 RIFLE 8712411 (19207)	EA	1	*	*	*	*	*	*			127	9
P O	5310-209-0786	WASHER, LOCK, BRACKETS AND SUPPORT BRACE MS35335-33 (96906)	EA	7	*	*	*	*	*	*			127	10
P O	5305-622-1507	SCREW, MACHINE, CATCH BRACKET MS35224-80 (96906)	EA	2	*	*	*	*	*	*			127	11
X20		SPACER, STRIKER 11658245 (19207)	EA	2	*	*	*	*	*	*			127	12
X20		SPACER, STRIKER 11658272 (19207)	EA	2	*	*	*	*	*	*			127	13
X20		STRIKER, FRONT DOOR 704862 (19207)	EA	2	*	*	*	*	*	*			127	14

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal Stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr alt per 100 equip entry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-30	31-30	31-100	1-30	31-30	31-100			Figure No.	Item No.
		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued												
P O	5905-145-0783	SCREW, ASSEMBLED WASHER, STRIKER 11662685 (19207)	EA	4	*	*	*	*	*	*			127	15
P O		SCREW, ASSEMBLED WASHER, DOVETAIL 594436 (24617)	EA	4	*	*	*	*	*	*			127	16
X20		DOVETAIL, FRONT DOOR 7540419 (19207)	EA	2	*	*	*	*	*	*			127	17
X20		SPACER, DOVETAIL 11658228 (19207)	EA	2	*	*	*	*	*	*			127	18
P O	5905-993-2461	SCREW, MACHINE, EXTINGUISHER BRACKET MS35297-201 (96906)	EA	4	*	*	*	*	*	*			127	19
X20		BRACKET, FIRE EXTINGUISHER 10924916 (19207)	EA	1	*	*	*	*	*	*			127	20
P O	5310-957-7600	NUT, SELF-LOCKING, EXTINGUISHER BRACKET MS51922-5 (96906)	EA	4	*	*	*	*	*	*			127	21
X20		BRACKET, RIFLE MOUNTING 8712409 (19207)	EA	1	*	*	*	*	*	*			127	22
P O	5905-052-4923	SCREW, MACHINE, BRACKET MS24629-59 (96906)	EA	1	*	*	*	*	*	*			127	23
P O	5905-088-0506	SCREW, CAP, BRACKET MS90726-6 (96906)	EA	3	*	*	*	*	*	*			127	24
P O	5905-018-0024	SCREW, MACHINE, SUPPORT BRACE MS35297-10 (96906)	EA	2	*	*	*	*	*	*			127	25
P O	5905-855-0957	SCREW, MACHINE, DOOR MOUNTING MS24629-66 (96906)	EA	7	*	*	*	*	*	*			127	26
P O		SEAL, DOOR, FRONT AND REAR 11659532-1 (19207)	EA	2	*	*	*	*	*	*			127	27
P O		SEAL, DOOR, TOP AND BOTTOM 11659532-2 (19207)	EA	2	*	*	*	*	*	*			127	28

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip entry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued												
X20		DOOR ASSEMBLY, TOOL COMPARTMENT 11662549 (19207)	EA	1	*	*	*	*	*	*			127	29
P O	5306-225-9081	BOLT, MACHINE, HANGER ARM MS90725-36 (96906)	EA	2	*	*	*	*	*	*			128	1
X20		BRACKET, HANGER ARM SUPPORT 11658323-2 (19207)	EA	2	*	*	*	*	*	*			128	2
X20		BRACKET, HANGER ARM SUPPORT 11658323-1 (19207)	EA	2	*	*	*	*	*	*			128	3
P O	5310-984-3806	NUT, PLAIN, HEXAGON, HANGER ARM MS51922-9 (96905)	EA	2	*	*	*	*	*	*			128	4
P O	5306-071-2241	SCREW, CAP, RETAINERS AND BRACKETS MS90725-10 (96905)	EA	42	*	*	*	*	*	*			128	5
P O	5310-582-5965	WASHER, LOCK, RETAINER AND BRACKETS MS35338-44 (96906)	EA	42	*	*	*	*	*	*			128	6
X20		RETAINER, LITTER 11658203 (19207)	EA	2	*	*	*	*	*	*			128	7
X20		BRACKET ASSEMBLY, REAR INBOARD 11658223 (19207)	EA	2	*	*	*	*	*	*			128	8
X20		HOOK AND LOOP ASSEMBLY, UTILITY 11658367 (19207)	EA	4	*	*	*	*	*	*			128	9
P O	5306-068-0502	SCREW, CAP, HOOK AND LOOP MS90725-6 (96906)	EA	8	*	*	*	*	*	*			128	10
MFO		STRAP ASSEMBLY, LITTER SUPPORT 5601313-3 (19207)	EA	4									128	11
		MANUFACTURE FROM												
P F	8306-263-2479	WEBBING, COTTON, 50 IN. LG 27-W-921 (80244)	FT	V	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued												
P F	5340-598-3537	STRAP ASSEMBLY, LITTER SUPPORT—Continued	EA	1	*	*	*	*	*	*				
		SNAP, STRAP												
		001-1-1-2 (76786)												
P F	5340-878-8827	SLIDE, STRAP	EA	1	*	*	*	*	*	*				
		585852 (00000)												
P F	5340-333-6060	CLIP, STRAP	EA	1	*	*	*	*	*	*				
		MS51926-5 (96906)												
P O		SCREW, MACHINE, COVER PLATE	EA	2	*	*	*	*	*	*			128	12
		156113 (24617)												
P O	5310-045-3296	WASHER, LOCK, COVER PLATE	EA	2	*	*	*	*	*	*			128	13
		MS35338-43 (96906)												
X20		PLATE, COVER, L. H. RETAINER	EA	1	*	*	*	*	*	*			128	14
		11658191-2 (19207)												
P O	2510-502-5512	PLATE, COVER, R. H. RETAINER	EA	1	*	*	*	*	*	*			128	14
		11658191-1 (19207)												
X20		HOUSING ASSEMBLY, INBOARD BALL JOINT L. H.	EA	1	*	*	*	*	*	*			128	15
		11658363-1 (19207)												
X20		HOUSING ASSEMBLY, INBOARD BALL JOINT, R. H.	EA	1	*	*	*	*	*	*			128	15
		11658363-2 (19207)												
X20		RETAINER, UPPER LEFT HAND	EA	1	*	*	*	*	*	*			128	16
		11658192-1 (19207)												
X20		RETAINER, UPPER RIGHT HAND	EA	1	*	*	*	*	*	*			128	16
		11658192-2 (19207)												
X20		RETAINER, LOWER LEFT HAND	EA	1	*	*	*	*	*	*			128	17
		11658194-1 (19207)												
X20		RETAINER, LOWER RIGHT HAND	EA	1	*	*	*	*	*	*			128	17
		11658194-2 (19207)												

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip entry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
MPO		1812—SPECIAL PURPOSE BODY-AMBULANCE—Continued STRAP ASSEMBLY, LITTER HANDLE 11658584-2 (19207)	EA	6									128	18
		MANUFACTURE FROM												
P F	8305-263-2479	WEBBING, COTTON, 20 IN. REQUIRED 27-W-921 (80244)	FT	V	*	*	*	*	*	*				
P F		BUCKLE, STRAP 11658579 (19207)	EA	1	*	*	*	*	*	*				
P F	5340-333-6060	CLIP, STRAP MS1926-5 (98806)	EA	1	*	*	*	*	*	*				
MPO		STRAP ASSEMBLY, UPPER HOLDDOWN 11658554 (19207)	EA	1									128	19
		MANUFACTURE FROM												
P F	8305-263-2479	WEBBING, COTTON, 15 IN. REQUIRED 27-W-921 (80244)	FT	V	*	*	*	*	*	*				
P F	5340-333-6060	CLIP, STRAP MS51926-5 (19207)	EA	1	*	*	*	*	*	*				
MPO		STRAP ASSEMBLY, RACK STOWAGE 11658585 (19207)	EA	1									128	20
P F	8305-263-2479	WEBBING, COTTON, 9-1/2 IN. 27-W-921 (80244)	FT	V	*	*	*	*	*	*				
X20		SEAT ASSEMBLY, PATIENT'S 11659000 (19207)	EA	6	*	*	*	*	*	*			128	21
P O		CUSHION ASSEMBLY, SEAT 11657993 (19207)	EA	1	*	*	*	*	*	*			128	22
X20		SUPPORT, SEAT, UPPER 11658444 (19207)	EA	1	*	*	*	*	*	*			128	23
X20		SUPPORT, SEAT, LOWER 11658485 (19207)	EA	1	*	*	*	*	*	*			128	24

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day GS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr altw per 100 equip enlgy	(9) Depot maint altw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
P O	5305-988-1725	1812 — SPECIAL PURPOSE BODY—AMBULANCE — Continued SEAT ASSEMBLY, PATIENT'S—Continued SCREW MACHINE, SUPPORT 155348 (24617)	EA	4	*	*	*	*	*	*			128	25
MPO		STRAP ASSEMBLY, LITTER HANDLE 11658584-1 (19207)	EA	4									128	27
		MANUFACTURE FROM												
P F	8305-263-2479	WEBBING, COTTON, 17 IN. REQUIRED 27-W-921 (80244)	FT	V	*	*	*	*	*	*				
P F		BUCKLE, STRAP 11658579 (19207)	EA	1	*	*	*	*	*	*				
P F	5340-333-6060	CLIP, STRAP MS51925-5 (96806)	EA	1	*	*	*	*	*	*				
X20		RETAINER, LITTER RACK STOWAGE 11658202 (19207)	EA	2	*	*	*	*	*	*			128	28
X20		SPACER, WALL HOOK 11658210 (19207)	EA	2	*	*	*	*	*	*			128	29
X20		HOOK, WALL, LITTER RACK 11658348 (19207)	EA	2	*	*	*	*	*	*			128	30
X20		LATCH, WALL HOOK, L. H. 11658332-1 (19207)	EA	1	*	*	*	*	*	*			128	31
X20		LATCH, WALL HOOK, R. H. 11658332-2 (19207)	EA	1	*	*	*	*	*	*			128	31
P O		SCREW, CAP, HANGER ARM LATCH 11658093 (19207)	EA	2	*	*	*	*	*	*			128	32
X20		ARM, LITTER RACK HANGER 11658324 (19207)	EA	2	*	*	*	*	*	*			128	33
X20		LATCH, HANGER ARM, L. H. 11658198-1 (19207)	EA	1	*	*	*	*	*	*			128	34

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Milg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day C6 maint. allowance			(7) 30-day C5 maint. allowance			(8) 1-yr slw per 100 equip cntry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		1812 — SPECIAL PURPOSE BODY—AMBULANCE — Continued												
X20		LATCH, HANGER ARM, R. H. 11658196-2 (19207)	EA	1	*	*	*	*	*	*			128	34
P O	5310-045-3299	WASHER, LOCK, WALL HOOK LATCH MS35338-42 (96906)	EA	2	*	*	*	*	*	*			128	35
P O	5305-984-6189	SCREW, MACHINE, WALL HOOK LATCH MS35306-241 (96906)	EA	2	*	*	*	*	*	*			128	36
X20		RETAINER, UPPER LEFT HAND 11658322-2 (19207)	EA	1	*	*	*	*	*	*			128	37
X20		RETAINER, UPPER RIGHT HAND 11658322-1 (19207)	EA	1	*	*	*	*	*	*			128	37
X20		HOUSING ASSEMBLY, OUTBOARD 11658366 (19207)	EA	2	*	*	*	*	*	*			128	38
P O	5305-883-0628	SCREW, MACHINE, BUMPER MS24617-21 (96906)	EA	4	*	*	*	*	*	*			128	39
X20		BUMPER, LITTER 11662882 (19207)	EA	4	*	*	*	*	*	*			128	40
X20		RETAINER, OUTBOARD LOWER 11658304 (19207)	EA	2	*	*	*	*	*	*			128	41
X20		BACK ASSEMBLY, LITTER, L. H. 11658540-1 (19207)	EA	1	*	*	*	*	*	*			129	
P O	5305-879-7941	SCREW, MACHINE, SEAT BACK MOUNTING MS24617-31 (96906)	EA	24	*	*	*	*	*	*			129	1
X20		BACK ASSEMBLY, SEAT 11658509 (19207)	EA	3	*	*	*	*	*	*			129	2
X 1		PAD ASSEMBLY, SEAT BACK 11658518 (19207)	EA	1									129	3
X 1		PANEL, SEAT BACK 11658437 (19207)	EA	1									129	4

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NRR code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code Usable as Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip catgry	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		1812 — SPECIAL PURPOSE BODY—AMBULANCE — Continued												
		BACK ASSEMBLY, SEAT—Continued												
		PANEL SEAT BACK—Continued												
P O	5305-854-6880	SCREW MACHINE, PAD MOUNTING MS26617-32 (98806)	EA	6	*	*	*	*	*	*			129	5
X30		FRAME ASSEMBLY, RACK 1168870-1 (19897)	EA	1	*	*	*	*	*	*			129	6
P O	5305-071-3237	SCREW, CAP, BALL JOINT MS26725-14 (98806)	EA	2	*	*	*	*	*	*			129	7
P O	5305-063-6823	SCREW, MACHINE, BALL JOINT MS26823-50 (98806)	EA	2	*	*	*	*	*	*			129	8
X30		BALL JOINT ASSEMBLY, INBOARD 1168822 (19897)	EA	1	*	*	*	*	*	*			129	9
X30		BALL JOINT ASSEMBLY, OUTBOARD 11688219 (19897)	EA	1	*	*	*	*	*	*			129	9
P O	5310-088-1251	NUT, SELF-LOCKING, BALL JOINT MS61823-1 (98806)	EA	2	*	*	*	*	*	*			129	10
MPO		STRAP ASSEMBLY, LITTER HANDLE 1168884-2 (19897)	EA	6									129	11
		MANUFACTURE FROM												
P F	5305-363-3479	WEBBING, COTTON, 20 IN. REQUIRED 27-W-421 (88844)	FT	V	*	*	*	*	*	*				
P F		BUCKLE, STRAP 1168879 (19897)	EA	1	*	*	*	*	*	*				
P O	5310-834-9758	NUT, PLAIN, HEX, FOOTMAN LOOP MS26645-302 (98806)	EA	6	*	*	*	*	*	*			129	12
P O	5340-323-0840	LOOP, FOOTMAN, LITTER STRAP MS61888-3 (98806)	EA	3	*	*	*	*	*	*			129	13

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntgty	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		1812 — SPECIAL PURPOSE BODY—AMBULANCE — Continued												
X20		RACK ASSEMBLY, LITTER, R. H. 11658540-2 (19207)	EA	1	*	*	*	*	*	*			129	
X20		FRAME ASSEMBLY, LITTER RACK 11658570-2 (19207)	EA	1	*	*	*	*	*	*			129	6
P O	7690-405-0237	DECAL, AMBULANCE, RED CROSS 11658187-2 (19207)	EA	1	*	*	*	*	*	*				
P O	7690-405-0227	DECAL, AMBULANCE, RED CROSS, FRONT 11658186 (19207)	EA	1	*	*	*	*	*	*				
P O	7690-431-8336	DECAL, SIDE PANEL, RED CROSS 11658187-1 (19207)	EA	2	*	*	*	*	*	*				
P F		FILLER, WINDSHIELD SEAL 8826272 (19207)	EA	1	*	*	*	*	*	*			130	1
P F	5330-143-8565	SEAL, WINDSHIELD GLASS 11662611 (19207)	EA	1	*	*	*	*	*	*			130	2
P F	9340-179-7247	GLASS, WINDSHIELD 11658354 (19207)	EA	1	*	*	*	*	*	*			130	3
X20		PANEL, COWLING, R. H. 11658485-2 (19207)	EA	1	*	*	*	*	*	*			130	4
X20		PANEL, COWLING, L. H. 11658485-1 (19207)	EA	1	*	*	*	*	*	*			130	4
X1		RIVET, TUBULAR, PANEL MIL-R-24243/1A602 (81349)	EA	14									130	5
P O	5310-088-1251	NUT, SELF-LOCKING, BRACKET MOUNTING MS51922-1 (96906)	EA	3	*	*	*	*	*	*			130	6
X20		BRACKET, COWL AND INSTRUMENT PANEL MOUNTING 11658266 (19207)	EA	3	*	*	*	*	*	*			130	7
X20		DEFLECTOR, AIR 11658306 (19207)	EA	2	*	*	*	*	*	*			130	8

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip enrgy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		1812 — SPECIAL PURPOSE BODY — AMBULANCE — Continued												
P O	5306-018-6493	SCREW, ASSEMBLED WASHER, DEFLECTOR AND BRACKET MOUNTING 186493 (24617)	EA	7	*	*	*	*	*	*			130	9
P O	5305-052-8228	SCREW, MACHINE, FILLER AND PANEL MS24617-42 (96906)	EA	13	*	*	*	*	*	*			130	10
X20		PANEL, COWL SIDE, L. H. 11658343-1 (19207)	EA	1	*	*	*	*	*	*			130	11
X20		PANEL, COWL, SIDE, R. H. 11658342-2 (19207)	EA	1	*	*	*	*	*	*			130	11
X20		PANEL, PILLAR, L. H. 11658426-1 (19207)	EA	1	*	*	*	*	*	*			130	12
X20		PANEL, PILLAR, R. H. 11658426-2 (19207)	EA	1	*	*	*	*	*	*			130	12
X1		RIVET, TUBULAR, PANEL MIL-R24243/A904 (81349)	EA	34									130	13
P O	5306-018-7993	SCREW, ASSEMBLED WASHER, PANEL 187993 (24617)	EA	8	*	*	*	*	*	*			130	14
P O	5310-506-6326	WASHER, FLAT, PANEL MS27183-13 (96906)	EA	8	*	*	*	*	*	*			130	15
X20		PANEL, FRONT END, L. H. 11658483-1 (19207)	EA	1	*	*	*	*	*	*			130	16
X20		PANEL, FRONT END, R. H. 11658483-2 (19207)	EA	1	*	*	*	*	*	*			130	16
X20		FILLER, FENDER, R. H. 11658450-2 (19207)	EA	1	*	*	*	*	*	*			130	17
X20		FILLER, FENDER, L. H. 11658450-1 (19207)	EA	1	*	*	*	*	*	*			130	17

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued


(1) SACR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day GS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr air per 100 equip cntgry	(9) Depot maint air per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		1812 — SPECIAL PURPOSE BODY—AMBULANCE — Continued												
X30		PANEL, FRONT END, L. H. 11668300-1 (19207)	EA	1	*	*	*	*	*	*			130	18
X30		PANEL, FRONT END, R. H. 11668300-2 (19207)	EA	1	*	*	*	*	*	*			130	18
P O	5810-984-3806	NUT, SELF-LOCKING, HEXAGON, PANEL MS51922-9 (94806)	EA	2	*	*	*	*	*	*			130	19
X1		FRONT END ASSEMBLY 11668045 (19207)		1									131	1
P O		SEAL, WEATHERSTRIP, WINDSHIELD TO COWL 11668373 (19207)	EA	1	*	*	*	*	*	*			131	2
X1		REAR COMPARTMENT ASSEMBLY 11668049 (19207)		1									131	3
P O	5310-088-1251	NUT, SELF-LOCKING, FRONT END TO REAR COMPARTMENT MS51922-1 (94806)	EA	32	*	*	*	*	*	*			131	4
P O	5810-627-6128	WASHER, LOCK, REAR COMPARTMENT TO FRONT END MS35335-35 (94806)	EA	8	*	*	*	*	*	*			131	5
P O	5305-280-3208	SCREW, CAP, REAR COMPARTMENT TO FRONT END MS90725-57 (94806)	EA	8	*	*	*	*	*	*			131	6
P O	5305-088-0506	SCREW, CAP, REAR COMPARTMENT TO FRONT END MS90725-6 (19207)	EA	32	*	*	*	*	*	*			131	7
P O	5306-151-4247	BOLT, BODY MOUNTING 11640936 (19207)	EA CA	2	*	*	*	*	*	*			132	1
P O	5810-100-6222	WASHER, BODY MOUNTING 11657375-1 (19207)	EA CA	6	*	*	*	*	*	*			132	2
P O	2590-453-8854	SPRING, BODY MOUNTING 11657374 (19207)	EA CA	2	*	*	*	*	*	*			132	3

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) EMR code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr slw per 100 equip entry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
X20		1812 — SPECIAL PURPOSE BODY — AMBULANCE — Continued SPACER, BODY MOUNTING 7097514 (19207)	CA	EA	4	*	*	*	*	*	*		132	4
P O	5310-809-5997	WASHER, FLAT, BODY MOUNTING MS27183-17 (19207)	CA	EA	2	*	*	*	*	*	*		132	5
P O	5310-857-5561	NUT, SELF-LOCKING, BODY MOUNTING MS21045C7 (90906)	CA	EA	2	*	*	*	*	*	*		132	6
P O	5340-454-5317	PLUG, BUTTON 432449 (24617)	CA	EA	2	*	*	*	*	*	*		132	7
P O	5305-269-2811	SCREW, CAP, BODY MOUNTING MS90726-07 (90906)	CA	EA	2	*	*	*	*	*	*		132	8
P O	5310-865-6073	WASHER, BODY MOUNTING MS21306-1 (90906)	CA	EA	2	*	*	*	*	*	*		132	9
X20		SPACER, BODY MOUNTING 11657559 (19207)	CA	EA	6	*	*	*	*	*	*		132	10
P O	5310-514-8078	WASHER, BODY MOUNTING 11657375-5 (19207)	CA, EA, EB	EA	8	*	*	*	*	*	*		132	11
X20		WASHER ASSEMBLY, BODY MOUNTING 11657828 (19207)	CA	EA	2	*	*	*	*	*	*		132	12
P O		WASHER, BODY MOUNTING 11657375-3 (19207)	CA	EA	2	*	*	*	*	*	*		132	13
P O	5310-950-1488	NUT, SELF-LOCKING, BODY MOUNTING MS51922-21 (90906)	CA	EA	4	*	*	*	*	*	*		132	14
P O	5310-209-0955	SCREW, CAP, BODY MOUNTING 107288 (28528)	CA	EA	2	*	*	*	*	*	*		132	15
P O	5310-456-9146	WASHER, BODY MOUNTING 11657375-2 (19207)	CA	EA	2	*	*	*	*	*	*		132	16
P O	2510-456-9151	SPRING, BODY MOUNTING 11657962 (19207)	CA	EA	2	*	*	*	*	*	*		132	17

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SAR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr alt. per 100 equip energy	(9) Depot maint alt. per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a) Figure No.	(b) Item No.
		1812 — SPECIAL PURPOSE BODY — AMBULANCE — Continued												
X20		WASHER, BODY MOUNTING 11657827 (19207)	CA	EA	2	*	*	*	*	*			132	18
P O	5310-461-2888	WASHER, BODY MOUNTING 7404151 (19207)	CA	EA	2	*	*	*	*	*			132	19
P O	5305-071-1773	SCREW, CAP, HEXAGON HEAD, BODY MOUNTING MS90725-120 (98906)	CA	EA	6	*	*	*	*	*			132	20
X20		SPACER, BODY MOUNTING 11657876-1 (19207)	CA	EA	6	*	*	*	*	*			132	21
P O	5310-150-6268	WASHER, BODY MOUNTING 11657375-6 (19207)	CA	EA	6	*	*	*	*	*			132	22
P O	5305-150-0902	SPACER, BODY MOUNTING 11640883 (19207)	CA	EA	6	*	*	*	*	*			132	23
P O	5310-150-6224	WASHER, BODY MOUNTING 11657375-7 (19207)	CA	EA	12	*	*	*	*	*			132	24
X20		SPACER, BODY MOUNTING 11658199 (19207)	CA	EA	6	*	*	*	*	*			132	25
P O	5310-834-8732	NUT, HEXAGON, BODY MOUNTING MS35491-33 (98906)	CA	EA	6	*	*	*	*	*			132	26
P O	5310-768-0918	NUT, HEXAGON, BODY MOUNTING MS51967-14 (98906)	CA	EA	6	*	*	*	*	*			132	27
P O	2540-933-3543	CURTAIN SET, BLACKOUT 5704425 (19207)	CA	EA	1	*	*	*	*	*				
		COMPOSED OF:												
X1		CURTAIN ASSEMBLY, REAR DOOR 11658581 (19207)		EA	1								121	24
X1		CURTAIN ASSEMBLY, PARTITION 11658580 (19207)		EA	1								120	3

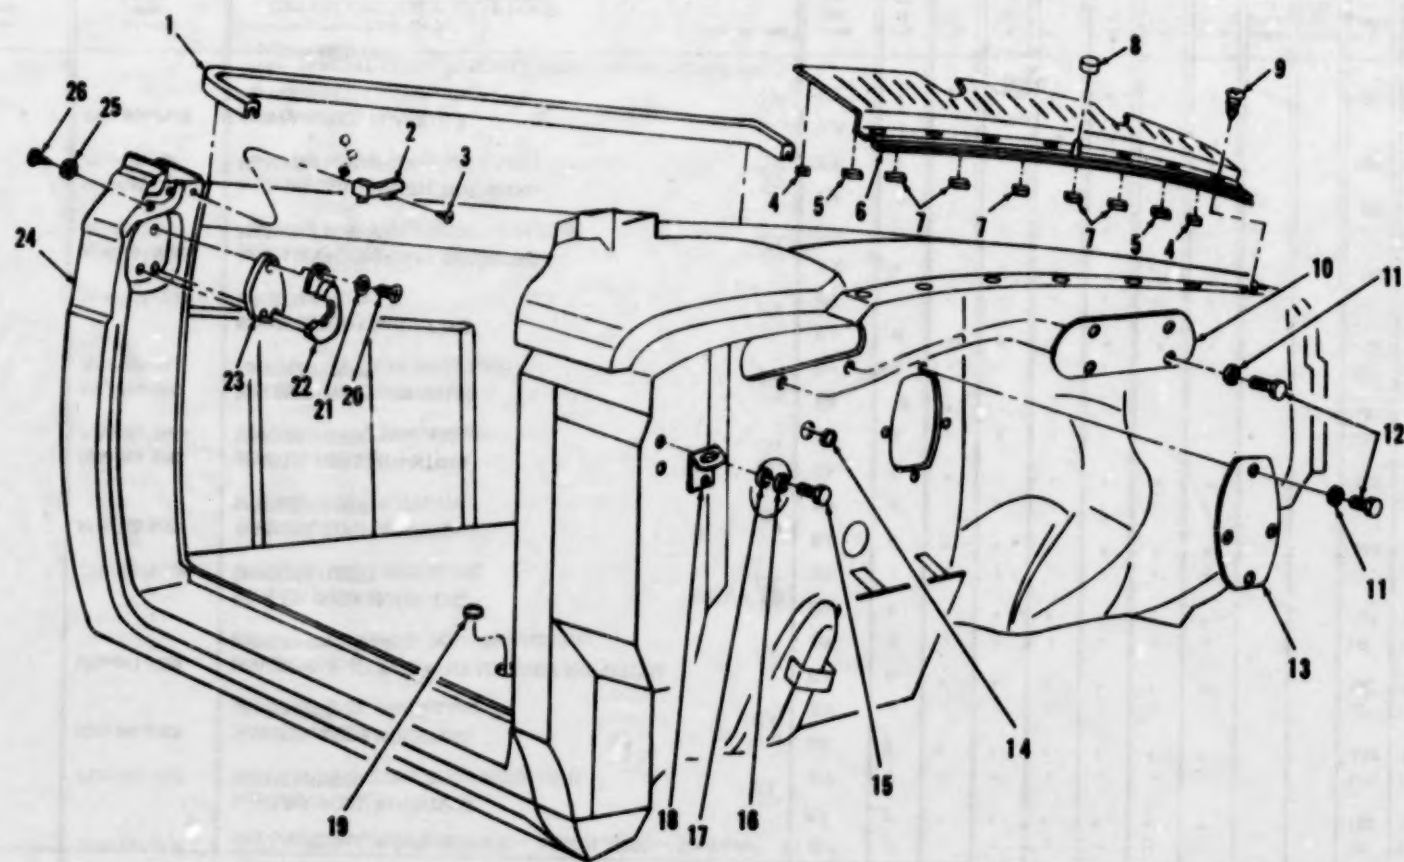

AT 41364

Figure 97. Front End Covers and Related Parts

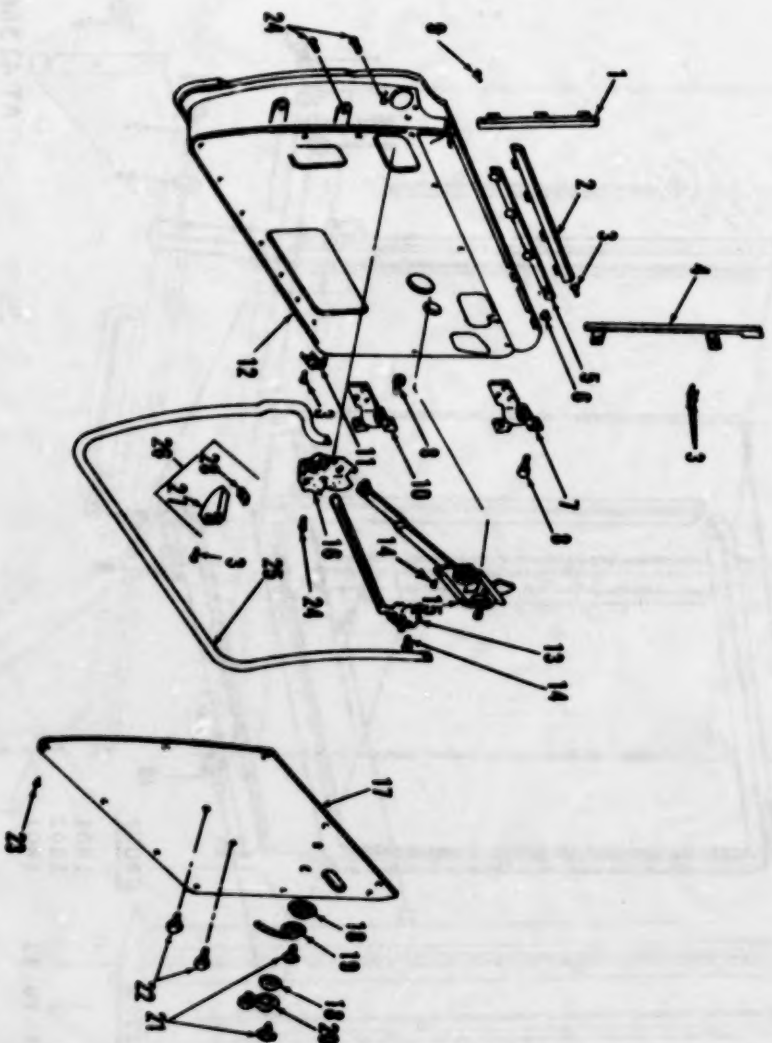


Figure 86. Front Door Assembly (M715 and M720)

AT 41365

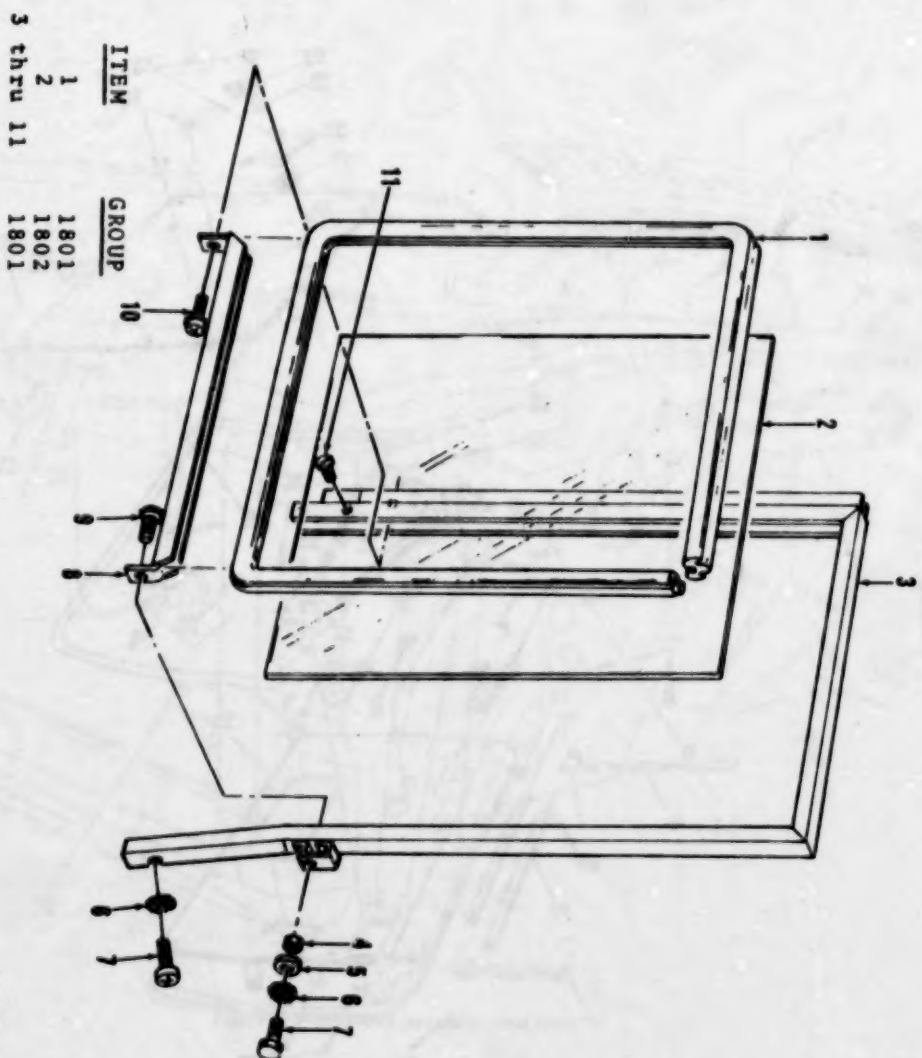


Figure 18. Front Door Panel Glass and Mounting Parts

AT 41366


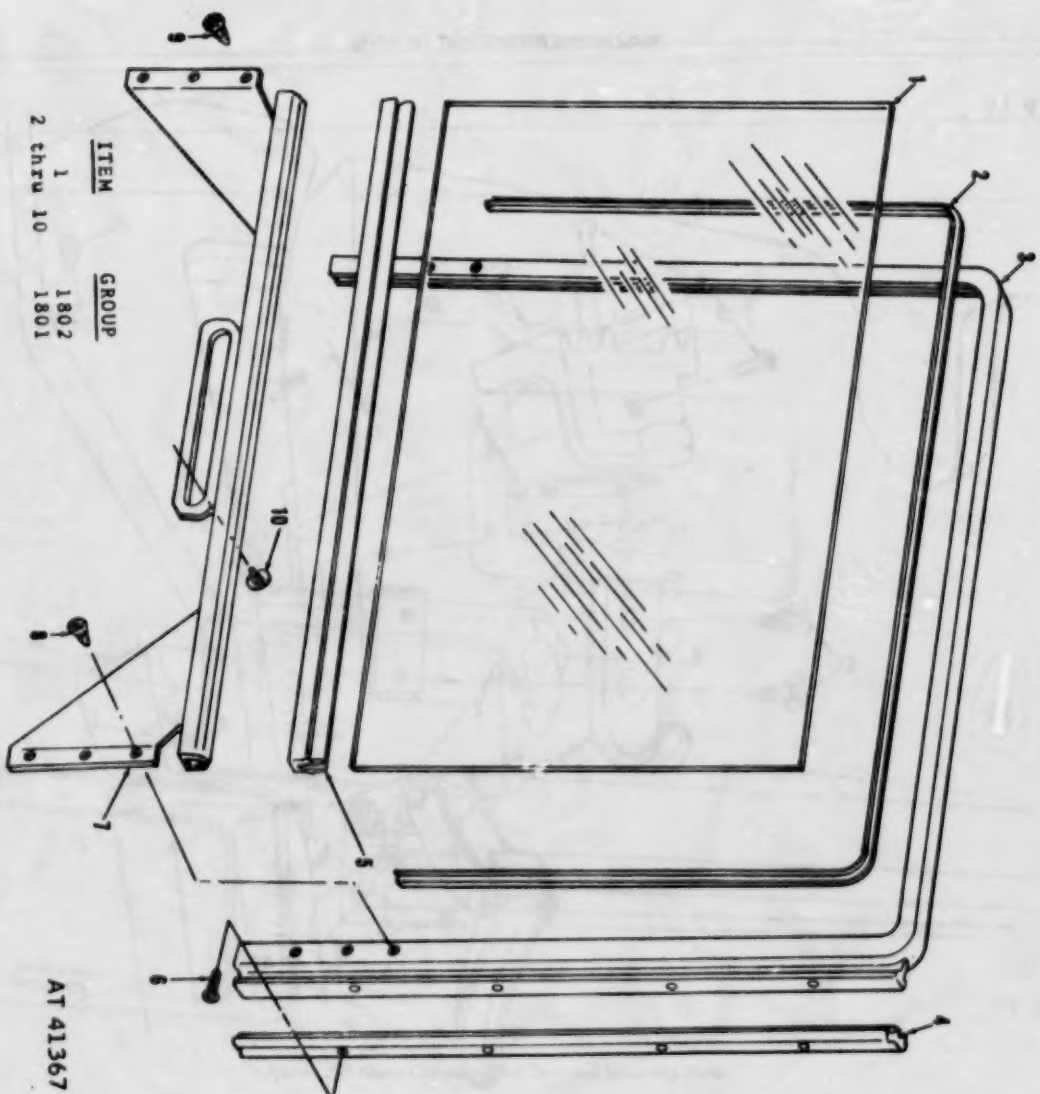



Figure 100. Front Door Glass and Mounting Parts

324

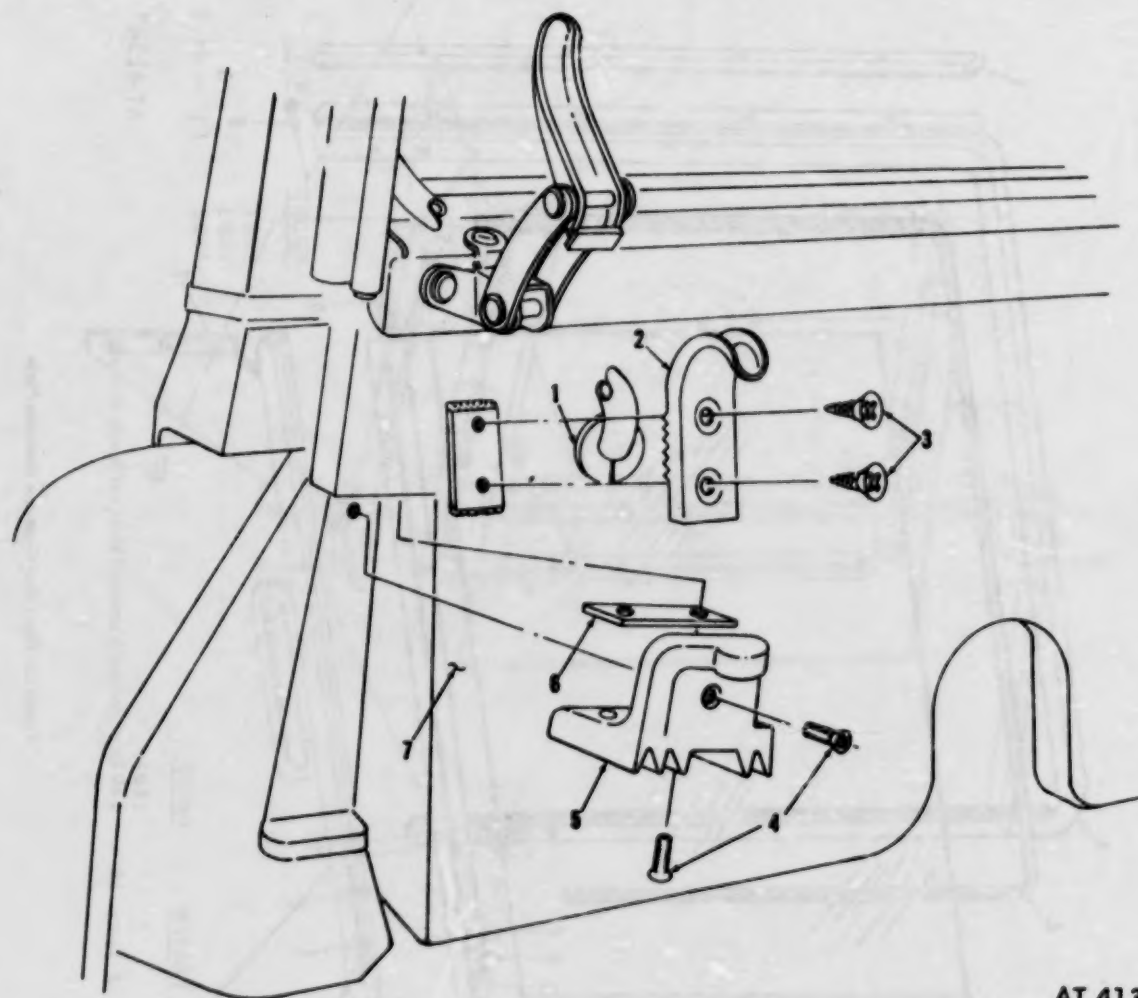


AT 41368

Figure 101. Door Seal and Related Parts

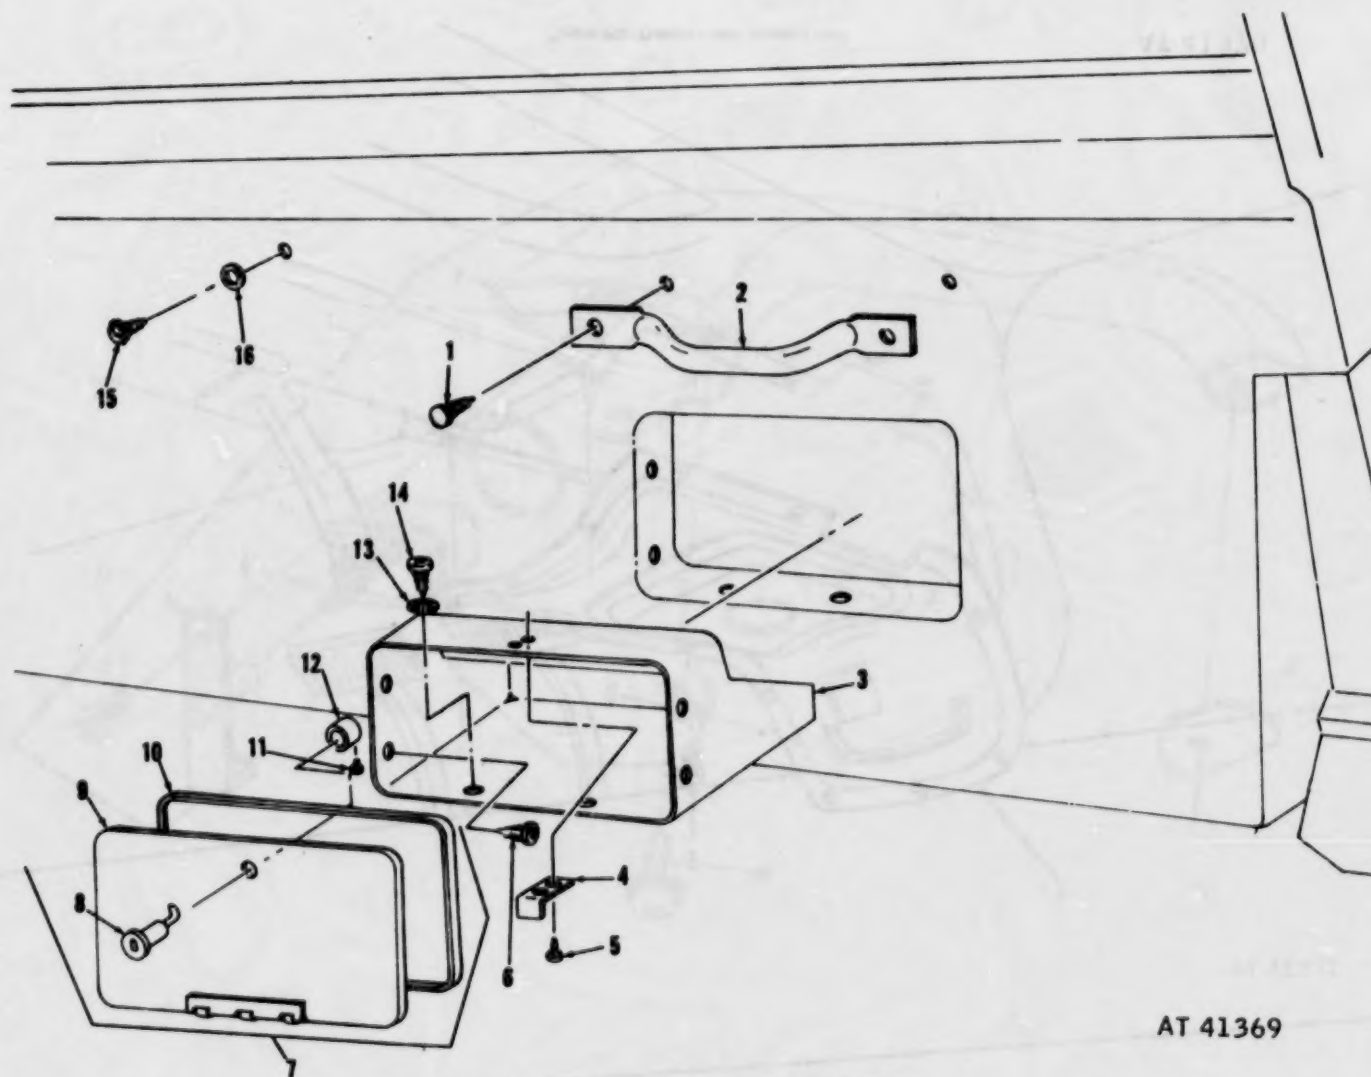


AT 41369

Figure 102. Glove Compartment, Door and Mounting Parts

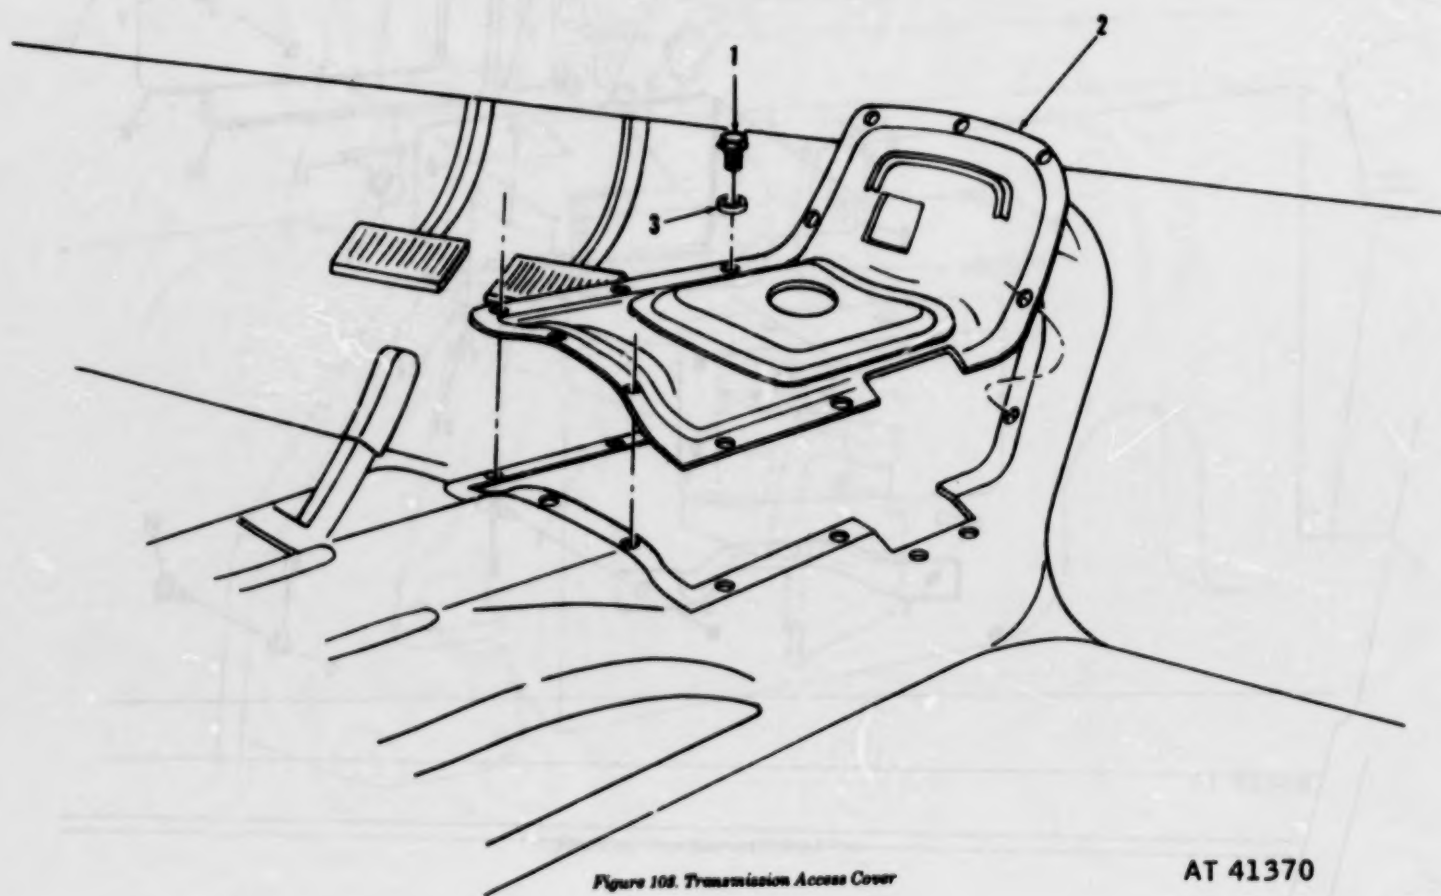


AT 41370

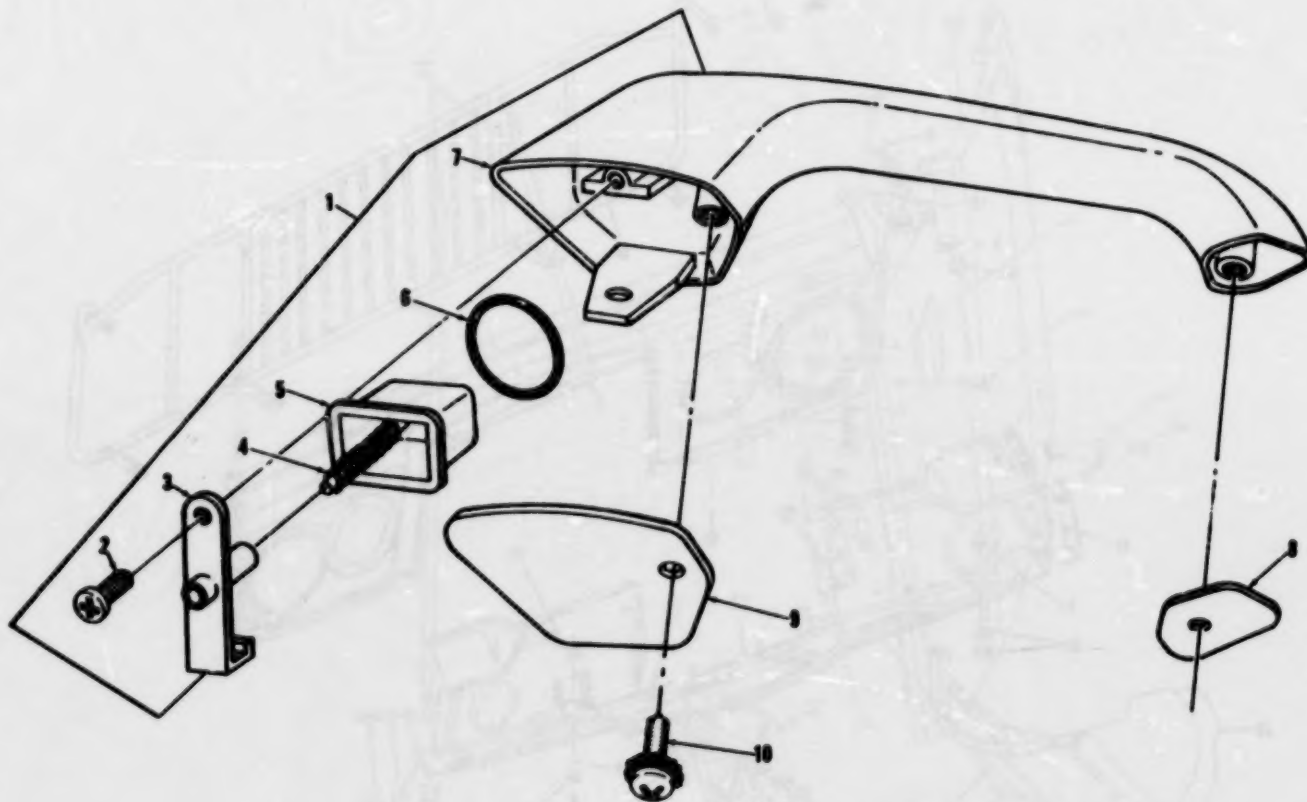

AT 41371

Figure 104. Front Door Handle

328

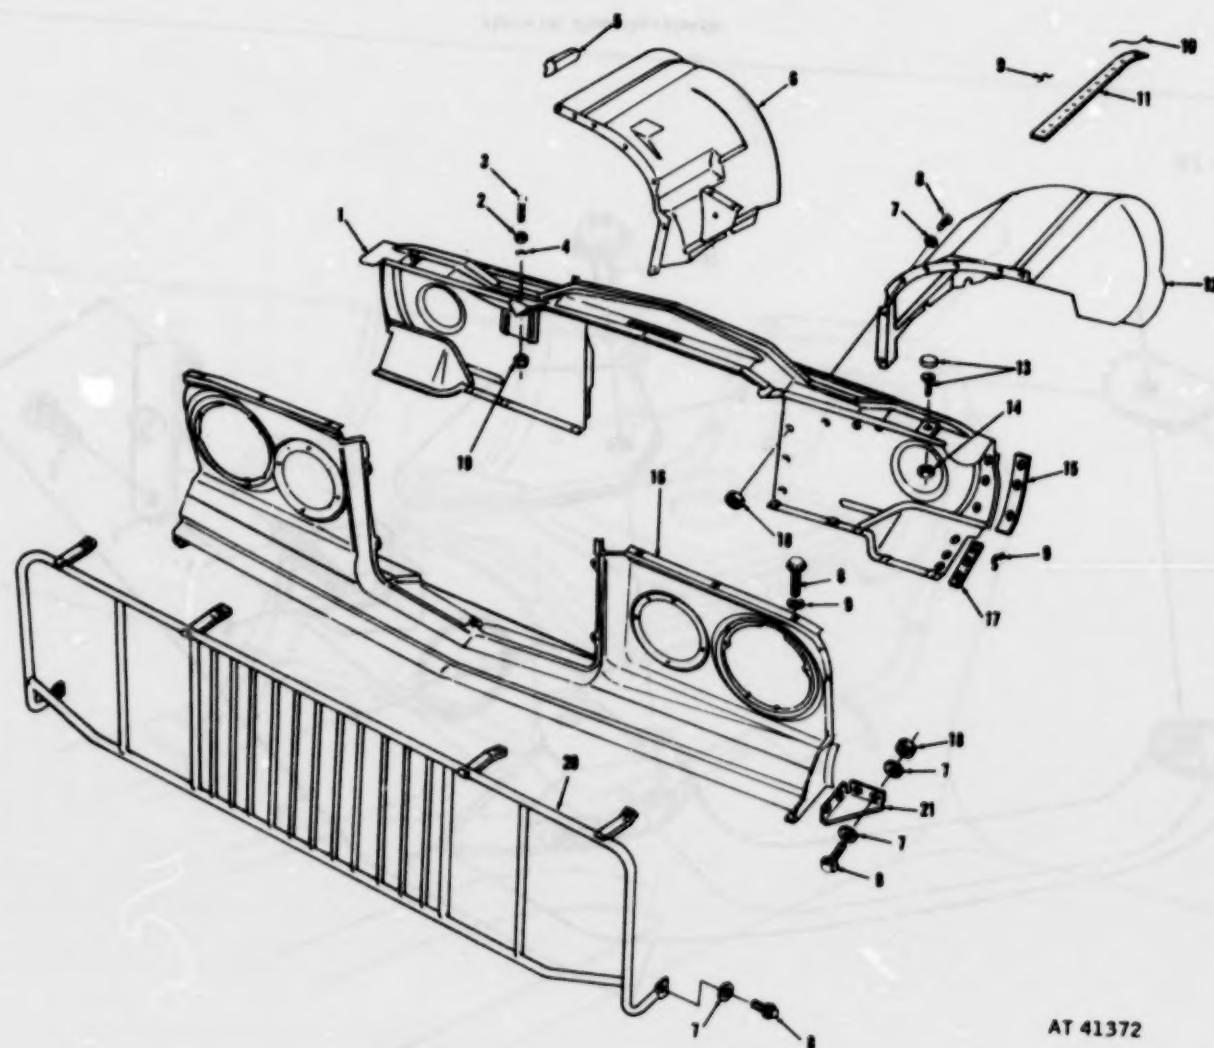

AT 41372

Figure 105. Front End Grille, Fender Shields and Related Parts

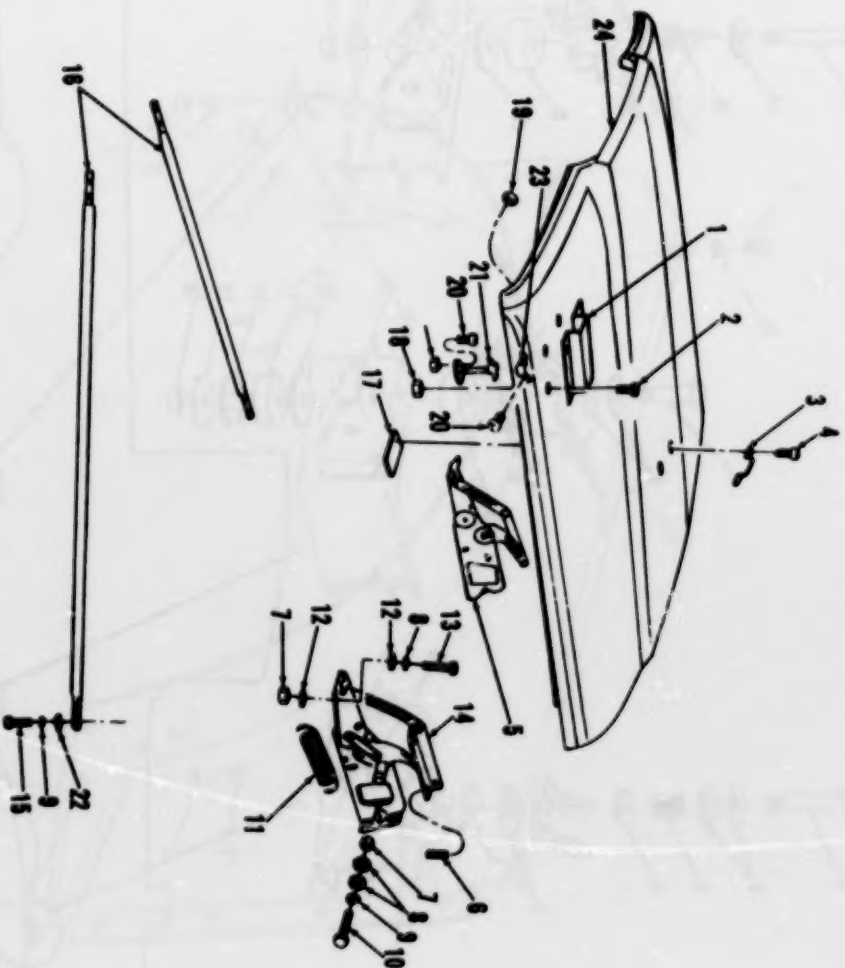


Figure 104. Hood and Mounting Parts

AT 41373

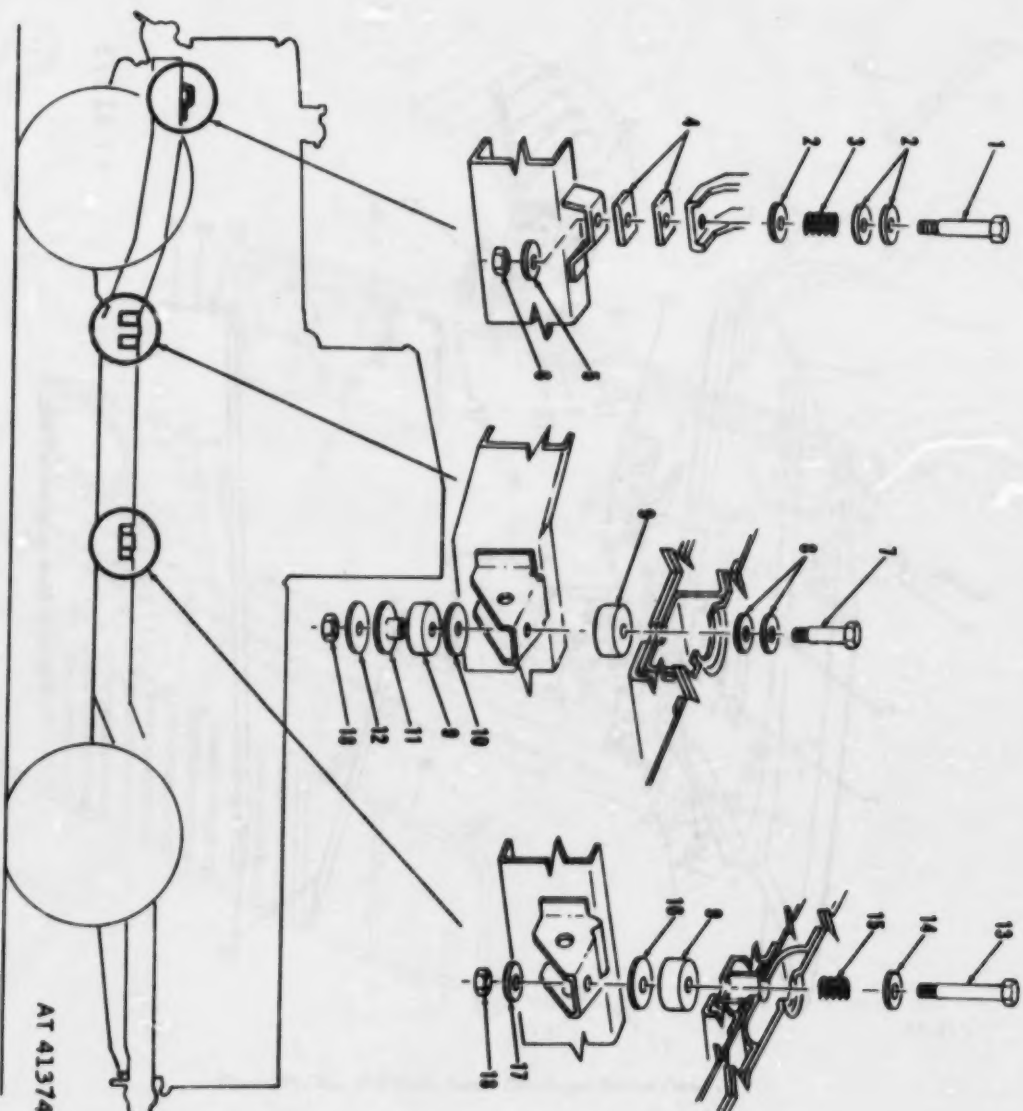


Figure 107. Front Body Hold-down Parts


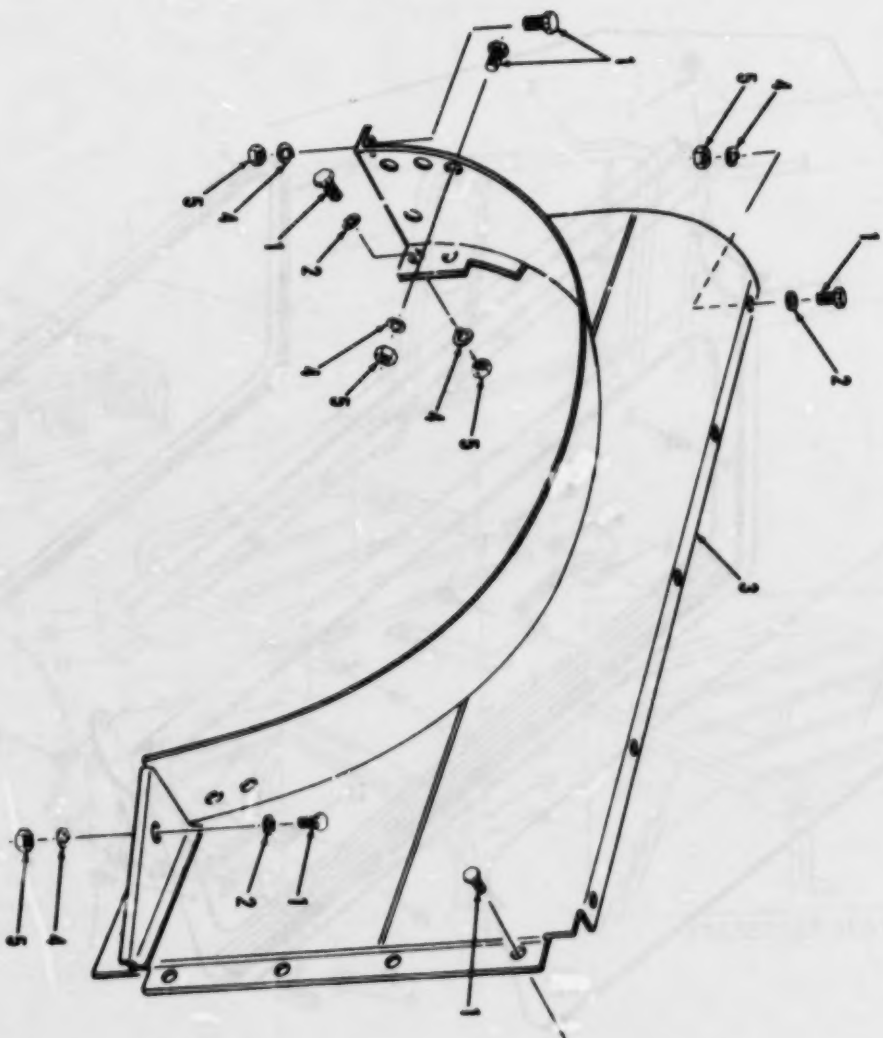


Figure 108. Front/End View


AT 41375

332

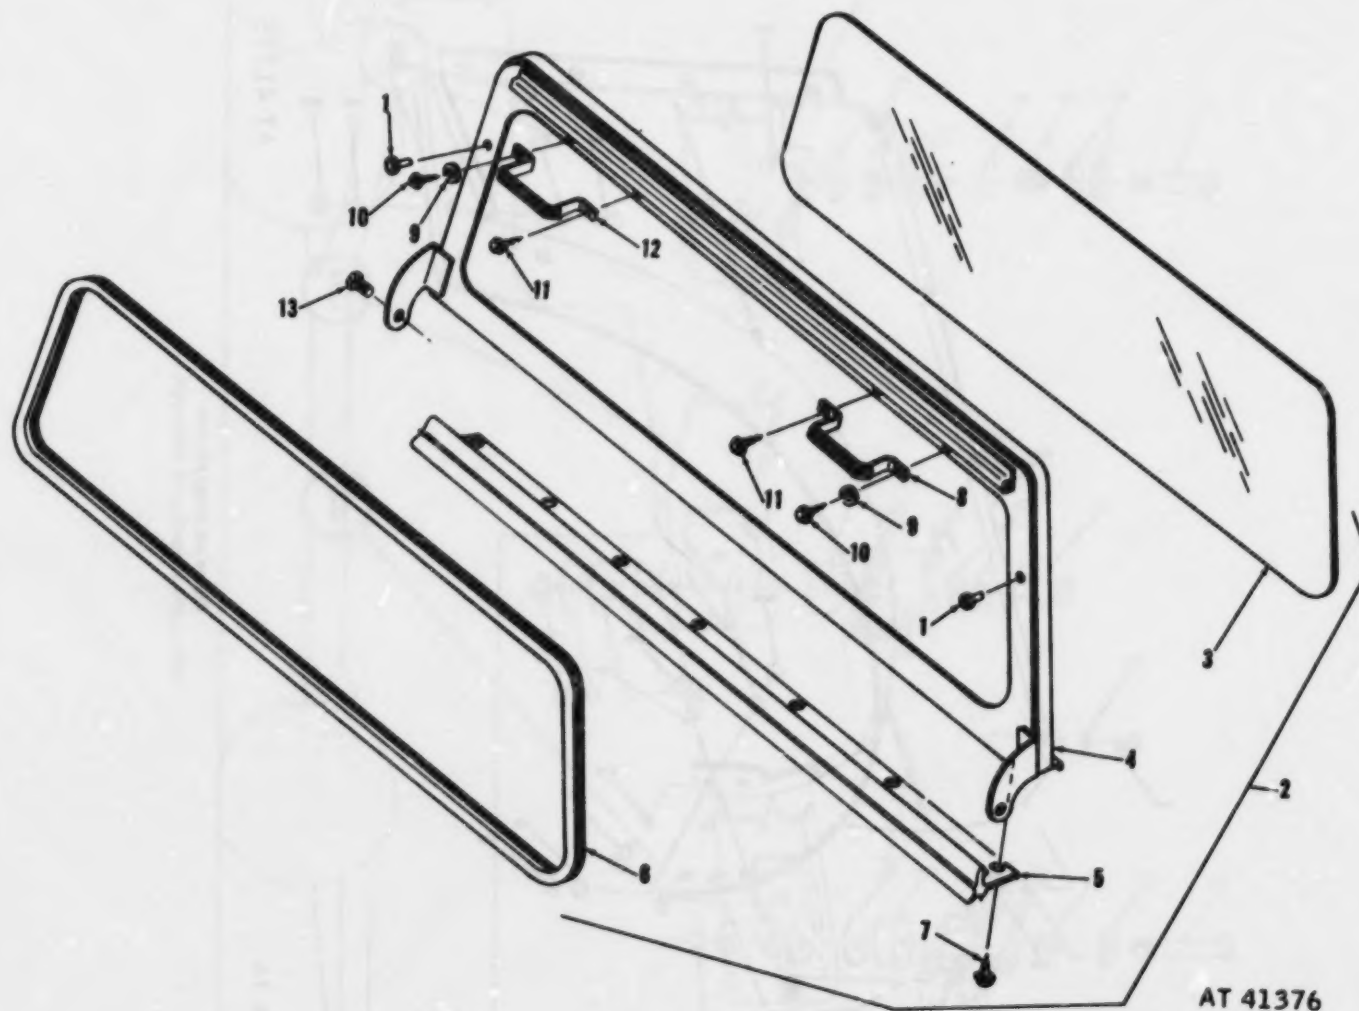

AT 41376

Figure 100. Windshield Assembly

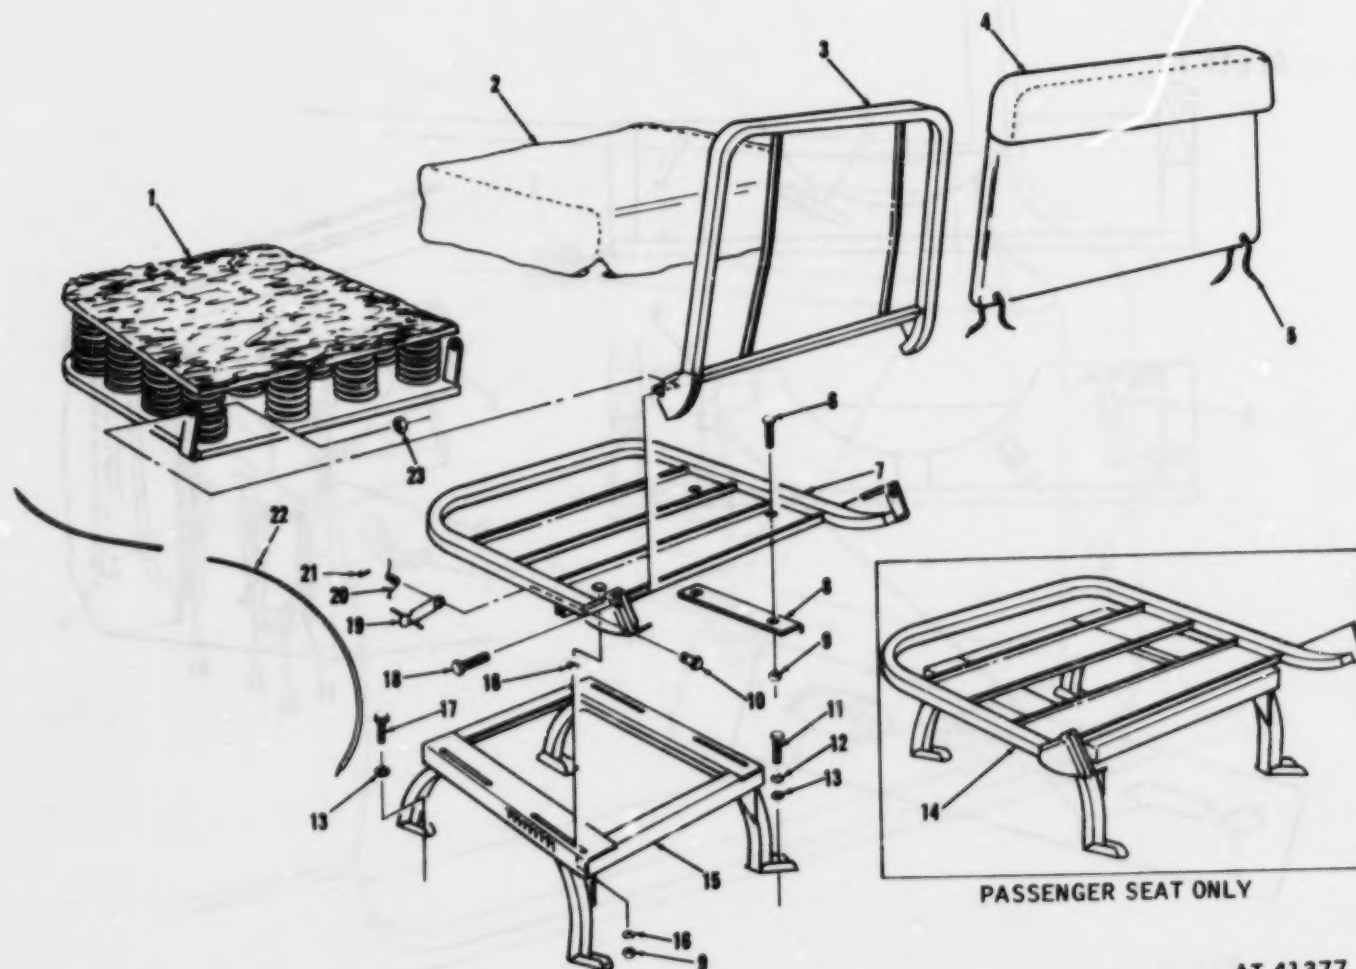

AT 41377

Figure 110. Drivers and Passengers Seats and Mounting Parts

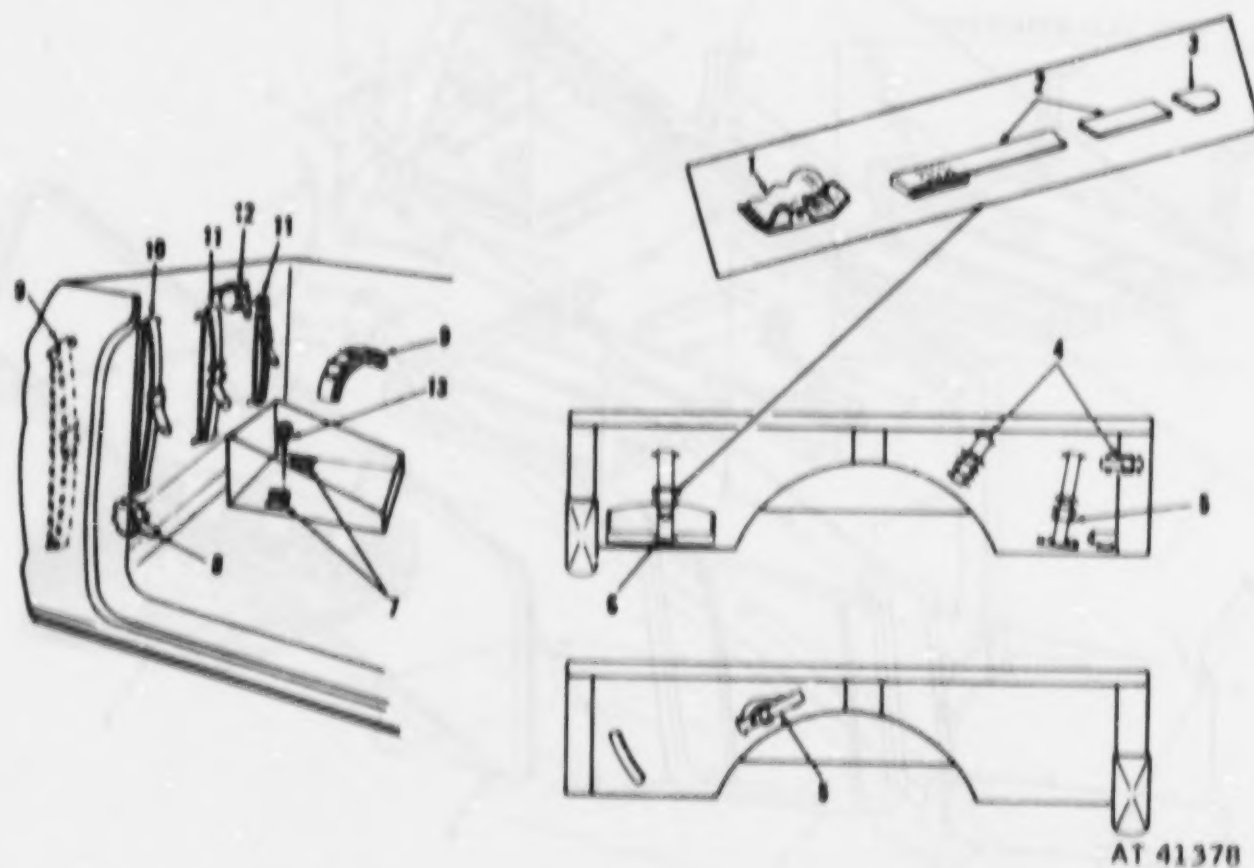


Figure 111. Storage Strap


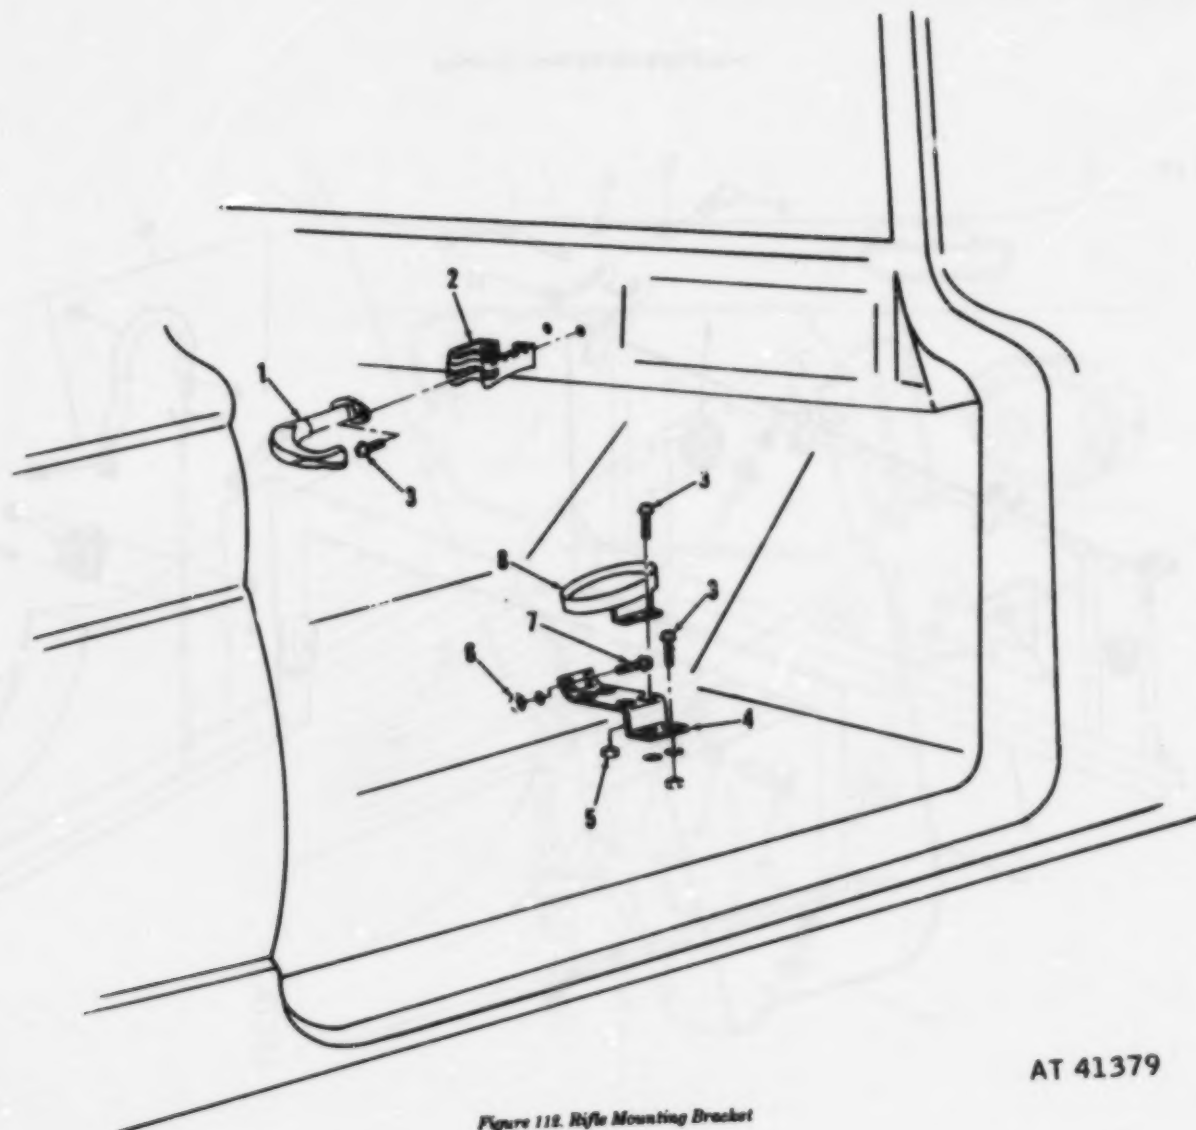


Figure 118. Rifle Mounting Bracket

AT 41379

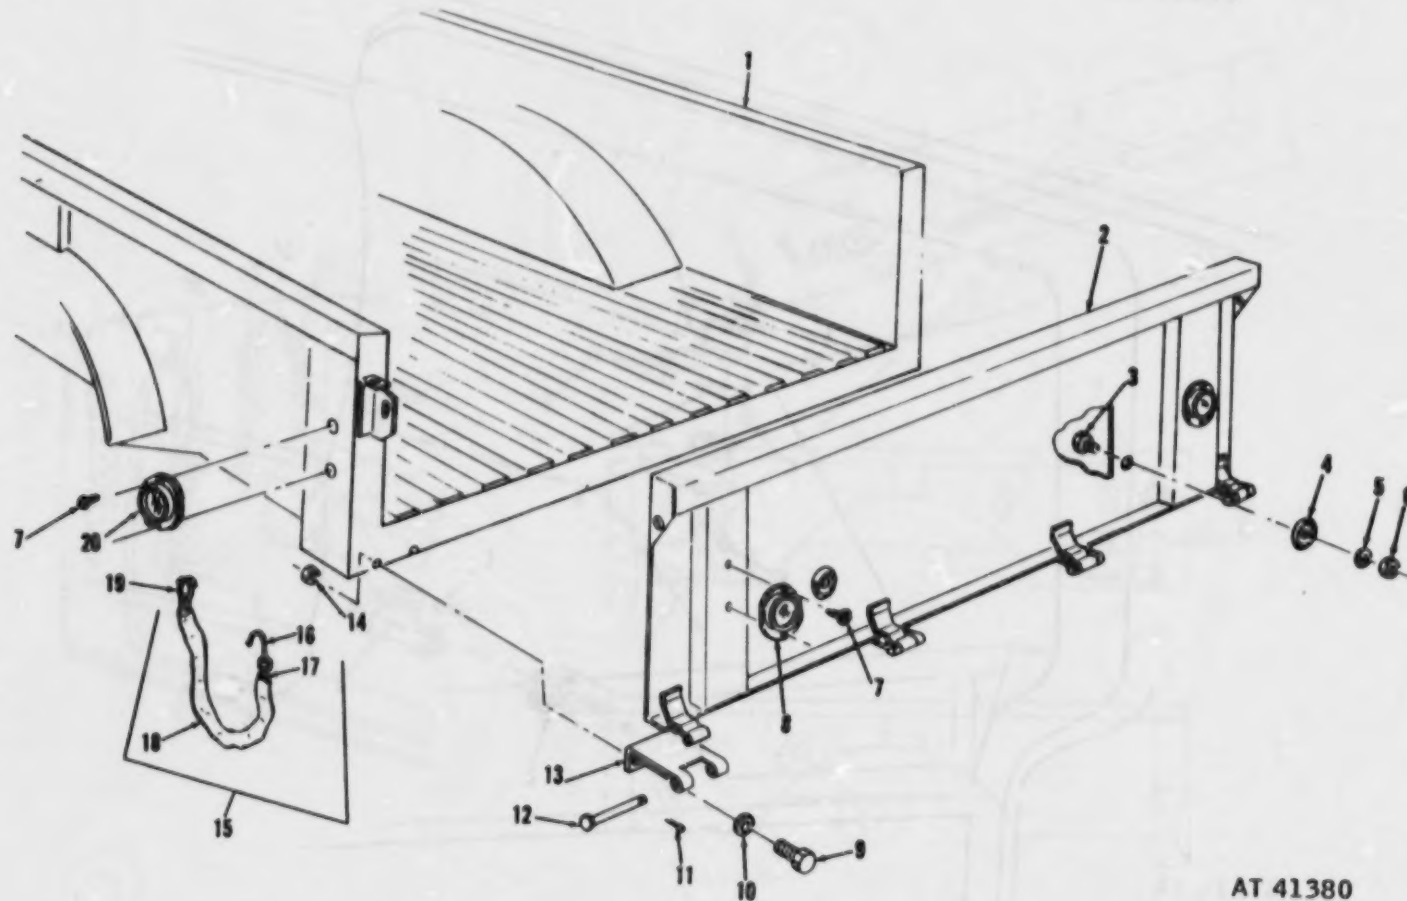

AT 41380

Figure 112. Cargo Box and Related Parts


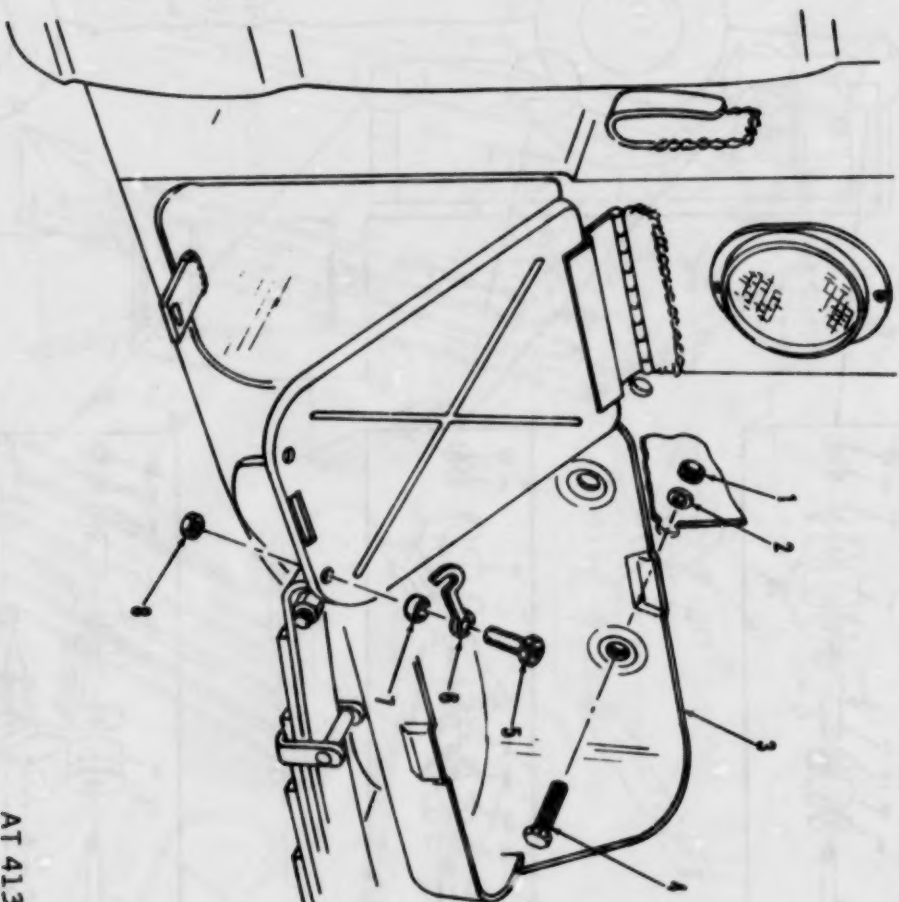



Figure 114. Container Storage and Tool Box

AT 41381

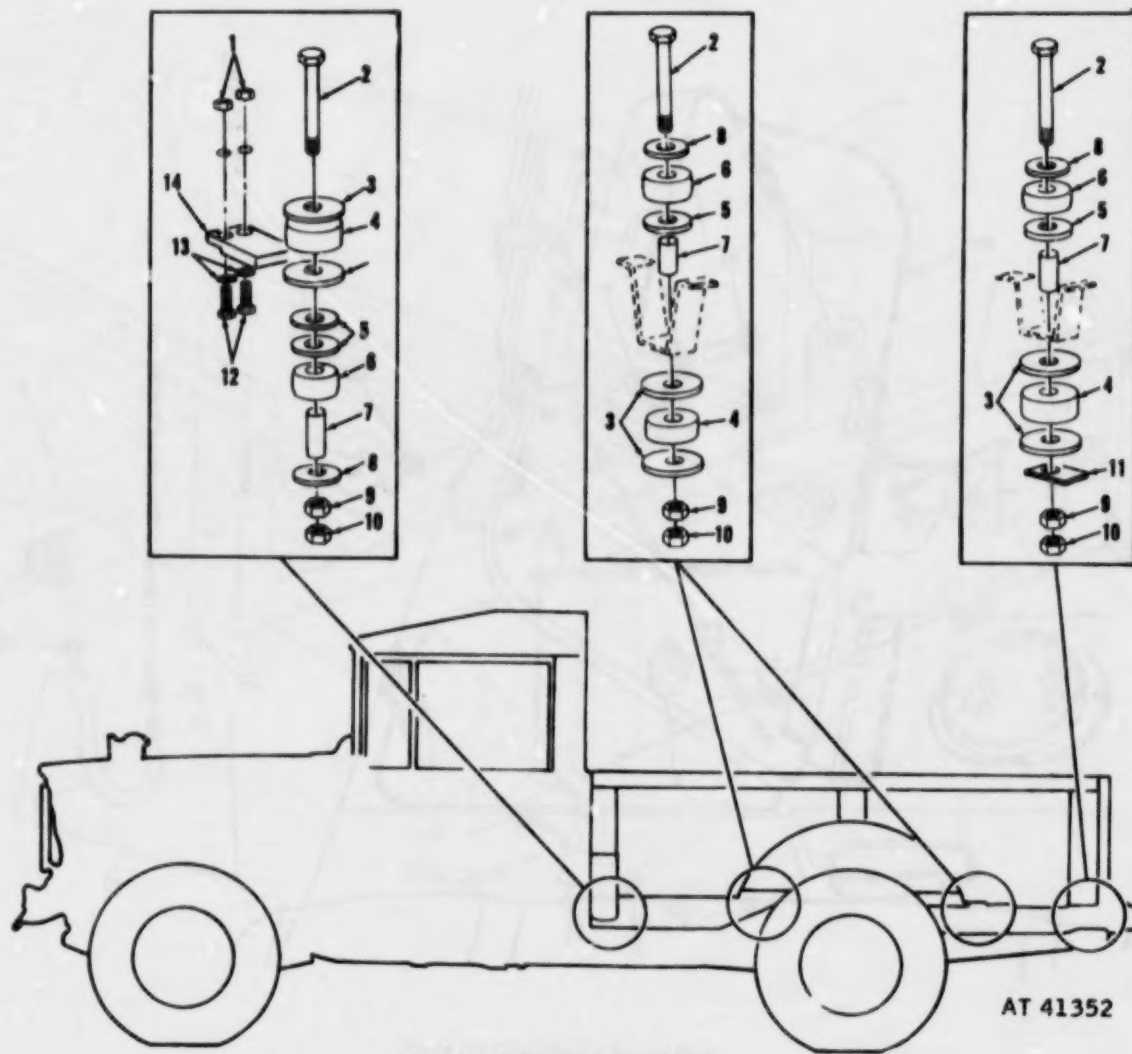


AT 41352

Figure 115. Cargo Box Mounting Parts

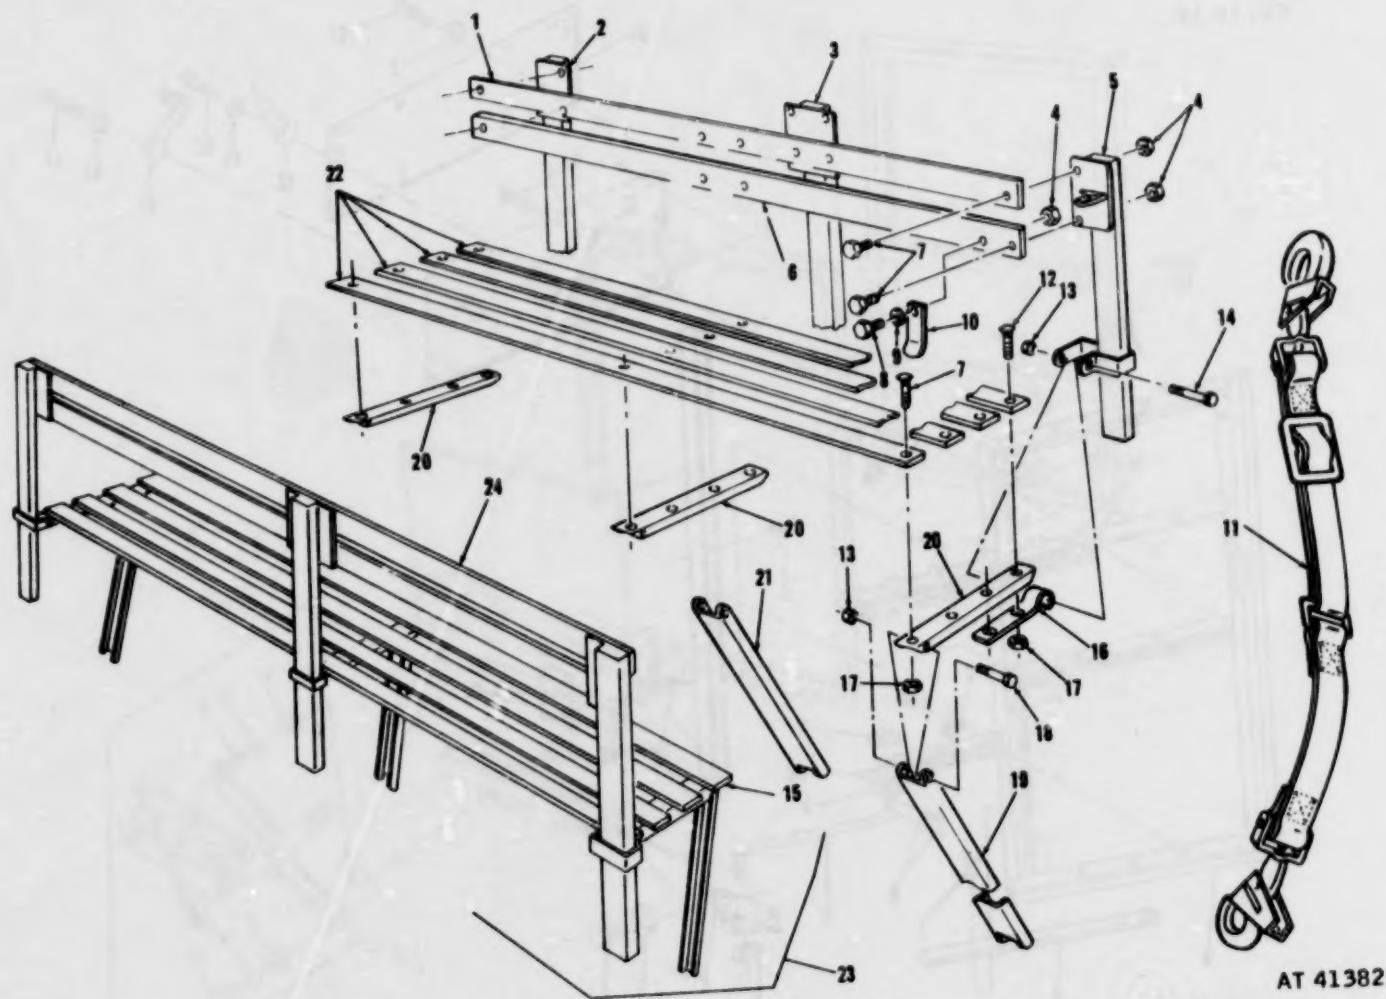


AT 41382

Figure 116. Rack and Troop Seats

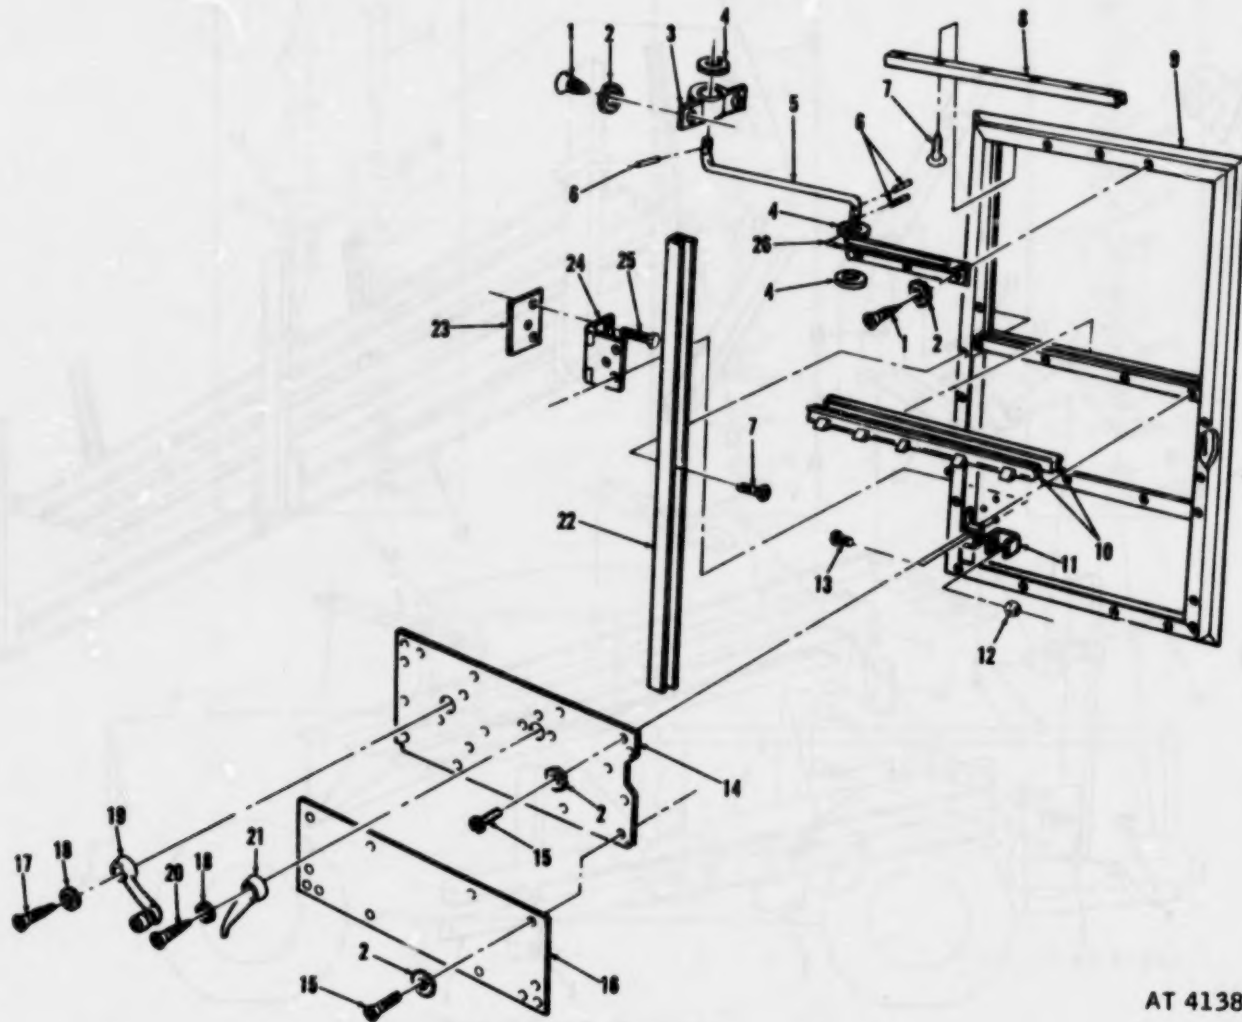

AT 41383

Figure 117. Drivers and Passengers Door and Related Parts (M725)

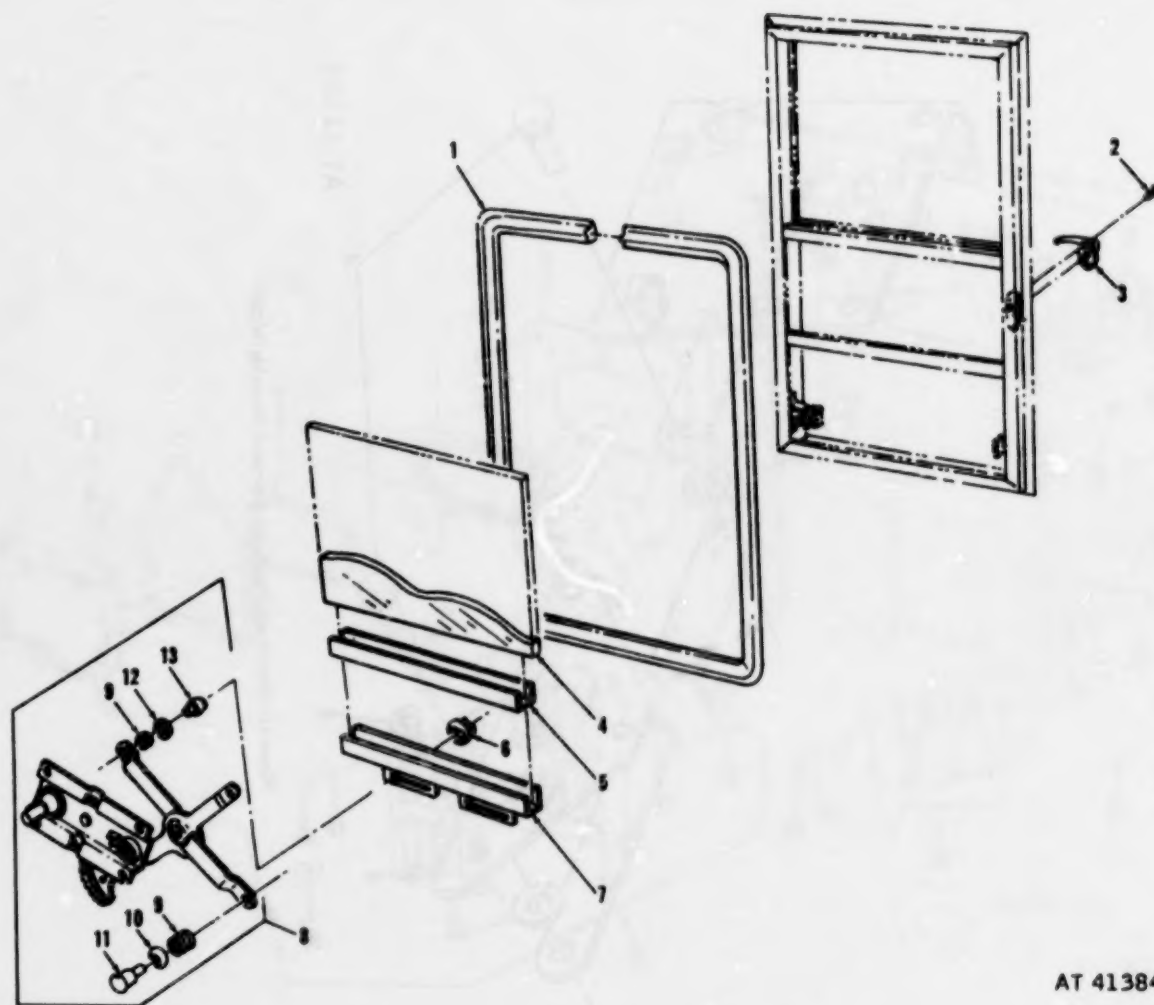

AT 41384

Figure 118. Drivers and Passengers Door Regulator, Window and Related Parts (M725)


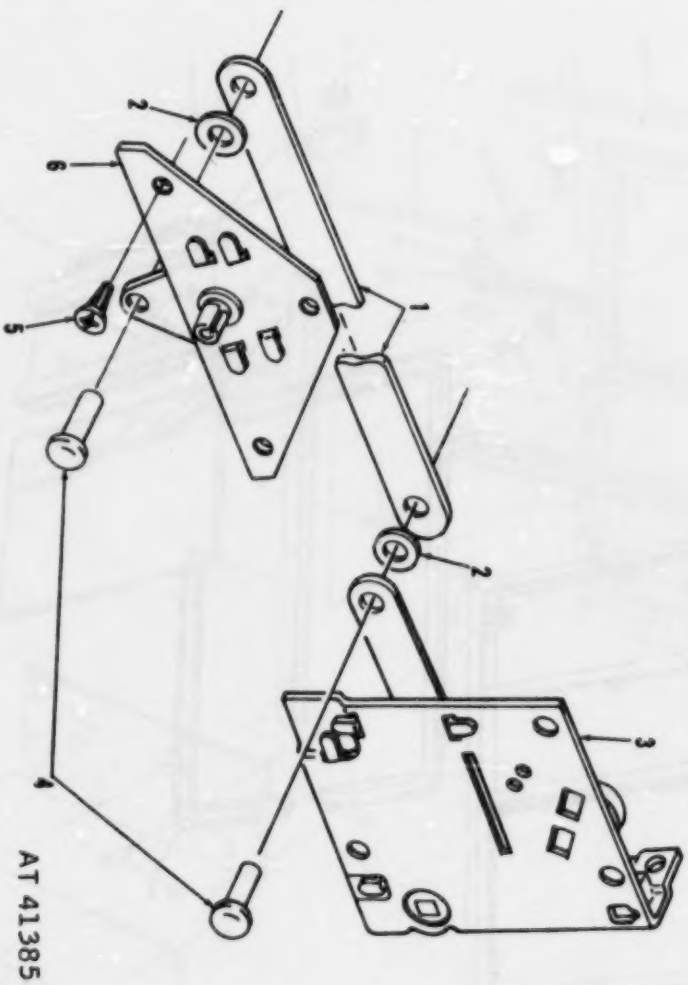


Figure 119. Drivers and Passengers Door Lock Assembly (N775)

AT 41385

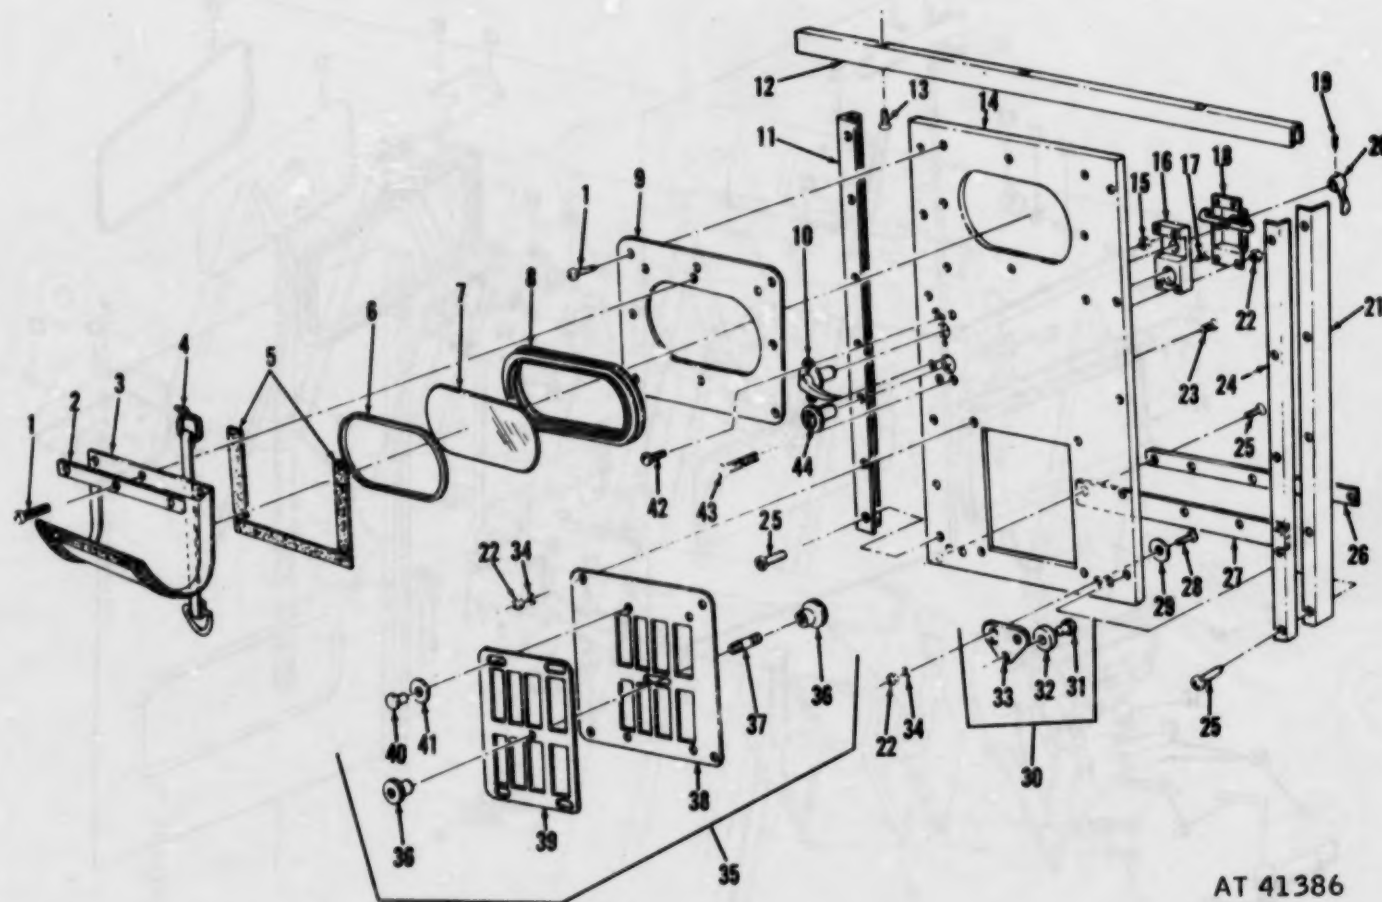

AT 41386

Figure 120. Partition Door Assembly and Related Parts

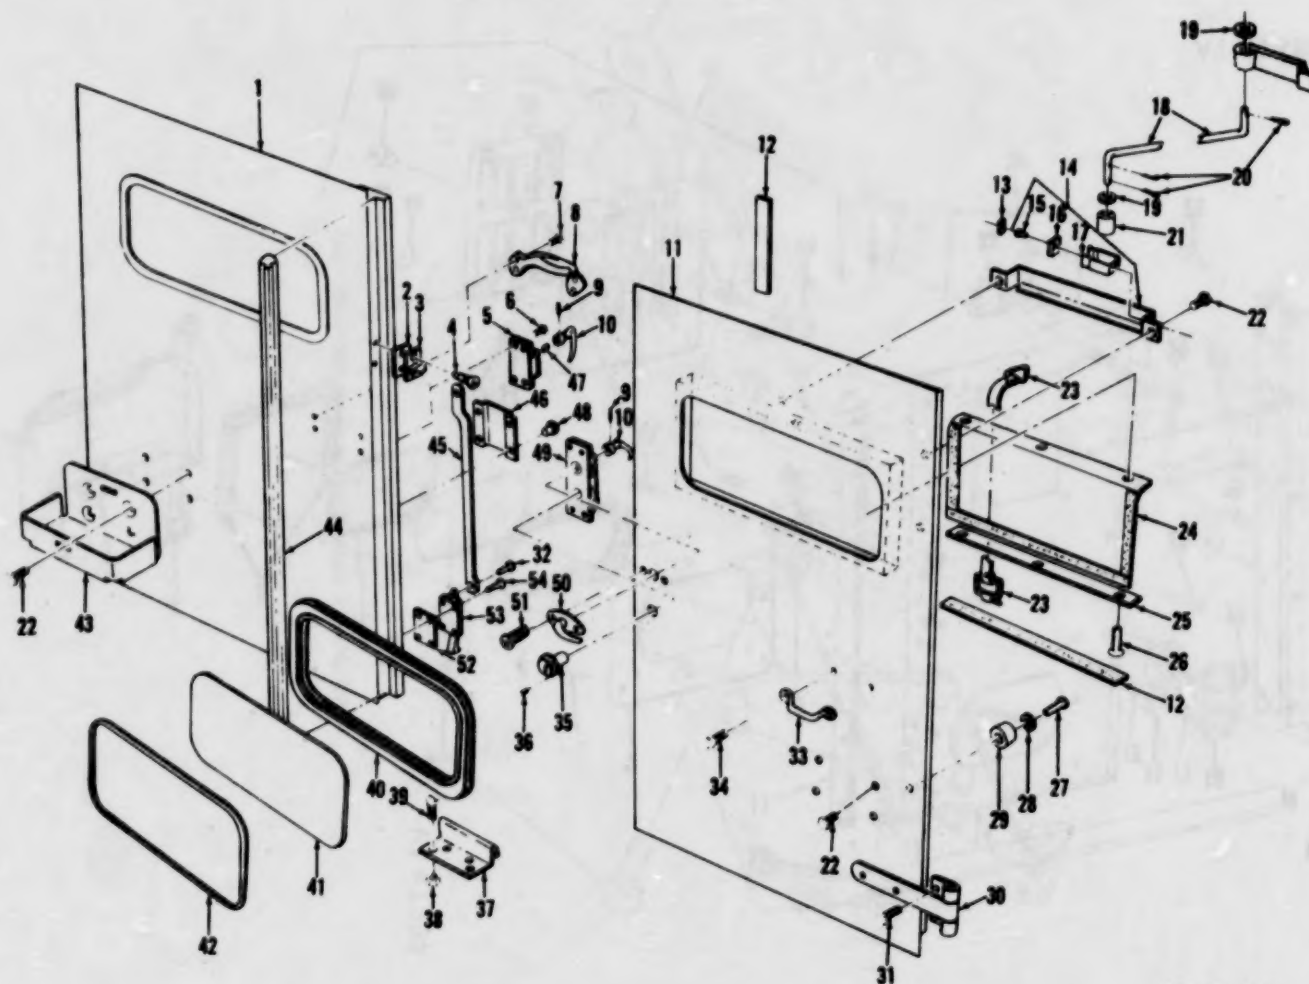


Figure 121. Ambulance Rear Doors and Related Parts

AT 41387


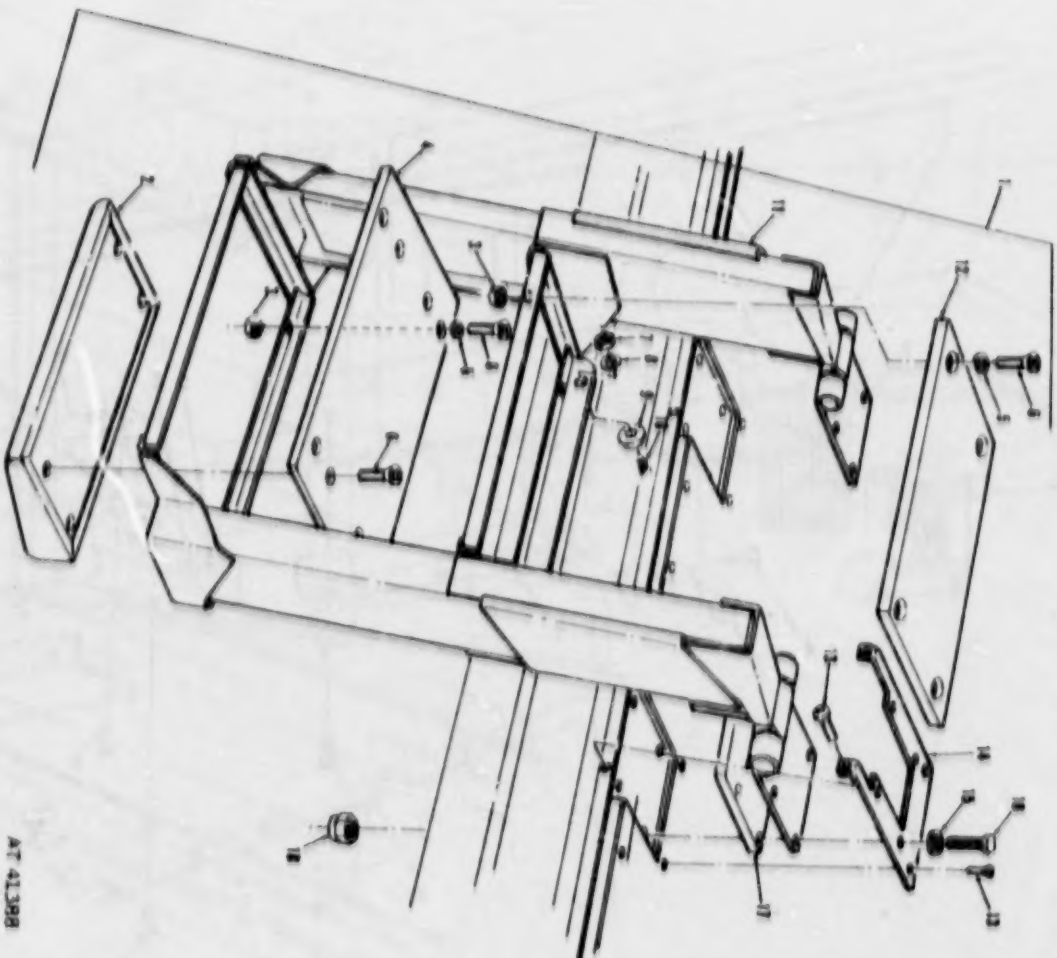


Figure 122. River Ship and Attendance Seat


AT 41398

348

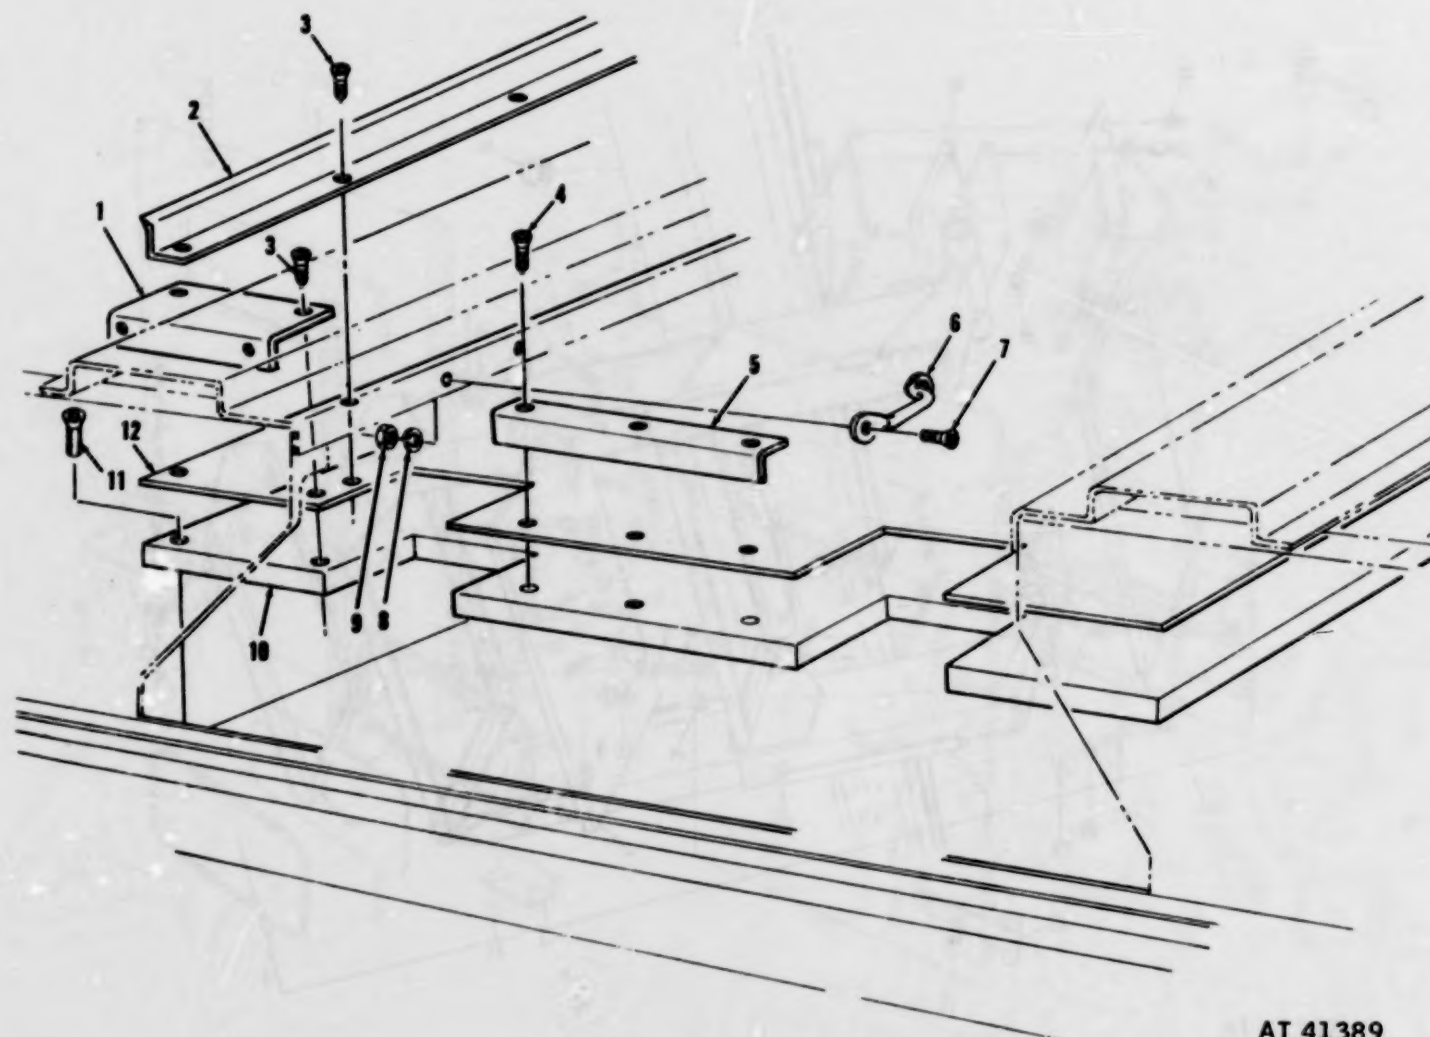


AT 41389

Figure 123. Ambulance Floor Board and Related Parts

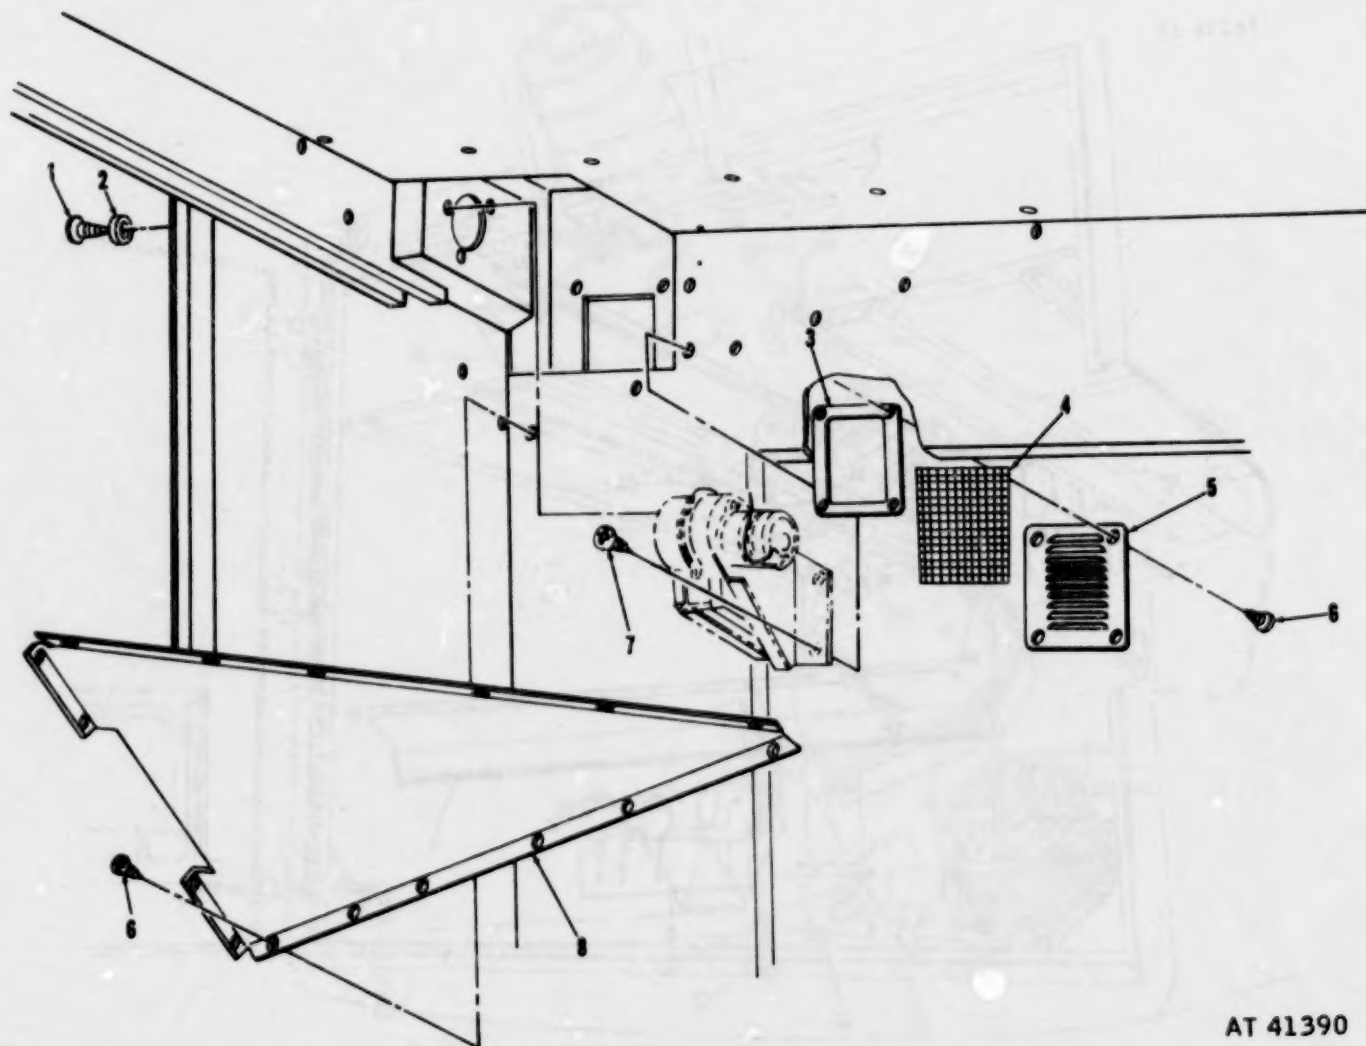

AT 41390

Figure 124. Exhaust Blower Duct, Cover and Mounting Parts

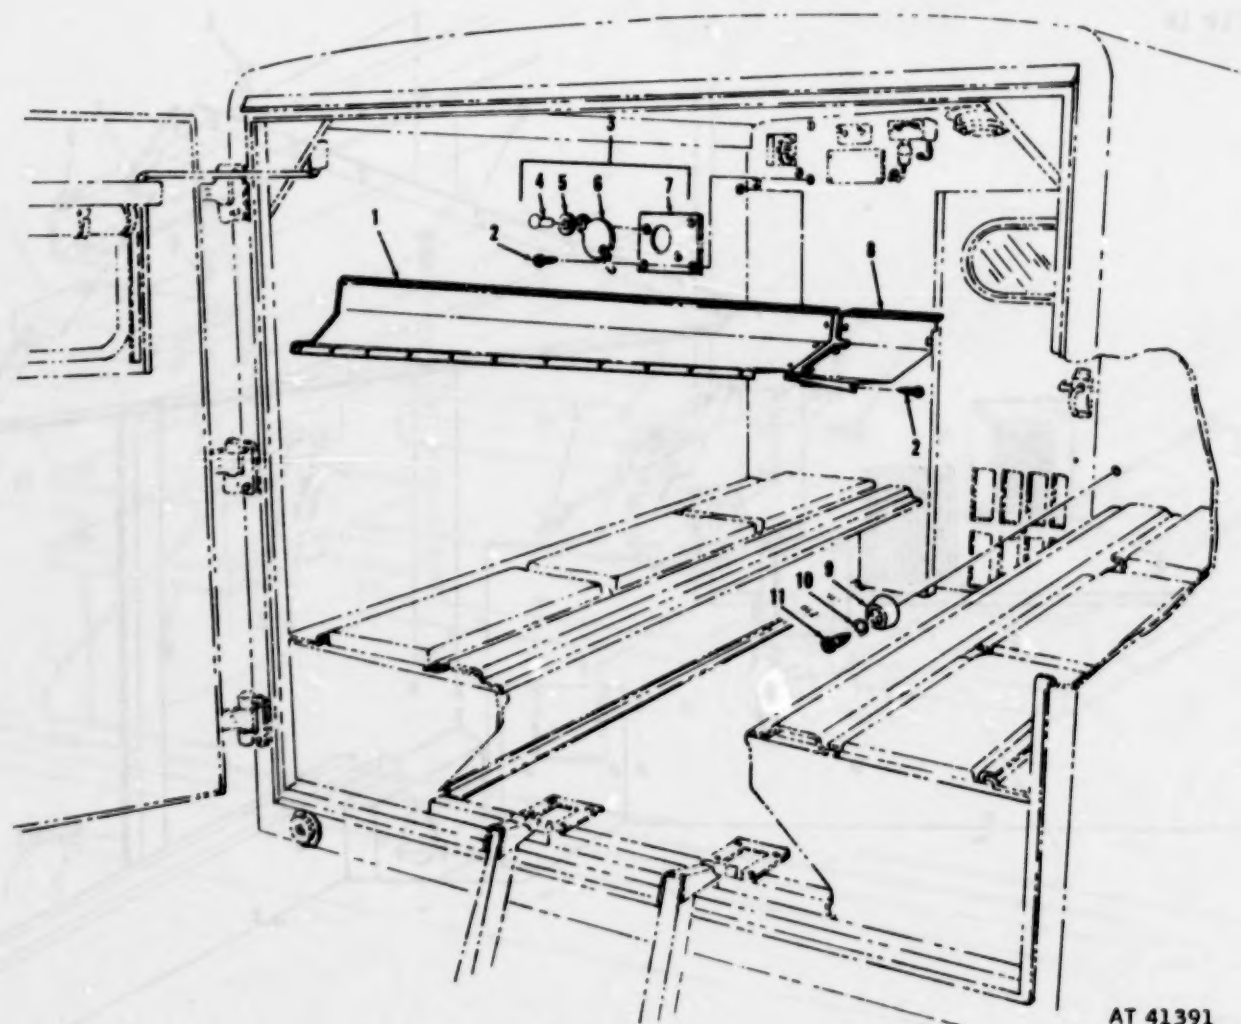

AT 41391

Figure 125. Ambulance Exhaust Vent Duct and Related Parts

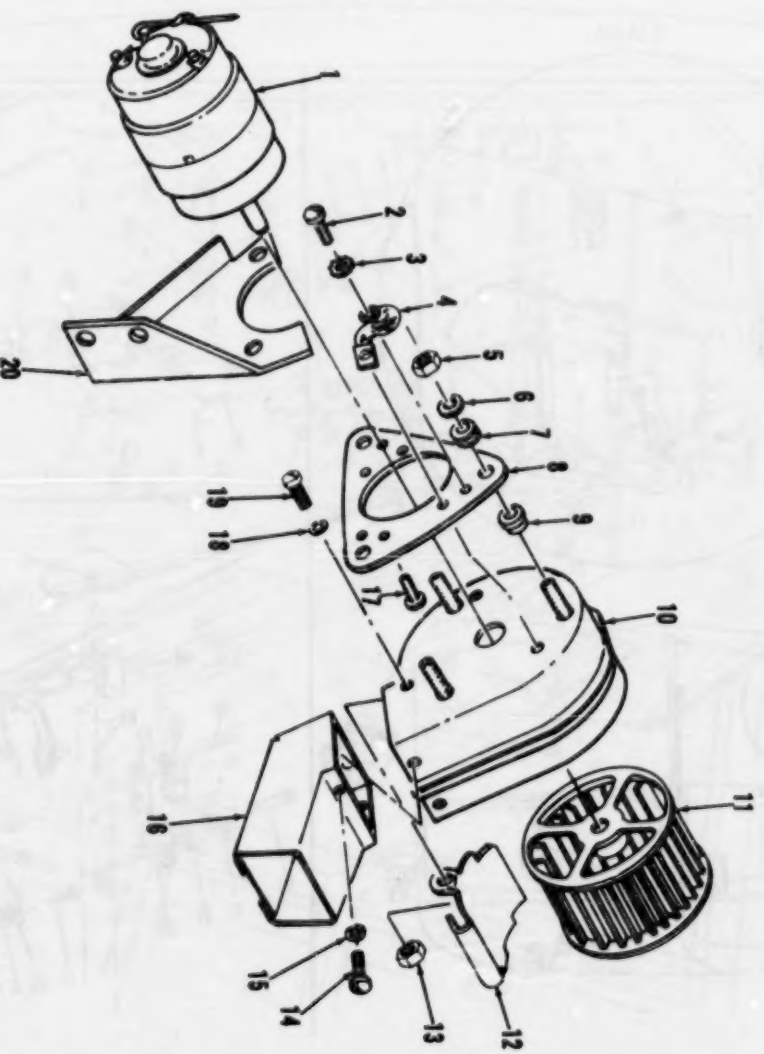


Figure 128. Schenck Blower Assembly

AT 41392

390


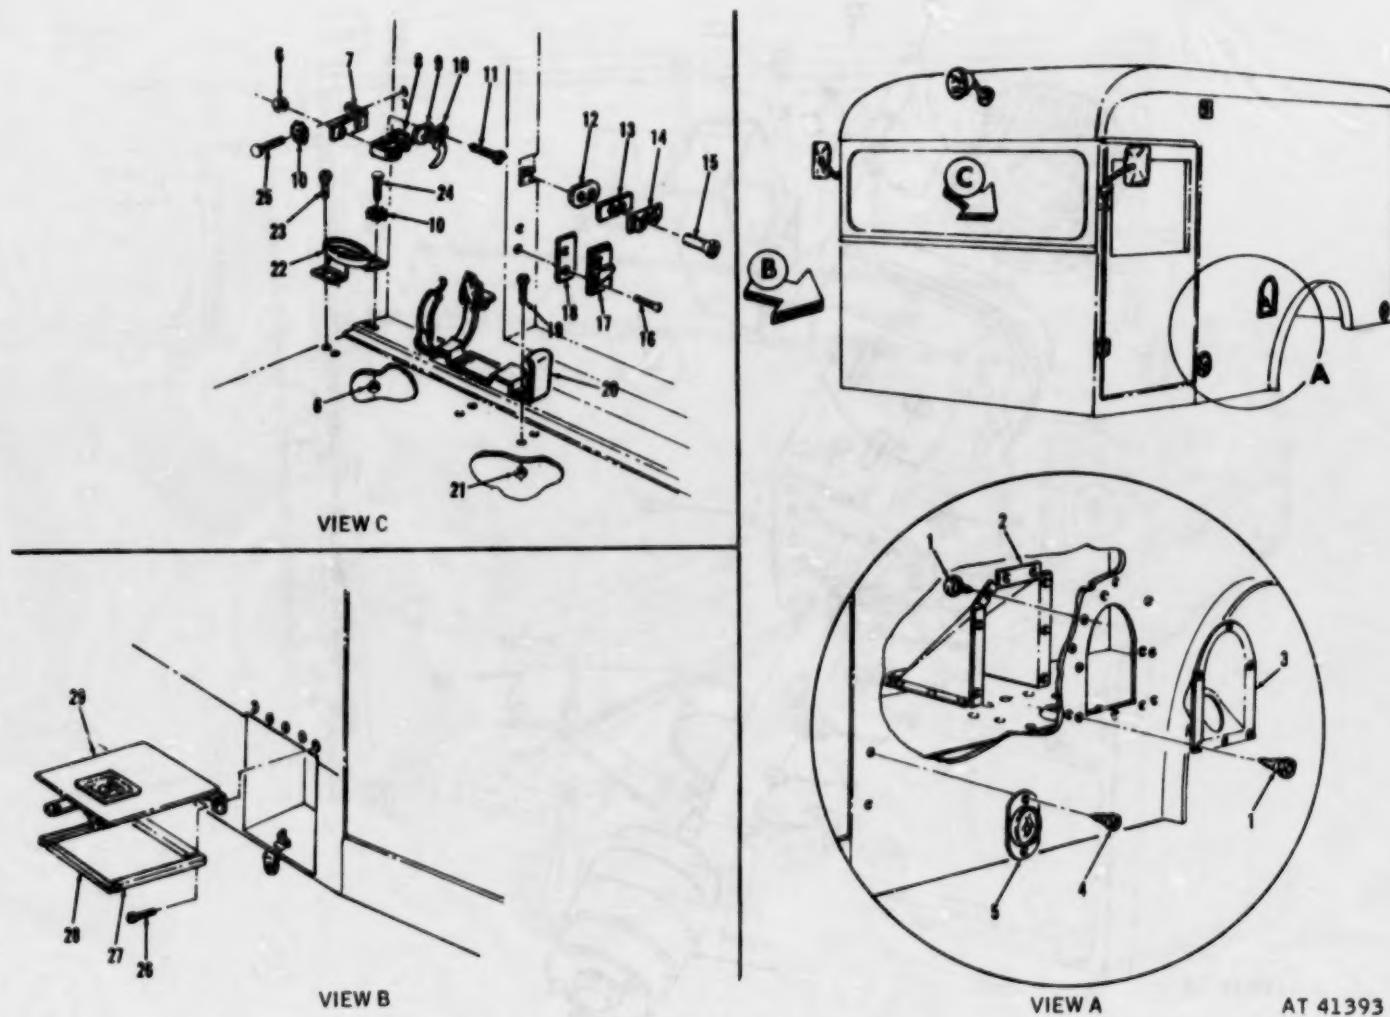


Figure 127. Ambulance Rear Compartment and Miscellaneous Items


AT 41393

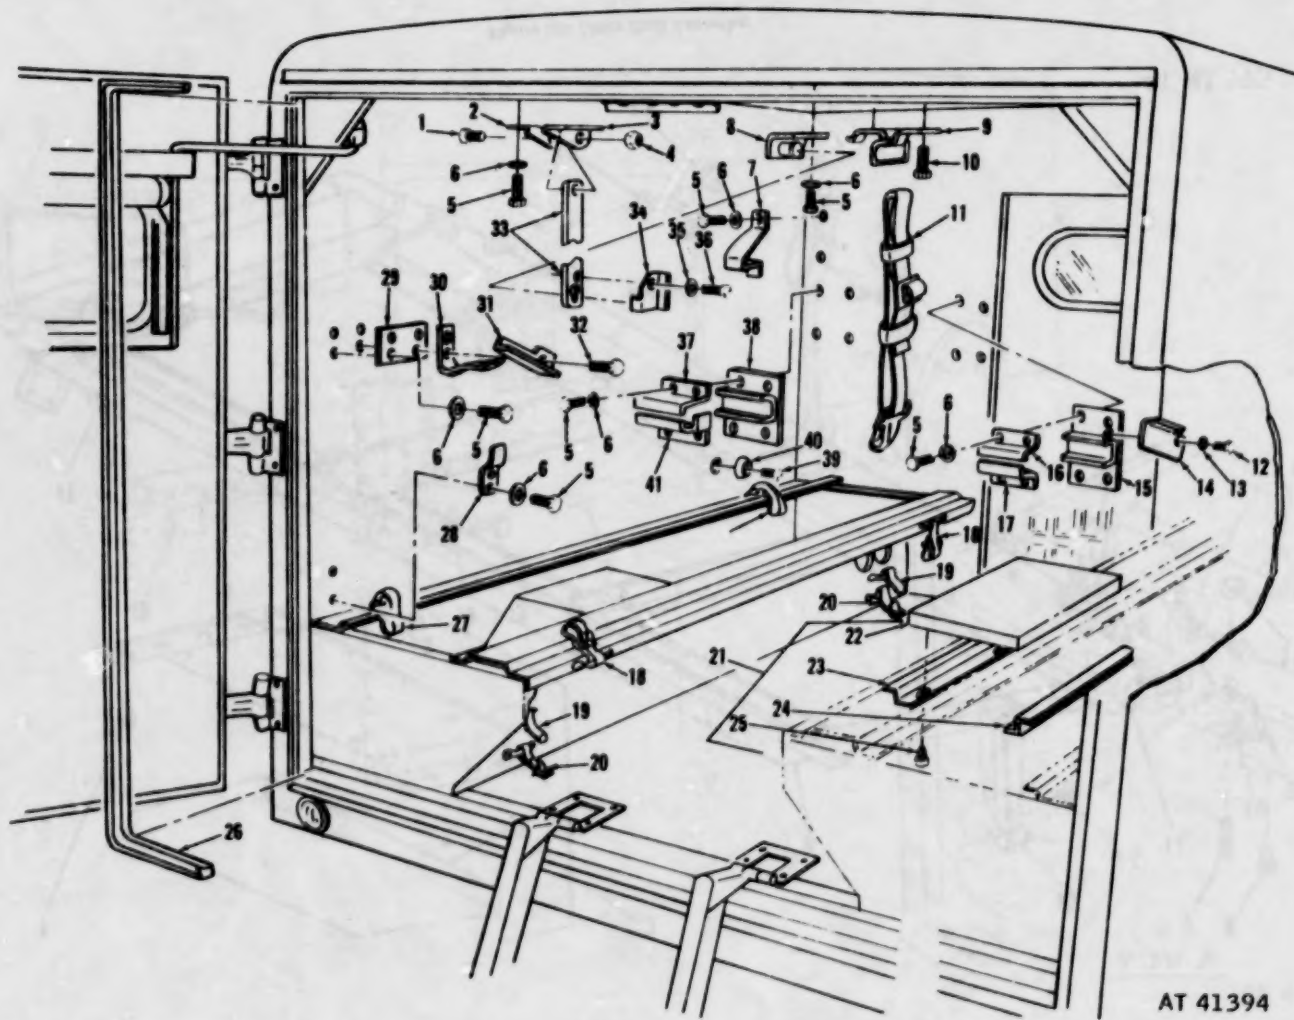

AT 41394


Figure 128. Litter Rack Hanger, Mounting Brackets and Related Parts

392

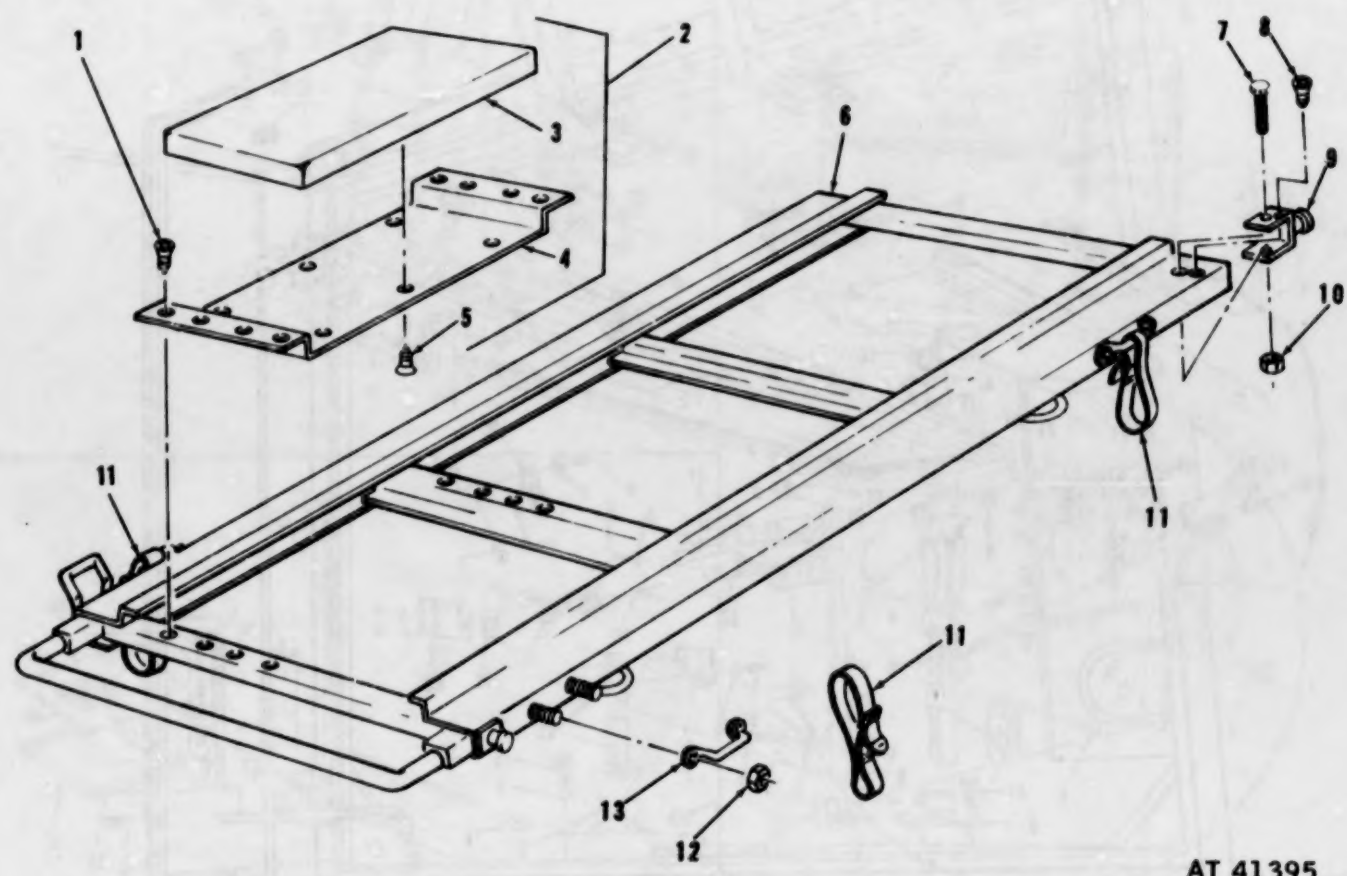


AT 41395

Figure 129. Litter Rack Assembly

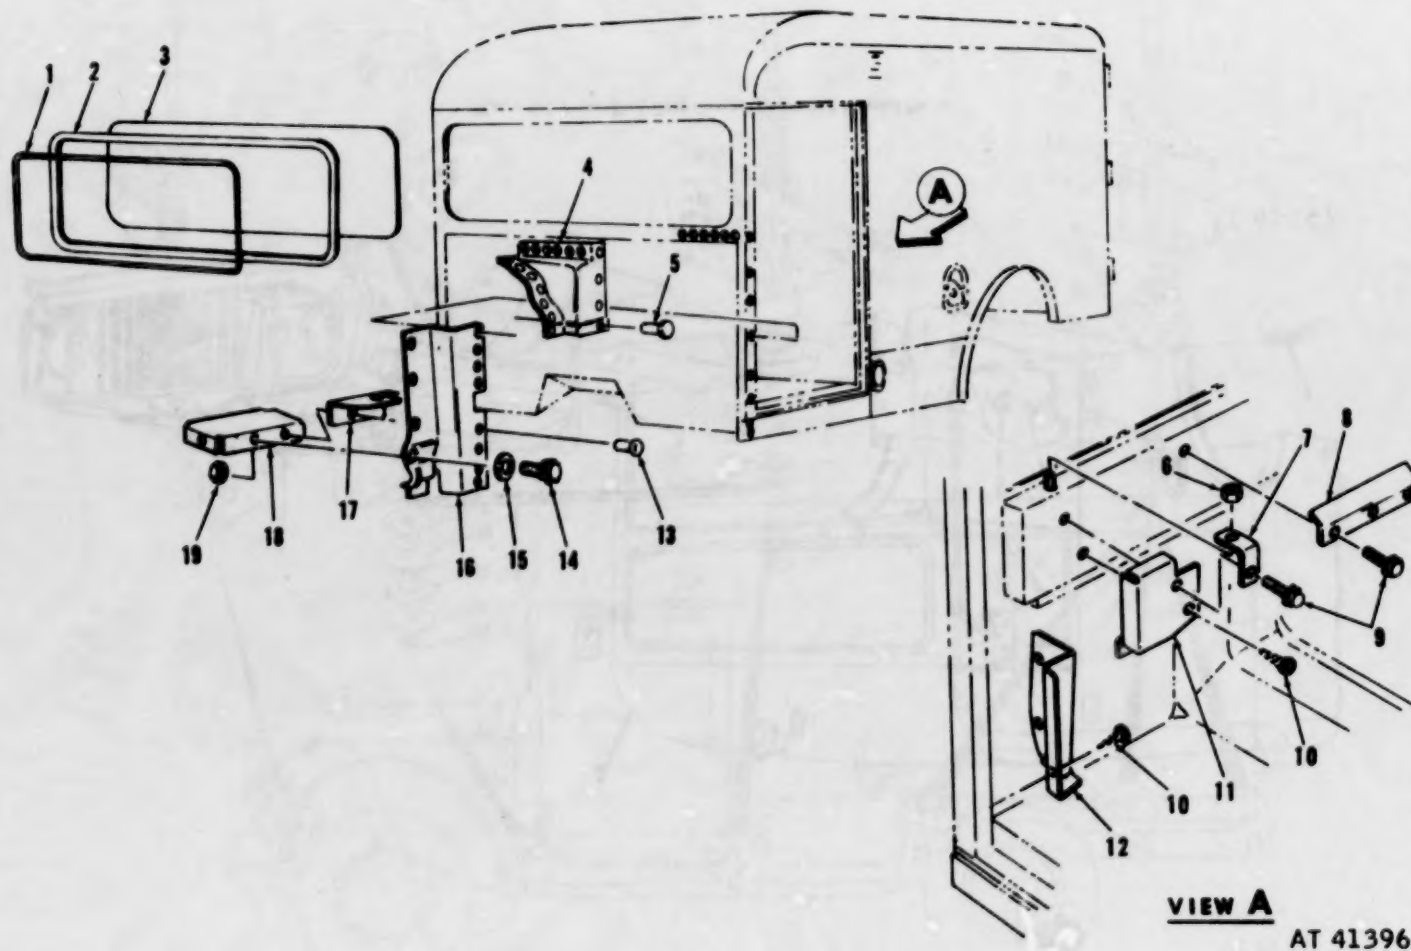


VIEW A
AT 41396

Figure 190. Windshield, Front End Panels and Related Parts

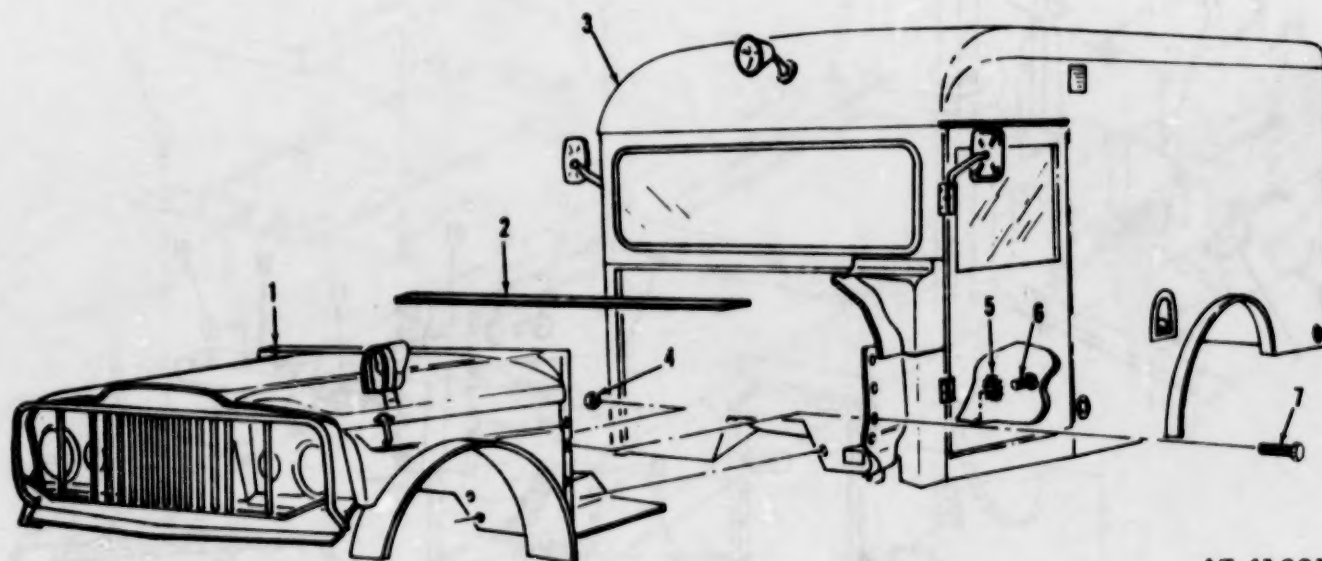

AT 41397

Figure 131. Front End, Rear Compartment and Related Parts

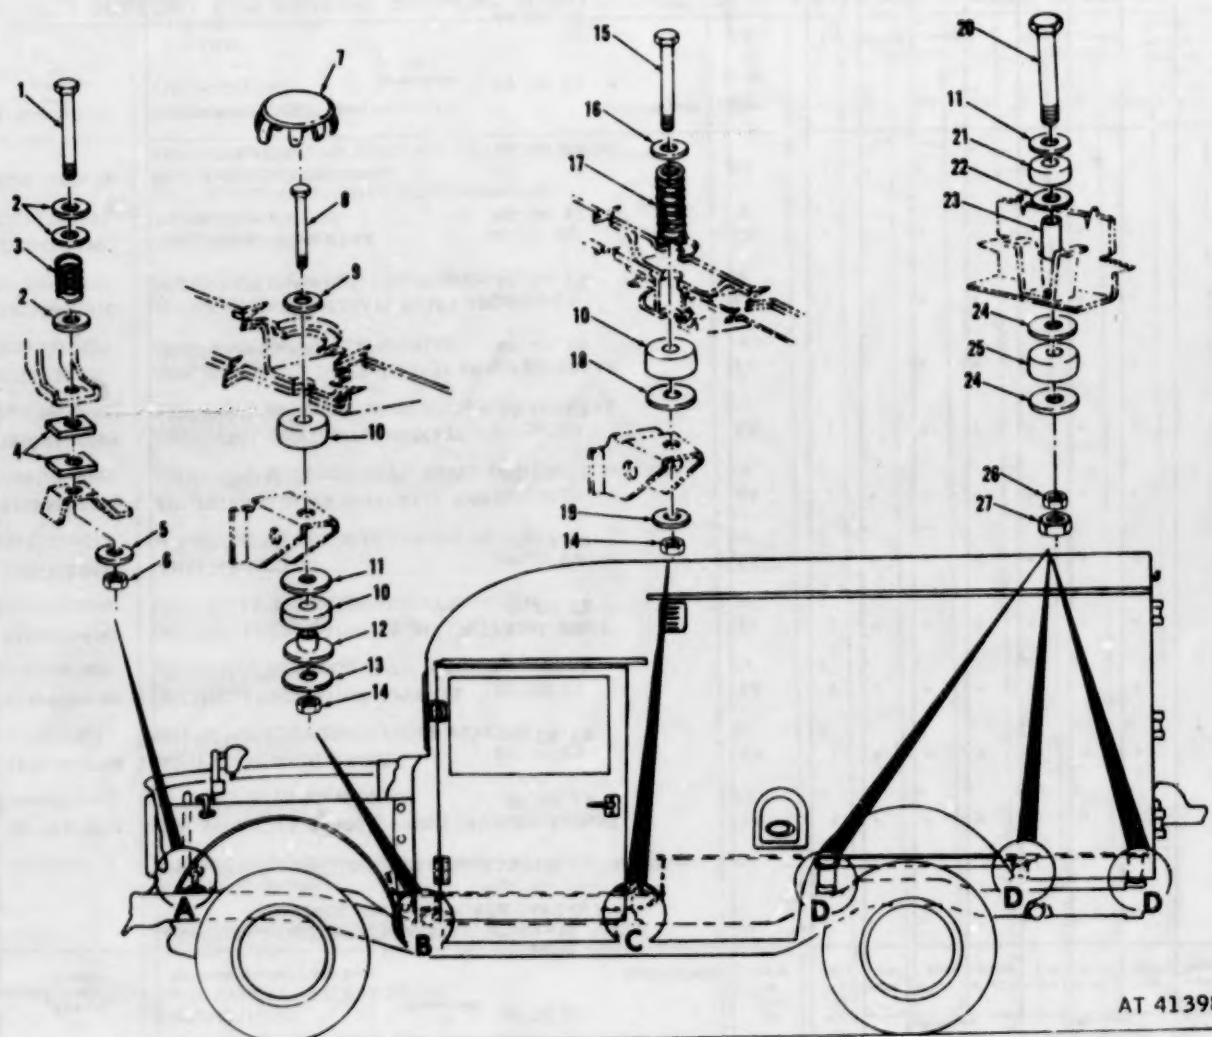

AT 41398

Figure 132. Ambulance Body Mounting Parts

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DB maint. allowance			(7) 30-day DB maint. allowance			(8) 1-yr depot maint allow per 100 equip catgry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-50	(b) 51-99	(c) 100	(a) 1-50	(b) 51-99	(c) 100			(a) Figure No.	(b) Item No.
		GROUP 20—HOIST, WINCH CAPSTAN, WINDLASS, POWER CONTROL UNIT AND POWER TAKE-OFF												
		2001—HOIST, CAPSTAN WINDLASS, CRANE OR WINCH ASSEMBLY												
PO	5315-935-9084	PIN, STRAIGHT, HEADED, FRONT UNIVERSAL JOINT 7745632 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			133	1
PO	2520-484-0768	UNIVERSAL JOINT, FRONT 11640827 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			133	2
PO	4730-050-4208	FITTING, LUBRICATION, JOURNAL MS15003-1 (96906)	EA	3	*	*	*	*	*	*			133	8
PO	4730-050-4203	FITTING, LUBRICATION, FRONT UNIVERSAL JOINT MS15001-1 (96906) BB, DB, EB	EA	2	*	*	*	*	*	*			133	9
PO	2590-248-0639	SHAFT, FRONT 11657025 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			133	10
PO	5315-664-8075	PIN, INTERMEDIATE UNIVERSAL JOINT MS171689 (81349) BB, DA, EB	EA	1	*	*	*	*	*	*			133	11
PO	2520-484-0769	UNIVERSAL JOINT, INTERMEDIATE 11640835 (19207) BB, DA, EB	EA	1	*	*	*	*	*	*			133	12
PO	5315-021-8211	KEY, WOODRUFF, INTERMEDIATE SHAFT AND REAR MS35756-35 (96906) BB, DA, EB	EA	2	*	*	*	*	*	*			133	13
PO	5305-724-6810	SETScrew, INTERMEDIATE SHAFT AND REAR MS51963-101 (96906) BB, DA, EB	EA	2	*	*	*	*	*	*			133	14
PO	2520-487-3780	UNIVERSAL JOINT, REAR 11640813 (19207) BB, DA, EB	EA	1	*	*	*	*	*	*			133	15
PO	2590-248-0638	SHAFT, INTERMEDIATE 11650726 (19207) BB, DA, EB	EA	1	*	*	*	*	*	*			133	16
PO	2590-248-0637	COLLAR ASSEMBLY, DRIVE SHAFT 11657422 (19207) BB, DB, EB	EA	2	*	*	*	*	*	*			133	17
X1		COLLAR 11656422-1 (19207) BB, DB, EB	EA	1									133	18

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NCR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DB maint. allowance			(7) 30-day CB maint. allowance			(8) 1-yr allow per 100 equip catgry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
PO	5305-724-5822	2001-HOIST, CAPSTAN, WINDLASS, CRANE OR WINCH ASSEMBLY—Continued COLLAR ASSEMBLY, DRIVE SHAFT—Continued SETSCREW, COLLAR MS51964-79 (96906) BB, DB, EB	EA	1	*	*	*	*	*	*			133	19
PO	5310-044-2823	NUT, PLAIN, HEXAGON, FLANGE MOUNTING MS51943-31 (96906) BB, DB, EB	EA	3	*	*	*	*	*	*			133	20
PO	2590-248-0635	FLANGE ASSEMBLY, WINCH DRIVE 11640828 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			133	21
PO	5305-068-0502	SCREW, CAP, HEXAGON HEAD, FLANGE TO BRACKET MS90725-6 (96906) BB, DB, EB	EA	3	*	*	*	*	*	*			133	22
PO	5306-225-9087	SCREW, CAP, HEXAGON HEAD, BRACE TO HANGER BRACKET MS90726-32 (96906) BB, DB, EB	EA	2	*	*	*	*	*	*			133	23
PO	5310-081-4219	WASHER, FLAT, BRACE TO HANGER BRACKET MS27183-12 (96906) BB, DB, EB	EA	2	*	*	*	*	*	*			133	24
PO	5315-842-3044	PIN, COTTER, FRONT UNIVERSAL JOINT PIN MS24665-283 (96906)	EA	1	*	*	*	*	*	*			133	25
PO	5305-269-2806	SCREW, CAP, HEXAGON HEAD, HANGER BRACKET MS90726-63 (96906) BB, DB, EB	EA	1	*	*	*	*	*	*			133	26
PO	5310-814-0672	NUT, PLAIN, HEXAGON, HANGER BRACKET MS51943-36 (96906) BB, DB, EB	EA	1	*	*	*	*	*	*			133	27
PO	2590-248-0769	BRACKET, BEARING HANGER 11657027 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			133	28
PO	5305-071-2055	SCREW, CAP, HEXAGON HEAD, HANGER BRACKET MS90726-89 (96906) BB, DB, EB	EA	1	*	*	*	*	*	*			133	29
X20		BRACE, HANGER BRACKET 11657035 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			133	30
PO	5307-159-6275	STUD, HANGER BRACKET BRACE 11657030 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			133	31
PO	5310-814-0673	NUT, PLAIN, HEXAGON, HANGER BRACKET BRACE MS51943-33 (96906) BB, DB, EB	EA	2	*	*	*	*	*	*			133	32

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day 100 maint. allowance			(7) 30-day 08 maint. allowance			(8) 1-yr alt per 100 equip catgry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(6) 1-30	(6) 31-60	(6) 61-100	(7) 1-30	(7) 31-60	(7) 61-100			(10) Figure No.	(10) Item No.
		2001—HOIST, CAPSTAN, WINDLASS, CRANE OR WINCH ASSEMBLY—Continued												
PO	5310-982-4912	NUT, PLAIN, HEXAGON, BRACE TO HANGER BRACKET MS51943-34 (96906) BB, DB, EB	EA	2	*	*	*	*	*	*			133	33
PO	2520-917-0781	KIT, REPAIR, WINCH DRIVE SHAFT UNIVERSAL JOINT 5704441 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*				
		COMPOSED OF:												
X1		RING, RETAINER 1677 (81221)	EA	4									133	3
X1		BUSHING 1676 (81221)	EA	4									133	4
X1		BEARING; NEEDLE A650R (81221)	EA	108									133	5
X1		SEAL, RUBBER 28388 (81221)	EA	4									133	6
X1		JOURNAL 1675 (81221)	EA	1									133	7
PO	5305-012-3879	SCREW, CAP, HEXAGON HEAD, R. H. AND L. H. MS90726-112 (96906) BB, DB, EB	EA	8	*	*	*	*	*	*			134	1
PO	5310-809-5998	WASHER, FLAT, R. H. AND L. H. ARM MS27183-18 (96906) BB, DB, EB	EA	8	*	*	*	*	*	*			134	2
X20		BRACKET, R. H. REAR SUPPORT 11657023-2 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			134	3
PO	5310-488-3888	NUT, PLAIN, HEXAGON, R. H. AND L. H. ARM MS51943-40 (96906)	EA	8	*	*	*	*	*	*			134	4
PO	5305-710-4191	SCREW, CAP, HEXAGON, HEAD, BRACKET MS90726-85 (96906)	EA	2	*	*	*	*	*	*			134	5
PO	5310-653-6700	WASHER, FLAT, REAR SUPPORT 7998561 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			134	6

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBS code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr alt per 100 equip catgy	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		2001-HOIST, CAPSTAN WINDLASS, CRANE, OR WINCH ASSEMBLY—Continued												
PO	5305-710-4202	SCREW, CAP, HEXAGON HEAD, REAR MS90726-96 (96906) BB, DB, EB	EA	1	*	*	*	*	*	*			134	7
PO	5305-724-6769	SCREW, CAP, HEXAGON HEAD, REAR SUPPORT MS90726-136 (96906) BB, DB, EB	EA	2	*	*	*	*	*	*			134	8
PO	5305-042-8220	BOLT, BRACKET AND SUPPORT MOUNTING 428220 (00000) BB, DB, EB	EA	16	*	*	*	*	*	*			134	9
PO	5310-820-6653	WASHER, LOCK, BRACKET AND SUPPORT MOUNTING MS35338-50 (96906) BB, DB, EB	EA	16	*	*	*	*	*	*			134	10
X20		BRACKET, L. H. REAR SUPPORT 11657023-1 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			134	11
PO	5310-241-6661	NUT, PLAIN, HEXAGON, REAR SUPPORT MS51943-42 (96906)	EA	2	*	*	*	*	*	*			134	12
X20		SUPPORT ASSEMBLY, WINCH REAR 11657021 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			134	13
PO	5310-857-5361	NUT, PLAIN, HEXAGON, REAR SUPPORT MS21045-C7 (96906) BB, DB, EB	EA	1	*	*	*	*	*	*			134	14
MO		CABLE ASSEMBLY, WINCH 7017199-2 (19207) BB, DB, EB	EA	1									134	15
PO	2590-933-3544	ROPE, WIRE, 7/16 x 150 FT 7699767-1 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			134	16
PO	5340-087-8050	CLEVIS ASSEMBLY, WINCH CABLE 7071880-2 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			134	17
PO	4010-297-1815	CHAIN ASSEMBLY 7717031 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			134	18
X20		SUPPORT, WINCH FRONT 11657024 (19207) BB, DB, EB	EA	2	*	*	*	*	*	*			134	19
PO	5310-823-8803	WASHER, FLAT, SUPPORT MOUNTING MS27183-21 (96906) BB, DB, EB	EA	4	*	*	*	*	*	*			134	20

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip enrgy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-50	(b) 51-100	(c) 101-150	(a) 1-50	(b) 51-100	(c) 101-150			(a) Figure No.	(b) Item No.
		2001-HOIST, CAPSTAN WINDLASS, CRANE OR WINCH ASSEMBLY—Continued												
X20		BRACKET, WINCH MOUNTING 11657022-2 (19207) BB, DB, EB	EA	2	*	*	*	*	*	*			134	21
PO	5305-710-4192	SCREW, CAP, HEXAGON HEAD, BRACKET MS90726-87 (96906) BB, DB, EB	EA	2	*	*	*	*	*	*			134	22
PO	5310-126-5367	NUT, PLAIN, HEXAGON, BRACKET MS21045-C7 (96906) BB, DB, EB	EA	4	*	*	*	*	*	*			134	23
X20		ARM, R. H. WINCH SUPPORT 11657020-2 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			134	24
X20		ARM, L. H. WINCH SUPPORT 11657020-1 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			134	24
		GROUP 20—WINCH AND POWER TAKE-OFF												
		2001—WINCH ASSEMBLY												
POT	3830-772-8126	WINCH ASSEMBLY 7728126 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			135	
PF	2590-087-5870	HOUSING COVER AND BUSHING ASSEMBLY LU4-144-0 (08302)	EA	1	*	*	*	*	*	*			135	1
PF	5330-878-8433	GASKET, COVER LU4-144G (08302)	EA	1	*	*	*	*	*	*			135	2
PF	3120-496-2200	BUSHING, HOUSING MU134B (08302)	EA	3	*	*	*	*	*	*			135	3
PF	2590-741-2418	GEAR, WORM MU101R (08302)	EA	1	*	*	*	*	*	*			135	4
X2F		HOUSING, WORM LU4-134-0 (08302)	EA	2	*	*	*	*	*	*			135	5
PF	5330-807-6445	SEAL, PLAIN, ENCASED, CABLE DRUM LU4-135A (08302)	EA	1	*	*	*	*	*	*			135	6
PF	3110-100-0540	CUP, BEARING MU103B (08302)	EA	2	*	*	*	*	*	*			135	7

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NAPS code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty line in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip catgy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		2001-WINCH ASSEMBLY-Continued												
PF	3110-100-3535	WINCH ASSEMBLY-Continued	EA	2	*	*	*	*	*	*			135	8
		CONE AND ROLLERS												
PF	5330-585-6642	MU103A (08302)	EA	2	*	*	*	*	*	*			135	9
		SEAL, PLAIN ENCASED												
PF	5330-524-9623	LU4-149A (08302)	EA	2	*	*	*	*	*	*			135	10
		GASKET, BEARING RETAINER												
		MU149G (08302)												
X2F		RETAINER, BEARING	EA	2	*	*	*	*	*	*			135	11
		LU1490 (08302)												
PF	2590-741-2415	DRUM, BRAKE	EA	1	*	*	*	*	*	*			135	12
		MU151 (08302)												
PF	2590-735-1201	BAND, BRAKE	EA	1	*	*	*	*	*	*			135	13
		MU1520 (08302)												
PF	3950-693-1862	HOUSING, BRAKE DRUM	EA	1	*	*	*	*	*	*			135	14
		LU4-148 (08302)												
PF	2590-741-2462	SPRING, BRAKE	EA	1	*	*	*	*	*	*			135	15
		MU156 (08302)												
PF	5310-660-2987	WASHER, LOCK	EA	8	*	*	*	*	*	*			135	16
		A3750 (08302)												
PF	5305-012-0918	SCREW, CAP, HEXAGON HEAD BRAKE DRUM HOUSING	EA	4	*	*	*	*	*	*			135	17
		120918 (24617)												
PF	5310-012-0613	NUT, PLAIN, HEXAGON, BRAKE DRUM HOUSING	EA	4	*	*	*	*	*	*			135	18
		120613 (24617)												
PF	5315-741-2419	KEY, WORM GEAR	EA	2	*	*	*	*	*	*			135	19
		MU101A (08302)												
PF	2590-033-9367	DRUM ASSEMBLY, CABLE	EA	1	*	*	*	*	*	*			135	20
		LU4-135-0 (08302)												
PF	5305-010-2882	SETSCREW, WINCH CABLE DRUM	EA	1	*	*	*	*	*	*			135	21
		102882 (24617)												
PF	5340-205-9565	RING, RETAINING	EA	2	*	*	*	*	*	*			135	22
		MU139 (08302)												

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) RMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip enrgy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(6) 1-30	(6) 31-50	(6) 51-100	(7) 1-30	(7) 31-50	(7) 51-100			(10) Figure No.	(10) Item No.
PF	5315-054-3038	2001-WINCH ASSEMBLY-Continued WINCH ASSEMBLY-Continued KEY, CLUTCH MU141A (08302)	EA	2	*	*	*	*	*	*			135	23
PF	3830-630-6906	BUSHING, CABLE DRUM LU4-135B (08302)	EA	2	*	*	*	*	*	*			135	24
PF	3830-737-4952	CLUTCH M2-141 (08302)	EA	1	*	*	*	*	*	*			135	25
PF	5330-811-4881	SEAL, CLUTCH LU4-133A (08302)	EA	1	*	*	*	*	*	*			135	26
PF	3830-511-1937	HOUSING ASSEMBLY, CLUTCH LU4-133-0 (08302)	EA	1	*	*	*	*	*	*			135	27
PF	5340-050-1563	PLUG, EXPANSION, CLUTCH HOUSING 179380 (12204)	EA	3	*	*	*	*	*	*			135	28
PF	4730-737-4954	PLUG, RAIN, CLUTCH HOUSING E118HCS (08302)	EA	4	*	*	*	*	*	*			135	29
PF	3830-622-3483	PLATE, CLUTCH INDEXING 127364 (12204)	EA	1	*	*	*	*	*	*			135	30
PF	5305-013-3906	SCREW, INDEXING PLATE 133906 (24617)	EA	2	*	*	*	*	*	*			135	31
PF	5305-011-9504	SETSCREW, HANDLE 119504 (00000)	EA	1	*	*	*	*	*	*			135	32
PF	5340-741-2420	KNOB, SHIFTER MU143D (08302)	EA	1	*	*	*	*	*	*			135	33
PF	3830-511-1936	HANDLE, CLUTCH LU4-143B (08302)	EA	1	*	*	*	*	*	*			135	34
PF	5315-616-5526	KEY, WOODRUFF M535756-8 (96906)	EA	1	*	*	*	*	*	*			135	35
PF	5310-013-1017	WASHER, FLAT 131017 (00000)	EA	1	*	*	*	*	*	*			135	36

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr aw per 100 equip enlgy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
PF	2590-741-2454	2001-WINCH ASSEMBLY-Continued WINCH ASSEMBLY-Continued STEM, SHIFTER HANDLE MU143E (08302)	EA	1	*	*	*	*	*	*			135	37
PF	5340-741-2464	SPRING, SHIFTER MU143S (08302)	EA	1	*	*	*	*	*	*			135	38
PF	5305-272-4197	SETSCREW, SHIFTER 375-05BA (08302)	EA	1	*	*	*	*	*	*			135	39
PF	2590-737-4953	FORK, SHIFTER LU4-143 (08302)	EA	1	*	*	*	*	*	*			135	40
PF	5340-737-4955	RING, RETAINING LU4-143K (08302)	EA	1	*	*	*	*	*	*			135	41
PF	5330-585-6641	SEAL, SHIFTER HANDLE LU4-143H (08302)	EA	1	*	*	*	*	*	*			135	42
PF	2590-737-4958	SHAFT, SHIFTER LU4-143A (08302)	EA	1	*	*	*	*	*	*			135	43
X2F		SPACER, SHIFTER SHAFT LU4-134W (08302)	EA	1	*	*	*	*	*	*			135	44
PF		SCREW, DRAG BRAKE MS250-07 (08302)	EA	2	*	*	*	*	*	*			135	45
X2F		SPACER LU4-131S (08302)	EA	1	*	*	*	*	*	*			135	46
PF	2530-832-8017	BRAKE ASSEMBLY, DRAG LU4-131-0 (08302)	EA	1	*	*	*	*	*	*			135	47
PF	5310-012-4595	NUT, PLAIN, HEXAGON 124595 (24617)	EA	3	*	*	*	*	*	*			135	48
PF	5306-622-3482	BAR, SPACER 1273609 (12204)	EA	1	*	*	*	*	*	*			135	49
PF	3830-802-2030	BRACKET LU284A (08320)	EA	2	*	*	*	*	*	*			135	50

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) AMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per equip catgry	(9) Depot maint allow per equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		2001 - WINCH ASSEMBLY—Continued												
PF	5310-010-3323	WINCH ASSEMBLY—Continued WASHER, LOCK BRACKET A5000 (08302)	EA	4	*	*	*	*	*	*			135	51
PF	5305-206-3518	SCREW, CAP, HEXAGON HEAD, BRACKET 120426 (12204)	EA	4	*	*	*	*	*	*			135	52
PF	3830-374-1166	SPACER, WORK GEAR MU102S (08302)	EA	2	*	*	*	*	*	*			135	53
PF	5315-012-4553	KEY, BRAKE DRUM B118A (08302)	EA	1	*	*	*	*	*	*			135	54
PF	5315-741-2419	KEY, WORM GEAR 7412419 (19207)	EA	1	*	*	*	*	*	*			135	55
PF	3020-287-7343	WORM GEAR MU100R (08302)	EA	1	*	*	*	*	*	*			135	56
PF	5305-012-0918	SCREW, CAP, HEXAGON HEAD, BEARING RETAINER 120918 (24617)	EA	4	*	*	*	*	*	*			135	57
PF	3830-737-8242	SHAFT, WORM MU2-202 (08302)	EA	1	*	*	*	*	*	*			135	58
PF	5310-902-8204	WASHER, LOCK, HOUSING COVER A5500 (08302)	EA	3	*	*	*	*	*	*			135	59
PF	5305-206-3519	SCREW, CAP, HEXAGON HEAD, HOUSING COVER 122433 (24617)	EA	3	*	*	*	*	*	*			135	60
PF	4820-726-4719	PLUG, BREATHER 5196397 (00000)	EA	1	*	*	*	*	*	*			135	61
PF	2520-737-4959	SHAFT, CABLE DRUM LU4-136 (08302)	EA	1	*	*	*	*	*	*			135	62
		2004 - POWER TAKE-OFF ASSEMBLY												
PO	4720-165-0942	GRIP, POWER TAKE-OFF LEVER 11657047 (19207)	EA	1	*	*	*	*	*	*			136	1
X20		LEVER ASSEMBLY SHIFT 11657037 (19207)	EA	1	*	*	*	*	*	*			136	2

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST														
(1) NMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr alt per 100 equip cntry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		2004-POWER TAKE-OFF ASSEMBLY-Continued												
X20		CLAMP, LEVER ASSEMBLY 11657041 (19207) BB, DB, EB	EA	2	*	*	*	*	*	*			136	3
X20		PLATE, LEVER ASSEMBLY 8328405 (19207) BB, DB, EB	EA	2	*	*	*	*	*	*			136	4
X20		SPACER, LEVER ASSEMBLY MOUNTING 11657042 (19207) BB, DB, EB	EA	2	*	*	*	*	*	*			136	5
X20		ROD ASSEMBLY, SHIFT LEVER TO POWER TAKE-OFF 11657423 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			136	6
PO	3040-517-1159	BALL JOINT 426310 (24617) BB, DB, EB	EA	2	*	*	*	*	*	*			136	7
PO	5310-880-7746	NUT, PLAIN, HEXAGON, BALL JOINT MS51968-5 (96906) BB, DB, EB	EA	1	*	*	*	*	*	*			136	8
X20		ROD, SHIFT LEVER 11657424 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			136	9
PO	5365-151-5190	BUSHING, SHIFT LEVER TO ROD 11657038 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			136	10
PO	5310-982-4912	NUT, PLAIN, HEXAGON, SHIFT ROD TO LEVERS MS51943-34 (96906) BB, DB, EB	EA	2	*	*	*	*	*	*			136	11
PO	5310-044-2823	NUT, PLAIN, HEXAGON, SHIFT LEVER MOUNTING MS51943-31 (96906) BB, DB, EB	EA	4	*	*	*	*	*	*			136	12
X20		CLAMP, LOCK, SHIFT LEVER 11657043 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			136	13
PO	5305-225-3840	SCREW, CAP, HEXAGON HEAD, SHIFT LEVER MOUNTING MS90725-7 (96906) BB, DB, EB	EA	4	*	*	*	*	*	*			136	14
PF	5315-880-5860	STUD, PLAIN, POWER TAKE-OFF MOUNTING 378390 (11757) BB, DB, EB	EA	1	*	*	*	*	*	*			137	3
PF	5307-508-0807	STUD, PLAIN, POWER TAKE-OFF MOUNTING 1060 (11757) BB, DB, EB	EA	5	*	*	*	*	*	*			137	4
PFR	2520-933-3734	POWER TAKE-OFF ASSEMBLY 11640715 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			137	5

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued


(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr alt per 100 equip cntgcy	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-90	91-99	100-109	1-90	91-99	100-109			Figure No.	Item No.
		2004—POWER TAKE-OFF ASSEMBLY—Continued												
PF	5310-151-9069	NUT, PLAIN, HEXAGON, POWER TAKE-OFF MOUNTING 1023 (11757) BB, DB, EB	EA	5	*	*	*	*	*	*			137	6
PF	5310-496-2648	WASHER, COPPER, POWER TAKE-OFF MOUNTING 1020 (11757) BB, DB, EB	EA	5	*	*	*	*	*	*			137	7
PH	5306-078-0164	SCREW, CAP, HEXAGON HEAD, BEARING CAP MS35763-819 (96906) BB, DB, EB	EA	16				*	*	*			138	1
PH	2520-886-2775	CAP, BEARING, POWER TAKE-OFF 559 (11757) BB, DB, EB	EA	3				*	*	*			138	2
PH	3110-278-7510	BEARING ASSEMBLY, CUP AND CONE 364 (11757) BB, DB, EB	EA	3				*	*	*			138	5
X2H		HOUSING, POWER TAKE-OFF 550 (11757) BB, DB, EB	EA	1				*	*	*			138	6
PH	3110-572-5970	BALL, SHIFT 171 (11757) BB, DB, EB	EA	1				*	*	*			138	8
PH	2520-841-7694	SPRING, BALL SHIFT 352A (11757) BB, DB, EB	EA	1				*	*	*			138	9
PH	5310-177-7748	WASHER, LOCK, COVER 1004 (11757) BB, DB, EB	EA	4				*	*	*			138	10
PH	5306-157-8373	SCREW, CAP, HEXAGON HEAD, COVER 2937 (11757) BB, DB, EB	EA	4				*	*	*			138	11
PF	2520-871-2460	LEVER, SHIFT 564T (1757) BB, DB, EB	EA	1	*	*	*	*	*	*			138	12
PF	5305-885-7252	SCREW CAP, HEXAGON HEAD, SHIFT LEVER 1179 (11757) BB, DB, EB	EA	1	*	*	*	*	*	*			138	13
PF	5310-838-1490	WASHER, LOCK, SHIFT LEVER 1178 (11757) BB, DB, EB	EA	1	*	*	*	*	*	*			138	14
PF	5310-834-8586	WASHER, FLAT, SHIFT LEVER 1177 (11757) BB, DB, EB	EA	1	*	*	*	*	*	*			138	15

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS														
(1) SACR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day OS maint. allowance			(7) 30-day OS maint. allowance			(8) 1-yr air per 100 equip catgry	(9) Depot main air per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a) Figure No.	(b) Item No.
					1-30	31-50	51-100	1-30	31-50	51-100				
		2004-POWER TAKE-OFF ASSEMBLY-Continued												
PH	2520-082-5405	COVER, SHIFT 1875A (11757) BB, DB, EB	EA	1				*	*	*			138	17
PH	2520-928-6118	PLATE ASSEMBLY, SHIFT 720T (11757) BB, DB, EB	EA	1				*	*	*			138	18
PH	2520-718-0894	GEAR, CLUSTER, REVERSE-IDLER 785 (11757) BB, DB, EB	EA	1				*	*	*			138	19
PH	5315-151-9071	KEY WOODRUFF, REVERSE IDLER SHAFT 1050 (11757) BB, DB, EB	EA	1				*	*	*			138	20
PH		SHAFT, REVERSE IDLER 747 (11757) BB, DB, EB	EA	1				*	*	*			138	21
PH	5340-880-6367	SPACER, REVERSE IDLER 768 (11757) BB, DB, EB	EA	1				*	*	*			138	22
PH	2520-125-2960	CAP, OUTPUT SHAFT 560 (11757) BB, DB, EB	EA	1				*	*	*			138	24
PH	2520-476-4501	SHAFT, OUTPUT DRIVE 797APL (11757) BB, DB, EB	EA	1				*	*	*			138	26
PH	2520-928-6119	GEAR, SLIDING, OUTPUT SHAFT 780A (11757) BB, DB, EB	EA	1				*	*	*			138	27
PH	3110-100-3532	BEARING ASSEMBLY, DRIVE GEAR 469 (11757) BB, DB, EB	EA	2				*	*	*			138	28
PH	2520-986-5506	GEAR, CLUSTER, IDLER 739A (11757) BB, DB, EB	EA	1				*	*	*			138	29
PH	2520-627-6666	SHAFT, IDLER GEAR 719 (11757) BB, DB, EB	EA	1				*	*	*			138	30
PH	3110-293-8250	BEARING ASSEMBLY, IDLER SHAFT 365 (11757) BB, DB, EB	EA	1				*	*	*			138	31
PH	5305-087-9883	SETSCREW, IDLER GEAR 1033A (11757) BB, DB, EB	EA	1				*	*	*			138	32

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued


(1) S&M code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day GS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip entry	(9) Deput maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		2004-POWER TAKE-OFF ASSEMBLY-Continued												
PH	3110-144-8498	SPACER, IDLER GEAR BEARING 755 (11757) BB, DB, EB	EA	1				*	*	*			138	33
PH	5315-121-2600	KEY, WOODRUFF, OUTPUT DRIVE SHAFT 1054 (11757) BB, DB, EB	EA	1				*	*	*			138	34
PH	2520-928-6135	GASKET AND SEAL SET, POWER TAKE-OFF K400X (11757) BB, DB, EB	EA	1				*	*	*				
PF	5330-653-7656	GASKET, POWER TAKE-OFF MOUNTING 105 (11757) BB, DB, EB	EA	1	*	*	*	*	*	*			137	1
PF	5330-317-8525	GASKET, MOUNTING 105A (11757) BB, DB, EB	EA	1	*	*	*	*	*	*			137	2
PH	2520-741-2887	GASKET, BEARING CAP, .020 751A (11757) BB, DB, EB	EA	4				*	*	*			138	3
PH	2520-741-2886	GASKET, BEARING CAP, .010 751 (11757) BB, DB, EB	EA	4				*	*	*			138	4
PH	5330-653-7653	GASKET, SHIFT COVER 351 (11757) BB, DB, EB	EA	2				*	*	*			138	7
PF	5330-187-3635	PACKING, PREFORMED, SHIFT LEVER 1288 (11757) BB, DB, EB	EA	1	*	*	*	*	*	*			138	16
PH	2520-892-2010	SEAL, PLAIN ENCASED, OUTPUT SHAFT 367 (11757) BB, DB, EB	EA	1				*	*	*			138	23
PH	5340-773-5382	RING, RETAINING, OUTPUT DRIVE SHAFT 103 (11757) BB, DB, EB	EA	2				*	*	*			138	25

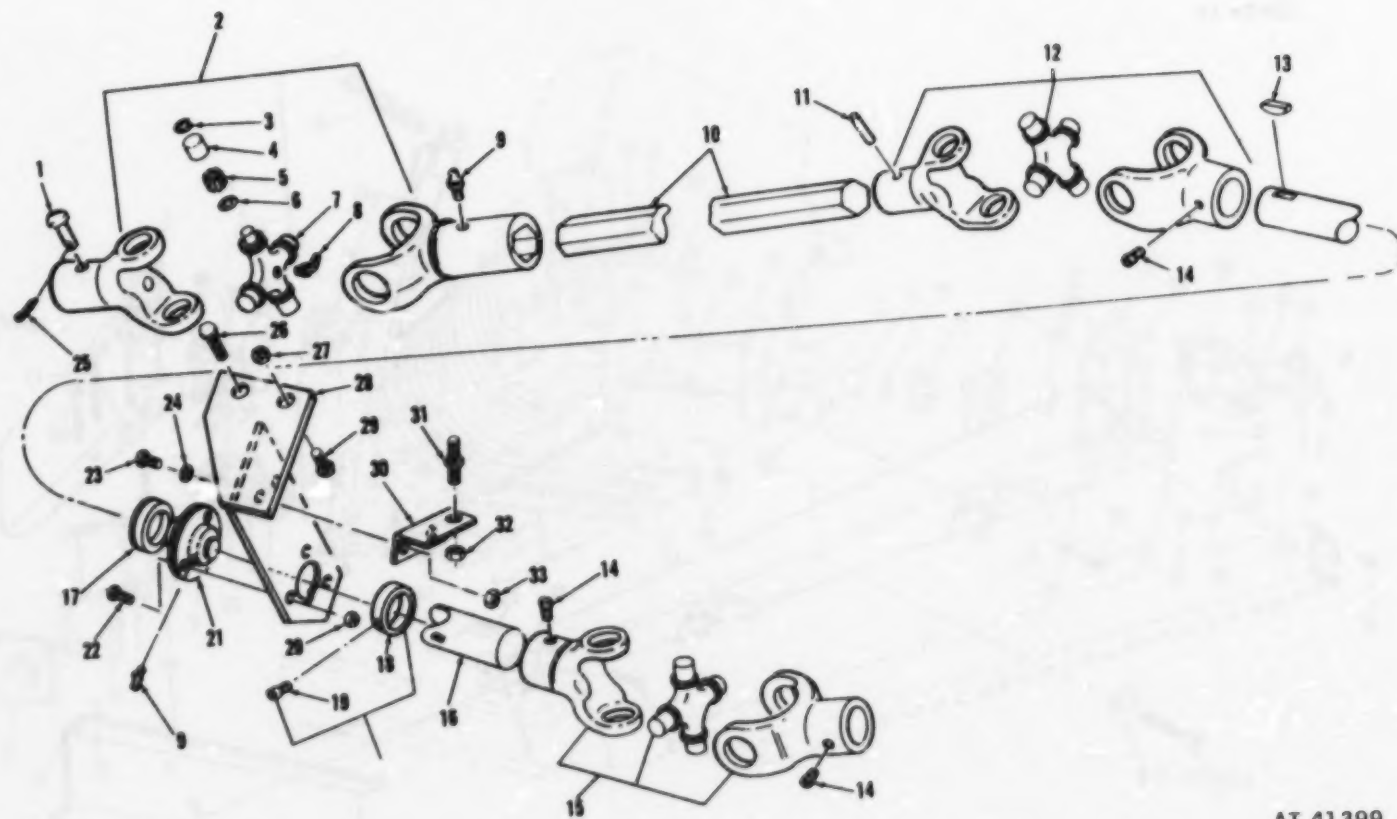

AT 41399


Figure 133, Winch Drive Shafts

370

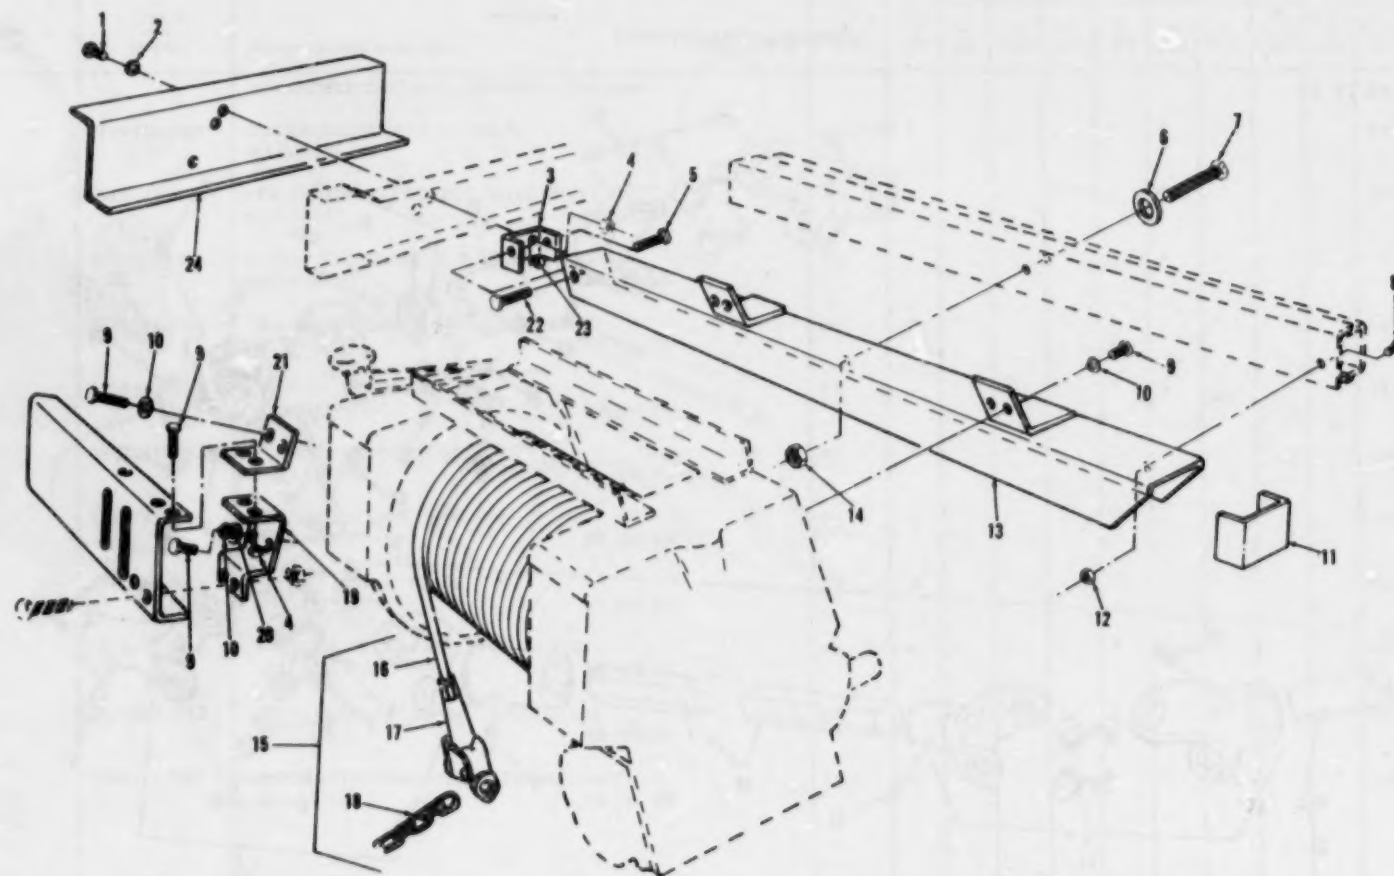


AT 41402

Figure 134. Winch Mounting Parts

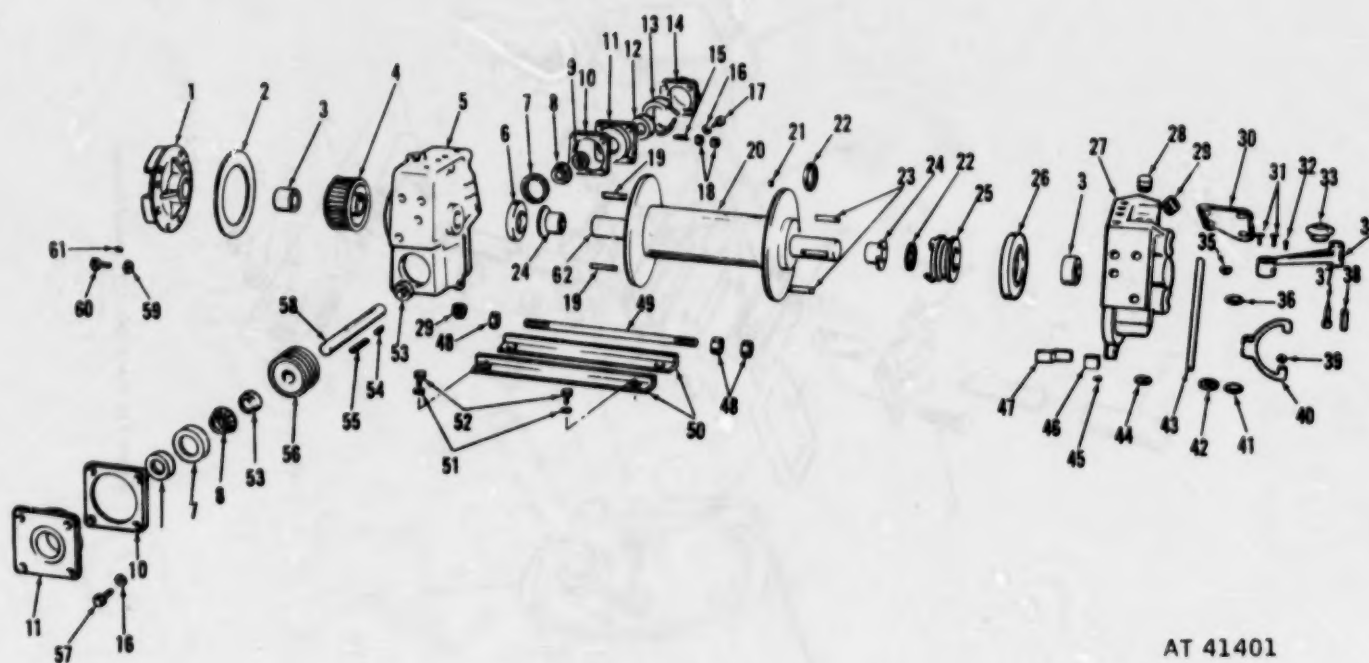

AT 41401

Figure 135. Winch Assembly

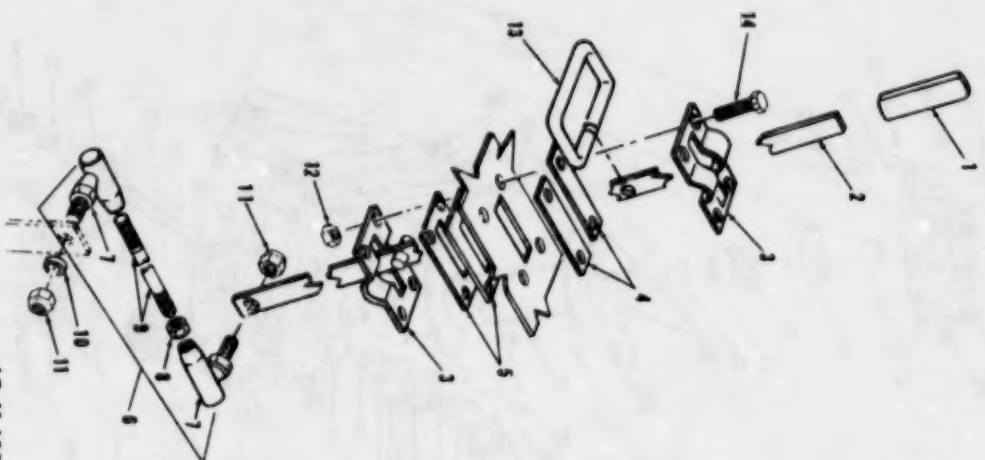

AT 41400

Figure 13b. Power Take-Off Central Linkage

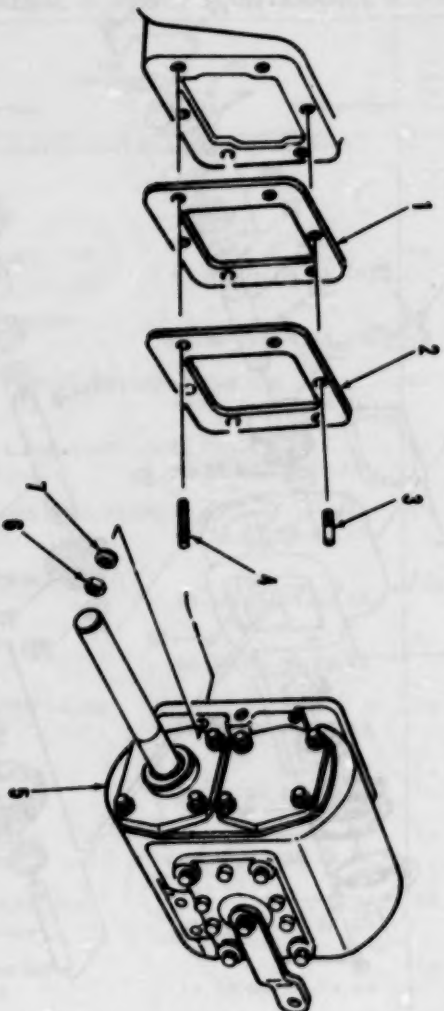


Figure 137. Power Take-Off Mounting Parts

AT 41403

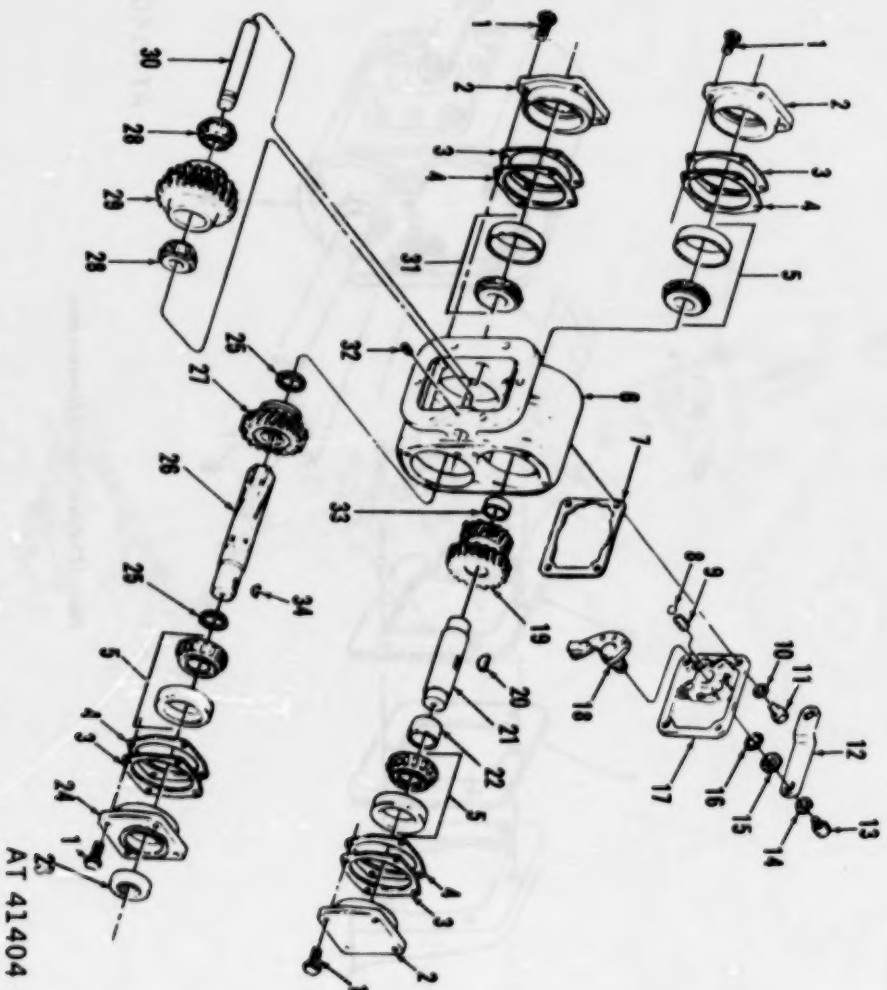


Figure 138. Power Take-Off Assembly

AT 41404

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SAR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr alt per 100 equip catry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		GROUP 22 MISCELLANEOUS BODY CHASSIS AND ACCESSORY ITEMS												
		2201 CANVAS ITEMS												
PO	2540-917-5904	CANVAS TOP ASSEMBLY, CAB 11657964 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			139	1
X20		BOW, TOP, CAB ENCLOSURE 11657941 (19207) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			139	2
X20		FRAME ASSEMBLY, CANVAS ENCLOSURE, CAB, L. H. 11657733-1 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			139	3
X20		FRAME ASSEMBLY, CANVAS ENCLOSURE, CAB, R. H. 11657733-2 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			139	3
PO	5305-071-2237	SCREW, CAP, HEXAGON HEAD, FRAME, MS90725-14 (96906) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			139	4
PO	5330-157-6258	WEATHERSTRIP, TOP 54.25 IN. LG 11657943 (19207) BA, BB, DA, DB, EA, EB	EA	V	*	*	*	*	*	*			139	5
PO		FASTENER, CANVAS TOP 11640707 (19207) BA, BB, DA, DB, EA, EB	EA	18	*	*	*	*	*	*			139	6
PO	5310-761-6882	NUT, PLAIN, HEXAGON, FRAME MS51967-2 (96906) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			139	7
PO	5310-209-0786	WASHER, LOCK, FRAME MS35335-33 (96906) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			139	8
PO	5310-809-4058	WASHER, FLAT, FRAME MS27183-10 (96906) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			139	9
PO		SCREW, CAP, HEXAGON HEAD 11662593 (19207) BA, BB, DA, DB, EA, EB	EA	2	*	*	*	*	*	*			139	10
PO	5325-359-6844	FASTENER, CANVAS TOP MS27980-1B (96906) BA, BB, DA, DB, EA, EB	EA	18	*	*	*	*	*	*			139	11
PO	5325-893-6242	FASTENER, CANVAS TOP MS27980-6B (96906) BA, BB, DA, DB, EA, EB	EA	18	*	*	*	*	*	*			139	12

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
X20		2201 - CANVAS ITEMS - Continued TOP ASSEMBLY, CANVAS, CARGO 11657158 (19207) BA, BB, DA, DB, EA, EB	EA	1	*	*	*	*	*	*			140	1
X20		CURTAIN, CANVAS, FRONT AND REAR 11657754 (19207) BA, BB	EA	2	*	*	*	*	*	*			140	2
MO		ROPE CURTAIN 8701565 (19207) BA, BB	EA	2									140	3
		MANUFACTURE FROM:												
PO	4020-289-8614	ROPE, SISAL, 3 STRAND 3/8 IN. DIA., 288 IN. LG. SPEC-T-R-605 (80244)	FT	V	*	*	*	*	*	*				
PO	2540-917-5893	KIT, BOW, CARGO BODY, TOP 5704424 (19207)	EA	1	*	*	*	*	*	*				
		COMPOSED OF:												
PO	5306-012-8439	BOLT, STEP, STABILIZER BAR MS35752-025 (96906)	EA	4	*	*	*	*	*	*			140	4
X1		BOW, BODY RACK 7370394-1 (19207)	EA	3									140	5
PO	5305-016-0731	SCREW, CAP, HEXAGON HEAD MS35206-300 (96906)	EA	24	*	*	*	*	*	*			140	6
X1		BOW ASSEMBLY, TOP CORNER 11657842 (19207)	EA	6									140	7
X1		STAVE, BOW 11657942 (19207)	EA	6									140	8
PO	5310-081-4219	WASHER, FLAT MS27183-12 (96906)	EA	12	*	*	*	*	*	*			140	9
PO	5310-828-8189	NUT, PLAIN WING MS35425-41 (96906)	EA	4	*	*	*	*	*	*			140	10
PO	5310-021-3513	NUT, PLAIN, HEXAGON 213513 (24617)	EA	12	*	*	*	*	*	*			140	11

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip catgry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a) Figure No.	(b) Item No.
		2201—CANVAS ITEMS—Continued												
PO	5305-682-7733	SCREW, CAP, HEXAGON HEAD MS35206-301 (96906)	EA	12	*	*	*	*	*	*			140	12
X1		STOP, BOW STAVE 11657944 (19207)	EA	6									140	13
X1		BAR STABILIZER 11657943 (19207)	EA	2									140	13
PO	5340-868-9610	STRAP, STOWAGE 8690544 (19207)	EA	1	*	*	*	*	*	*			140	16
X20		BOW AND CORNER ASSEMBLY CARGO BOX 11657959 (19207)	EA	3	*	*	*	*	*	*			140	15
MO		ROPE, TIE DOWN, CARGO BOX COVER 8710565 (19207)	EA	8									140	17
		MANUFACTURE FROM:												
PO	4020-289-8614	ROPE, SISAL, 3 STRAND, 3/8 DIA., 34 IN. LG. SPEC-T-R-605 (80244)	FT	V	*	*	*	*	*	*				
		2202—ACCESSORY ITEMS												
PO	2540-953-0110	BOX ASSEMBLY HEATER CONTROL 19885798 (19207)	EA	1	*	*	*	*	*	*			141	
PF	6240-950-1678	LAMP, HEATER INDICATOR 11621411 (19207)	EA	1	*	*	*	*	*	*			141	1
PF	6210-295-1909	LAMP ASSEMBLY, HEATER INDICATOR 7951731 (19207)	EA	1	*	*	*	*	*	*			141	2
X1		PANEL, BOTTOM, CONTROL BOX 7951726 (19207)	EA	1									141	3
PF	5925-295-5459	BREAKER ASSEMBLY, CIRCUIT 7974395 (00000)	EA	1	*	*	*	*	*	*			141	4
X1		BRACKET, BOTTOM, CONTROL BOX 7951727 (19207)	EA	1									141	5

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day Dd maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip catgry	(9) Depot allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		2202-ACCESSORY ITEMS—Continued												
		BOX ASSEMBLY, HEATER INDICATOR—Continued												
PF	5310-333-7341	NUT, HEXAGON, CIRCUIT BREAKER 7951221 (00000)	EA	2	*	*	*	*	*	*			141	6
PF	5930-655-1514	SWITCH, HEATER CONTROL MS35058-22 (96906)	EA	1	*	*	*	*	*	*			141	7
PF	5310-584-5005	NUT, PLAIN, HEXAGON, CONTROL BOX MS35690-450 (96906)	EA	2	*	*	*	*	*	*			141	9
PF	5310-527-3289	WASHER, LOCK, CONTROL BOX MS35333-23 (96906)	EA	2	*	*	*	*	*	*			141	10
PF	2590-944-6252	CABLE ASSEMBLY, HEATER 7951732 (19207)	EA	1	*	*	*	*	*	*			141	11
PF	5305-940-8838	SCREW, MACHINE, CABLE 7951752 (19207)	EA	4	*	*	*	*	*	*			141	12
PF	6115-039-8253	CASE ASSEMBLY, CONTROL BOX 7951725 (19207)	EA	1	*	*	*	*	*	*			141	13
PF	5305-105-6871	SCREW, MACHINE, CONTROL BOX 187745 (24617)	EA	2	*	*	*	*	*	*			141	14
PF	5310-800-0076	NUT, PLAIN, HEXAGON, PANEL 7951753 (19207)	EA	2	*	*	*	*	*	*			141	15
PF	5930-615-7897	SWITCH, HEATER STARTING MS35059-31 (96906)	EA	1	*	*	*	*	*	*			141	16
X2F		SPACER, CIRCUIT BREAKER 7951730 (19207)	EA	2	*	*	*	*	*	*			141	17
PF	5325-795-1754	GROMMET, RUBBER, CABLE 7951754 (19207)	EA	1	*	*	*	*	*	*			141	18
PF	2540-916-2095	CABLE ASSEMBLY, CIRCUIT BREAKER 7986167 (19207)	EA	1	*	*	*	*	*	*			141	19
PF	5305-043-6698	SCREW, MACHINE, CIRCUIT BREAKER MS35225-48 (96906)	EA	2	*	*	*	*	*	*			141	20
PF	5305-531-0450	SCREW, MACHINE, BRACKET 454341 (24617)	EA	2	*	*	*	*	*	*			141	21

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty line in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr depot maint allow per 100 equip category	(9) 1-yr depot maint allow per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
PF	5305-014-5183	2202-ACCESSORY ITEMS-Continued BOX ASSEMBLY, HEATER INDICATOR-Continued	EA	2	*	*	*	*	*	*			141	22
		SCREW, MACHINE, PANEL 145183 (24617)	EA	1									141	21
X1		PANEL, CONTROL BOX 10896505 (19207)	EA	1	*	*	*	*	*	*			141	8
X2F		SUPPORT, HEATER CONTROL 11658339 (19207) CA	EA	4	*	*	*	*	*	*			142	1
PO	5305-993-1848	SCREW, MACHINE, MOTOR MOUNTING MS35207-265 (96906) BA, BB, DA, DB, EA, EB	EA	4	*	*	*	*	*	*			142	2
PO	5310-576-5752	WASHER, LOCK, MOTOR MOUNTING MS35333-39 (96906)	EA	2	*	*	*	*	*	*			142	3
PO	5325-754-2240	GROMMET, RUBBER, WIPER MOTOR MS35490-11 (96906) BA, BB, DA, DB, EA, EB	EA	4	*	*	*	*	*	*			142	4
PO		SPACER, MOTOR MOUNTING 11640793 (19207)	EA	4	*	*	*	*	*	*			142	5
MO		HOSE, WIPER (1 PIECE, 26 IN. LG., 2 PIECES, 4 IN. LG., 1 PIECE 67 IN. LG.) BA, BB, DA, DB, EA, EB	EA	4										
PO	4720-203-2668	MANUFACTURE FROM: HOSE, RUBBER (101 IN. REQUIRED) ZZ-H617, TYPE 1, CLASS 1 (81349)	FT	V	*	*	*	*	*	*				
PO	2310-921-6369	TEE, WINDSHIELD WIPER TUBE 11640795 (19207)	EA	1	*	*	*	*	*	*			142	6
PO	2540-678-1340	VALVE ASSEMBLY, WIPER CONTROL 7017829 (19207)	EA	1	*	*	*	*	*	*			142	7
PO	5310-696-5172	NUT, ASSEMBLED WASHER, CONTROL VALVE 8328424 (19207)	EA	2	*	*	*	*	*	*			142	8
PO	5340-827-2453	CLAMP, WIPER HOSE TO FRAME MS35140-5 (96906) BA, BB, DA, DB, EA, EB	EA	4	*	*	*	*	*	*			142	9
PO	5305-879-7941	SCREW, MACHINE, WIPER HOSE CLAMP MS24617-31 (96906) BA, BB, DA, DB, EA, EB	EA	4	*	*	*	*	*	*			142	10

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SBR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day GS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip entry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		2202-ACCESSORY ITEMS-Continued												
PO	5305-015-5198	SCREW, MACHINE, MOTOR MOUNTING 155198 (24617)	EA	4	*	*	*	*	*	*			142	11
		CA												
PO	2540-917-5896	ARM ASSEMBLY, WINDSHIELD WIPER 11652522 (19207)	EA	2	*	*	*	*	*	*			142	12
PO	2540-917-5894	BLADE, WINDSHIELD WIPER 11640713 (19207)	EA	2	*	*	*	*	*	*			142	13
PO	5325-185-0004	GROMMET, RUBBER, WIPER MOTOR MS35490-34 (96906)	EA	2	*	*	*	*	*	*			142	14
		CA												
PO	2540-917-5895	MOTOR ASSEMBLY, WINDSHIELD WIPER 7017830-1 (19207)	EA	2	*	*	*	*	*	*			142	15
MO		HOSE, WIPER (1 PIECE, 32 IN. LG., 1 PIECE, 6.5 IN. LG., 1 PIECE 38 IN. LG AND 1 PIECE 88 IN. LG)	EA	4									142	16
		CA												
PO	4720-203-2668	MANUFACTURE FROM: HOSE, RUBBER (164.5 IN. REQUIRED) ZZ-H617, TYPE 1, CLASS 1 (81349)	FT	V	*	*	*	*	*	*				
PO	5305-052-8238	SCREW, MACHINE, WIPER HOSE CLAMP MS24617-42 (96906)	EA	3	*	*	*	*	*	*			142	17
		CA												
PO	5340-157-7625	CLAMP, WIPER HOSE 7416682 (19207)	EA	3	*	*	*	*	*	*			142	18
		CA												
PO		BUSHING, RUBBER, WIPER HOSE 7000997 (19207)	EA	1	*	*	*	*	*	*			142	19
PO	2540-152-2499	CLIP, WIPER HOSE 11640737 (19207)	EA	1	*	*	*	*	*	*			142	20
PO	2530-930-0739	TUBE, WIPER HOSE 8742688 (19207)	EA	1	*	*	*	*	*	*			142	21
PO	5305-984-6208	SCREW, MACHINE, CONTROL VALVE MS35206-261 (96906)	EA	2	*	*	*	*	*	*			142	22
PO	5325-451-9189	GROMMET, WIPER HOSE 7008259 (19207)	EA	1	*	*	*	*	*	*			142	23

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of measure	(5) Qty in unit	(6) 30-day DB maint. allowance			(7) 30-day GB maint. allowance		
					(a) 1-30	(b) 31-60	(c) 61-90	(a) 1-30	(b) 31-60	(c) 61-90
		2202-ACCESSORY ITEMS-Continued								
PO	5310-616-1739	NUT, PLAIN, ARM MOUNTING MS51967-2 (96906)	CA	EA	8	*	*	*	*	*
PO	2540-917-5901	ARM ASSEMBLY, REAR VIEW MIRROR 11657774-2 (19207)	CA	EA	2	*	*	*	*	*
PO		ARM ASSEMBLY, REAR VIEW MIRROR 11657774-1 (19207)		EA	2	*	*	*	*	*
PO	5310-877-5796	NUT, PLAIN, HEXAGON, MIRROR MS21044-N4 (96906)		EA	2	*	*	*	*	*
PO	5310-809-4058	WASHER, FLAT, MIRROR MS27183-10 (96906)		EA	2	*	*	*	*	*
PO	2540-459-7267	MIRROR ASSEMBLY, REAR VIEW MS53015-1 (96906)		EA	2	*	*	*	*	*
PO	9905-205-2795	REFLECTOR, RED MS35387-1 (96906)		EA	4	*	*	*	*	*
PO	9905-202-3639	REFLECTOR, AMBER MS35387-2 (96906)		EA	2	*	*	*	*	*
PO	5305-855-0957	SCREW, MACHINE, REFLECTOR MS24629-46 (96906)	CA	EA	12	*	*	*	*	*
PO	5305-543-2335	SCREW, MACHINE, REFLECTOR MOUNTING 188749 (24617)	BA, BB, DA, DB, EA, EB	EA	12	*	*	*	*	*
PO	5305-988-1725	SCREW, MACHINE, ARM MOUNTING MS35206-281 (96906)	BA, BB, DA, DB, EA, EB	EA	8	*	*	*	*	*
PO	5305-068-0502	SCREW, CAP, ARM MOUNTING MS90725-6 (96906)	CA	EA	8	*	*	*	*	*
PO	5310-582-5965	WASHER, LOCK, ARM MOUNTING MS35338-44 (96906)		EA	8	*	*	*	*	*
POR	2540-627-9923	HEATER ASSEMBLY, REAR AND CREW COMPARTMENT 8359774 (19207)		EA	2	*	*	*	*	*
PF	2990-213-1279	VALVE ASSEMBLY, FUEL CONTROL 7520336 (19207)		EA	1	*	*	*	*	*

144

[illegible]

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMP code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day O&M maint. allowance			(7) 30-day O&M maint. allowance			(8) 1-yr air per 100 equip category	(9) Depot maint air per 100 equip	(10) Illustration	
					(11) 1-30	(12) 31-60	(13) 61-100	(14) 1-30	(15) 31-60	(16) 61-100			(17) Figure No.	(18) Item No.
		2202-ACCESSORY ITEMS-Continued												
		HEATER ASSEMBLY, REAR AND CREW COMPARTMENT-Continued												
PF		RECEPTACLE, ELECTRICAL 7410324 (19207)	EA	1	*	*	*	*	*	*			144	16
PF		SCREW, MACHINE, RECEPTACLE 8359533 (19207)	EA	4	*	*	*	*	*	*			144	17
PF	5935-772-9224	CONNECTOR, RECEPTACLE 8359787 (19207)	EA	1	*	*	*	*	*	*			144	18
X2F		HOUSING ASSEMBLY, HEATER 8359783 (19207)	EA	1	*	*	*	*	*	*			144	19
PF	4720-752-0366	DUCT, COMBUSTION, BLOWER 7520366 (19207)	EA	1	*	*	*	*	*	*			144	20
PF	4730-770-9059	CLAMP, HOSE, AIR DUCT 8359683 (19207)	EA	2	*	*	*	*	*	*			144	21
PF	2540-340-3393	BLOWER ASSEMBLY, VENT 8359743 (19207)	EA	1	*	*	*	*	*	*			144	22
PF		RIVET, TUBULAR, IDENTIFICATION PLATES 118730 (78385)	EA	6	*	*	*	*	*	*			144	23
X2F		PLATE, IDENTIFICATION, 24V 484153 (78385)	EA	1	*	*	*	*	*	*			144	24
PF	5310-333-7341	NUT, PLAIN, BLOWER AND GROUND LEAD 7951221 (19207)	EA	7	*	*	*	*	*	*			144	25
PF	2540-692-8851	EXCHANGER ASSEMBLY HEAT 8359782 (19207)	EA	1	*	*	*	*	*	*			144	26
PF	5310-017-8364	WASHER, LOCK, GROUND LEAD 178364 (24617)	EA	5	*	*	*	*	*	*			144	27
PF	5310-167-1366	NUT, PLAIN, HEXAGON, IGNITOR 113103 (24617)	EA	2	*	*	*	*	*	*			144	28
PF	2540-344-8601	BLOWER ASSEMBLY, COMBUSTION 8359779 (19207)	EA	1	*	*	*	*	*	*			144	29
PF		CLAMP, LOOP 572889 (24617)	EA	1	*	*	*	*	*	*			144	30

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty in unit	(6) 30-day DB maint. allowance			(7) 30-day DB maint. allowance			(8) 1-yr allow per 100 equip catgry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		2202- ACCESSORY ITEMS—Continued												
PF		HEATER ASSEMBLY, REAR AND CREW COMPARTMENT—Continued	EA	1	*	*	*	*	*	*			144	31
		SCREW, MACHINE, GROUND LEAD												
		455230 (24617)												
PF	6150-279-6097	LEAD, GROUND	EA	1	*	*	*	*	*	*			144	32
		7413564 (19207)												
PF	5330-752-0346	WICK, FUEL	EA	1	*	*	*	*	*	*			144	33
		7520346 (19207)												
PF	4730-090-9123	STANDPIPE, WICK	EA	1	*	*	*	*	*	*			144	34
		7951960 (19207)												
PF		RESISTOR ASSEMBLY, HEATER	EA	1	*	*	*	*	*	*			144	35
		G489359 (78385)												
PF	4730-844-6345	NUT, TUBE, FUEL VALVE	EA	1	*	*	*	*	*	*			144	36
		114630 (24617)												
PF	4730-423-3559	COLLAR, COMPRESSION FUEL VALVE	EA	1	*	*	*	*	*	*			144	37
		114631 (24617)												
PF	4730-270-4557	UNION, PIPE, FUEL VALVE	EA	1	*	*	*	*	*	*			144	38
		114629 (24617)												
PF	2540-308-6205	FLANGE, FUEL LINE	EA	1	*	*	*	*	*	*			144	39
		7951959 (19207)												
PF	2540-039-8967	PLATE, FUEL LINE	EA	1	*	*	*	*	*	*			144	40
		7951958 (19207)												
PF	5325-550-9356	GROMMET, RUBBER	EA	1	*	*	*	*	*	*			144	41
		117959 (24617)												
X2F		PLATE, IDENTIFICATION	EA	1	*	*	*	*	*	*			144	42
		484114 (78385)												
PF	2540-039-8086	ROD, QUARTZ	EA	1	*	*	*	*	*	*			144	43
		7416552 (19207)												
PF	2540-152-2528	SWITCH ASSEMBLY, FLAME DETECTOR	EA	1	*	*	*	*	*	*			144	44
		7700185 (19207)												

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr air per 100 equip enclgy	(9) Depot maint air per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		2202-ACCESSORY ITEMS-Continued												
PF	2540-692-8848	HEATER ASSEMBLY, REAR AND CREW COMPARTMENT-Continued HEATER ASSEMBLY, W/O BLOWER 8359778 (19207)	EA	1	*	*	*	*	*	*				
PF	5950-645-8838	COIL ASSEMBLY 8359613 (19207)	EA	1	*	*	*	*	*	*				
PF	5950-310-4655	COIL ASSEMBLY 8359617 (19207)	EA	1	*	*	*	*	*	*				
PO	2910-073-0165	PUMP, FUEL MS51321-1 (96906)	EA	1	*	*	*	*	*	*			145	1
PO	5305-993-2461	SCREW, MACHINE, SUPPORT PANEL AND FUEL PUMP MOUNTING MS35207-281 (96906)	EA	6	*	*	*	*	*	*			145	2
PO		COCK, FUEL SHUTOFF 593549 (24617)	EA	1	*	*	*	*	*	*			145	3
PO	4730-270-4673	FITTING, FUEL TUBE 114795 (24617)	EA	1	*	*	*	*	*	*			145	4
PO		TUBE, FUEL PUMP-TO-HEATER 11658048 (19207)	EA	1	*	*	*	*	*	*			145	5
PO	4730-133-3252	CLAMP, HOSE 11608950-17 (19207)	EA	2	*	*	*	*	*	*			145	6
MO		HOSE, DUCT, HEATER 8711056 (19207)	EA	1									145	7
		MANUFACTURE FROM:												
PO	4720-409-3988	HOSE, DUCT (11-1/2 IN. REQUIRED) MIL-H-62028, TYPE III, CLASS I (81349)	FT	V	*	*	*	*	*	*				
PO	5340-157-7536	CLAMP, HEATER HOLDDOWN 11658216 (19207)	EA	1	*	*	*	*	*	*			145	8
PO	5305-795-1122	SCREW, MACHINE, HOLDDOWN CLAMP 7951122-1 (19207)	EA	2	*	*	*	*	*	*			145	9

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr depot maint allowance per 100 equip category	(9) Depot maint allowance per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-90	(a) 1-30	(b) 31-60	(c) 61-90			(a) Figure No.	(b) Item No.
		2202-ACCESSORY ITEMS-Continued												
PO	5310-407-9566	WASHER, LOCK, HOLDDOWN CLAMP MS35338-45 (96906)	CA	EA	2	*	*	*	*	*	*		145	10
PO	5310-081-4219	WASHER, FLAT, HOLDDOWN CLAMP MS27183-12 (96906)	CA	EA	2	*	*	*	*	*	*		145	11
X20		ADAPTER ASSEMBLY, VENT 7390369 (19207)	CA	EA	1	*	*	*	*	*	*		145	12
PO	5305-052-8238	SCREW, MACHINE, VENT ADAPTER MS24617-42 (96906)	CA	EA	3	*	*	*	*	*	*		145	13
PO	2510-739-0787	SUPPORT ASSEMBLY, HEATER 7390787 (19207)	CA	EA	1	*	*	*	*	*	*		145	14
PO	5310-770-0243	WASHER, EXHAUST 7700243 (19207)	CA	EA	1	*	*	*	*	*	*		145	15
PO	2540-770-0242	SEAL, EXHAUST 7700242 (19207)	CA	EA	1	*	*	*	*	*	*		145	16
PO	2990-152-2531	EXTENSION, EXHAUST 7390043 (19207)	CA	EA	1	*	*	*	*	*	*		145	17
PO	5305-954-4295	SCREW, MACHINE, HEATER SUPPORT MS35190-287 (96906)	CA	EA	1	*	*	*	*	*	*		145	18
X20		PANEL ASSEMBLY, HEATER SUPPORT 11658501 (19207)	CA	EA	1	*	*	*	*	*	*		145	19
PO	5310-959-7600	NUT, PLAIN, HEXAGON, SUPPORT PANEL AND FUEL PUMP MOUNTING MS51922-5 (96906)	CA	EA	6	*	*	*	*	*	*		145	20
MO		HOSE, FUEL 11657394-7 (19207)	CA	EA	1								145	21
		MANUFACTURE FROM:												
PO		HOSE, RUBBER (28 IN. REQUIRED) MIL-H-13444, TYPE II (81349)	IT	V	*	*	*	*	*	*	*			

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr air per 100 equip catgry	(9) Depot maint air per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		2202 - ACCESSORY ITEMS - Continued												
PO	4730-137-9236	CLAMP, FUEL HOSE 11640805-3 (19207)	CA	EA	4	*	*	*	*	*	*		145	22
PO		TEE, FUEL LINE 11662583 (19207)	CA	EA	1	*	*	*	*	*	*		145	23
PO	4730-270-4673	FITTING, FUEL TUBE 114796 (24617)	CA	EA	1	*	*	*	*	*	*		145	24
MO		TUBE, TEE-TO-FUEL PUMP 8742689 (19207)	CA	EA	1								145	25
		MANUFACTURE FROM:												
PO		TUBE, STEEL (2.38 IN. REQUIRED) MIL-T-3520, TYPE III (81349)	FT	V	*	*	*	*	*	*	*			
PO	2540-753-7537	ADAPTER ASSEMBLY, OUTLET 7537537 (19207)	CA	EA	1	*	*	*	*	*	*		145	26
PO	4730-274-7406	CLAMP, HEATER 7951827 (19207)	CA	EA	1	*	*	*	*	*	*		145	27
PO	5310-061-0004	WASHER, LOCK, OUTLET ADAPTER MS45904-57 (96906)	CA	EA	4	*	*	*	*	*	*		145	28
PO	5305-889-3002	SCREW, MACHINE, OUTLET ADAPTER MS35206-242 (96906)		EA	4	*	*	*	*	*	*		145	29
PO		BLOWER ASSEMBLY, AIR 11657832 (19207)	CA	EA	1	*	*	*	*	*	*		146	1
PO		HEATER ASSEMBLY, WATER 11657852 (19207)	CA	EA	1	*	*	*	*	*	*		146	2
X20		NOZZLE ASSEMBLY, DEFROSTER 11657700 (19207)	CA	EA	2	*	*	*	*	*	*		146	3

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) S&R code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty per line item	(6) 30-day O&M maint. allowance			(7) 30-day O&M maint. allowance			(8) 1-yr air per 100 equip entry	(9) Depot maint air per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-90	(a) 1-30	(b) 31-60	(c) 61-90			(a) Figure No.	(b) Item No.
MO		2202-ACCESSORY ITEMS-Continued												
		HOSE, DEFROSTER (1 PIECE 14 IN. LG., 1 PIECE 24-1/2 IN. LG.)	EA	2									146	4
		CA												
		MANUFACTURE FROM:												
PO	4720-999-9323	HOSE, DUCT (38-1/2 IN. REQUIRED) MIL-H-62028, TYPE III, CLASS I (81349)	FT	V	*	*	*	*	*	*				
X20		DUCT AND VALVE ASSEMBLY, AIR 11657837 (19207)	EA	1	*	*	*	*	*	*			146	5
X20		DISTRIBUTOR ASSEMBLY, AIR 11657833 (19207)	EA	1	*	*	*	*	*	*			146	6
X20		CABLE ASSEMBLY, AIR CONTROL 8686901-4 (19207)	EA	1	*	*	*	*	*	*			146	7
MO		HOSE, DEFROSTER (1-PIECE 14 IN. LG., 1-PIECE 24 IN. LG.)CA	EA	2									146	8
		MANUFACTURE FROM:												
PO	4720-999-9323	HOSE, DUCT (38 IN. REQUIRED) MIL-H-62028, TYPE III, CLASS I (81349)	FT	V	*	*	*	*	*	*				
PO	3040-472-4187	CABLE ASSEMBLY, DEFROSTER CONTROL 8686901-3 (19207)	EA	1	*	*	*	*	*	*			146	9
PO		CABLE ASSEMBLY, HEATER SWITCH-TO HEATER MOTOR 11657665 (19207)	EA	1	*	*	*	*	*	*			146	10
PO		GROMMET, RUBBER, CONTROL CABLE 7000997 (19207)	EA	1	*	*	*	*	*	*			146	11
PO		CABLE ASSEMBLY, HEAT CONTROL 8686901-2 (19207)	EA	1	*	*	*	*	*	*			146	12
PO		DECAL, BLOWER SWITCH 11657671 (19207)	EA	1	*	*	*	*	*	*			146	13
PO	5930-655-1514	SWITCH, BLOWER, ON-OFF MS35058-22 (96906)	EA	1	*	*	*	*	*	*			146	14
PO		CABLE ASSEMBLY, BATTERY-TO-HEATER SWITCH 11657916 (19207)	EA	1	*	*	*	*	*	*			146	15

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day GS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip enlgy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		2202-ACCESSORY ITEMS-Continued												
PO		SPACER, DISTRIBUTOR MOUNTING QQ-T830 (81349)	CA	EA	1	*	*	*	*	*	*		146	16
PO	5340-827-8314	CLIP, CONTROL CABLE MS21333-33 (96906)	CA	EA	1	*	*	*	*	*	*		146	17
PO	5310-696-5177	NUT ASSEMBLY, CONTROL CABLE 8328482 (19207)	CA	EA	3	*	*	*	*	*	*		146	18
PO	5330-297-7255	TUBE, WATER, ENGINE OUTLET 11657251 (19207)	CA	EA	1	*	*	*	*	*	*		146	19
PO	4730-908-3194	CLAMP, HOSE MS35842-11 (96906)	CA	EA	2	*	*	*	*	*	*		146	20
PO	4730-908-3194	CLAMP, HOSE MS35842-11 (96906)	CA	EA	1	*	*	*	*	*	*		146	21
MO		HOSE, WATER 11657670-1 (19207)	CA	EA	1								146	22
		MANUFACTURE FROM:												
PO		HOSE, RUBBER (22 IN. REQUIRED) ZZ-H428, TYPE VI, GRADE B, CLASS 2 (81349)	FT	V	*	*	*	*	*	*	*			
MO		HOSE, WATER 11657670-2 (19207)	CA	EA	1								146	23
		MANUFACTURE FROM:												
PO		HOSE, RUBBER, (34 IN. REQUIRED) ZZ-H428, TYPE VI, GRADE B, CLASS 2 (81349)	FT	V	*	*	*	*	*	*	*			
PO		SEAL, BLOWER 11640873 (19207)	CA	EA	1	*	*	*	*	*	*		146	24
PO	5305-068-0500	SCREW, CAP, CABLE CLIP MS90725-3 (96906)	CA	EA	1	*	*	*	*	*	*			

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip catlgy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-90	(b) 21-90	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		2202-ACCESSORY ITEMS-Continued												
PO		NUT, CABLE CLIP 8328462 (19207) CA	EA	1	*	*	*	*	*	*				
PO		CLIP, DISTRIBUTOR 7974659 (19207) CA	EA	3	*	*	*	*	*	*				
PO		SCREW, MACHINE, DISTRIBUTOR 443882 (24617) CA	EA	8	*	*	*	*	*	*				
PO		SCREW, MACHINE, DISTRIBUTOR 451673 (24617) CA	EA	1	*	*	*	*	*	*				
PO	5310-809-4058	WASHER, FLAT, DISTRIBUTOR MS27183-10 (96906) CA	EA	1	*	*	*	*	*	*				
PO		NUT ASSEMBLY, HEATER AND DUCT AND VALVE MOUNTING 8328462 (19207) CA	EA	4	*	*	*	*	*	*				
		2210-DATA PLATES												
PO		PLATE, WINCH CONTROL 11657243 (19207) BB, DB, EB	EA	1	*	*	*	*	*	*			147	1
PO	5305-016-1790	SCREW, MOUNTING PLATE ATTACHING 161790 (24617)	EA	4	*	*	*	*	*	*			147	2
PO	9905-431-8337	PLATE, CAUTION, TRANSFER AND TRANSMISSION 11657242 (19207)	EA	1	*	*	*	*	*	*			147	3
PO		RIVET, DATA PLATE ATTACHING MS16535-228 (96906)	EA	24	*	*	*	*	*	*			147	4
PO	9905-168-3190	PLATE, TRANSMISSION AND TRANSFER SHIFTING 11657241 (19207)	EA	1	*	*	*	*	*	*			147	5
PO	9905-248-4741	PLATE, SERVICING 11640941 (19207)	EA	1	*	*	*	*	*	*			147	6
PO	9905-248-4739	PLATE, WEIGHT AND DIMENSION 11640942 (19207) BA, BB, DA, EA	EA	1	*	*	*	*	*	*			147	7
PO	9905-426-0763	PLATE, WEIGHT AND DIMENSION 11657303 (19207) CA	EA	1	*	*	*	*	*	*			147	7

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr alt per 100 equip catgry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		2210—DATA PLATES—Continued												
PO		PLATE, WEIGHT AND DIMENSION 11657246 (19207)	DB	EA	1	*	*	*	*	*	*		147	7
PO		PLATE, WEIGHT AND DIMENSION 11658082 (19207)	EB	EA	1	*	*	*	*	*	*		147	7
PO	2510-405-4377	PLATE, MOUNTING, DATA 7412583 (19207)		EA	1	*	*	*	*	*	*		147	8
PO		PLATE, NAME 11658081 (19207)	EB	EA	1	*	*	*	*	*	*		147	9
PO	9905-405-0230	PLATE, NAME 11640940 (19207)	BA, DA, EA	EA	1	*	*	*	*	*	*		147	9
PO	9905-405-0224	PLATE, NAME 11657377 (19207)	CA	EA	1	*	*	*	*	*	*		147	9
PO		PLATE, NAME 11657245 (19207)	DB	EA	1	*	*	*	*	*	*		147	9
PO		PLATE, NAME 11657304 (19207)	BB	EA	1	*	*	*	*	*	*		147	9
X2F		TAG, FRONT AXLE IDENTIFICATION 32682-4 (72447)		EA	1	*	*	*	*	*	*		74	27
X2F		TAG, FRONT AXLE RATIO 17627-17 (72447)		EA	1	*	*	*	*	*	*		74	28
X2F		TAG, REAR AXLE IDENTIFICATION 32682-4 (72447)		EA	1	*	*	*	*	*	*		77	44

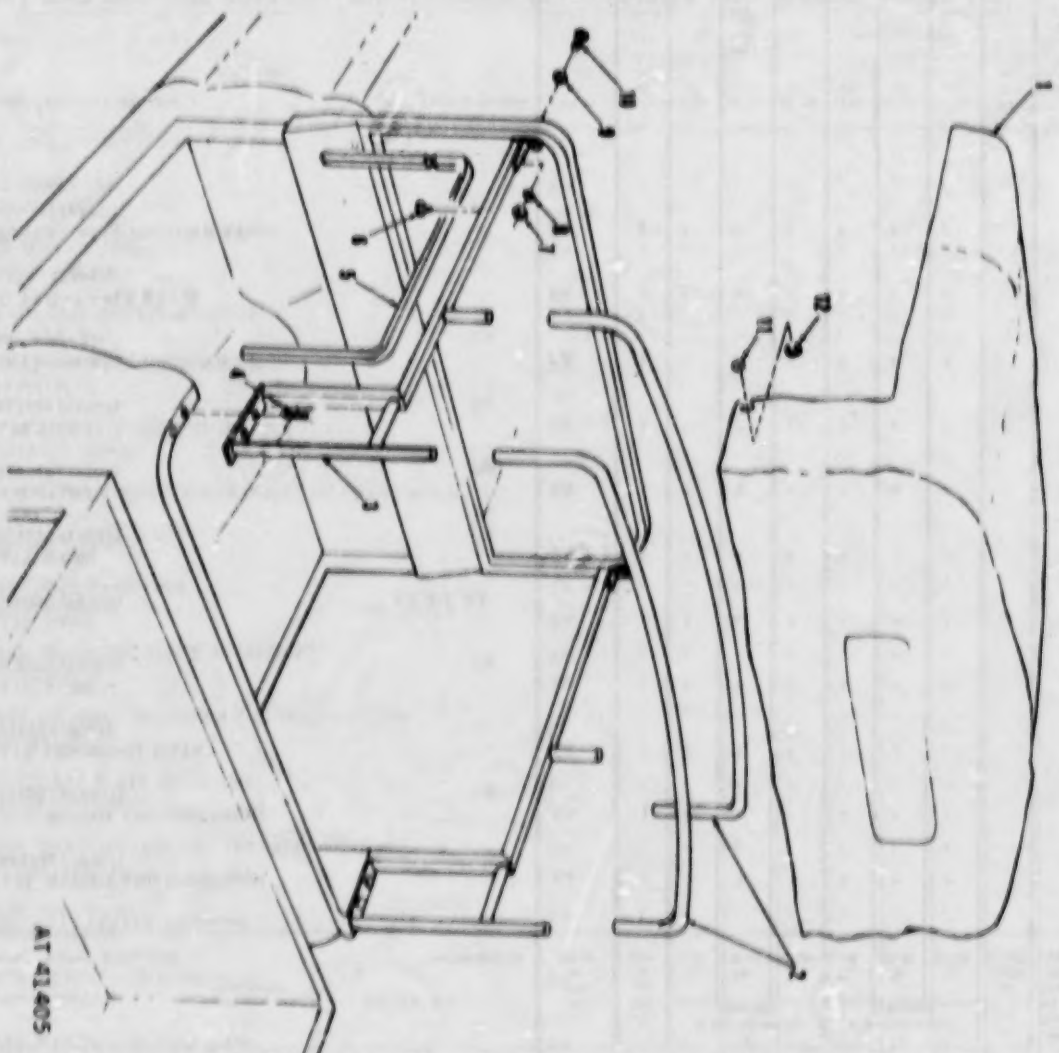


Figure 125. Oak Chair and Frame

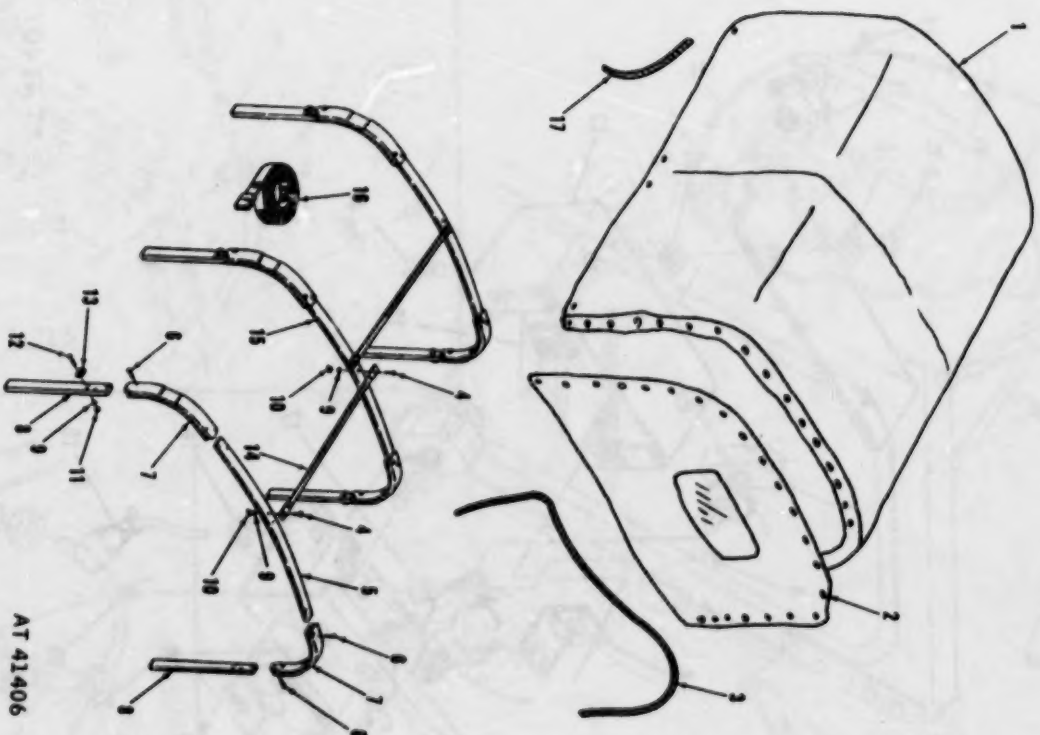


Figure 140. Cargo Cans and Bows

AT 41406

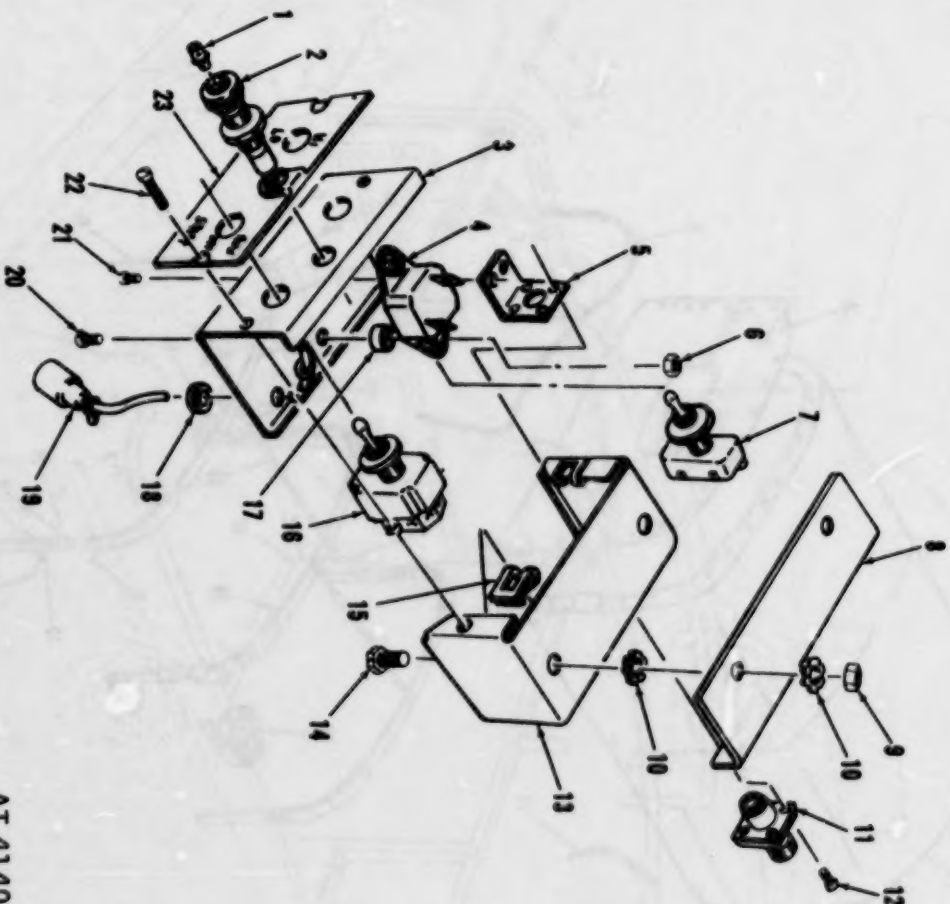


Figure 141. Heater Control Box Assembly

AT 41407



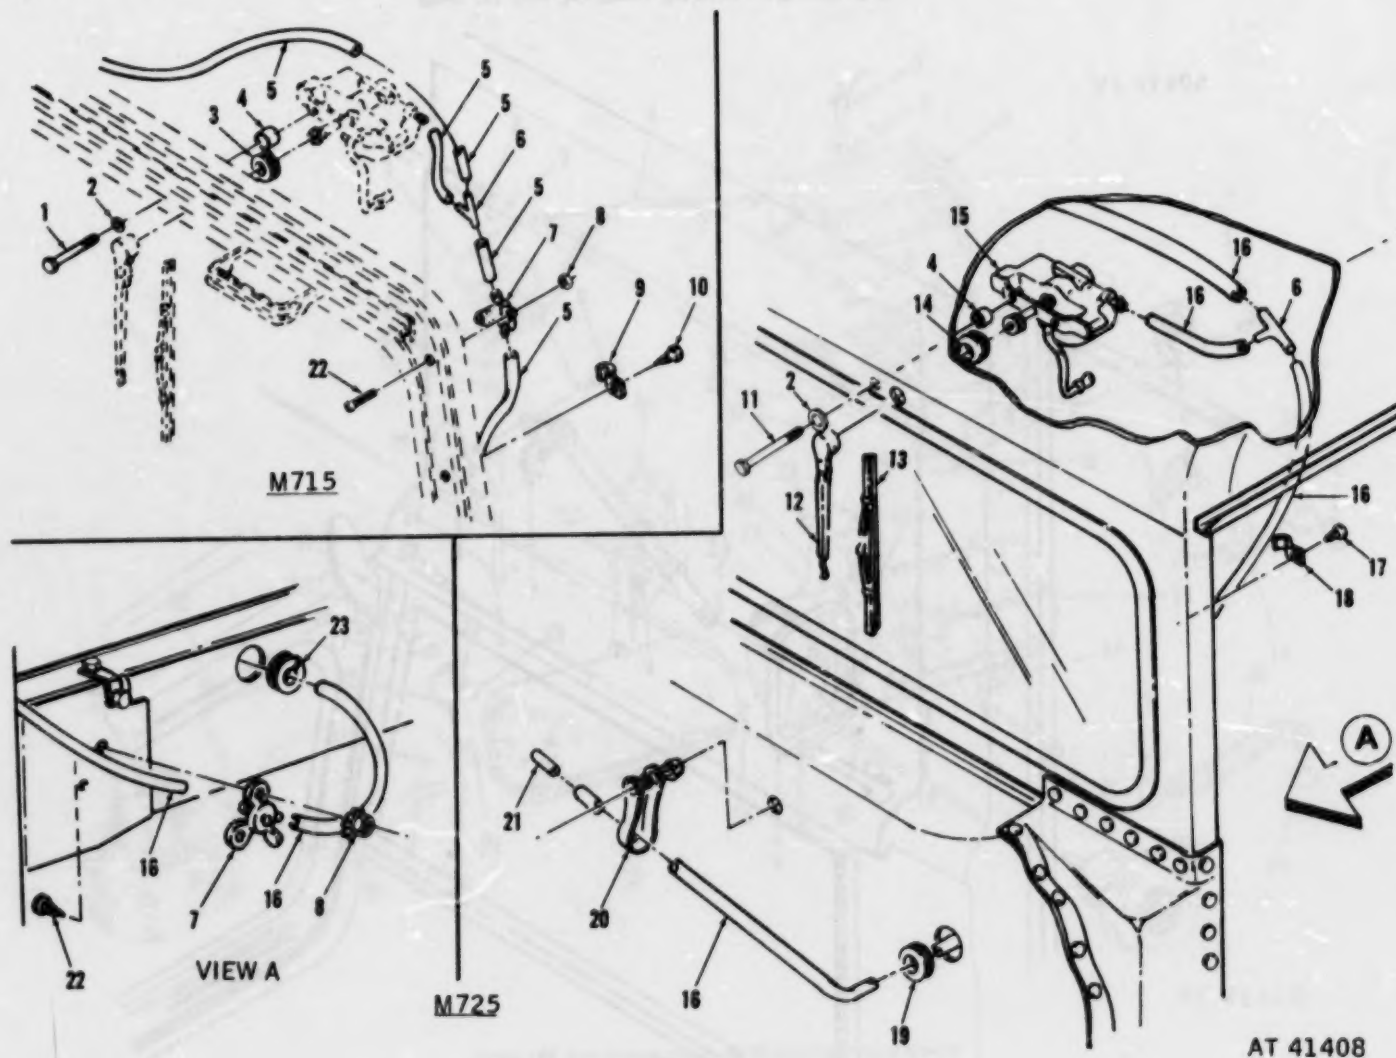


Figure 142. Windshield Wipers, Motors and Related Parts

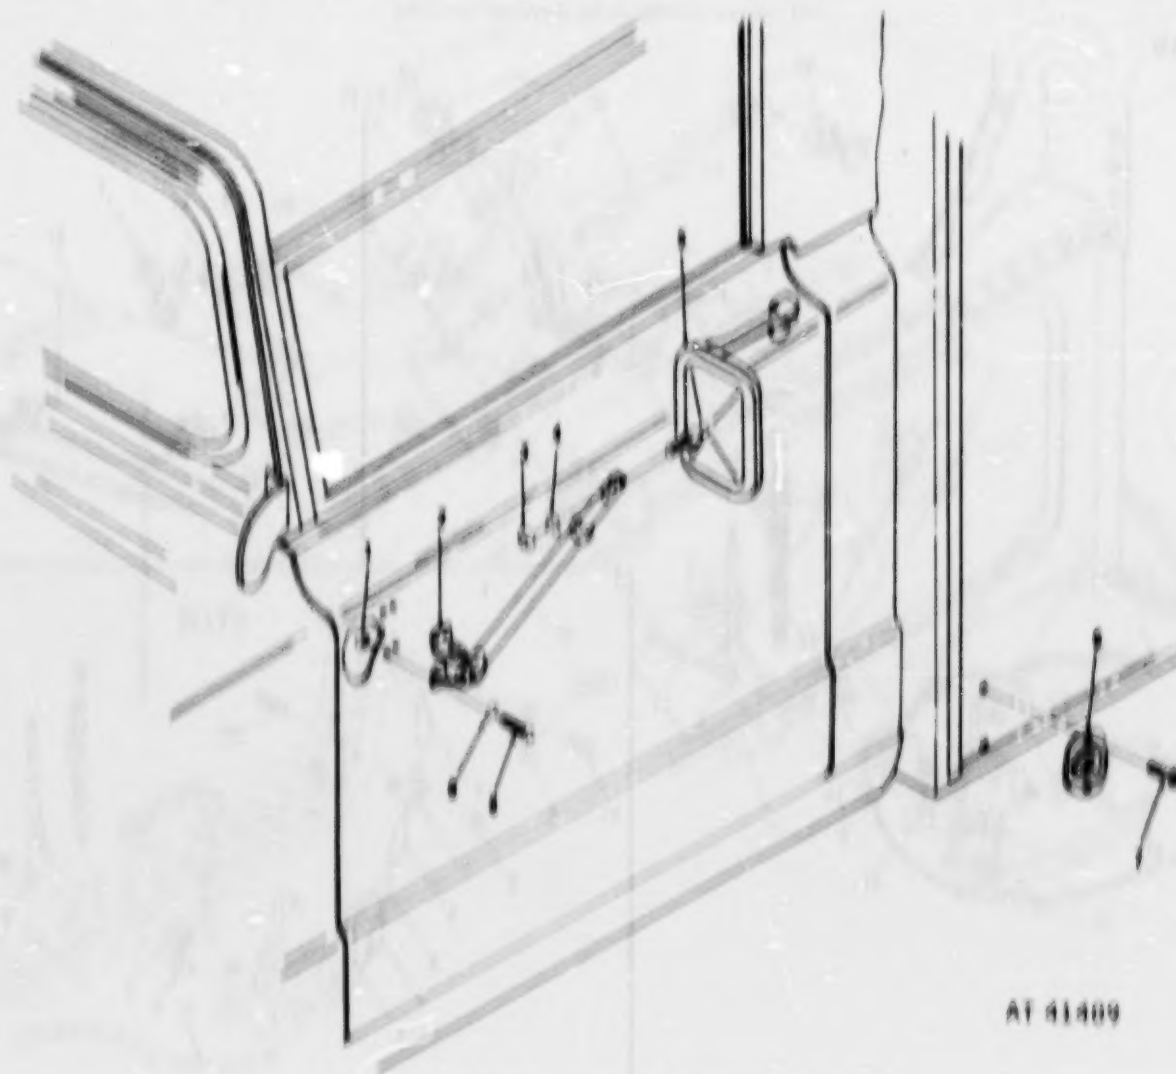

AT 41409

Figure 18-1: Rear View of Main, Reference and Mounting Parts

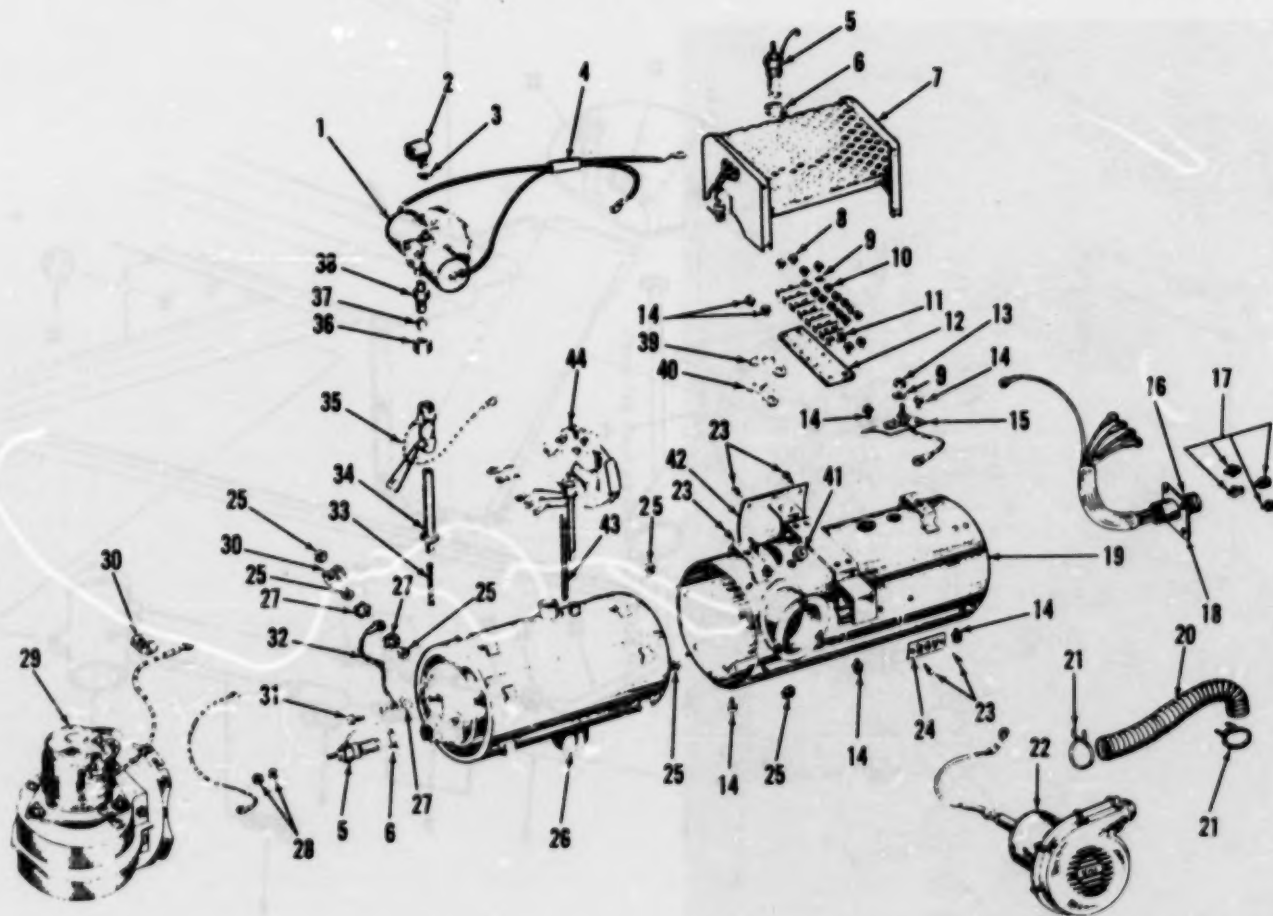

AT 41410

Figure 144. Rear Compartment and Crew Compartment Heaters

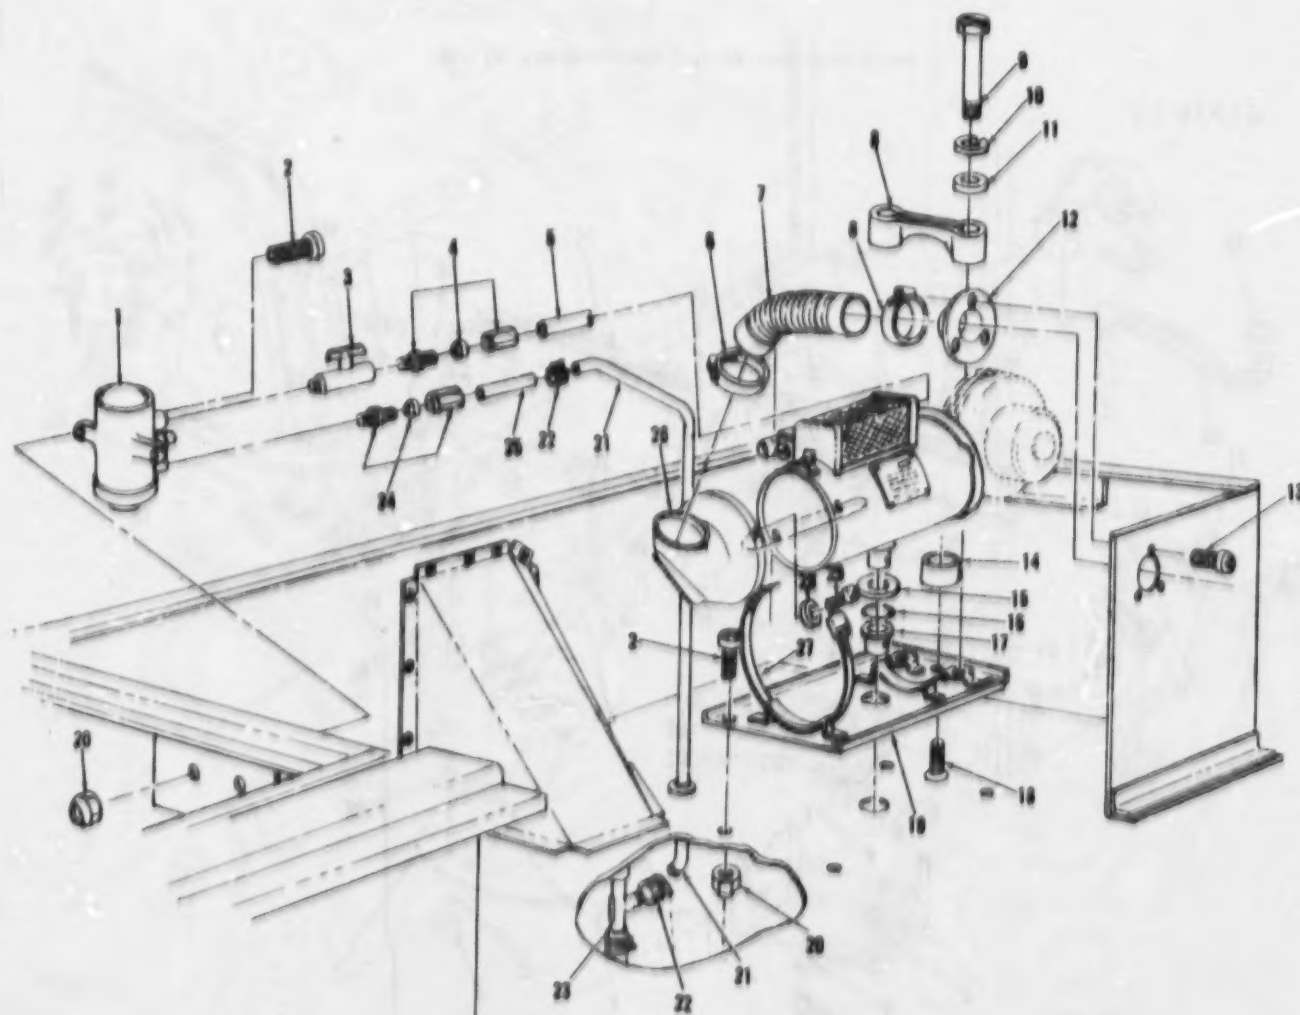


Figure 145. Rear Compartment Heater and Related Parts

AT 41411


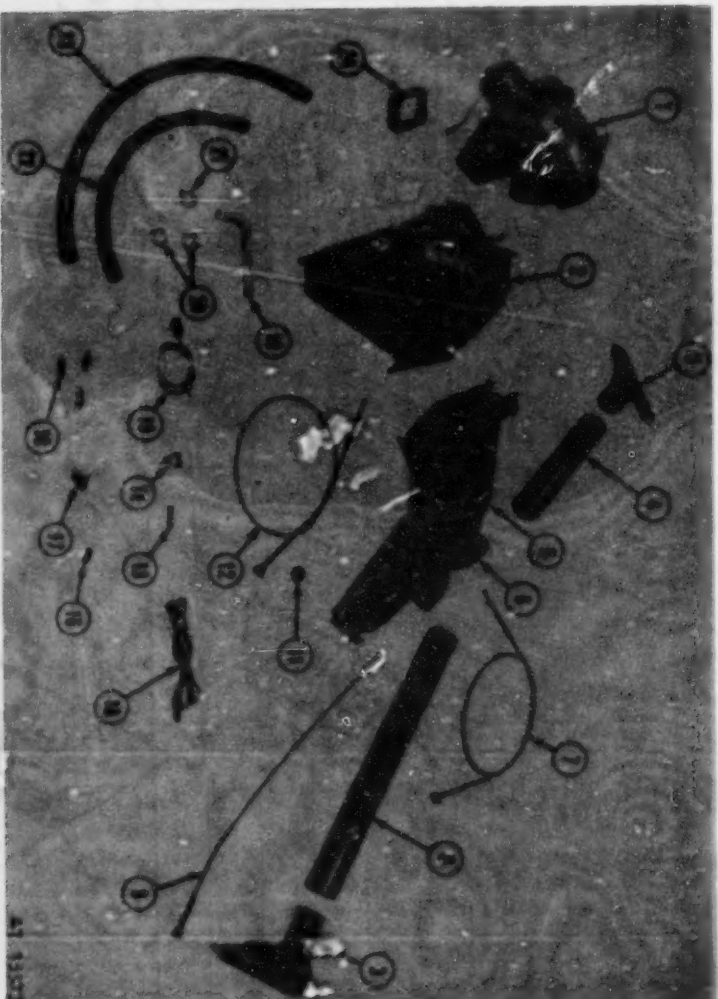


Figure 146. Fresh Air Heater and Related Parts

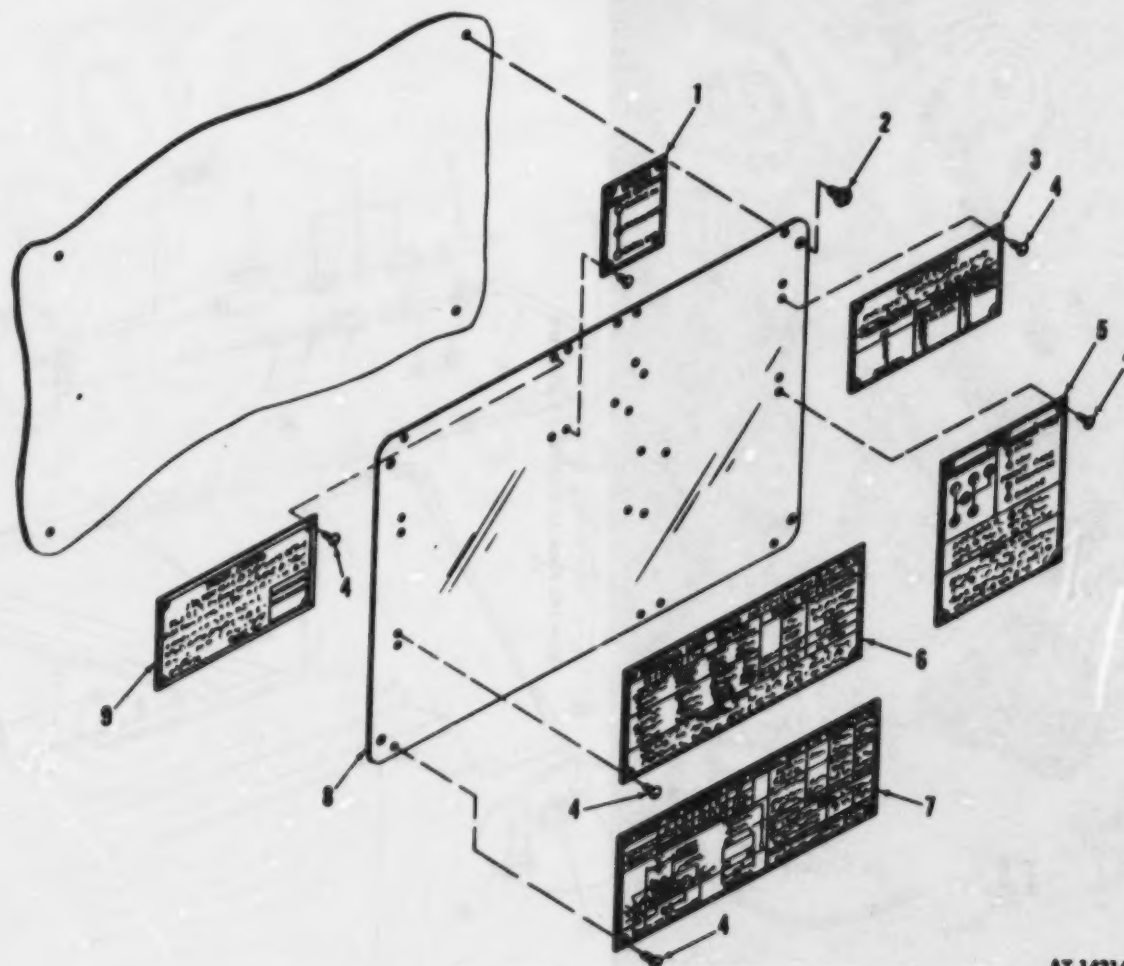

AT 14314

Figure 147. Data Plates

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(8) 30-day DA maint. allowance			(9) 30-day GS maint. allowance			(10) 1-yr allow per 100 equip catrgy	(11) Depot maint allow per 100 equip	(12) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		GROUP 33—SPECIAL PURPOSE KITS												
		3303—WINTERIZATION KITS												
PO	2540-933-3978	HEATER KIT, POWER PLANT 11657808 (19207)	EA	1	*	*	*	*	*	*			148	
X20		BRACKET, OIL PAN SHROUD, L. H. 11657210 (19207)	EA	1	*	*	*	*	*	*			148	1
X20		BRACKET, OIL PAN SHROUD, R.H. 11657209 (19207)	EA	1	*	*	*	*	*	*			148	2
PF		KIT, SLAVE RECEPTACLE 946878 (65909)	EA	1	SEE GROUP 3307								148	3
PO		TUBE, HOT AIR EXHAUST 11657814 (19207)	EA	1	*	*	*	*	*	*			148	4
X20		SUPPORT ASSEMBLY, HEATER 11657816 (19207)	EA	1	*	*	*	*	*	*			148	5
PO	5306-775-1868	BOLT, MACHINE, HEATER SUPPORT MS90725-35 (96906)	EA	3	*	*	*	*	*	*				
PO	5310-880-7744	NUT, PLAIN, HEATER SUPPORT MS51967-5 (96906)	EA	3	*	*	*	*	*	*				
PO	5310-959-4679	WASHER, LOCK, HEATER SUPPORT MS35340-5 (96906)	EA	3	*	*	*	*	*	*				
X20		SPACER, HEATER SUPPORT 11657807 (19207)	EA	1	*	*	*	*	*	*				
PO	2540-953-0110	BOX ASSEMBLY, HEATER CONTROL 10885798 (19207)	EA	1	*	*	*	*	*	*			148	6
PO	4730-795-1084	ELBOW ASSEMBLY, HOT AIR EXHAUST 7951084 (19207)	EA	1	*	*	*	*	*	*			148	7
PO	4730-908-6294	CLAMP, HEATER MOUNTING MS35842-16 (96906)	EA	2	*	*	*	*	*	*			148	8
POR	2540-997-1532	HEATER ASSEMBLY, POWER PLANT 11601698 (19207)	EA	1	*	*	*	*	*	*			148	9

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(2) SNR code	(3) Federal stock Number	(4) Description Reference Number & Mfg. Code	(5) Unit of meas	(6) Qty inc in unit	(8) 30-day DB maint. allowance			(7) 30-day GB maint. allowance			(8) 1-yr allow per 100 equip catgry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		3303-WINTERIZATION KITS—Continued												
		HEATER KIT, POWER PLANT—Continued												
PF	2540-997-1534	HEATER ASSEMBLY, POWER PLANT—Continued	EA	1	*	*	*	*	*	*			149	1
		SWITCH, FLAME DETECTOR												
		G702647 (78385)												
PF	5305-436-2582	SCREW, MACHINE, SWITCH	EA	5	*	*	*	*	*	*			149	2
		170677 (78385)												
PF	5310-095-1621	WASHER, LOCK, THERMOSTAT COVER	EA	1	*	*	*	*	*	*			149	3
		61086 (57733)												
PF	5310-011-2432	NUT, PLAIN, THERMOSTAT COVER	EA	1	*	*	*	*	*	*			149	4
		64459 (57733)												
PF	6115-787-8524	COVER, THERMOSTAT	EA	1	*	*	*	*	*	*			149	5
		489414 (78385)												
PF	5305-182-5191	SCREW, MACHINE, TEMPERATURE CONTROL TERMINAL	EA	2	*	*	*	*	*	*			149	6
		489426 (78385)												
PF	4520-678-7768	CONTROL, TEMPERATURE	EA	1	*	*	*	*	*	*			149	7
		700245 (78385)												
PF	5330-678-1225	PACKING, PREFORMED, CONTROL	EA	1	*	*	*	*	*	*			149	8
		700138 (78385)												
PF	2540-420-8862	BURNER ASSEMBLY	EA	1	*	*	*	*	*	*			149	9
		G702542 (78385)												
PF	2540-420-8861	BUSHING ASSEMBLY	EA	1	*	*	*	*	*	*			149	10
		G489442 (78385)												
PF	4730-278-8829	NUT, TUBE, FUEL CONTROL VALVE	EA	1	*	*	*	*	*	*			149	11
		114630 (00000)												
PF	4730-278-8764	SLEEVE, COMPRESSION FUEL CONTROL VALVE	EA	1	*	*	*	*	*	*			149	12
		114631 (00000)												
PF	2540-420-8869	CABLE ASSEMBLY	EA	1	*	*	*	*	*	*			149	13
		G703505 (78385)												
PF	4730-270-4557	UNION, FUEL CONTROL VALVE	EA	1	*	*	*	*	*	*			149	14
		114629 (24617)												
PF	2920-052-0033	VALVE ASSEMBLY, FUEL CONTROL	EA	1	*	*	*	*	*	*			149	15
		G702573 (78385)												

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SAR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty line in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint allowance			(8) 1-yr slw per 100 equip cnlgy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		3303-WINTERIZATION KITS-Continued												
		HEATER KIT, POWER PLANT-Continued												
		HEATER ASSEMBLY POWER PLANT-Continued												
PF	5905-089-1111	RESISTOR, FIXED 702853 (78385)	EA	1	*	*	*	*	*	*			149	16
PF	5310-135-1116	NUT, PLAIN, HEXAGON 700860 (78385)	EA	3	*	*	*	*	*	*			149	17
PF	5305-591-3388	SCREW, MACHINE, RESISTOR 454735 (00000)	EA	7	*	*	*	*	*	*			149	18
PF		NUT, PLAIN, 1/2 HEXAGON, IGNITOR 113103 (24617)	EA	2	*	*	*	*	*	*			149	19
PF		WASHER, LOCK, GROUND LEAD 475005 (78385)	EA	2	*	*	*	*	*	*			149	20
PF	6115-787-8523	PLATE, IGNITOR END 489406 (78385)	EA	1	*	*	*	*	*	*			149	21
PF		SCREW, MACHINE, RECEPTACLE 8359533 (19207)	EA	4	*	*	*	*	*	*			149	22
PF		RECEPTACLE, ELECTRICAL 6702576 (78385)	EA	1	*	*	*	*	*	*			149	23
PF	2540-420-8872	SLEEVE, CABLE 703551 (78385)	EA	1	*	*	*	*	*	*			149	24
PF	8135-134-3667	WIRE, TIE 720365-1 (78385)	EA	3	*	*	*	*	*	*			149	25
PF	5961-222-6135	HOI DER, ASSEMBLY, DIODE C703503 (78385)	EA	1	*	*	*	*	*	*			149	26
PF	5305-135-3033	SCREW, MACHINE, SEMICONDUCTOR 701314 (78385)	EA	1	*	*	*	*	*	*			149	27
PF		SEMICONDUCTOR DEVICE 703500 (78385)	EA	1	*	*	*	*	*	*			149	28
PF	5305-592-9988	SCREW, MACHINE, TERMINAL STRIP 8359534 (19207)	EA	4	*	*	*	*	*	*			149	29

404

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) EGR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty Inc in unit	(6) 30-day O&M maint. allowance			(7) 30-day O&M maint. allowance			(8) 1-yr altw per 100 equip catgry	(9) Depot maint altw per 100 equip	(10) Illustration	
					(6) 1-20	(6) 21-50	(6) 51-100	(7) 1-20	(7) 21-50	(7) 51-100			(10) Figure No.	(10) Item No.
		3303—WINTERIZATION KITS—Continued												
		HEATER KIT, POWER PLANT—Continued												
		HEATER ASSEMBLY, POWER PLANT—Continued												
PF	2540-420-8864	GUARD ASSEMBLY G703499 (78385)	EA	1	*	*	*	*	*	*			149	30
PF	5305-403-5130	SCREW, MACHINE, HEATER HOUSING AND SHIELD BRACKET 719675 (78385)	EA	11	*	*	*	*	*	*			149	31
PF	5325-350-9356	GROMMET, RUBBER, HOUSING 117959 (24617)	EA	2	*	*	*	*	*	*			149	32
PF	5305-145-0828	SCREW, MACHINE, FUEL LINE FLANGE 701761 (78385)	EA	2	*	*	*	*	*	*			149	33
PF	2540-308-6205	FLANGE, FUEL LINE 488164 (57733)	EA	1	*	*	*	*	*	*			149	34
PF	2540-039-8967	PLATE, FUEL LINE FLANGE 488163 (78385)	EA	1	*	*	*	*	*	*			149	35
PF	5310-685-7051	NUT, PLAIN, HEXAGON, BLOWER, GUARD, END PLATE, AND TAPPING PLATE 487283 (78385)	EA	10	*	*	*	*	*	*			149	36
PF	2540-420-8860	HOUSING, HEAT EXCHANGER G702581 (78385)	EA	1	*	*	*	*	*	*			149	37
PF	2540-420-8867	BLOWER ASSEMBLY, HEATER G702591 (78385)	EA	1	*	*	*	*	*	*			149	38
PF	2540-420-8865	TUBE, BLOWER OUTLET G702593 (78385)	EA	1	*	*	*	*	*	*			149	39
PF	2540-420-8866	TUBE, HEAT EXCHANGER G702592 (78385)	EA	1	*	*	*	*	*	*			149	40
PF	5310-282-9545	SCREW, MACHINE, RESISTOR 79690 (78385)	EA	1	*	*	*	*	*	*			149	41
PF		RESISTOR, MOTOR G702561 (78385)	EA	1	*	*	*	*	*	*			149	42
PF	5220-801-1548	RIVET, NAME PLATE 488755 (57733)	EA	4	*	*	*	*	*	*			149	43

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DB maint. allowance			(7) 30-day GB maint. allowance			(8) 1-yr allow per 100 equip cntgy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		3303—WINTERIZATION KITS—Continued												
		HEATER KIT, POWER PLANT—Continued												
PF	9905-178-5831	HEATER ASSEMBLY, POWER PLANT—Continued	EA	1	*	*	*	*	*	*			149	44
		PLATE, IDENTIFICATION												
		703498 (78385)												
PF		NUT, PLAIN, RESISTOR	EA	1	*	*	*	*	*	*			149	45
		7951286 (19207)												
X2F		BRACKET, TERMINAL AND RECEPTACLE	EA	1	*	*	*	*	*	*			149	46
		703495 (78385)												
PF	5940-179-2803	STRIP, MARKER	EA	1	*	*	*	*	*	*			149	47
		703497 (78385)												
PF	5940-177-6615	BOARD, TERMINAL	EA	1	*	*	*	*	*	*			149	48
		702612 (78385)												
PF	5310-135-3073	WASHER, FLAT, THERMOSTAT	EA	2	*	*	*	*	*	*			149	49
		702607 (78385)												
PF	2540-420-8871	CABLE ASSEMBLY	EA	1	*	*	*	*	*	*			149	50
		G703508 (78385)												
PF	2540-420-8870	CABLE ASSEMBLY	EA	1	*	*	*	*	*	*			149	51
		G703506 (78385)												
PF	2540-997-1529	THERMOSTAT, OVERHEAT	EA	1	*	*	*	*	*	*			149	52
		702566 (78385)												
PF	5365-235-5883	SPACER, SLEEVE, THERMOSTAT	EA	2	*	*	*	*	*	*			149	53
		702884 (78385)												
PF	2540-420-8868	CABLE ASSEMBLY	EA	1	*	*	*	*	*	*			149	54
		G703504 (78385)												
PF	2540-484-0700	EXCHANGER, HEAT	EA	1	*	*	*	*	*	*			149	55
		G702531 (78385)												
PF	2540-997-1528	GASKET, HEAT EXCHANGER	EA	1	*	*	*	*	*	*			149	56
		703349 (78385)												
PF	5330-179-0247	PACKING, PREFORMED, BURNER	EA	1	*	*	*	*	*	*			149	57
		718768-24 (78385)												
PF		WASHER, FLAT, BURNER	EA	3	*	*	*	*	*	*			149	58
		702557 (78385)												

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

[illegible]

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip enrgy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-30	31-50	51-100	1-30	31-50	51-100			Figure No.	Item No.
X1		3303-WINTERIZATION KITS-Continued HEATER KIT, POWER PLANT-Continued VALVE ASSEMBLY, HEATER SHUT-OFF-Continued WASHER, FLAT, SHUT-OFF VALVE 11657810 (19207)	EA	1										
X1		WASHER, LEATHER, SHUT-OFF VALVE 11657812 (19207)	EA	1										
X1		NUT, SHUT-OFF VALVE 11657811 (19207)	EA	1										
X1		STEM, SHUT-OFF VALVE 11657813 (19207)	EA	1										
X1		HANDLE, SHUT-OFF VALVE 11657809 (19207)	EA	1										
MO		HOSE, WATER PUMP TO WATER PUMP SHUT-OFF VALVE 11657670 (19207)	EA	1									148	16
		MANUFACTURE FROM:												
PO		HOSE, RUBBER (3-1/2 IN. REQUIRED) ZZ-H428, TYPE VI, GRADE B, CLASS 2 (81349)	EA	V	*	*	*	*	*	*				
PO	4820-152-1354	VALVE ASSEMBLY, SHUT-OFF, HEATER TO CYLINDER HEAD 11641069 (19207)	EA	1	*	*	*	*	*	*			148	17
X1		BODY, SHUT-OFF VALVE 11658063 (19207)	EA	1										
X1		WASHER, FLAT, SHUT-OFF VALVE 11657810 (19207)	EA	1										
X1		WASHER, LEATHER, SHUT-OFF VALVE 11647812 (19207)	EA	1										
X1		NUT, SHUT-OFF VALVE 11647811 (19207)	EA	1										
X1		STEM, SHUT-OFF VALVE 11657813 (19207)	EA	1										
X1		HANDLE, SHUT-OFF VALVE 11657809 (19207)	EA	1										

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBS code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntgcy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		3303-WINTERIZATION KITS-Continued												
		HEATER KIT, POWER PLANT-Continued												
PO	4730-196-1503	NIPPLE PIPE, SHUT-OFF VALVE 192069 (24617)	EA	1	*	*	*	*	*	*			148	18
PO	4730-908-3194	CLAMP, HOSE MS35842-11 (96906)	EA	10	*	*	*	*	*	*			148	19
PO	2540-152-2507	SLEEVE, INSULATOR, HOSE 11640974 (19207)	EA	2	*	*	*	*	*	*			148	20
PO	4730-278-2703	COUPLING, PIPE, SHUT-OFF VALVE 192088 (14617)	EA	1	*	*	*	*	*	*				
PO	4730-909-8627	CLAMP, HOSE, INLET AND OUTLET MS35842-13 (96906)	EA	1	*	*	*	*	*	*				
PO	4730-277-8768	CONNECTOR, FUEL LINE 137406 (24617)	EA	1	*	*	*	*	*	*				
PO		DECAL "ENGINE" 10896514 (19207)	EA	1	*	*	*	*	*	*				
PO	2590-152-2486	WIRING, HARNESS, CONTROL BOX TO HEATER 11657822 (19207)	EA	2	*	*	*	*	*	*				
X20		SHROUD ASSEMBLY, OIL PAN 11657817 (19207)	EA	1	*	*	*	*	*	*			148	21
PO	5325-700-0997	GROMMET, RUBBER, WIRING HARNESS 7000997 (19207)	EA	1	*	*	*	*	*	*				
PO	5935-900-6281	ADAPTER, CABLE MS27147-1 (96906)	EA	1	*	*	*	*	*	*				
PO	5340-282-7521	CLAMP, LOOP, WIRING HARNESS MS21333-40 (96906)	EA	1	*	*	*	*	*	*				
PO	2540-461-2758	SPACER, OIL PAN SHROUD BRACKET 11657453 (19207)	EA	4	*	*	*	*	*	*				
PO	5306-462-7017	BOLT, ASSEMBLED WASHER, BRACKET 425338 (24617)	EA	4	*	*	*	*	*	*				
PO	5306-225-9086	BOLT, MACHINE, OIL PAN SHROUD MS90726-31 (96906)	EA	6	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D8 maint allowance			(7) 30-day G8 maint. allowance			(8) 1-yr allow per 100 equip cntgcy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
PO	5310-407-9566	3303-WINTERIZATION KITS—Continued HEATER KIT POWER PLANT—Continued WASHER, LOCK, OIL PAN SHROUD MS35338-45 (96906)	EA	6	*	*	*	*	*	*				
PO	5315-298-1498	PIN, COTTER, EXHAUST ELBOW AND TUBE MS24665-362 (96906)	EA	3	*	*	*	*	*	*				
X20		HEATER KIT, CREW COMPARTMENT 11657870 (19207)	EA	1	*	*	*	*	*	*			150	
X20		BOX ASSEMBLY, DIVERTER 11662680 (19207)	EA	1	*	*	*	*	*	*			150	1
PO		HOSE, DEFROSTER AIR VENT 8723935-24 (19207)	EA	1	*	*	*	*	*	*			150	2
PO		HOSE, DEFROSTER AIR VENT 8723935-20 (19207)	EA	1	*	*	*	*	*	*			150	2
X20		NOZZLE ASSEMBLY, DEFROSTER 11657881 (19207)	EA	2	*	*	*	*	*	*			150	3
PO	2540-953-0110	BOX ASSEMBLY, HEATER CONTROL 10885798 (19207)	EA	1	*	*	*	*	*	*			150	4
PO	4720-809-2430	HOSE, AIR VENT 8711056 (19207)	EA	2	*	*	*	*	*	*			150	5
X20		ADAPTER ASSEMBLY, HEATER 7524078 (19207)	EA	1	*	*	*	*	*	*			150	6
X20		BRACKET, HEATER MOUNTING 11657869 (19207)	EA	2	*	*	*	*	*	*			150	7
PO	4730-908-6294	CLAMP, LOOP, CABLE MS35842-16 (96906)	EA	1	*	*	*	*	*	*			150	8
POR	2540-627-9923	HEATER ASSEMBLY, CREW COMPARTMENT 8359774 (19207)	EA	1	*	*	*	*	*	*			150	9
PO	4720-809-2430	HOSE, AIR VENT 8711056 (19207)	EA	2	*	*	*	*	*	*			150	10
PO		CLAMP, HOSE 451246 (24617)	EA	1	*	*	*	*	*	*			150	11

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NBS code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip cntgry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
X20		3303-WINTERIZATION KITS—Continued HEATER KIT, POWER PLANT—Continued BRACKET, HEATER MOUNTING 11657869 (19207)	EA	2	*	*	*	*	*	*			150	12
PO	2990-445-2237	CLAMP, HEATER 7700237 (19207)	EA	2	*	*	*	*	*	*			150	13
PO	5306-855-0436	BOLT, CARRIAGE, HEATER CLAMP M585751-59 (96906)	EA	2	*	*	*	*	*	*			150	14
X20		PIPE AND BRACKET ASSEMBLY, EXHAUST 11657934 (19207)	EA	1	*	*	*	*	*	*			150	15
X20		BRACKET, HEATER MOUNTING 11602345 (19207)	EA	1	*	*	*	*	*	*			150	16
PO	5340-159-3835	CLAMP, EXHAUST TUBE 11657882 (19207)	EA	1	*	*	*	*	*	*			150	17
X20		ELBOW ASSEMBLY, EXHAUST 791064 (19207)	EA	1	*	*	*	*	*	*			150	18
X20		ADAPTER ASSEMBLY 11641082 (19207)	EA	1	*	*	*	*	*	*			150	19
X20		VENT ASSEMBLY, AIR CHAMBER 11657863 (19207)	EA	1	*	*	*	*	*	*			150	20
MO		HOSE, VENT DRAIN 11657394-5 (19207)	EA	1										
		MANUFACTURE FROM:												
PO		HOSE, RUBBER (11 IN. REQUIRED) MIL-H13444, TYPE II (81394)	FT	V	*	*	*	*	*	*				
PO		CLAMP, VENT DRAIN HOSE 11640805-1 (19207)	EA	1	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) S&M code	(2) Federal stock Number	(3) Description Reference Number & Mig. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip cntry	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-30	31-50	51-100	1-30	31-50	51-100			Figure No.	Item No.
MO		3303-WINTERIZATION KITS-Continued HEATER KIT, POWER PLANT-Continued HOSE, EXHAUST	EA	1									150	21
PO		MANUFACTURE FROM: TUBE, FLEXIBLE (78 IN. REQUIRED) WW-H1053, TYPE 1, CLASS S (81349)	FT	V	*	*	*	*	*	*				
PO	2590-152-2487	CABLE ASSEMBLY, HEATER 11657873 (19207)	EA	1	*	*	*	*	*	*			150	22
PO	1660-025-3493	FILTER, FUEL PUMP MS51085-1 (96906)	EA	1	*	*	*	*	*	*			150	23
PO	2910-710-6054	PUMP, FUEL MS51321-1 (96906)	EA	1	*	*	*	*	*	*			150	24
PO	3040-472-4187	CABLE ASSEMBLY, DEFROSTER CONTROL 8686901-3 (19207)	EA	1	*	*	*	*	*	*			150	25
X20		COVER, HEATER HOLE 11657878 (19207)	EA	1	*	*	*	*	*	*			150	26
PO		COCK, SHUT-OFF, FUEL 593549 (24617)	EA	1	*	*	*	*	*	*			150	27
PO	4720-152-1353	LINE, FUEL, HEATER 11657967-2 (19207)	EA	1	*	*	*	*	*	*			150	28
PO		NIPPLE, PIPE, FUEL LINE MS15953-9 (96906)	EA	1	*	*	*	*	*	*				
PO	4730-989-6016	FITTING, TUBE, FUEL LINE 173203 (00000)	EA	1	*	*	*	*	*	*				
PO	5340-282-7519	CLAMP, LOOP, FUEL LINE MS21333-34 (96906)	EA	3	*	*	*	*	*	*				
PO		SCREW, MACHINE, CLAMP AND DIVERTER BOX 9415783 (24617)	EA	6	*	*	*	*	*	*				
PO		NUT ASSEMBLED WASHER, CLAMP AND DIVERTER BOX 272474 (24617)	EA	6	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc. in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntgcy	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
PO		3303 - WINTERIZATION KITS - Continued HEATER KIT, POWER PLANT - Continued LINE, FUEL HEATER 11658052 (19207)	EA	1	*	*	*	*	*	*				
PO		UNION, BULKHEAD, FUEL LINE 11621952 (19207)	EA	1	*	*	*	*	*	*				
PO	4730-278-3721	NIPPLE, PIPE, FUEL LINE 443976 (24617)	EA	1	*	*	*	*	*	*				
PO	4730-266-2425	CONNECTOR, PIPE, FUEL LINE 11640899 (19207)	EA	1	*	*	*	*	*	*				
PO	5325-159-3820	GROMMET, RUBBER, CABLE 11657872 (19207)	EA	1	*	*	*	*	*	*				
PO		NUT, ASSEMBLED WASHER, VENT 8328392 (19207)	EA	2	*	*	*	*	*	*				
PO	5315-298-1498	PIN, COTTER, EXHAUST ELBOW MS24665-362 (96906)	EA	2	*	*	*	*	*	*				
PO		NUT, ASSEMBLED WASHER, BRACKET, PIPE AND FUEL PUMP MOUNTING 8328462 (19207)	EA	9	*	*	*	*	*	*				
PO	5305-068-0502	SCREW, CAP, BRACKET MS90725-6 (96906)	EA	2	*	*	*	*	*	*				
PO	5310-809-4058	WASHER, FLAT, BRACKET MS27183-10 (96906)	EA	2	*	*	*	*	*	*				
PO		NUT, ASSEMBLED WASHER, CABLE 8328482 (19207)	EA	1	*	*	*	*	*	*				
PO	5305-269-2814	SCREW, CLAMP MOUNTING MS90726-70 (96906)	EA	1	*	*	*	*	*	*				
PO	5310-959-1488	NUT, SELF-LOCKING, CLAMP MS51922-21 (96906)	EA	3	*	*	*	*	*	*				
PO	5310-975-2075	NUT, HEXAGON, JAM, CLAMP MS35691-21 (96906)	EA	1	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mig. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip enrgy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
PO		3303-WINTERIZATION KITS-Continued HEATER KIT, POWER PLANT-Continued NUT ASSEMBLED WASHER, CLAMP AND BRACKET MOUNTING 7998483 (19207)	EA	4	*	*	*	*	*	*				
PO	5310-081-4219	WASHER, FLAT, BRACKET AND CLAMP MOUNTING MS27183-12 (96906)	EA	4	*	*	*	*	*	*				
PO	5306-225-9081	BOLT, MACHINE, BRACKET MOUNTING MS90725-36 (96906)	EA	2	*	*	*	*	*	*				
PO	5310-088-1251	NUT, SELF-LOCKING NOZZLE MS51922-1 (19207)	EA	4	*	*	*	*	*	*				
PO		DECAL, PERSONNEL HEATER 10896515 (19207)	EA	1	*	*	*	*	*	*				
PO	5305-059-8262	SCREW, MACHINE, ADAPTER, HEATER AND CLAMP MS35214-39 (96906)	EA	8	*	*	*	*	*	*				
PO	5310-596-7693	WASHER, LOCK, ADAPTER, HEATER AND CLAMP MOUNTING MS35335-31 (96906)	EA	8	*	*	*	*	*	*				
PO	5305-883-0628	SCREW, MACHINE, HEATER MS24617-21 (96906)	EA	8	*	*	*	*	*	*				
PO		NUT, HEXAGON, HEATER 120622 (24617)	EA	1	*	*	*	*	*	*				
X20		PLATE, DATA 11657874 (19207)	EA	1	*	*	*	*	*	*				
PO	5305-984-6207	SCREW, MACHINE, DATA PLATE MS35206-260 (96906)	EA	4	*	*	*	*	*	*				
PO	5310-696-5172	NUT, ASSEMBLED WASHER, DATA PLATE 8328424 (19207)	EA	4	*	*	*	*	*	*				
PO	5305-269-2814	BOLT, MACHINE, HEATER CLAMP 11657857 (19207)	EA	1	*	*	*	*	*	*				
X20	*	SPACER, HEATER CLAMP 11657876 (19207)	EA	2	*	*	*	*	*	*				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) DSMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip cntry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
X20		3303-WINTERIZATION KITS-Continued HEATER KIT, POWER PLANT-Continued BRACKET, EXHAUST PIPE 11657877 (19207)	EA	1	*	*	*	*	*	*				
PO	5310-770-0243	WASHER, EXHAUST PIPE 7700243 (19207)	EA	2	*	*	*	*	*	*				
PO	2540-770-0242	SEAL, EXHAUST PIPE 7700242 (19207)	EA	2	*	*	*	*	*	*				
PO	5305-068-0500	SCREW, CAP, PIPE AND BRACKET AND FUEL PUMP MS90725-3 (96906)	EA	6	*	*	*	*	*	*				
PO	5305-059-8264	SCREW, MACHINE, HOSE CLAMP MS35214-39 (96906)	EA	3	*	*	*	*	*	*				
PO	2590-152-2489	WIRING HARNESS, HEATER 11657883 (19207)	EA	1	*	*	*	*	*	*				
PO	4730-274-9258	ADAPTER, TEE, FUEL FILTER 11640794 (19207)	EA	1	*	*	*	*	*	*				
PO		SEAL, WEATHER, DOOR FRONT 11657943-1 (19207)	EA	2	*	*	*	*	*	*			151	1
		BA, BB, EA, EB												
PO		SEAL, WEATHER, DOOR TOP AND REAR 11657943 (19207)	EA	2	*	*	*	*	*	*			151	2
		BA, BB, EA, EB												
PO	5305-988-9265	SCREW, MACHINE, UPPER TOP PANEL MS35206-286 (96906)	EA	9	*	*	*	*	*	*			151	3
		BA, BB, EA, EB												
X20		PANEL ASSEMBLY, TOP UPPER 11658021 (19207)	EA	1	*	*	*	*	*	*			151	4
		BA, BB, EA, EB												
PO	5305-988-1170	SCREW, MACHINE, UPPER TOP PANEL MS35206-284 (96906)	EA	6	*	*	*	*	*	*			151	5
		BA, BB, EA, EB												
X20		PANEL ASSEMBLY, TOP LOWER 11658024 (19207)	EA	1	*	*	*	*	*	*			151	6
		BA, BB, EA, EB												
PO		GLASS, WINDOW 11658013 (19207)	EA	1	*	*	*	*	*	*			151	7

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip cruisy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		3303—WINTERIZATION KITS—Continued												
PO		HEATER KIT, POWER PLANT—Continued	EA	1	*	*	*	*	*	*			151	8
		SEAL, GLASS 11641004-2 (19207)	EA	1	*	*	*	*	*	*			151	9
PO		SEAL, RUBBER, SPECIAL SHAPE 8328282 (19207)	EA	4	*	*	*	*	*	*			151	10
PO	5305-988-1723	SCREW, MACHINE, LOWER PANEL MS35206-279 (96906) BA, BB, EA, EB	EA	32	*	*	*	*	*	*			151	11
PO	5310-929-1807	NUT, PLAIN, UPPER AND LOWER PANEL MS51922-2 (96906) BA, BB, EA, EB	EA	7	*	*	*	*	*	*			151	12
PO		NUT, JACK, LOWER TOP PANEL 11621344 (19207) BA, BB, EA, EB	EA	7	*	*	*	*	*	*			151	13
PO	5305-225-3839	SCREW, CAP, LOWER TOP PANEL MS90725-8 (96906) BA, BB, EA, EB	EA	13	*	*	*	*	*	*			151	14
PO	5305-068-0500	SCREW, CAP, UPPER TOP PANEL MS90725-3 (96906) BA, BB, EA, EB	EA	1	*	*	*	*	*	*				
		3305—DEEP WATER FORDING KITS												
PF	2540-933-3982	FORDING KIT, DEEP WATER 11657730-1 (19207) BA, BB	EA	1	*	*	*	*	*	*			152	1
PO	5325-158-0098	GROMMET, RUBBER, DUAL CONTROL 11657765 (19207)	EA	1	*	*	*	*	*	*			152	2
PO	3040-455-1272	CONTROL ASSEMBLY, DUAL 11657968 (19207)	EA	4	*	*	*	*	*	*			152	3
PO	5305-969-6914	SCREW, MACHINE, PLATE MOUNTING MS24617-10 (96906)	EA	1	*	*	*	*	*	*			152	4
PO	2590-769-7554	PLATE, INSTRUCTION, DUAL CONTROL 11657766 (19207)	EA	2	*	*	*	*	*	*			152	5
PO	5310-059-9264	NUT, SELF-LOCKING, EXTENSION AND SHIELD MS21045C6 (96906)	EA	2	*	*	*	*	*	*			152	7
PO	5310-595-6326	WASHER, FLAT, EXTENSION AND SHIELD MS27183-13 (96906)	EA											

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SBR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr alt per 100 equip enclty	(9) Depot maint alt per 100 equip enclty	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-90	91-99	100	1-90	91-99	100			Figure No.	Item No.
PO	2990-442-5902	3305-DEEP WATER FORDING KITS—Continued HEATER KIT, POWER PLANT—Continued EXTENSION AND SHIELD ASSEMBLY, TAIL PIPE 11657729 (19207)	EA	1	*	*	*	*	*	*			152	8
PO	5305-269-2804	SCREW, CAP, EXTENSION AND SHIELD MS90726-61 (96906)	EA	2	*	*	*	*	*	*			152	9
PO	5305-710-4199	SCREW, CAP, TAIL PIPE TO EXTENSION MS90726-89 (96906)	EA	3	*	*	*	*	*	*			152	10
PO	2990-917-0836	GASKET, TAIL PIPE TO EXTENSION 11656964 (19207)	EA	1	*	*	*	*	*	*			152	11
PO	5310-857-5561	NUT, SELF-LOCKING TAIL PIPE TO EXTENSION MS21045C7 (96906)	EA	3	*	*	*	*	*	*			152	12
PO	5310-880-7746	NUT, PLAIN, HEXAGON, TUBE AND TUBE BRACKET MOUNTING MS51968-5 (96906)	EA	7	*	*	*	*	*	*			152	13
PO	5310-407-9566	WASHER, LOCK, TUBE AND TUBE BRACKET MOUNTING MS35338-45 (96906)	EA	7	*	*	*	*	*	*			152	14
PO	5310-081-4219	WASHER, FLAT, UPPER BRACKET MS27183-12 (96906)	EA	4	*	*	*	*	*	*			152	15
PO	5306-225-9087	BOLT, MACHINE, UPPER BRACKET MS90726-32 (96906)	EA	1	*	*	*	*	*	*			152	16
X20		BRACKET, INTAKE TUBE, UPPER 11657139 (19207)	EA	1	*	*	*	*	*	*			152	17
PO	2540-442-5903	TUBE ASSEMBLY, AIR INTAKE 11657753 (19207)	EA	1	*	*	*	*	*	*			152	18
PO	5306-225-9086	BOLT, MACHINE, TUBE MOUNTING MS90726-31 (96906)	EA	4	*	*	*	*	*	*			152	19
PO		CLAMP AIR INTAKE HOSE 111630 (24617)	EA	2	*	*	*	*	*	*			152	20
PO	4720-163-0221	HOSE ASSEMBLY, AIR INTAKE 11657752-2 (19207)	EA	1	*	*	*	*	*	*			152	21

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) DSR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D8 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr slw per 100 equip cntgty	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			Figure No.	Item No.
		3305-DEEP WATER FORDING KITS—Continued												
		HEATER KIT, POWER PLANT—Continued												
PO	4730-679-1184	NIPPLE, SHUT-OFF VALVE 192050 (24617)	EA	1	*	*	*	*	*	*			152	22
PO	3305-068-0504	SCREW, CAP, HOSE CLAMP AND CRANKCASE BREATHER VALVE MS90726-3 (96906)	EA	3	*	*	*	*	*	*			152	23
PO		CLAMP, CUSHIONED, AIR INTAKE HOSE 11657686 (19207)	EA	1	*	*	*	*	*	*			152	24
PO	5310-209-0786	WASHER, LOCK, HOSE CLAMP MS35335-33 (96906)	EA	1	*	*	*	*	*	*			152	25
PO	5310-768-0319	NUT, PLAIN, HEXAGON, HOSE CLAMP AND CRANKCASE BREATHER VALVE MS51968-2 (96906)	EA	3	*	*	*	*	*	*			152	26
PO	2910-741-0836	VALVE, SHUT-OFF, ENGINE VENT 7410836 (19207)	EA	1	*	*	*	*	*	*			152	27
PC	2540-152-2484	CUP, VACUATOR VALVE INTAKE COVER 11657841 (19207)	EA	1	*	*	*	*	*	*			152	28
PO		CLAMP, HOSE, COVER CUP 174935 (24617)	EA	1	*	*	*	*	*	*			152	29
X20		BRACKET, BREATHER HOSE VALVE 11657136 (19207)	EA	1	*	*	*	*	*	*			152	30
PO	5310-582-5965	WASHER, LOCK, CLAMP MOUNTING MS35338-44 (96906)	EA	2	*	*	*	*	*	*			152	31
PO	2540-933-3294	VALVE ASSEMBLY, CRANKCASE BREATHER 11640947 (19207)	EA	1	*	*	*	*	*	*			152	32
X1		VALVE, CRANKCASE BREATHER 11657764 (19207)	EA	1									152	33
PO	5305-853-4313	SCREW, MACHINE, CLAMP 450539 (24617)	EA	1	*	*	*	*	*	*			152	34
X1		CLAMP, DUAL CONTROL CONDUIT 11657691 (19207)	EA	1									152	35

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NARS code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		3305-DEEP WATER FORDING KITS—Continued HEATER KIT, POWER PLANT—Continued VALVE ASSEMBLY, CRANKCASE BREATHER—Continued												
XI		FITTING, CABLE STOP 11640703 (19207)	EA	1									152	36
PO	5305-984-4983	SCREW, MACHINE, CABLE FITTING MS35206-226 (96906)	EA	1	*	*	*	*	*	*			152	37
PO	5306-225-9088	BOLT, MACHINE, UPPER BRACKET MS90726-33 (96906)	EA	2	*	*	*	*	*	*			152	38
PF	2540-900-3144	FORDING KIT, DEEP WATER 11657730-2 (19207)	EA	1	*	*	*	*	*	*				
		CA												
PO	5325-158-0098	GROMMET, RUBBER, DUAL CONTROL 11657765 (19207)	EA	1	*	*	*	*	*	*			152	1
PO	3040-455-1272	CONTROL ASSEMBLY, DUAL 11657968 (19207)	EA	1	*	*	*	*	*	*			152	2
PO	5305-969-6914	SCREW, MACHINE, PLATE MOUNTING MS24617-10 (96906)	EA	4	*	*	*	*	*	*			152	3
PO	2590-769-7554	PLATE, INSTRUCTION, DUAL CONTROL 11657766 (19207)	EA	1	*	*	*	*	*	*			152	4
PO	5310-637-9541	WASHER, LOCK EXTENSION AND SHIELD MS35338-46 (96906)	EA	2	*	*	*	*	*	*			152	6
PO	5310-595-6326	WASHER, FLAT, EXTENSION AND SHIELD MS27183-13 (96906)	EA	2	*	*	*	*	*	*			152	7
PO	2990-442-5902	EXTENSION AND SHIELD ASSEMBLY, TAIL PIPE 11657729 (19207)	EA	1	*	*	*	*	*	*			152	8
PO	5305-269-2801	SCREW, CAP, EXTENSION AND SHIELD MS90726-58 (96906)	EA	2	*	*	*	*	*	*			152	9
PO	5305-710-4199	SCREW, CAP, TAIL PIPE TO EXTENSION MS90726-89 (96906)	EA	3	*	*	*	*	*	*			152	10
PO	2990-917-0836	GASKET, TAIL PIPE TO EXTENSION 11656964 (19207)	EA	1	*	*	*	*	*	*			152	11

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) DSR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr air per 100 equip catgry	(9) Depot maint air per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		3305-DEEP WATER FORDING KITS-Continued												
		FORDING KIT, DEEP WATER-Continued												
PO	5310-857-5561	NUT, SELF-LOCKING, TAIL PIPE TO EXTENSION MS21045C7 (96906)	EA	3	*	*	*	*	*	*			152	12
PO	5310-880-7746	NUT, PLAIN, HEXAGON, TUBE AND BRACKET MOUNTING MS51968-5 (96906)	EA	6	*	*	*	*	*	*			152	13
PO	5310-407-9566	WASHER, LOCK, TUBE AND TUBE BRACKET MOUNTING MS35338-45 (96906)	EA	6	*	*	*	*	*	*			152	14
PO	5306-225-9087	BOLT, MACHINE, UPPER BRACKET MS90726-32 (96906)	EA	2	*	*	*	*	*	*			152	16
PO	2540-152-2461	TUBE ASSEMBLY, AIR INTAKE 11657299 (19207)	EA	1	*	*	*	*	*	*			152	18
PO	5306-225-9086	BOLT, MACHINE, TUBE MOUNTING MS90726-31 (96906)	EA	4	*	*	*	*	*	*			152	19
PO		CLAMP, AIR INTAKE HOSE 111630 (24617)	EA	2	*	*	*	*	*	*			152	20
PO		HOSE ASSEMBLY, AIR INTAKE 11657752-2 (19207)	EA	1	*	*	*	*	*	*			152	21
PO	4730-679-1184	NIPPLE, SHUT-OFF VALVE 192050 (24617)	EA	1	*	*	*	*	*	*			152	22
PO	5305-068-0504	SCREW, CAP, HOSE CLAMP AND CRANKCASE BREATHER VALVE MS50726-3 (96906)	EA	3	*	*	*	*	*	*			152	23
PO		CLAMP, CUSHIONED, AIR INTAKE HOSE 11657686 (19207)	EA	1	*	*	*	*	*	*			152	24
PO	5310-209-0786	WASHER, LOCK, HOSE CLAMP MS35335-33 (96906)	EA	1	*	*	*	*	*	*			152	25
PO	5310-768-0319	NUT, PLAIN, HEXAGON, HOSE CLAMP AND CRANKCASE BREATHER VALVE MS51968-2 (96906)	EA	3	*	*	*	*	*	*			152	26
PO	2910-741-0836	VALVE, SHUT-OFF, ENGINE VENT 7410836 (19207)	EA	1	*	*	*	*	*	*			152	27

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip cntry	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
PO	2540-152-2482	3305-DEEP WATER FORDING KITS-Continued FORD KIT, DEEP WATER-Continued CUP, VACUATOR VALVE INTAKE COVER 11657841 (19207)	EA	1	*	*	*	*	*	*			152	28
PO		CLAMP, HOSE, COVER CUP 174935 (24617)	EA	1	*	*	*	*	*	*			152	29
X20		BRACKET, BREATHER HOSE VALVE 11657136 (19207)	EA	1	*	*	*	*	*	*			152	30
PO	5310-582-5965	WASHER, LOCK, CLAMP MOUNTING MS25738-44 (96906)	EA	2	*	*	*	*	*	*			152	31
PO	2540-933-3294	VALVE ASSEMBLY, CRANKCASE BREATHER 11640947 (19207)	EA	1	*	*	*	*	*	*			152	32
X1		VALVE, CRANKCASE BREATHER 11657764 (19207)	EA	1									152	33
PO	5305-853-4313	SCREW, MACHINE, CLAMP 450539 (24617)	EA	1	*	*	*	*	*	*			152	34
X1		CLAMP, DUAL CONTROL CONDUIT 11657691 (19207)	EA	1									152	35
X1		FITTING, CABLE STOP 11640703 (19207)	EA	1									152	36
PO	5305-984-4983	SCREW, MACHINE, CABLE FITTING MS35206-226 (96906)	EA	1	*	*	*	*	*	*			152	37
PF		3307-SPECIAL PURPOSE KITS KIT, SLAVE RECEPTACLE 946878 (65909)	EA	1	*	*	*	*	*	*			153	
PO	1005-116-3396	NUT, PLAIN, HEXAGON, RECEPTACLE MOUNTING 8438462 (19204)	EA	4	*	*	*	*	*	*			153	1
PO		RECEPTACLE ASSEMBLY, SLAVE 11658029 (19207)	EA	1	*	*	*	*	*	*			153	2
PO	5305-269-2803	SCREW, CAP, HEXAGON HEAD, RECEPTACLE GROUND MS90726-60 (96906)	EA	1	*	*	*	*	*	*			153	3

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SNER code	(2) Federal stock number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		3307—SPECIAL PURPOSE KITS—Continued												
		KIT, SLAVE RECEPTACLE—Continued												
PO	5310-061-1258	WASHER, LOCK, RECEPTACLE GROUND CABLE MS45904-76 (96906)	EA	1	*	*	*	*	*	*			153	4
PO	5310-080-6004	WASHER, FLAT, RECEPTACLE GROUND CABLE MS27183-14 (96906)	EA	1	*	*	*	*	*	*			153	5
PO	5310-689-9518	WASHER, LOCK, RECEPTACLE GROUND CABLE MS35338-46 (96906)	EA	1	*	*	*	*	*	*			153	6
PO	5305-068-0502	SCREW, CAP, HEXAGON HEAD, RECEPTACLE MOUNTING MS90725-6 (96906)	EA	4	*	*	*	*	*	*			153	7
PO	5310-732-0559	NUT, PLAIN, HEXAGON, RECEPTACLE GROUND CABLE MS51968-8 (96906)	EA	1	*	*	*	*	*	*			153	8
PO	2530-456-9193	CLIP, GROUND CABLE 11640737 (19207)	EA	1	*	*	*	*	*	*			153	9
PO	5340-721-7676	CLIP, CABLE TO DASH PANEL 127753 (00000)	EA	1	*	*	*	*	*	*			153	10
PO	5340-454-3639	SUPPORT, RECEPTACLE CABLE TO BATTERY 11640773 (19207)	EA	4	*	*	*	*	*	*			153	11
PO	5310-934-9758	NUT, PLAIN, HEXAGON, CABLE CLAMP ATTACHING MS35649-202 (96906)	EA	3	*	*	*	*	*	*			152	12
PO	5310-576-5752	WASHER, LOCK, CABLE CLAMP ATTACHING MS35333-39 (96906)	EA	3	*	*	*	*	*	*			153	13
PO	5340-495-9621	CLAMP, CABLE, RECEPTACLE TO BATTERY 7346933 (19207)	EA	3	*	*	*	*	*	*			153	14
PO	5305-989-7435	SCREW, CAP, HEXAGON HEAD, CABLE CLAMP ATTACHING MS35206-264 (96906)	EA	3	*	*	*	*	*	*			153	15
PO	2920-933-3981	KIT, ALTERNATOR, 100 AMP, WITH RECTIFIER AND REGULATOR 11657892 (19207)	EA	1	*	*	*	*	*	*			154	
PO	5820-061-6650	RECTIFIER MS17100-1 (96906)	EA	1	*	*	*	*	*	*			154	1

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip cnlgy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		3307-SPECIAL PURPOSE KITS -Continued												
		KIT, ALTERNATOR, 100 AMP, WITH RECTIFIER AND REGULATOR -Continued												
PO	2920-933-3287	CABLE ASSEMBLY RECTIFIER TO ALTERNATOR 11657928 (19207)	EA	1	*	*	*	*	*	*			154	2
PO	2920-933-3285	CABLE ASSEMBLY, RECTIFIER TO REGULATOR 11657927 (19207)	EA	1	*	*	*	*	*	*			154	3
PO	5306-225-8496	BOLT, MACHINE RECTIFIER BRACKET MS90725-51 (96906)	EA	5	*	*	*	*	*	*			154	4
X20		STRAP, ALTERNATOR MOUNTING 11657884 (19207)	EA	1	*	*	*	*	*	*			154	5
POR	2920-818-8635	ALTERNATOR, 100 AMP 7954720 (19207)	EA	1	*	*	*	*	*	*			154	6
PO	5340-454-3639	SUPPORT, REGULATOR POWER INPUT 11640773 (19207)	EA	4	*	*	*	*	*	*			154	7
PO	2590-152-2490	CABLE ASSEMBLY, REGULATOR POWER INPUT 11657889 (19207)	EA	1	*	*	*	*	*	*			154	8
PO	2920-198-7140	CABLE ASSEMBLY, REGULATOR 11657926 (19207)	EA	1	*	*	*	*	*	*			154	9
PO	2920-900-7993	REGULATOR 10947439 (19207)	EA	1	*	*	*	*	*	*			154	10
PO	5305-071-1788	SCREW, CAP, HEXAGON HEAD, ALTERNATOR MOUNTING MS90728-87 (96906)	EA	2	*	*	*	*	*	*			154	11
PO	5310-209-0965	WASHER, FLAT, ALTERNATOR MOUNTING MS35338-47 (96906)	EA	4	*	*	*	*	*	*			154	12
PO	5305-068-0502	SCREW, CAP, HEXAGON HEAD, REGULATOR BRACKET MS90725-6 (96906)	EA	4	*	*	*	*	*	*			154	13
X20		BRACKET, REGULATOR MOUNTING 11657886 (19207)	EA	1	*	*	*	*	*	*			154	14
PO	5310-809-4058	WASHER, FLAT, REGULATOR BRACKET MS27183-10 (96906)	EA	4	*	*	*	*	*	*			154	15

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) NDR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip catgy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-60	(c) 61-100	(a) 1-30	(b) 31-60	(c) 61-100			(a) Figure No.	(b) Item No.
		3307-SPECIAL PURPOSE KITS - Continued												
X20		KIT, ALTERNATOR, 100 AMP, WITH RECTIFIER AND REGULATOR - Continued	EA	4	*	*	*	*	*	*			154	16
X20		NUT ASSEMBLED WASHER, REGULATOR BRACKET 8328467 (19207)	EA	1	*	*	*	*	*	*			154	17
PO	5305-829-1486	BRACKET, ALTERNATOR MOUNTING 11657885 (19207)	EA	2	*	*	*	*	*	*			154	18
X20		SCREW, CAP, HEXAGON HEAD ALTERNATOR MOUNTING MS90725-86 (96906)	EA	1	*	*	*	*	*	*			154	19
X20		SPACER, HORN BRACKET 5383899 (19207)	EA	1	*	*	*	*	*	*			154	20
PO	5305-269-2814	BRACKET ASSEMBLY, CABLE SUPPORT AND HORN MOUNTING 11657888 (19207)	EA	1	*	*	*	*	*	*			154	21
X20		SCREW, CAP, HEXAGON HEAD, GROUND CABLE BUSHING MS90725-70 (96906)	EA	2	*	*	*	*	*	*			154	22
PO	5310-061-1258	BUSHING, REGULATOR GROUND CABLE 11657887 (19207)	EA	1	*	*	*	*	*	*			154	23
PO	5310-275-3683	WASHER, GROUND CABLE BUSHING MS45904-76	EA	1	*	*	*	*	*	*			154	24
PO	5310-732-0558	WASHER, LOCK, GROUND CABLE BUSHING MS35335-40 (96906)	EA	1	*	*	*	*	*	*			154	25
PO	3030-130-5208	NUT, PLAIN, HEXAGON, GROUND CABLE BUSHING MS51867-8 (96906)	EA	1	*	*	*	*	*	*			154	26
PO	2920-933-3297	BELT SET, ALTERNATOR MS51065-42-4 (96906)	EA	1	*	*	*	*	*	*			154	27
PO	2920-502-5486	PULLEY, ALTERNATOR DRIVE 11657212 (19207)	EA	1	*	*	*	*	*	*			154	28
PO	4730-908-3193	PINCHWELT 11657983-3 (19207)	EA	2	*	*	*	*	*	*			154	29
X20		CLAMP, ALTERNATOR TO RECTIFIER CABLE MS35842-12 (96906)	EA	1	*	*	*	*	*	*			154	30
		BRACKET ASSEMBLY, RECTIFIER BRACKET 11657893 (19207)	EA											

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D6 maint. allowance			(7) 30-day G5 maint. allowance			(8) 1-yr alt per 100 equip cntry	(9) Depot maint alt per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		3307-SPECIAL PURPOSE KITS-Continued												
		KIT, ALTERNATOR, 100 AMP, WITH RECTIFIER AND REGULATOR-Continued												
PO	5325-158-0082	FASTENER 11640769 (19207)	EA	1	*	*	*	*	*	*			154	31
X20		STRAP 8424501 (19207)	EA	1	*	*	*	*	*	*			154	32
PO	5310-889-2527	WASHER RECTIFIER BRACKET MS45904-72 (96906)	EA	5	*	*	*	*	*	*			154	33
PO	5310-829-9981	NUT, PLAIN, HEXAGON, RECTIFIER BRACKET MS35649-2312 (96906)	EA	5	*	*	*	*	*	*			154	34


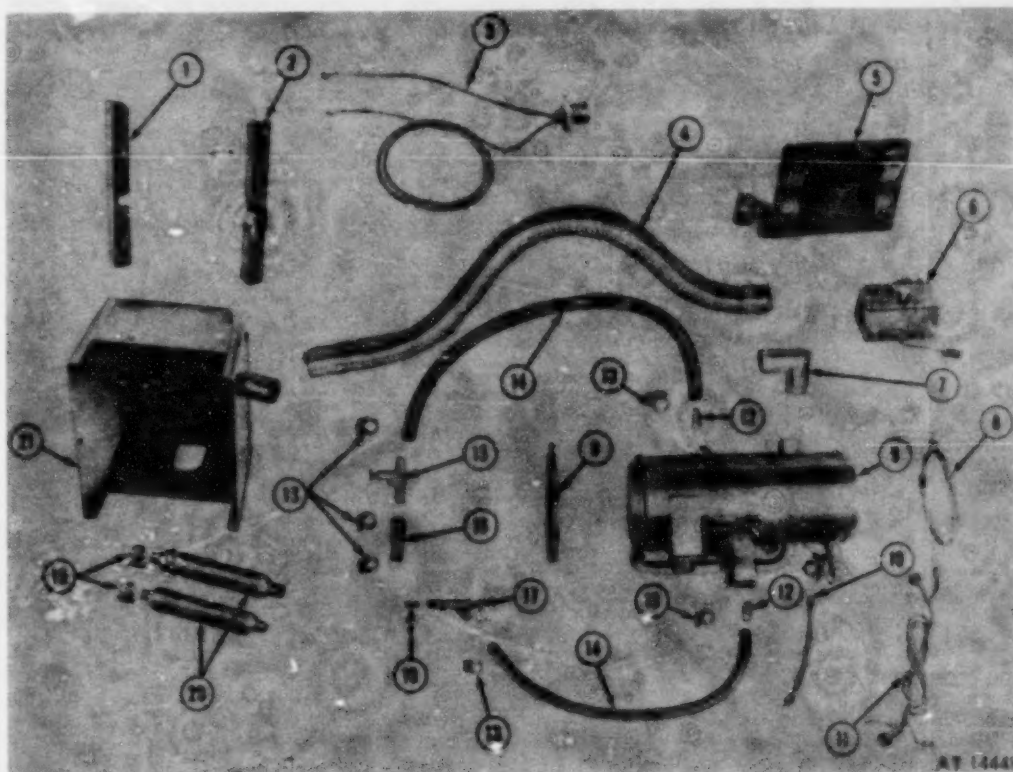


Figure 148. Power Plant Heater Kit

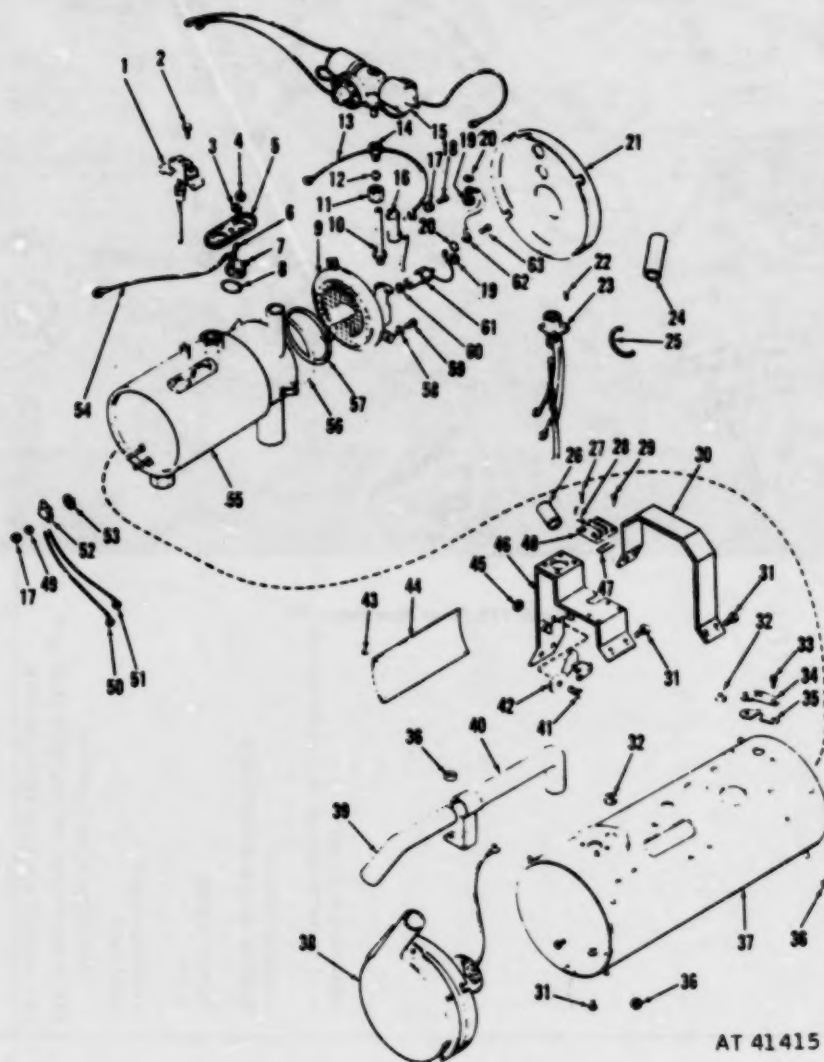

AT 41415

Figure 149. Power Plant Heater Assembly


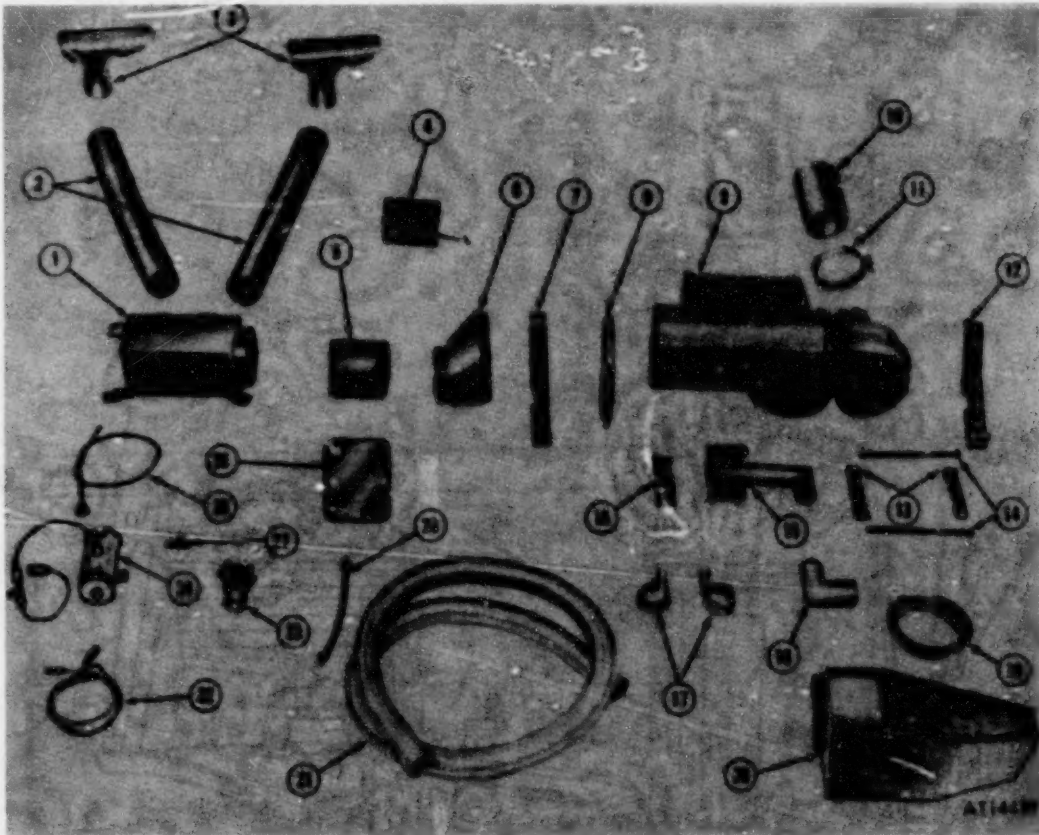


Figure 150. Crew Compartment Heater Kit

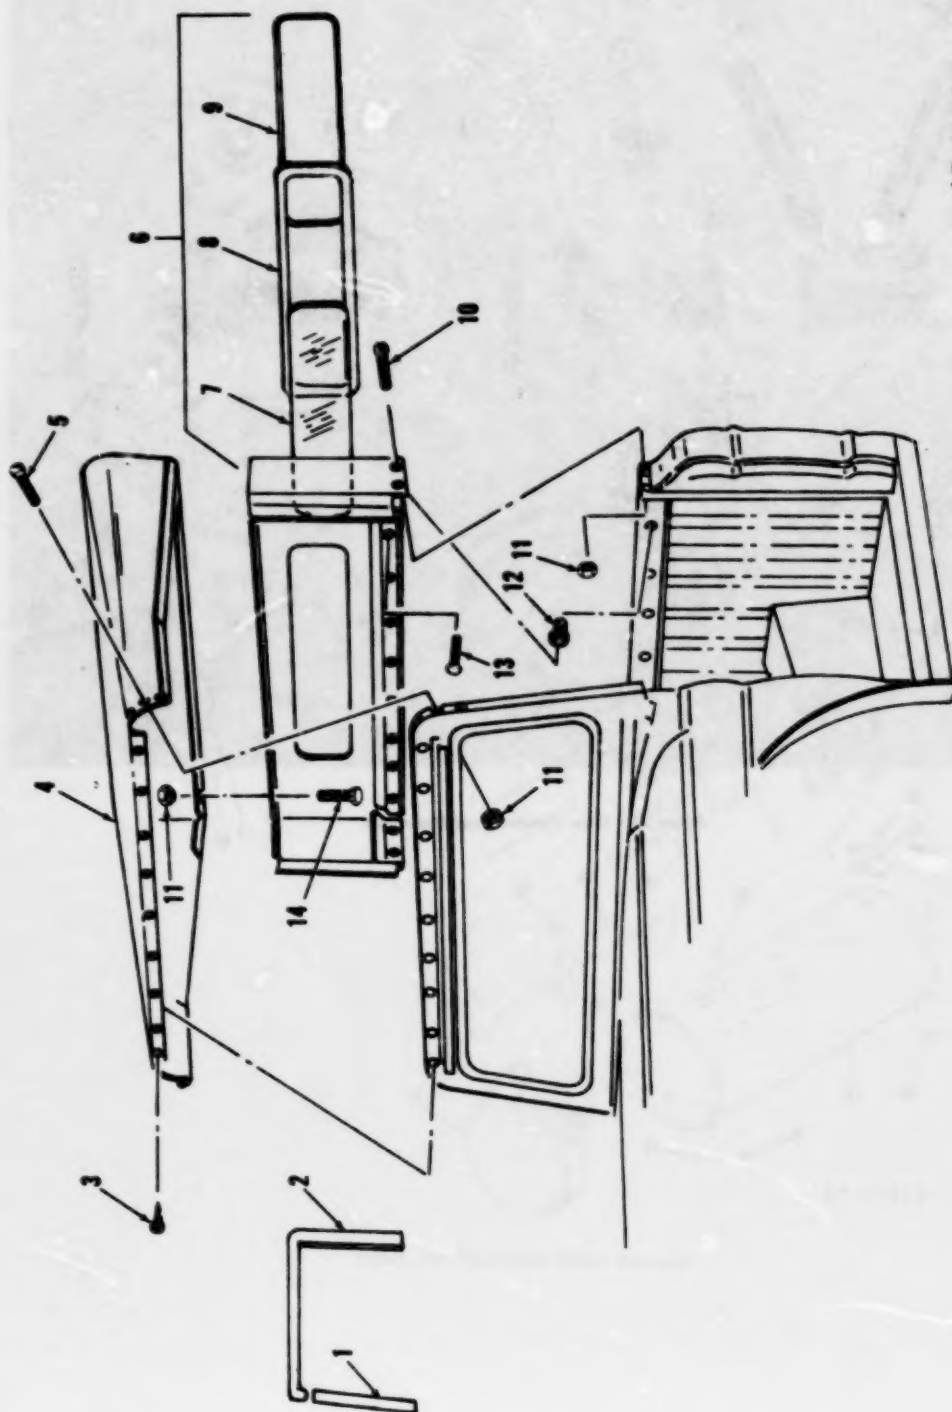

AT 41417

Figure 151. Cab Winterization Top


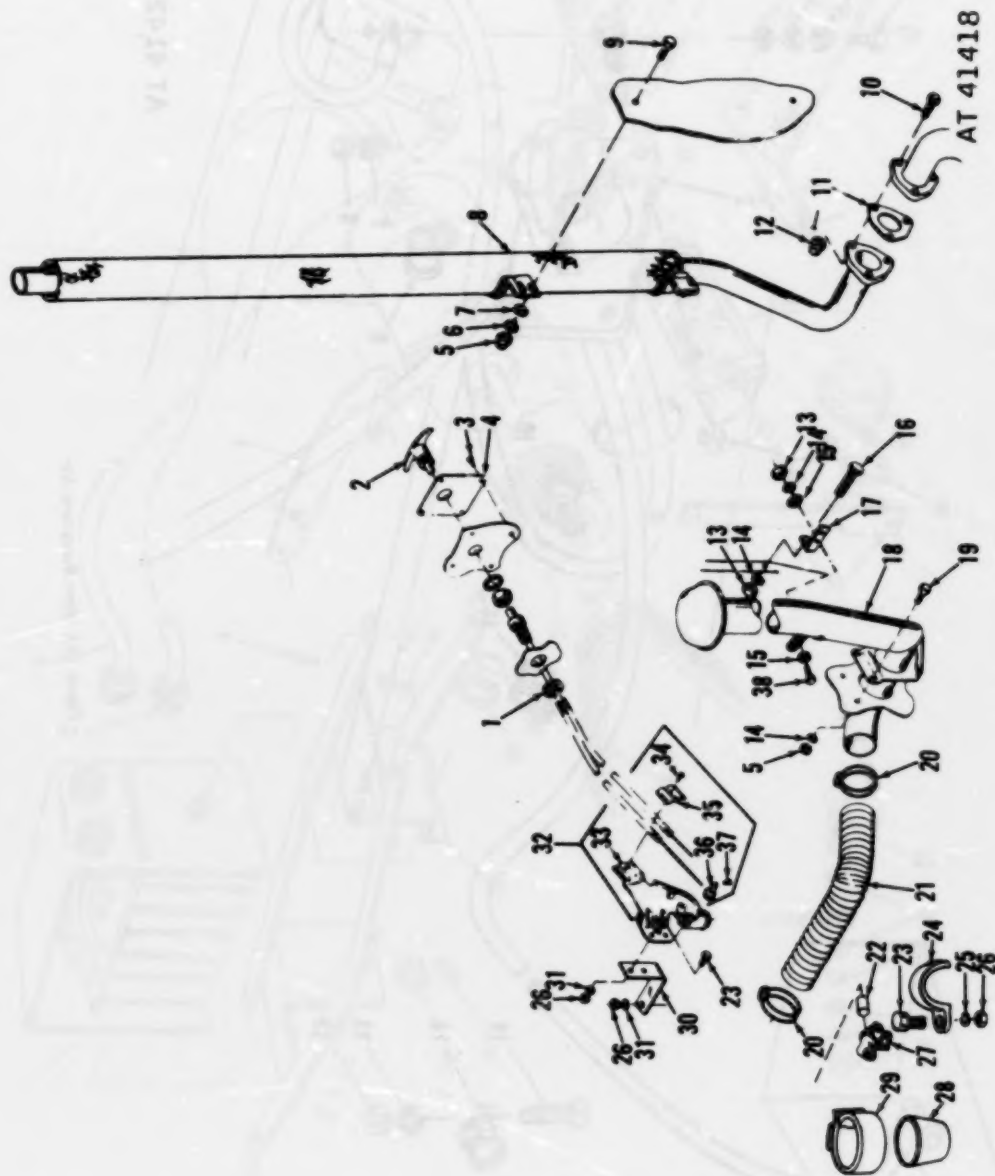


Figure 152. Deep Water Fording Kit

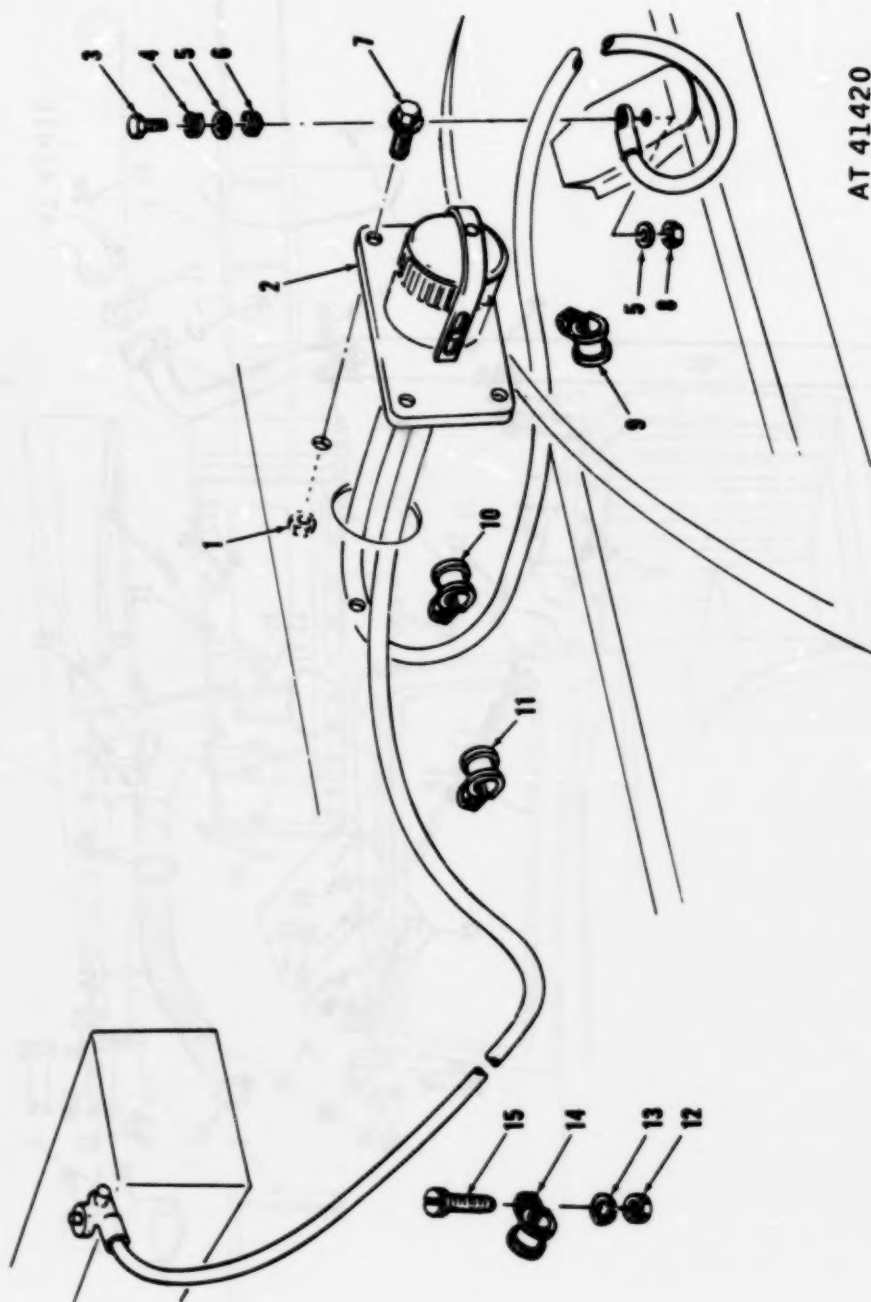

AT 41420

Figure 153. Slave Receptacle Kit

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued														
(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip cntgty	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
		GROUP 47- GAGES												
		4701 SPEEDOMETER												
PH	2520-741-1861	GEAR, DRIVEN, 17 TEETH 11640679 (19207)	EA	1				*	*	*			69	6
PH	4730-202-9539	SLEEVE, DRIVE GEAR 5263926 (19207)	EA	1				*	*	*			69	7
PO	5330-183-5946	GASKET, SPEEDOMETER 11657698 (19207)	EA	1	*	*	*	*	*	*			69	8
PO	6680-933-3606	TUBE AND SHAFT ASSEMBLY 11640783 (19207)	EA	1	*	*	*	*	*	*			155	1
PO	5330-400-8447	"O" RING 11657697 (19207)	EA	1	*	*	*	*	*	*			155	2
PO	6680-933-3599	SPEEDOMETER ASSEMBLY MS39021-2 (96906)	EA	1	*	*	*	*	*	*			155	3
PO	5330-183-5947	SEAL, CABLE 11657699 (19207)	EA	1	*	*	*	*	*	*			155	4

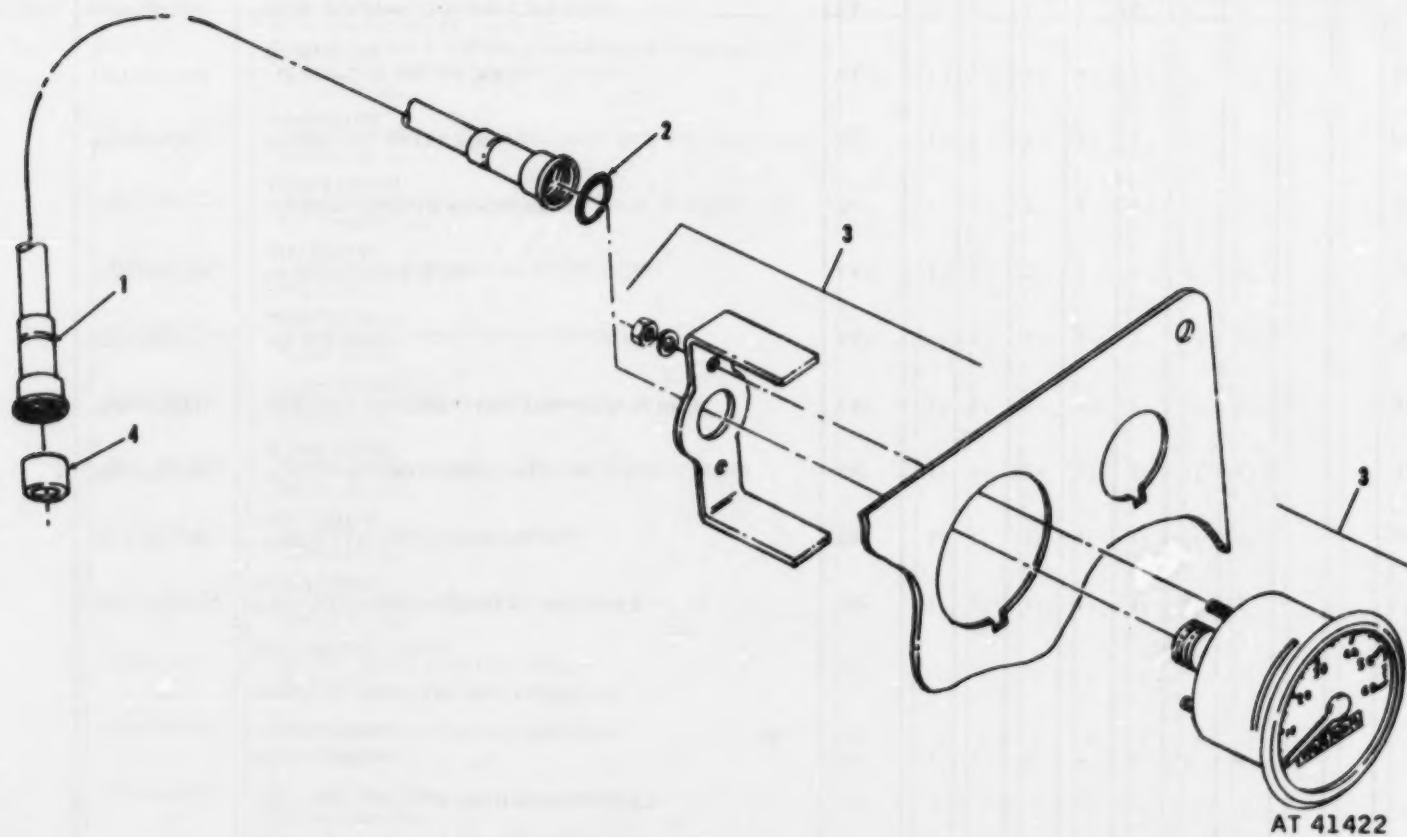


Figure 155. Speedometer and Cable

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D8 maint. allowance			(7) 30-day G5 maint. allowance			(8) 1-yr aw per 100 equip catgy	(9) 1-yr aw per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-50	(c) 51-100	(a) 1-30	(b) 31-50	(c) 51-100			(a) Figure No.	(b) Item No.
		GROUP 76—FIRE FIGHTING EQUIPMENT COMPONENTS												
		7638—PORTABLE FIRE FIGHTING EQUIPMENT												
PO		EXTINGUISHER 279453 (58464) CA	EA	1	*	*	*	*	*	*				
		GROUP 26—TOOLS AND TEST EQUIPMENT												
		2604—SPECIAL TOOLS												
PF	4910-927-3349	TOOL KIT, DIRECT SUPPORT MAINTENANCE 945902 (65909)	EA	1	1	1	1	1	1	1				
PF	4910-168-2387	INSTALLER, VALVE STEM OIL SEAL W273 (33116)	EA	1	1	1	1	1	1	1			156	1
PF	4910-105-2817	INSTALLER, CRANKSHAFT OIL SEAL W269A (33116)	EA	1	1	1	1	1	1	1			156	2
PF	4910-105-2821	REMOVER AND INSTALLER, VIBRATION DAMPER C3732A (33116)	EA	1	1	1	1	1	1	1			156	3
PF	5315-792-3077	PIN SET, DOWEL W285 (33116)	EA	1	1	1	1	1	1	1			156	4
PO	5120-168-2283	WRENCH, SPARK PLUG 2613 (33116)	EA	1	1	1	1	1	1	1			156	5
PO		SOCKET, CYLINDER HEAD SCREWS 34224-2 (33116)	EA	1	1	1	1	1	1	1			156	7
PF	4910-168-2653	PROTECTOR, VALVE STEM W300 (33116)	EA	1	1	1	1	1	1	1			156	8
PF	4910-168-2424	COUPLING, 14 MM, AIR HOLD W275 (33116)	EA	1	1	1	1	1	1	1			156	9
PF	5120-168-2278	TOOL, HOLDING, CAMSHAFT SPROCKET W271A (33116)	EA	1	1	1	1	1	1	1			156	10
PF	4910-168-2392	EXTENSION, MAIN PULLER SCREW DD914-7 (33116)	EA	1	1	1	1	1	1	1			157	1

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip cntry	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
PF		2604 SPECIAL TOOLS - Continued TOOL KIT, DIRECT SUPPORT MAINTENANCE - Continued INSTALLER, UNIVERSAL JOINT FLANGE C3718 (33116)	EA	1	1	1	1	1	1	1			157	2
PF	5120-168-2279	COMPRESSOR, VALVE SPRING, USED WITH W275 COUPLING W267A (33116)	EA	1	1	1	1	1	1	1			157	3
PF	4910-168-2384	ADAPTER, BUTTON, USED WITH DD914-62 ADAPTER DD914-42 (33116)	EA	1	1	1	1	1	1	1			157	4
PF	4910-105-2822	REMOVER AND INSTALLER, VALVE GUIDE W265 (33116)	EA	1	1	1	1	1	1	1			157	5
PO	4910-105-2815	INSTALLER, CAMSHAFT CHAIN SPROCKET W268 (33116)	EA	1	1	1	1	1	1	1			157	6
PO	5120-788-0621	WRENCH, UNIVERSAL JOINT FLANGE C3281 (33116)	EA	1	1	1	1	1	1	1			157	7
PF	4910-168-2425	INSTALLER, DIFFERENTIAL SIDE CARRIER BEARING C4025 (33116)	EA	1	1	1	1	1	1	1			157	8
PF	5120-168-2282	WRENCH, CARBURETOR MAIN JET C3748 (33116)	EA	1	1	1	1	1	1	1			157	9
PF	5120-168-2284	PULLER, ROLLER BEARING DD914P (33116)	EA	1	1	1	1	1	1	1			157	10
PF	5120-168-2276	DRIVER, PINION SHAFT OIL SEAL C359 (33116)	EA	1	1	1	1	1	1	1			158	1
PO	5120-168-2286	WRENCH, WHEEL BEARING ADJUSTING DD1241 (33116)	EA	1	1	1	1	1	1	1			158	2
PF	5120-168-2352	HOLDER, ADAPTER DD914-9 (33116)	EA	1	1	1	1	1	1	1			158	3
PF	4910-105-2823	SPREADER, REAR AXLE HOUSING W129 (33116)	EA	1	1	1	1	1	1	1			158	4
PF	5120-168-2277	PULLER, CRANKSHAFT OIL SEAL W286 (33116)	EA	1	1	1	1	1	1	1			158	5

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day D8 maint. allowance			(7) 30-day G8 maint. allowance			(8) 1-yr allow per 100 equip catgry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
PF	4910-105-2820	2604-SPECIAL TOOLS-Continued TOOL KIT, DIRECT SUPPORT MAINTENANCE-Continued REMOVER AND INSTALLER, PINION BEARING CUPS W100-60-70 (33116)	EA	1	1	1	1	1	1	1			158	6
PF	4910-168-2391	GAGE, PINION AND RING ADJUSTING W99B60-60 (33116)	EA	1	1	1	1	1	1	1			158	7
PF	4910-168-2390	ADAPTER, PINION BEARING REMOVING C293-37 (33116)	EA	1	1	1	1	1	1	1			158	8
PF	4910-105-2819	ADAPTER, SIDE CARRIER ROLLER BEARING REMOVING DD914-62 (33116)	EA	1	1	1	1	1	1	1			158	9
PF	4910-105-2816	INSTALLER XLE, SIDE CARRIER BEARING DD1243 (33116)	EA	1	1	1	1	1	1	1			158	10
PF	4910-168-2385	SLEEVE, PINION BEARING C3095 (33116)	EA	1	1	1	1	1	1	1			158	11
PF	4910-168-2386	ADAPTER, PINION INNER BEARING DD914-95 (33116)	EA	1	1	1	1	1	1	1			158	12
PF	4910-105-2818	RING, MEDIUM DD914-8 (33116)	EA	1	1	1	1	1	1	1			158	13
PO	5120-168-2349	PULLER AND INSTALLER, SPINDLE BEARING W328 (33116)	EA	1	1	1	1	1	1	1			159	1
PO	5120-168-2348	WRENCH, REMOVER AND INSTALLER, SPEEDOMETER CABLE COUPLING W326 (33116)	EA	1	1	1	1	1	1	1			159	2
PO		PULLER, STEERING WHEEL C3428B (33116)	EA	1	1	1	1	1	1	1			159	4
PF	5120-168-2285	PULLER, UNIVERSAL, CAMSHAFT AND CRANKSHAFT GEARS W172 (33116)	EA	1	1	1	1	1	1	1			159	6
PF	4910-168-2389	ARBOR, CLUTCH DISK ALINING W237 (33116)	EA	1	1	1	1	1	1	1				

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued


SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS														
(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DB maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr allow per 100 equip catgry	(9) Depot maint allow per 100 equip	(10) Illustration	
					(a) 1-30	(b) 31-90	(c) 91-100	(a) 1-30	(b) 31-90	(c) 91-100			(a) Figure No.	(b) Item No.
		2604-SPECIAL TOOLS-Continued												
PH	4910-927-3348	TOOL KIT, GENERAL SUPPORT MAINTENANCE 945903 (65909)	EA	1				1	1	1			156	1
PF	4910-168-2387	INSTALLER, VALVE STEM OIL SEAL W273 (33116)	EA	1	1	1	1	1	1	1			156	2
PF	4910-105-2817	INSTALLER, CRANKSHAFT OIL SEAL W269A (33116)	EA	1	1	1	1	1	1	1			156	3
PF	4910-105-2821	REMOVER AND INSTALLER, VIBRATION DAMPER C3732A (33116)	EA	1	1	1	1	1	1	1			156	4
PF	5315-792-3077	PIN SET, DOWEL W285 (33116)	EA	1	1	1	1	1	1	1			156	5
PO	5120-168-2283	WRENCH, SPARK PLUG 2613 (33116)	EA	1	1	1	1	1	1	1			156	6
PH		SLEEVE, DRIVE GEAR NEEDLE BEARING DD854 (33116)	EA	1				1	1	1			156	7
PO		SOCKET, CYLINDER HEAD SCREWS 34724-2 (33116)	EA	1	1	1	1	1	1	1			156	8
PF	4910-168-2653	PROTECTOR, VALVE STEM W300 (33116)	EA	1	1	1	1	1	1	1			156	9
PF	4910-168-2424	COUPLING, 14 MM, AIR HOLD W275 (33116)	EA	1	1	1	1	1	1	1			156	10
PF	5120-168-2278	TOOL, HOLDING, CAMSHAFT SPROCKET WA271A (33116)	EA	1	1	1	1	1	1	1			157	
PF	4910-165-2392	EXTENSION, MAIN PULLER SCREW DD914-7 (33116)	EA	1	1	1	1	1	1	1			157	
PF		INSTALLER, UNIVERSAL JOINT FLANGE C3718 (33116)	EA	1	1	1	1	1	1	1			157	
PF	5120-168-2279	COMPRESSOR, VALVE SPRING, USED WITH W275 COUPLING W267A (33116)	EA	1	1	1	1	1	1	1			157	
PF	4910-168-2384	ADAPTER, BUTTON, USED WITH DD914-62 ADAPTER DD914-42 (33116)	EA	1	1	1	1	1	1	1			157	

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMA code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr aw per 100 equip enlgy	(9) Depot maint aw per 100 equip	(10) Illustration	
					(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) Figure No.	(b) Item No.
PF	4910-105-2822	2604-SPECIAL TOOLS-Continued TOOL KIT, GENERAL SUPPORT MAINTENANCE-Continued REMOVER AND INSTALLER, VALVE GUIDE W265 (33116)	EA	1	1	1	1	1	1	1			157	5
PO	4910-105-2815	INSTALLER, CAMSHAFT CHAIN SPROCKET W268 (33116)	EA	1	1	1	1	1	1	1			157	6
PO	5120-788-0621	WRENCH, UNIVERSAL JOINT FLANGE C3281 (33116)	EA	1	1	1	1	1	1	1			157	7
PF	4910-168-2425	INSTALLER, DIFFERENTIAL SIDE CARRIER BEARING C4025 (33116)	EA	1	1	1	1	1	1	1			157	8
PF	5120-168-2282	WRENCH, CARBURETOR MAIN JET C3748 (33116)	EA	1	1	1	1	1	1	1			157	9
PF	5120-168-2284	PULLER, ROLLER BEARING DD914F (33116)	EA	1	1	1	1	1	1	1			157	10
PF	5120-168-2276	DRIVER, PINION SHAFT OIL SEAL C359 (33116)	EA	1	1	1	1	1	1	1			158	1
PO	5120-168-2286	WRENCH, WHEEL BEARING ADJUSTING DD1241 (33116)	EA	1	1	1	1	1	1	1			158	2
PF	5120-168-2352	HOLDER, ADAPTER DD914-9 (33116)	EA	1	1	1	1	1	1	1			158	3
PF	4910-105-2823	SPREAD, REAR AXLE HOUSING W129 (33116)	EA	1	1	1	1	1	1	1			158	4
PF	5120-168-2277	PULLER, CRANKSHAFT OIL SEAL W286 (33116)	EA	1	1	1	1	1	1	1			158	5
PF	4910-105-2820	REMOVER AND INSTALLER, PINION BEARING CUPS W100-60-70 (33116)	EA	1	1	1	1	1	1	1			158	6
PF	4910-168-2391	GAGE, PINION AND RING ADJUSTING W99B60-70 (33116)	EA	1	1	1	1	1	1	1			158	7

SECTION II. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST — Continued

(1) SMR code	(2) Federal stock Number	(3) Description Reference Number & Mfg. Code Usable on Code	(4) Unit of meas	(5) Qty inc in unit	(6) 30-day DS maint. allowance			(7) 30-day GS maint. allowance			(8) 1-yr slw per 100 equip cntgcy	(9) Depot maint slw per 100 equip	(10) Illustration	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
					1-20	21-50	51-100	1-20	21-50	51-100			Figure No.	Item No.
		2604-SPECIAL TOOLS-Continued TOOL KIT, GENERAL SUPPORT MAINTENANCE-Continued												
PF	4910-168-2390	ADAPTER, PINION BEARING REMOVING C293-37 (33116)	EA	1	1	1	1	1	1	1			158	8
PF	4910-105-2819	ADAPTER, SIDE CARRIER ROLLER BEARING REMOVING DD914-62 (33116)	EA	1	1	1	1	1	1	1			158	9
PF	4910-105-2816	INSTALLER, AXLE, SIDE CARRIER BEARING DD1243 (33116)	EA	1	1	1	1	1	1	1			158	10
PF	4910-168-2385	SLEEVE, PINION BEARING C3095 (33116)	EA	1	1	1	1	1	1	1			158	11
PF	4910-168-2386	ADAPTER, PINION INNER BEARING DD914-95 (33116)	EA	1	1	1	1	1	1	1			158	12
PF	4910-105-2818	RING, MEDIUM DD914-8 (33116)	EA	1	1	1	1	1	1	1			158	13
PO	5120-168-2349	PULLER AND INSTALLER, SPINDLE W328 (33116)	EA	1	1	1	1	1	1	1			159	1
PO	5120-168-2348	WRENCH, REMOVER AND INSTALLER, SPEEDOMETER CABLE COUPLING W326 (33116)	EA	1	1	1	1	1	1	1			159	2
PH		ARBOR, IDLER SHAFT REMOVING DD852 (33116)	EA	1				1	1	1			159	3
PO		PULLER, STEERING WHEEL C3428B (33116)	EA	1	1	1	1	1	1	1			159	4
PH		SPACER, IDLER SHAFT BEARING ADJUSTING DD853 (33116)	EA	1				1	1	1			159	5
PF	5120-168-2285	PULLER, UNIVERSAL, CAMSHAFT AND CRANKSHAFT GEARS W172 (33116)	EA	1	1	1	1	1	1	1			159	6
PF	4910-168-2389	ARBOR, CLUTCH DISK ALINING W327 (33116)	EA	1	1	1	1	1	1	1				

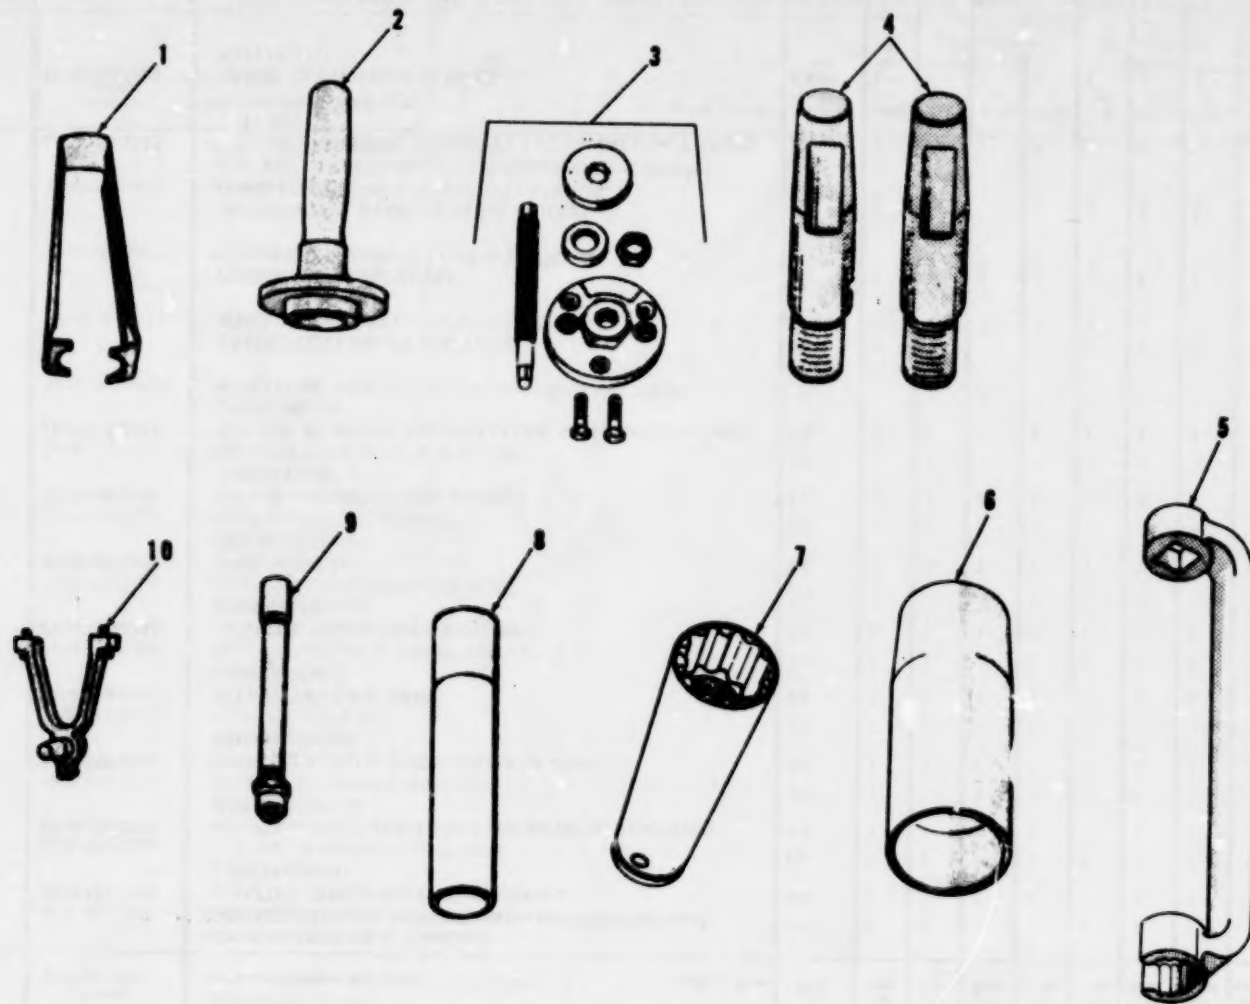

AT 41439

Figure 156. Special Tools

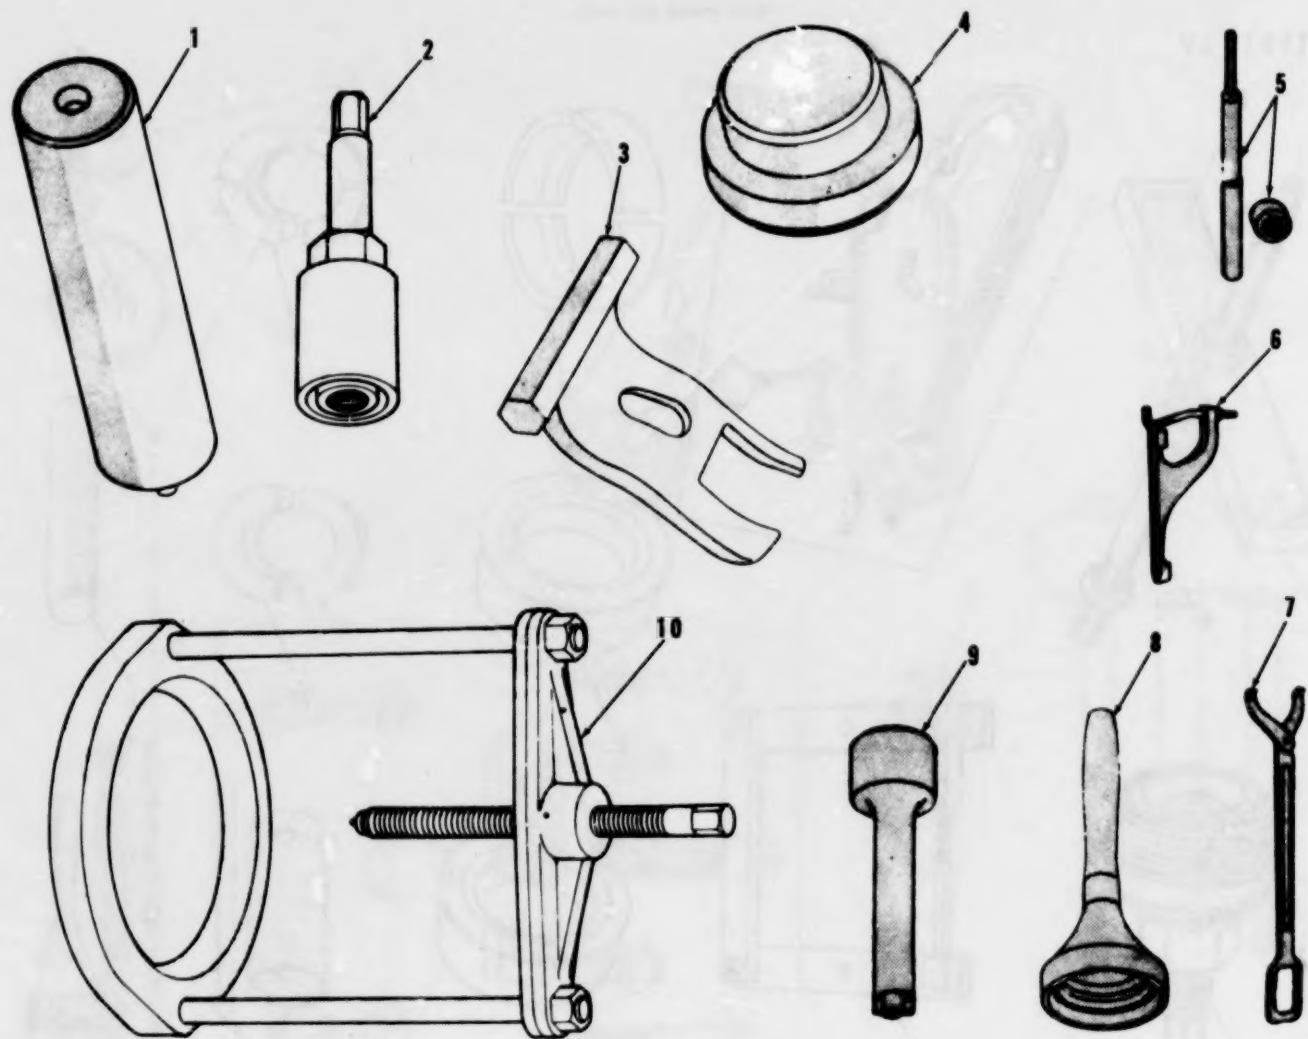


Figure 157. Special Tools

AT 41440


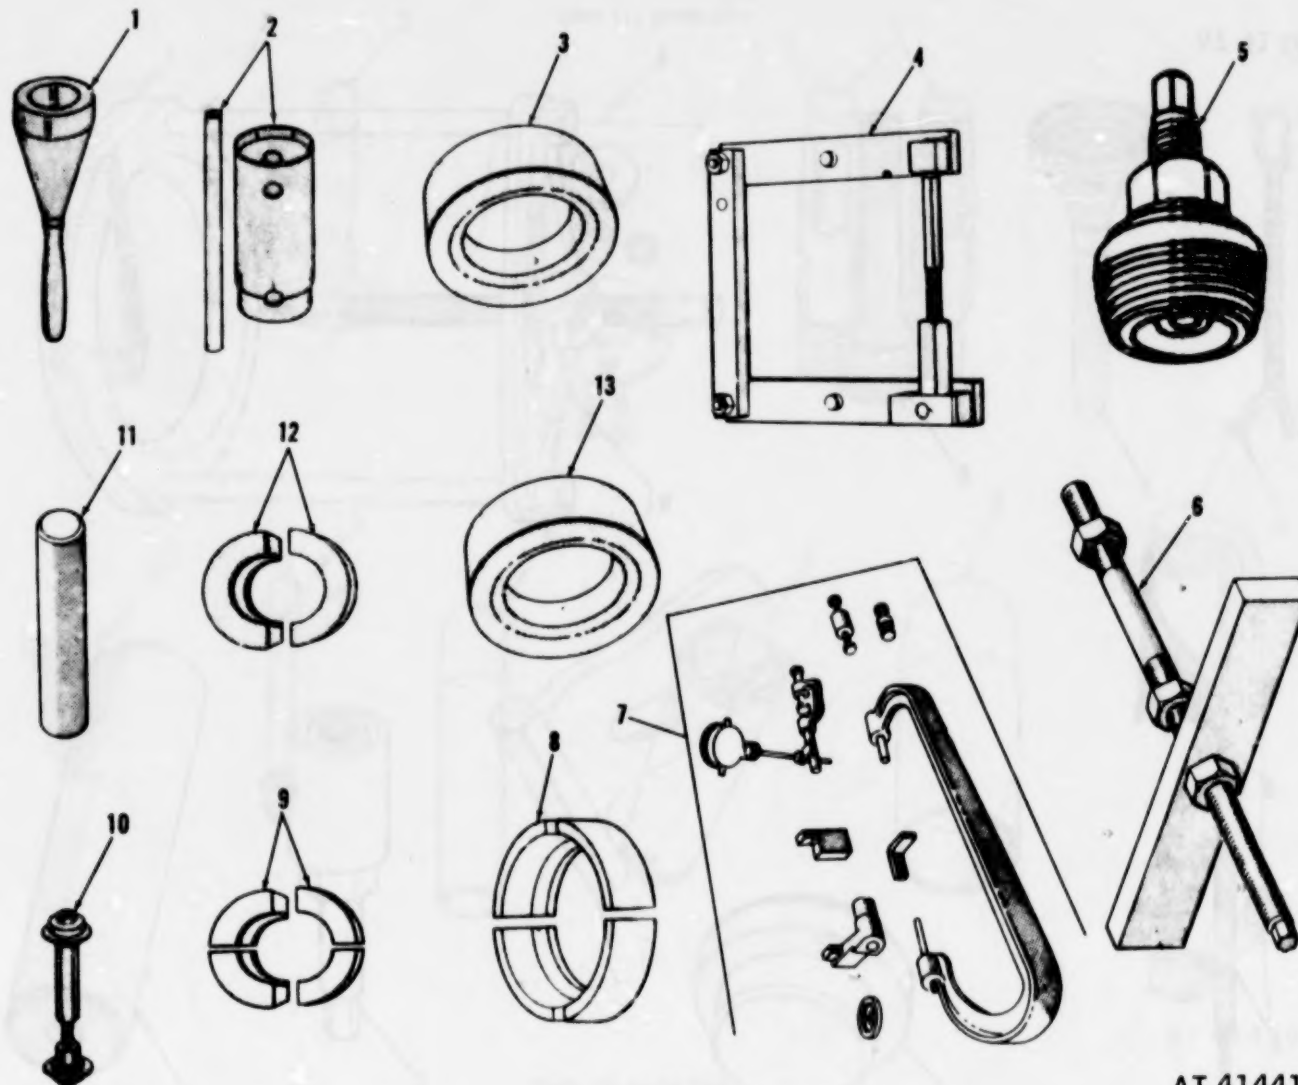


Figure 158. Special Tools

AT 41441

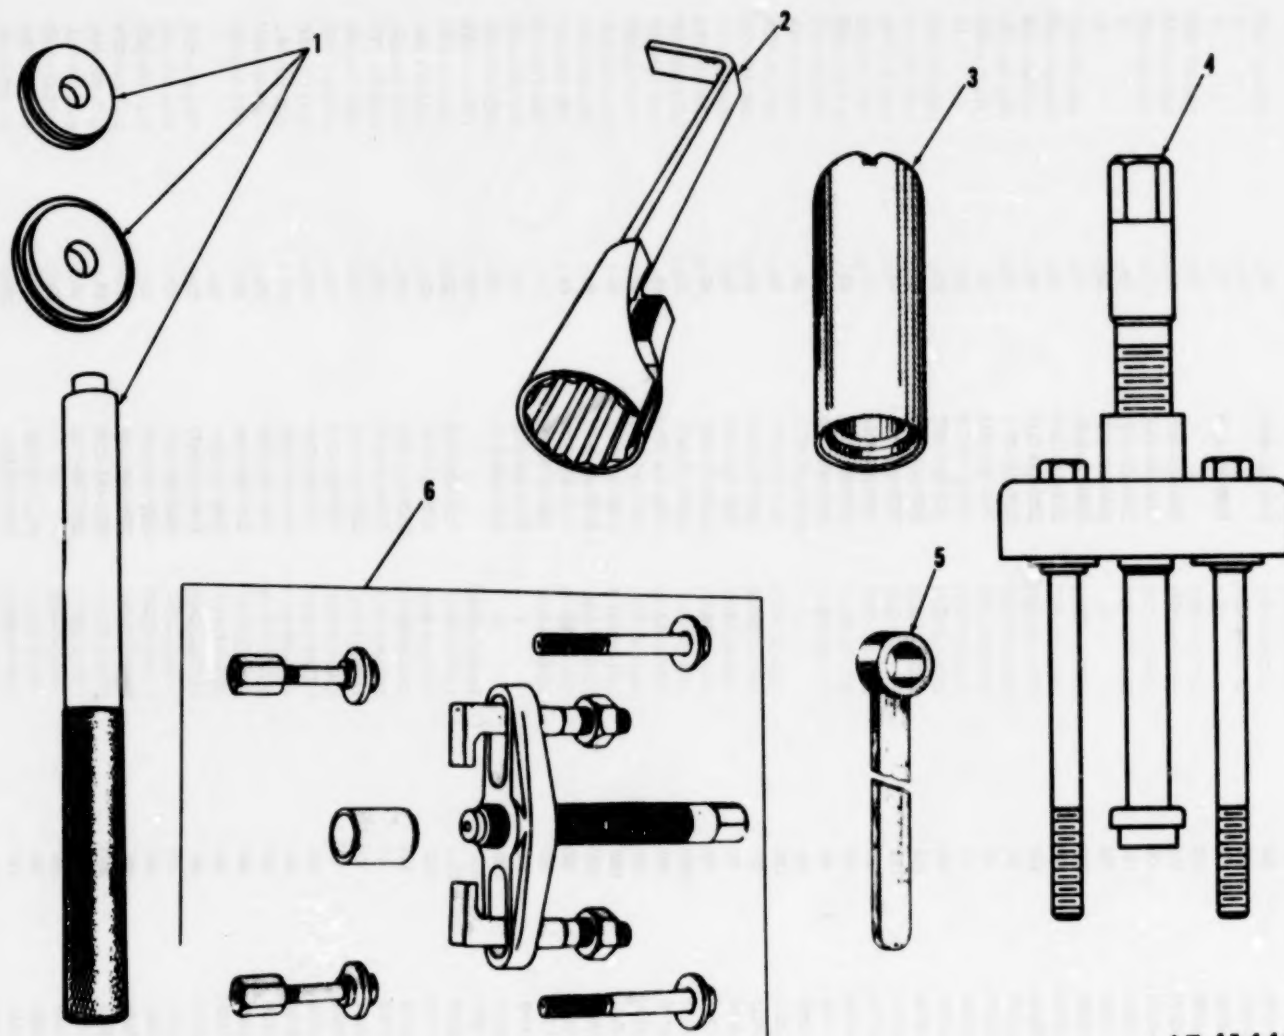

AT 41442

Figure 159. Special Tools

SECTION IV. FEDERAL REFERENCE NUMBER INDEX

<i>Stock Number</i>	<i>Fig. No.</i>	<i>Item No.</i>	<i>Stock Number</i>	<i>Fig. No.</i>	<i>Item No.</i>
2310-921-6369	142	6	2520-061-6848	77	17
2420-279-7377	39	12		74	14
2501-735-0355	120	12	2520-061-6849	77	17
2510-040-2522	102	10		74	14
2510-106-2200	116	3	2520-080-9858	74	11
2510-124-1312	96		2520-082-5405	138	17
2510-134-8314	113	2	2520-123-0197	23	16
2510-152-2483	113	15	2520-125-2960	138	24
2510-152-2495	120	26	2520-133-9634	74	
2510-152-2503	100		2520-152-2510	64	47
2510-152-2504	100		2520-152-2511	65	9
2510-152-2505	99		2520-152-2512	64	21
2510-152-2506	99		2520-152-2513	65	23
2510-152-2529			2520-177-8238	64	15
2510-159-8768	102	7	2520-246-2267	81	11
2510-159-8769	108	3	2520-246-2269	27	1
2510-159-8772	108	3	2520-256-7152	65	15
2510-159-8783	105	1	2520-257-0664	65	12
2510-247-6783	98	12	2520-268-1265	65	13
2510-253-1098	90	19	2520-360-7270	62	7
2510-405-4377	147	8	2520-369-6819	66	11
2510-411-8313	118	4	2520-369-6821	66	4
2510-451-8124	98	26	2520-374-9464	63	17
2510-454-8106	98	12	2520-374-9480	64	7
2510-455-1316	98	17	2520-379-3891	67	24
2510-456-9151	107	15	2520-400-2435	23	4
2510-461-2775	106	14	2520-401-3816	67	19
2510-461-2776	106	5	2520-401-3818	67	37
2510-461-2871	100	10	2520-404-0681	61	3
2510-461-2879	105	5	2520-404-0682	23	30
2510-522-2489	96	25	2520-404-7083	64	37
2510-657-9746	40	4	2520-420-3898	22	5
2510-731-4797	89	4	2520-443-8018	81	4
2510-737-2788	116	10	2520-443-8133	23	3
2510-737-5317	101	2		83	13
2510-737-5358	102	12	2520-470-9955	23	33
2510-769-7514	107	4	2520-476-6507	63	21
2510-832-6463	31	29	2520-476-6508	65	21
2510-917-0882			2520-476-6509	77	22
2510-917-0887			2520-476-6510	23	36
2510-917-0952			2520-484-0768	133	2
2510-933-3278	96	3	2520-484-0769	133	12
2510-933-3279	96	7	2520-487-3780	133	15
2510-933-3280	96	5	2520-491-6758	66	15
2510-933-3298	106	21	2520-491-6759	66	9
2510-933-3538	96	18	2520-499-8876	65	6
2510-933-3710	96	—	2520-535-0473	72	11
2510-933-4434	—	—	2520-589-5684	62	1
2510-933-4436	96	17	2520-589-5688	65	17
2510-961-2889	98	7	2520-627-6666	138	30
2510-962-3065	95	23	2520-661-3266	63	11
2510-986-5689	96	20	2520-709-1753	68	3
2520-033-9336	84	9		69	3
2520-033-9337	75	24	2520-709-1754	67	21
2520-033-9341	77	42	2520-718-0894	138	19
2520-061-2397	77	32	2520-734-2494	67	22
2520-061-2399	77	32		67	32
2520-061-6846	77	32		68	8
2520-061-6847	77	17	2520-734-2495	69	23
	74	14		67	31
				68	7

SECTION IV. FEDERAL REFERENCE NUMBER INDEX — Continued

<i>Stock Number</i>	<i>Fig. No.</i>	<i>Item No.</i>	<i>Stock Number</i>	<i>Fig. No.</i>	<i>Item No.</i>
2520-734-2496	69	22	2520-933-3711	72	7
	67	30	2520-933-3712	22	9
	68	6	2520-933-3723	67	4
2520-734-2499	69	5		68	14
2520-734-2649	67	26	2520-933-3734	137	5
2520-734-2811	69	25	2520-933-7621	64	27
	67	33	2520-977-2418	63	5
	68	9	2520-986-5302	67	44
2520-734-2858	67	46		67	22
2520-734-2859	67	45	2520-986-5506	138	29
2520-735-1126	67	42	2520-986-5658	64	36
2520-737-4959	135	62	2520-986-5677	64	9
2520-737-5412	7	23	2520-986-5686	63	15
	78	1	2530-034-3436	75	12
2520-741-1861	69	6	2530-034-3442	75	14
2520-741-2043	67	20	2530-034-3443	75	6
2520-741-2886	138	4	2530-044-2240	86	7
2520-741-2887	138	3	2530-124-9752	88	37
2520-769-7570	64	40	2530-125-6638	88	36
2520-772-8079	63	1	2530-125-8726	81	3
2520-830-8771	63	4	2530-125-8727	23	26
2520-841-7694	138	9		83	7
2520-871-2460	138	12	2530-125-8728	82	7
2520-884-8430	74	38	2530-125-8729	83	9
2520-886-2775	138	2	2530-126-8391	80	20
2520-892-2010	138	23	2530-133-9804	80	13
2520-917-0781	—	—	2530-177-9325	86	14
2520-917-0837	66	16	2530-228-7017	80	20
2520-917-5582	77	43	2530-229-5346	80	20
2520-923-6128	67	14	2530-235-4754	88	11
2520-927-3278	21	6	2530-253-5826	80	6
2520-927-3288	9	11	2530-253-5827	80	15
2520-927-3293	61	7	2530-410-2275	91	2
2520-927-3331	72	34		77	39
2520-927-3333	77	3	2530-423-2787	84	12
2520-927-3340	21	16	2530-443-8017	78	11
2520-927-3342	63	13	2530-454-4819	31	30
2520-927-3343	63	39	2530-454-5083	78	14
2520-927-3344	64	15	2530-454-5085	88	34
2520-928-6118	138	27	2530-454-8247	82	10
2520-928-6119	138	—	2530-456-9193	82	9
2520-928-6135	—	20	2530-456-9273	153	9
2520-928-6151	74	7	2530-456-9273	88	5
2520-929-3576	63	4	2530-461-4091	78	22
	64	12	2530-472-4106	78	21
2520-929-8287	72	2	2530-477-1801	86	17
2520-929-8323	63	6	2530-481-2559	86	21
2520-933-3277	77	19	2530-496-2152	78	25
2520-933-3281	74	—	2530-714-3113	80	19
2520-933-3283	—	8	2530-714-3117	80	16
2520-933-3288	72	10	2530-773-8185	82	15
2520-933-3289	72	10	2530-832-8017	135	47
2520-933-3523	22	16	2530-871-6841	81	—
2520-933-3532	61	31	2530-873-5236	78	19
2520-933-3579	74	11	2530-898-6434	80	9
2520-933-3588	69	6	2530-900-3048	30	8
	67	13	2530-900-3115	30	8
	68	9	2530-900-3143	30	7
2520-933-3589	72	9	2530-900-3149	75	13
			2530-917-0802	82	1
			2530-917-0818	75	5

SECTION IV. FEDERAL REFERENCE NUMBER INDEX — Continued

Stock Number	Fig. No.	Item No.	Stock Number	Fig. No.	Item No.
2530-917-0835	77	12	2540-461-3829	110	2
2530-917-0871	80	6	2540-472-4412	97	10
2530-917-0922	83	5	2540-476-5497	98	1
2530-917-0927	87	9	2540-476-5498	98	4
2530-917-5857	79	5	2540-477-8277	109	5
2530-917-5909	54	10	2540-502-5548	116	24
2530-927-3291	85	3	2540-521-6179	116	16
2530-927-3316	80	12	2540-527-8823	144	—
2530-927-3336	75	15		150	9
2530-927-3337	74		2540-585-8848	—	—
2530-928-6117	75	34	2540-704-4251	92	13
2530-928-6149	74	4	2540-737-1193	31	25
2530-928-6155	74	9	2540-737-3276	119	—
2530-928-6156	74	10	2540-737-3277	119	—
2530-928-6157	75	10	2540-737-6117	23	21
2530-928-6158	75	17	2540-737-6299	102	8
2530-928-6159	75	17	2540-980-3148	—	—
2530-928-6161	75	37	2540-980-3142	29	1
2530-928-6324	74	12	2540-917-5882	98	19
2530-928-6530	74	43	2540-917-5883	—	—
2530-928-6531	86		2540-917-5884	142	13
2530-928-6532	77	34	2540-917-5885	142	15
2530-928-6539	—	—	2540-917-5886	142	12
2530-928-6575	—	—	2540-917-5889	98	15
2530-928-6578	74	30	2540-917-5890	98	15
2530-928-6580	84	2	2540-917-5892	120	44
2530-928-6581	84	6	2540-917-5893	118	3
2530-928-6584	80	12		121	50
2530-928-6585	80	17	2540-917-5894	119	1
2530-928-6713	75	—	2540-917-5895	104	1
2530-928-6714	75	—	2540-923-2294	152	32
2530-928-6715	—	—	2540-923-2300	56	7
2530-928-6726	84	6	2540-923-2540	—	—
2530-928-6749	77	21	2540-923-2541	109	6
2530-927-2553	80	3	2540-923-2542	—	—
2540-028-8886	144	43	2540-923-2543	—	—
2540-052-6481	111	12	2540-923-2545	98	25
	140	16	2540-923-2587	94	4
2540-076-4623	92	—	2540-923-3979	148	—
2540-124-1313	95	4	2540-923-4438	116	11
2540-152-0482	152	28	2540-952-4110	148	6
2540-152-2484	152	28		150	4
2540-152-2498	120	18		141	—
2540-158-6787	102	2	2540-997-1532	148	9
2540-226-1088	98	16	2550-029-4150	74	3
2540-226-1474	98	16	2550-023-9087	126	5
2540-387-7423	88	34		126	20
2540-340-3293	144	22	2550-045-9610	112	1
2540-344-8671	144	29	2550-050-6821	42	9
2540-428-5001	110	1	2550-087-5970	126	1
2540-428-5006	110	4	2550-113-0749	54	16
2540-442-5903	152	18	2550-115-4531	54	14
2540-442-8032	23	6	2550-152-3490	154	8
2540-455-1270	90	1	2550-152-3491	59	4
2540-455-1275	91	16	2550-152-2541	58	18
2540-455-1319	94	7	2550-165-2971	60	1
2540-455-1320	94	7	2550-226-2159	31	3
2540-456-0163	94	23	2550-226-2159	7	5
2540-459-7387	143	5	2550-345-9006	58	19
2540-488-4914	120	20	2550-347-0016	40	3
	121	18	2550-348-4087	58	20
2540-491-2738	73	3	2550-348-4088	54	1

SECTION IV. FEDERAL REFERENCE NUMBER INDEX — Continued

Stock Number	Fig. No.	Item No.	Stock Number	Fig. No.	Item No.
2590-248-0635	133	21	2805-235-1760	16	14
2590-248-0637	133	17	2805-277-9990	17	9
2590-248-0638	133	16	2805-397-9660	8	1
2590-248-0639	133	10	2805-400-4835	32	27
2590-248-0769	133	26	2805-442-5901	19	4
2590-436-4589	56	1	2805-453-9112	8	2
2590-443-8077	31	28	2805-462-7039	6	9
2590-453-8854	107	3	2805-462-7074	18	1
2590-455-1318	105	20	2805-462-8496	17	4
2590-473-6331	114	3	2805-472-4189	13	6
2590-474-5587	35	10	2805-493-6219	13	1
2590-490-0774	56	8	2805-891-6848	64	45
2590-493-6253	97	22	2805-900-3145	14	6
2590-628-6140	54	22	2805-917-0614	7	3
2590-693-0612	—	—	2805-917-0619	7	4
2590-735-1201	135	13	2805-917-0708	7	1
2590-737-4953	135	40	2805-917-0709	8	20
2590-737-4958	135	43	2805-917-0712	18	8
2590-741-2415	135	12	2805-917-0717	19	6
2590-741-2418	135	4	2805-917-1016	11	6
2590-741-2454	135	37	2805-917-5583	10	1
2590-741-2462	135	15	2805-918-4780	6	11
2590-741-2641	40	21	2805-927-3269	—	—
2590-761-5596	97	22	2805-927-3270	7	—
2590-769-7554	152	4	2805-927-3272	11	1
2590-772-8126	135	—	2805-927-3273	14	3
2590-801-2355	42	7	2805-927-3275	16	1
2590-917-0762	55	7	2805-927-3282	—	—
2590-917-5656	55	11	2805-927-3283	9	—
2590-933-3299	55	1	2805-927-3284	13	—
2590-933-3544	134	16	2805-927-3285	—	—
2590-944-6252	141	11	2805-927-3289	—	—
2590-953-2177	42	8	2805-927-3290	13	9
2610-051-9266	85	2	2805-927-3314	14	10
2610-540-4719	85	1	2805-927-3315	14	15
2640-052-0944	85	6	2805-927-3319	8	23
2805-104-6661	15	2	2805-927-3322	13	14
2805-110-1974	9	29	2805-927-3325	18	—
2805-110-9778	15	6	2805-927-3330	13	9
2805-113-0729	9	11	2805-927-3335	14	2
2805-118-1795	17	1	2805-927-3338	6	14
2805-122-0884	8	8	2805-927-3339	18	7
2805-152-2479	9	4	2805-929-3334	7	17
2805-152-2480	9	8	2805-929-3563	19	5
2805-152-2482	12	8	2805-929-3566	16	5
2805-152-2500	—	—	2805-933-3284	8	15
2805-152-2502	13	8	2805-933-3534	6	4
2805-159-8684	4	1	2805-933-3535	8	17
2805-167-9049	—	—	2805-933-3550	18	14
2805-199-9843	9	16	2805-933-3551	13	14
2805-199-9844	9	25	2805-933-3716	8	3
2805-220-3634	N	1	2805-933-3717	13	12
2805-220-3640	10	9	2805-933-3718	17	2
2805-220-3641	9	12	2805-933-3737	8	22
2805-220-3643	16	13	2805-933-3738	14	7
2805-220-3645	8	21	2805-933-3739	11	2
2805-220-3647	8	4	2805-933-3740	14	14
2805-220-3650	7	14	2810-341-4824	Group 1204	
2805-227-9947	17	6	2910-073-0165	145	1
2805-227-9973	7	10	2910-119-0851	30	4
2805-227-9974	18	4	2910-119-0852	29	7
2805-227-9976	15	25		30	11
2805-229-4676	12	20	2910-119-0854	31	17

SECTION IV. FEDERAL REFERENCE NUMBER INDEX — Continued

Stock Number	Fig. No.	Item No.	Stock Number	Fig. No.	Item No.
2910-119-0855	31	9	2930-083-9560	33	4
2910-119-0856	31	10	2930-119-0662	33	8
2910-119-0857	31	11	2930-168-2340	34	3
2910-119-0858	31	21	2930-198-7141	34	21
2910-135-6534	24	7	2930-453-8808	34	8
2910-136-2171	30	11	2930-456-1314	34	24
2910-136-2172	30	16	2930-699-9021	34	19
2910-179-5508	29	19	2930-933-3548	33	12
2910-459-8447	30	13	2930-933-3549	10	4
2910-476-6566	31	13	2930-933-3719	33	2
2910-737-5146	53	5	2930-933-3721	34	11
2910-741-0836	152	27	2940-119-0849	26	9
2910-917-0610	31	27	2940-119-0850	26	1
2910-917-0732	30	1	2940-124-7128	26	7
2910-917-0768	29	16	2940-135-6528	27	4
2910-917-0867	31	6	2940-135-6530	27	11
2910-927-3286	25	9	2940-135-6531	27	7
2910-927-3324	—	—	2940-135-6532	27	1
2910-933-3536	—	—	2940-135-6533	27	21
2910-933-3736	24	1	2940-142-0553	26	4
2910-134-7643	38	2		27	6
2920-168-2339	36	4	2940-832-6054	6	13
2920-198-7140	154	9	2940-875-9000	26	8
2920-247-0003	35	4	2940-928-6134	26	2
2920-247-0012	38	5		27	19
2920-247-0013	38	1	2990-213-1279	144	1
2920-247-0014	38	8	2990-246-3930	32	6
2920-358-7498	39	15	2990-400-7027	32	13
2920-443-4834	20	2	2990-442-5902	152	8
2920-455-1274	54	2	2990-442-5919	15	—
2920-457-6673	36	6	2990-443-4809	32	—
2920-502-5486	154	26	2990-488-3491	32	3
2920-610-7841	73	10	2990-869-6073	32	16
2920-622-3786	37	3	2990-917-0733	32	18
2920-640-7230	39	16	2990-917-0836	32	17
2920-659-6916	37	1		152	11
2920-737-4880	39	2	3020-287-7343	135	56
2920-818-8635	154	6	3020-459-9745	10	6
2920-900-7993	154	10	3020-460-0166	98	3
2920-909-2483	35	23	3030-130-5208	154	26
2920-917-0729	35	22	3030-130-5209	34	26
2920-927-3271	—	—	3040-455-1272	152	2
2920-927-3279	38	15	3040-455-5011	23	24
2920-927-3296	38	4	3110-100-0219	77	27
2920-927-3326	37	2	3110-100-0229	74	21
2920-927-3327	—	—	3110-100-0251	77	28
2920-927-3328	—	—	3110-100-0540	135	7
2920-927-3329	36	7	3110-100-3529	75	3
2920-928-6137	39	6	3110-100-3532	138	28
2920-928-6138	39	4	3110-100-3535	135	8
2920-928-6139	39	9	3110-100-5937	69	21
2920-929-8321	38	3	3110-117-0633	68	4
2920-929-8322	38	7	3110-117-0637	64	11
2920-933-3285	154	3	3110-142-6040	64	48
2920-933-3287	154	2		63	19
2920-933-3297	154	27	3110-151-9123	65	16
2920-933-3576	37	5	3110-151-9125	67	41
2920-933-3577	39	1	3110-155-6173	65	3
2920-933-3590	37	4	3110-159-6913	64	31
2920-933-3591	—	—	3110-198-2494	67	9
2920-933-3727	36	10	3110-198-2570	67	16
2920-933-3728	39	3	3110-198-2830	63	12
2920-933-7374	37	6	3110-227-2201	64	38
2930-040-2613	34	18			

SECTION IV. FEDERAL REFERENCE NUMBER INDEX — Continued

Stock Number	Fig. No.	Item No.	Stock Number	Fig. No.	Item No.
3110-227-4428	23	10	4720-130-4605	29	6
3110-227-4667	77	14		76	1
3110-278-7510	138	5	4720-130-4609	25	16
3110-293-8250	138	31		29	8
3110-572-5970	138	8	4720-152-1351	18	15
3110-580-3708	74	6	4720-165-4957	Group 0803	
	77	13	4720-165-4958	82	12
	77	7	4720-165-4959	73	11
3110-580-3709	74	18		76	9
	77	19	4720-270-3941	73	9
3110-606-9576	77	17	4720-409-3988	—	—
3110-691-2511	74	16	4720-442-5759	34	13
3110-691-2512	74	1	4720-456-1315	34	15
3110-722-7488	77	22	4720-462-7041	20	1
	74	41	4720-477-1800	33	6
3110-928-1873	64	2	4720-762-9248	29	5
3110-929-8365	68	2	4720-763-6497	29	9
	69	26	4720-912-3092	Group 1000	
3110-931-2246	75	2		Group 0804	
3110-933-3807	22	25		Group 1100	
3110-997-6187	75	8	4720-999-9323	—	—
3120-080-9858	75	13	4730-012-7951	30	17
3120-159-6973	13	35		7	8
3120-179-7355	77	10	4730-013-7397	12	24
	84	1	4730-014-2427	25	13
3120-498-2866	64	6	4730-014-2432	25	3
3120-498-2868	64	5		71	6
3120-498-9859	64	34		73	12
3120-734-2500	67	8		76	8
3120-765-3302	31	9		25	22
3820-249-3540	61	18		25	19
3820-802-7128	64	4	4730-014-3343	8	7
3820-802-7129	65	53	4730-042-6318	15	22
3830-374-1166	135	34	4730-050-4203	87	8
3830-511-1936	135	27		75	32
3830-511-1937	135	24		92	4
3830-630-6906	135	25		133	9
3830-737-4952	135	58		23	28
3830-737-8242	135	50	4730-050-4208	74	25
3830-802-2030	135	14		77	47
3950-693-1962	135	19		95	15
4010-116-1604	113	3	4730-057-5555	133	8
4010-129-3221	92	15	4730-130-4605	8	5
4010-158-1966	113	19	4730-130-4609	76	3
4010-158-2136	28	18	4730-131-4951	29	8
4010-186-9388	90	18	4730-133-3252	29	2
4010-297-1815	134	18	4730-137-9236	145	6
4030-243-4445	Group 0306			24	8
4030-916-2141	92	2		25	24
4030-948-7315	—	—		27	15
4710-165-4944	82	14		71	2
4710-165-4957	73	11		73	1
4710-165-4959	73	9		76	2
4710-165-4961	76	7	4730-137-9236	76	1
4710-248-4346	82	6	4730-139-3904	27	14
4710-289-2542	25	14		71	1
	25	2	4730-172-0034	95	19
4710-454-8176	—	—	4730-195-6022	75	9
4710-472-4190	7	9	4730-196-1503	148	18
4710-475-0182	81	13	4730-202-6063	30	12
4710-495-0181	71	5	4730-202-9539	69	7
4710-971-4187	25	21	4730-203-0549	61	10
	25	18	4730-220-9637	7	7

SECTION IV. FEDERAL REFERENCE NUMBER INDEX — Continued

Stock Number	Fig. No.	Item No.	Stock Number	Fig. No.	Item No.
4730-221-2136	65	7	5305-018-0121	35	7
4730-221-2139	66	18	5305-018-0129	64	49
4730-230-2959	—	—	5305-042-0454	54	17
4730-249-8278	27	16	5305-042-0989	121	55
4730-250-0393	34	22	5305-043-6698	141	20
4730-270-4609	81	14	5305-044-4153	91	8
4730-277-8273	71	7	5305-044-6609	60	3
	38	10	5305-052-6874	121	34
4730-277-8768	—	—	5305-052-6876	123	11
4730-278-2043	26	5	5305-052-6905	100	9
	27	5	5305-052-6913	100	8
4730-278-2703	—	—	5305-052-6917	117	1
4730-278-8885	82	11		121	54
4730-301-7470	6	8	5305-052-6918	123	4
4730-450-9229	82	8	5305-052-6923	120	8
4730-470-6624	26	3		127	23
4730-485-9289	12	3	5305-052-7492	121	6
4730-533-4678	82	13	5305-052-7500	121	27
4730-550-8263	33	1	5305-052-8238	130	10
4730-640-1051	29	21		142	17
4730-679-1184	152	22		145	13
4730-737-4954	135	29		120	25
4730-765-9091	7	16		122	13
4730-817-6578	86	25		123	3
4730-889-6133	25	4		124	6
	29	22		125	2
4730-889-6135	25	23		127	1
	25	5	5305-056-9945	70	9
4730-908-3193	56	16		23	37
	38	6	5305-057-7161	117	7
	33	3	5305-059-8262	—	—
	154	29	5305-068-0500	106	2
4730-908-3194	38	9		110	6
	34	7	5305-068-0501	106	15
	146	20		36	3
	146	21		29	10
	148	13	5305-068-0502	57	5
	148	19		29	25
4730-908-3195	61	2		183	22
4730-908-6292	27	18		153	7
4730-908-6293	30	6		154	13
	29	2		128	10
4730-908-6294	30	9	5305-068-0504	152	23
	150	8	5305-068-0506	131	7
4730-909-8627	57	6		54	20
4730-927-3347	74	42		127	24
	77	31	5305-068-0523	50	4
	61	15	5305-069-5574	87	1
4730-954-1281	8	11		12	17
4820-477-6174	80	18	5305-069-5582	87	10
4820-726-4719	86	1	5305-071-1767	36	9
4820-849-1220	33	13	5305-071-1770	77	15
4930-932-8894	137	2		74	40
5120-670-9821	Group 0306		5305-071-1773	115	2
5305-012-3879	134	1		132	20
5305-013-4396	120	42	5305-071-1788	154	11
5305-015-5358	117	17	5305-071-2055	133	29
5305-016-0731	140	6	5305-071-2237	129	7
5305-016-1790	147	2		139	4
5305-017-1026	76	5	5305-071-2241	128	5
5305-018-0624	127	25	5305-071-2242	117	13

SECTION IV. FEDERAL REFERENCE NUMBER INDEX — Continued

<i>Stock Number</i>	<i>Fig. No.</i>	<i>Item No.</i>	<i>Stock Number</i>	<i>Fig. No.</i>	<i>Item No.</i>
5305-080-5430	119	5	5305-285-5278	42	4
5305-081-6676	113	7	5305-285-5286	106	20
5305-087-9883	138	32	5305-285-5295	40	18
5305-105-6871	141	14	5305-292-7947	121	7
5305-145-0783	120	17	5305-407-3738	80	4
5303-157-8141	109	7	5305-456-5058	64	46
5305-157-8282	99	9	5305-457-6961	78	16
5305-157-8283	114	5	5305-462-7018	22	7
5305-157-8284	98	21	5305-462-7023	18	5
5305-157-8285	99	11		9	18
5305-157-8324	65	18	5305-462-7024	9	21
5305-157-8325	68	11	5305-462-7043	N	1
	69	16	5305-543-2335	102	5
5305-157-8371	77	40		56	5
5305-175-3230	90	20		36	2
5305-225-3839	—	—		143	7
5305-225-3840	12	1	5305-543-2394	102	11
	136	14	5305-619-6377	135	57
5305-225-8497	106	10	5305-622-1507	127	11
5305-226-7768	16	8	5305-639-7911	113	3
5305-234-7843	80	21	5305-682-7733	140	12
5305-237-8029	86	22	5305-687-5910	12	12
5305-241-6690	5	12	5305-696-5287	121	4
5305-253-5626	92	10	5305-709-8523	35	17
5305-269-2801	35	15	5305-710-4189	10	2
5305-269-2802	30	10		91	7
	5	9	5305-710-4190	35	20
5305-269-2803	153	3	5305-710-4191	134	5
5305-269-2804	35	11		90	10
	152	9	5305-710-4192	91	1
5305-269-2805	4	2		134	22
5305-269-2806	133	26	5305-710-4194	32	25
5305-269-2809	79	3		35	21
5305-269-2810	116	18		32	25
5305-269-2811	107	7	5305-710-4195	32	19
	116	14	5305-710-4196	88	31
	132	8	5305-710-4199	152	10
5305-269-2814	154	21	5305-710-4202	134	7
5305-269-2815	94	9	5305-716-8176	5	15
	95	9	5305-716-8182	95	16
5305-269-3208	62	9	5305-716-8183	66	8
	131	6		75	28
5305-269-3210	62	2	5305-716-8184	90	16
	21	1	5305-716-8186	90	4
	23	5	5305-724-5813	120	19
	4	5		121	9
5305-269-3211	64	33	5305-724-5822	133	19
	58	4	5305-724-6769	134	14
	114	4		134	8
	23	11	5305-724-6771	61	12
	4	4	5305-724-6810	133	14
5305-269-3212	23	25	5305-724-6838	94	13
	81	1	5305-727-8816	10	10
5305-269-3217	110	11	5305-753-7078	97	26
5305-269-3240	70	17	5305-761-4227	66	12
5305-269-3244	79	11	5305-782-9495	66	1
5305-269-4511	70	14	5305-823-5744	84	7
5305-269-7803	94	11	5305-825-8055	35	16
5305-272-4197	135	39	5305-829-1486	154	18
5305-285-3942	48	6	5305-836-3308	126	2
5305-285-5263	104	10	5305-840-6694	54	3

SECTION IV. FEDERAL REFERENCE NUMBER INDEX — Continued

<i>Stock Number</i>	<i>Fig. No.</i>	<i>Item No.</i>	<i>Stock Number</i>	<i>Fig. No.</i>	<i>Item No.</i>
5305-853-4313	152	34	5305-995-0436	123	7
5305-854-6688	120	1	5305-995-3437	116	8
5305-854-6690	129	5	5306-012-8439	140	4
5305-855-0841	125	11	5306-018-6493	102	15
5305-855-0957	143	7	5306-018-7527	111	13
	127	4		28	20
	127	26		56	13
5305-855-0961	104	2	5306-018-7993	18	10
5305-855-0964	117	15		23	40
5305-855-0973	120	13		105	8
5305-879-7941	97	9		106	13
	98	22		108	1
	102	6		55	10
	41	6	5306-042-3544	102	14
	129	1	5306-042-3560	49	9
	142	10	5306-042-3561	88	13
	121	26	5306-042-3562	49	3
	124	1	5306-042-3564	88	12
5305-883-0628	43	3	5306-042-3569	110	17
	44	1		45	4
	128	39	5306-042-5323	109	11
	126	14	5306-042-5589	117	25
5305-885-7252	138	13		121	22
5305-889-3002	145	29	5306-042-5594	122	16
	126	17	5306-043-1953	109	10
5305-933-3677	—	—	5306-045-1976	6	7
5305-940-8838	141	12	5306-050-1239	88	26
5305-942-7237	100	6	5306-151-6248	15	12
5305-954-3487	106	4	5306-157-8315	77	45
5305-958-0603	28	12	5306-174-4312	72	3
5305-958-5246	101	3	5306-177-5529	23	2
5305-959-2724	70	18	5306-182-9387	56	9
5305-959-4159	97	12	5306-217-9681	86	2
5305-969-6914	152	3	5306-225-8496	97	15
5305-978-9396	88	16	5306-225-8497	154	4
5305-983-6621	9	26	5306-225-8499	34	1
5305-983-6622	9	14	5306-225-8505	15	14
5305-984-4963	152	37	5306-225-8506	15	23
5305-984-4992	122	10	5306-225-8509	96	23
5305-984-5690	99	7	5306-225-8510	34	4
5305-984-6189	31	1	5306-225-9030	32	1
	128	36	5306-225-9081	12	10
5305-984-6193	126	19		128	1
5305-984-6195	53	2	5306-225-9086	91	14
5305-984-6208	142	22		152	19
5305-984-6210	50	2	5306-225-9087	133	23
	41	1		152	16
5305-984-6211	115	12	5306-225-9088	35	24
5305-984-7363	31	12		152	38
5305-988-1170	120	28	5306-225-9089	5	20
5305-988-1725	117	20	5306-225-9091	32	14
	143	8	5306-225-9093	32	10
5305-988-1727	120	23	5306-226-4837	15	11
	121	39		35	1
	122	6	5306-275-1629	33	9
5305-988-1728	120	43	5306-275-1659	75	23
5305-989-7435	153	15	5306-281-5137	78	2
5305-990-8387	51	2	5306-283-0407	102	1
5305-993-1848	142	1		29	18
5305-993-2460	97	20	5306-283-0408	54	24
5305-993-2461	127	19	5306-283-1504	31	22

SECTION IV. FEDERAL REFERENCE NUMBER INDEX — Continued

Stock Number	Fig. No.	Item No.	Stock Number	Fig. No.	Item No.
5306-317-3096	113	9	5310-058-9264	152	5
5306-436-4819	80	1	5310-061-0004	145	28
5306-443-8075	83	2		126	3
5306-456-9162	95	20	5310-061-1256	58	3
5306-462-7017				153	4
5306-462-7022	12	15		154	23
5306-472-2763	67	27	5310-080-6004	58	5
5306-637-9721	28	5		70	3
5306-685-2523	77	43		23	19
	74	39		24	4
5306-686-5377	47	2		31	7
	45	2		79	15
5306-732-4143	78	10		6	6
5306-753-6996	116	12		153	5
5306-775-1968	—	—		9C	7
5306-775-5201	110	18	5310-080-8495	—	—
5306-855-0436	150	14		15	9
5306-911-5005	116	7		9	7
5306-926-1784	—	—		14	16
5307-088-1588	75	11		18	9
5307-145-1760	31	15		99	5
5307-150-6248	14	8		113	5
5307-150-6274	24	10		116	9
5307-246-9624	8	14		38	13
5307-246-9626	19	10		34	5
5307-246-9627	15	21		35	3
	14	9		32	2
5307-246-9628	14	13		133	24
5307-246-9629	14	19		140	9
5307-250-0811	19	9		5	19
5307-250-0812	19	11		145	11
5307-508-0807	137	4		152	15
5307-752-6584	40	23		122	15
5310-010-3322	67	30	5310-082-1404	54	18
5310-010-3323	135	51	5310-087-0057	18	13
5310-012-0982	4	6	5310-087-4862	23	4
	5	11	5310-088-1251	57	4
5310-012-0977	96	8		129	10
5310-012-0988	33	10		130	6
	30	15		131	4
5310-012-0993	25	8		120	22
5310-012-1743	120	15		121	38
5310-013-1052	41	9		122	3
5310-013-1245	117	12	5310-112-1358	54	11
5310-013-4566	49	6	5310-115-9047	75	2
5310-013-8530	40	11		77	23
5310-014-5850	115	13	5310-122-5658	24	3
5310-021-3513	116	4	5310-124-9265	31	16
5310-021-3513	140	11	5310-126-5367	32	26
5310-021-9434	115	10		32	26
5310-044-2823	28	8		134	23
	133	20		4	9
	136	12	5310-145-1627	88	32
5310-044-2832	23	1	5310-151-8998	105	14
5310-045-1339	87	4	5310-150-6270	24	66
	75	19	5310-167-0680	61	13
5310-045-3296	128	13	5310-177-7748	138	10
	123	8	5310-184-8973	113	10
5310-045-3299	128	35	5310-194-8191	60	4
5310-050-3262	114	8	5310-207-9566	15	10
5310-050-9264	70	24	5310-208-0796	97	21
	19	1		54	21

SECTION IV. FEDERAL REFERENCE NUMBER INDEX — Continued

<i>Stock Number</i>	<i>Fig. No.</i>	<i>Item No.</i>	<i>Stock Number</i>	<i>Fig. No.</i>	<i>Item No.</i>
5310-209-0786	139	8	5310-453-8856	97	17
	152	25	5310-456-9146	107	14
	127	10	5310-456-9180	107	18
5310-209-0965	87	2	5310-456-9181	80	2
	12	11	5310-461-2880	105	19
	10	3	5310-461-2888	107	17
	88	20	5310-461-5856	53	3
	90	6	5310-461-5857	83	6
	91	5	5310-462-7019	13	10
	35	18	5310-462-7044	81	16
	154	12	5310-464-2745	19	2
5310-225-6408	95	14	5310-470-2981	86	24
5310-234-4936	96	15	5310-485-8168	63	22
5310-234-7840	12	16	5310-488-3888	95	24
5310-234-7841	12	2		90	7
5310-234-7842	12	18		83	4
5310-241-6658	28	1		90	14
5310-241-6661	134	12		94	20
5310-246-0187	75	18		95	10
5310-246-0188	75	1		134	4
	77	26		5	1
5310-253-2610	16	6	5310-493-6234	105	4
	94	19	5310-496-2648	137	7
5310-261-7340	69	9	5310-514-6674	99	6
	68	19	5310-514-8078	55	8
	78	4		107	10
	79	14		115	8
5310-275-3683	154	24	5310-514-8948	91	10
5310-276-3455	4	10	5310-527-3289	141	10
5310-285-2170	67	13	5310-527-4688	114	7
5310-297-3250	88	19	5310-550-1130	40	4
5310-297-3250	91	4	5310-550-2379	117	4
	77	38	5310-550-3503	77	37
	35	19		23	14
	84	14		84	13
5310-298-9261	41	7	5310-559-9110	92	8
5310-350-5617	67	8	5310-576-5752	142	2
	68	17		153	13
5310-380-9171	64	20	5310-579-0079	122	8
5310-407-9566	15	10	5310-582-5965	15	27
	16	11		97	11
	18	12		117	18
	34	6		49	5
	9	27		143	9
	12	9		152	31
	14	11		128	6
	14	17		141	9
	97	16	5310-584-5006	16	7
	106	9	5310-584-5272	75	30
	72	2		36	8
	38	12		91	12
	34	17		66	3
	34	2		105	7
	35	2	5310-595-6326	106	8
	19	7		130	15
	25	7		152	7
	32	15		102	13
	5	14	5310-595-6509	11	5
	145	10	5310-595-7237	61	8
	152	14	5310-596-0031	50	3
5310-436-3412	66	6	5310-596-7691	117	2
5310-436-8412	5	17			

SECTION IV. FEDERAL REFERENCE NUMBER INDEX — Continued

<i>Stock Number</i>	<i>Fig. No.</i>	<i>Item No.</i>	<i>Stock Number</i>	<i>Fig. No.</i>	<i>Item No.</i>
5310-596-7693	126	15	5310-733-6451	109	9
5310-616-1739	143	1	5310-737-2590	33	14
5310-616-8272	40	1	5310-752-6591	40	7
5310-619-5529	40	24	5310-752-6593	40	2
5310-624-5755	67	40	5310-761-6882	15	26
5310-627-6128	62	3		106	19
	64	34		112	5
	62	8		78	12
	131	5		139	7
5310-737-0692	86	16	5310-766-0318	91	13
				132	27
5310-637-9541	21	2	5310-766-0319	73	4
	23	12		152	26
	58	6		127	6
	88	17	5310-774-4472	11	4
	73	5	5310-792-3588	84	15
	94	6	5310-802-4701	106	22
	95	6		108	2
	110	12	5310-809-3078	102	16
	70	15		110	16
	35	6		121	28
	23	39		125	10
	4	3	5310-809-3079	5	21
	152	6	5310-809-4058	15	28
5310-639-1532	79	9		103	3
5310-641-9696	74	2		73	6
	77	23		139	9
5310-653-6700	134	6		154	15
5310-660-2987	135	16		122	5
5310-671-4109	75	36		126	6
5310-689-9518	153	6	5310-809-4061	110	13
5310-696-5172	106	18		114	2
	115	1		5	4
	56	14	5310-809-4085	90	9
	58	15		91	6
5310-696-5177	88	18		32	8
	30	14	5310-809-5997	94	22
5310-698-4460	49	7		95	25
	35	5		107	5
5310-722-5658	81	14		132	5
5310-728-9957	17	7		78	18
	19	3	5310-809-5998	90	15
5310-732-0558	58	7		95	11
	154	25		66	2
	113	14		134	2
	55	2	5310-809-8533	95	13
5310-732-0559	17	5	5310-809-8544	54	4
	96	2	5310-814-0672	133	27
	69	10		78	23
	68	18	5310-814-0673	32	22
	79	13		133	32
	116	13	5310-816-2535	74	5
	35	14		77	20
	23	39	5310-820-6653	134	10
	24	2	5310-823-8803	94	2
	78	3		95	2
	4	8		134	20
	5	3	5310-823-8804	120	34
	153	8	5310-828-8189	140	10
5310-732-0560	75	31	5310-829-9961	105	16
	66	14		106	7
5310-732-4849	87	3		108	5

SECTION IV. FEDERAL REFERENCE NUMBER INDEX — Continued

<i>Stock Number</i>	<i>Fig. No.</i>	<i>Item No.</i>	<i>Stock Number</i>	<i>Fig. No.</i>	<i>Item No.</i>
5310-829-9981	154	34	5310-931-8182	77	24
5310-833-8567	—	—	5310-933-4310	113	6
5310-834-8586	138	15		99	4
5310-834-8732	115	9	5310-934-9747	122	7
	132	26	5310-934-9751	126	5
5310-835-2036	23	15	5310-934-9757	126	13
	32	7	5310-934-9758	40	25
5310-838-1490	138	14		41	8
5310-853-9335	30	2		129	12
5310-857-5561	94	1		153	12
	95	1		123	9
	107	6	5310-935-3750	66	13
	132	6	5310-935-9022	110	9
	152	12	5310-952-4912	110	23
5310-865-6073	132	9	5310-957-7600	127	21
5310-871-7618	—	—	5310-959-1488	132	14
5310-880-6004	86	6	5310-959-4679	—	—
5310-880-7744	116	17	5310-959-7600	145	20
	49	8	5310-975-2075	23	35
	55	6	5310-982-4912	32	11
5310-880-7745	90	5		133	33
	70	6		136	11
	78	17	5310-982-6580	126	18
5310-880-7746	15	19	5310-984-3806	130	19
	16	12		128	4
	18	11	5310-984-3807	122	18
	14	12	5310-984-1006	32	20
	14	18	5315-012-0123	67	1
	96	15		69	13
	91	9	5315-012-4553	135	54
	72	1	5315-017-0123	68	15
	38	11	5315-021-8211	133	13
	34	16	5315-054-3038	135	23
	34	24	5315-121-2600	138	34
	35	9	5315-151-9003	105	9
	19	8	5315-188-0180	64	32
	25	6	5315-243-1169	92	1
	136	8	5315-281-7743	90	2
	79	2	5315-298-1481	33	11
	5	13	5315-298-1496	—	—
	152	13	5315-455-6884	90	3
5310-880-8789	90	11	5315-464-7129	31	20
5310-886-7225	79	13	5315-616-5530	16	15
5310-889-2527	106	12	5315-741-1872	78	13
	55	9	5315-741-2419	135	19
	32	30	5315-752-4316	92	6
	154	33	5315-754-0848	32	29
5310-889-2577	108	4		23	17
5310-891-1709	96	21	5315-815-8840	79	18
	79	10	5315-816-1794	18	6
5310-891-1733	105	2		121	20
5310-897-5940	94	17	5315-859-5820	110	10
	94	12		31	19
5310-902-8204	135	59	5315-839-5822	65	1
5310-905-0762	—	—		75	20
5310-913-5476	94	5		78	6
	95	5	5315-842-3044	113	11
5310-927-9399	14	1		110	21
5310-929-9400	7	2		93	1
5310-931-8167	—	—		23	18
5310-931-8182	74	1		23	23

SECTION IV. FEDERAL REFERENCE NUMBER INDEX — Continued

Stock Number	Fig. No.	Item No.	Stock Number	Fig. No.	Item No.
5315-842-3044	31	18	5330-297-7106	47	5
	32	5	5330-400-8447	155	2
	133	25	5330-437-8764	104	8
	79	17	5330-443-8049	30	19
	70	2		30	18
5315-842-3154	78	5	5330-461-5767	104	9
5315-844-3966	117	6		104	6
5315-844-5896	22	4	5330-461-5768	104	9
5315-846-0126	92	9	5330-463-0470	34	9
5315-846-1270	70	1	5330-495-8677	—	—
5315-890-5860	137	3	5330-524-9623	135	10
5315-990-2081			5330-579-3156	104	6
5320-067-5846			5330-585-6641	135	35
5320-067-9837	23	9		135	42
5320-067-9840	—	—	5330-585-6642	135	9
5320-067-9841	—	—	5330-653-7653	138	7
5320-242-1545	119	4	5330-653-7656	137	1
5320-816-5801	—	—	5330-741-1824	67	12
5325-147-5275	56	15	5330-770-9070	64	44
5325-158-0081	23	37	5330-807-6445	135	6
5325-158-0082	154	31	5330-811-4881	135	26
5325-158-0100	58	12	5330-834-2912	6	10
5325-159-3890	58	16	5330-864-5774	77	29
5325-155-0004	142	14	5330-878-8433	135	—
5325-276-6343	58	13		135	3
5325-359-6844	139	11	5330-929-8371	75	22
5325-507-8701	58	9	5330-933-3317	77	33
5325-574-3954	58	8	5330-933-3318	61	14
5325-700-0997	101	1	5330-954-1248	12	19
5325-754-2240	142	3	5340-060-1593	65	5
5325-757-1963	40	8	5340-057-6956	111	1
5325-893-6242	139	12	5340-062-7200	77	17
5330-052-6805	54	15		74	14
5330-087-8929	84	8	5340-078-7029	111	3
5330-133-6231	12	5	5340-081-6573	75	29
5330-147-8446	88	28	5340-087-8050	134	17
5330-157-4618	117	10	5340-128-1572	31	24
5330-157-4637	101	6	5340-157-7559	120	24
5330-157-4656	99	1	5340-157-7681	6	5
5330-157-4657	12	7	5340-157-7702	6	3
5330-157-6187	96	2	5340-158-0035	96	18
5330-157-6190	96	2	5340-158-0043	113	4
5330-157-6233	9	13	5340-158-0068	96	23
5330-157-6257	70	11	5340-158-0072	114	6
5330-157-6237	105	11	5340-158-0095	118	6
5330-157-6302	88	7	5340-158-0122	76	6
5330-159-3249	24	5		73	7
5330-159-3257	18	3	5340-158-0133	58	11
5330-159-3260	9	13	5340-158-0223	56	12
5330-159-3262	12	6		57	8
5330-159-6290	15	17	5340-159-1292	—	—
5330-178-8372	64	28	5340-159-3834	76	4
5330-179-1237	64	24	5340-159-3849	23	—
5330-183-5946	69	8	5340-165-7798	96	16
5330-183-5947	155	4		94	15
5330-187-3635	138	16	5340-165-7799	96	14
5330-235-5886	8	16	5340-178-1445	54	19
5330-250-9946	67	47	5340-205-9565	135	22
5330-285-3784	67	25	5340-220-3639	8	9
5330-297-4519	15	24		7	6
5330-297-7106	45	7	5340-229-0340	129	13

SECTION IV. FEDERAL REFERENCE NUMBER INDEX — Continued

Stock Number	Fig. No.	Item No.	Stock Number	Fig. No.	Item No.
5340-229-0340	121	33	5340-933-3314	5	8
	123	6	5340-933-3778	22	8
5340-241-0518	83	11	5355-962-9018	61	1
5340-249-3596	65	22	5360-102-9935	13	1
5340-282-7519	82	5	5360-159-3831	65	2
5340-282-7521	—	—	5360-159-3832	65	14
5340-282-7539	Group 0306		5365-057-2685	13	7
5340-282-7544	29	12	5365-159-3839	15	16
5340-296-6572	86	5	5365-159-6902	115	6
5340-311-4306	94	3	5365-221-6517	64	8
	95	3	5365-221-6519	64	43
5340-321-6431	109	12	5365-221-6523	63	24
5340-321-6432	109	8	5365-222-2061	63	10
5340-333-6060	—	—	5365-410-9795	5	5
5340-333-6078	29	14	5365-451-1607	63	14
5340-339-3768	111	10	5365-658-3815	86	20
5340-344-2754	82	16	5365-658-3816	86	20
5340-359-0959	78	15	5880-411-5700	98	5
5340-368-4935	25	27	5890-061-6650	154	1
5340-371-4134	82	2	5910-087-5076	39	17
5340-391-3830	73	13	5925-486-1635	41	3
5340-400-5547	29	13	5980-148-4780	—	—
5340-454-3639	153	11	5990-296-6318	51	3
5340-454-3640	58	1	5990-307-8856	40	22
5340-454-5317	97	19	5990-568-4181	144	15
5340-455-1315	104	1	5990-615-7897	141	16
5340-462-7045	31	23	5990-655-1514	141	7
5340-462-8549	5	10		146	14
5340-463-0482	34	14		44	3
5340-467-1987	64	30	5990-699-9438	40	20
5340-477-3776	79	1	5990-755-0761	53	6
5340-495-9621	153	14	5990-923-6163	42	2
5340-543-3038	58	14	5990-933-3742	54	12
5340-543-3155	111	9	5995-399-8636	—	—
5340-543-3321	111	11	5995-399-8676	—	—
5340-543-7110	111	8	5995-572-9180	—	—
5340-587-1447	12	13	5995-788-7042	—	—
5340-597-7982	—	—	5995-773-1438	60	2
5340-614-9772	97	25	5995-833-8561	—	—
5340-629-7273			5940-067-3929	—	—
5340-653-7275	106	3	5940-105-9943	55	3
5340-721-7876	153	10	5940-113-9836	—	—
5340-741-1882	68	1	5940-143-4780	43	4
5390-741-1882	69	1	5940-143-4794	—	—
5340-741-2420	135	33	5940-148-5170	55	5
5340-741-2464	135	38	5940-254-5217	Group 0613	
5340-769-7867	81	4	5940-453-5100	54	13
5340-773-5382	138	26	5340-508-6079	Group 0612	
5340-784-1709	32	23	5950-310-4655	—	—
5340-791-5361	111	2	5970-577-1630	—	—
5340-792-8125	33	7	5970-705-6537	Group 0612	
5340-803-7301	92	5	5970-833-8562	—	—
5340-827-2453	142	9	5975-177-1930	Group 0613	
5340-827-3314	146	17	5975-290-3357	—	—
5340-836-0647	8	10	5975-660-5962	—	—
5340-878-8627			5977-182-7529	54	7
5340-890-6367	138	22	6115-039-8253	141	13
5340-881-5308	29	15	6140-067-2553	55	4
5340-908-3193	34	12	6140-067-2554	55	4
5340-923-5734	4	7	6145-580-5481	59	—
5340-930-1755	70	5		43	5

SECTION IV. FEDERAL REFERENCE NUMBER INDEX — Continued

Stock Number	Fig. No.	Item No.	Stock Number	Fig. No.	Item No.
6145-705-6678	Group 0613		6240-295-2421	51	4
6145-905-3351	Group 0612		6240-686-4168	50	5
6210-699-9457	40	14	6240-933-3603	—	—
6210-699-9458	40	10	6240-950-1678	141	1
6220-160-0543	52	3	6620-814-4770	53	1
6220-160-0550	Group 0609		6620-933-3598	34	20
6220-179-5118	46	1	6620-938-8212	40	16
6220-300-9908	50	7	6625-321-6365	40	9
6220-368-4940	51	5	6680-167-9783	6	12
6220-403-9492	45	3	6680-917-6023	53	4
6220-447-9635	91	15	6680-933-3599	155	3
6220-500-0437	45	1	6680-933-3600	40	13
6220-669-5623	47	1	6680-933-3606	155	1
6220-678-9046	49	1	6685-814-5271	53	7
6220-678-9047	48	4	6685-936-2139	40	6
6220-693-4174	49	12	7510-461-2890	98	10
6220-695-1107	49	10	8305-263-2479	111	2
	50	6	9330-147-5276	57	7
6220-737-2820	49	4	9340-179-7247	130	3
6220-752-6020	47	6	9340-285-6774	100	1
6220-752-6030	45	8	9340-462-3304	121	41
6220-775-2384	48	5	9390-136-9204	100	3
6220-819-7028	49	11	9390-505-6594	120	6
6220-846-3445	52	1	9505-592-4690	22	6
6220-846-9745	48	1	9905-202-3639	113	20
6220-933-3990	50	1		143	6
6220-983-6920	51	1		127	5
6240-019-0877	45	5	9905-205-2795	113	8
	47	3		143	6
	48	3	9905-213-4739	147	7
6240-019-3141	46	3	9905-248-4741	147	6
	52	2	9905-405-0225	49	4
6240-044-6914	45	6	9905-431-8337	147	3
	47	4	9905-752-4649	43	6
6240-155-8714	42	3	9905-841-4445	Group 0612	
6240-266-9940	40	15			

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
MS90726-33	96906	152	38	11601614	19207	75	29
30266	72447	77	49	11601698	19207	148	9
32164	77640	86	13	11602345	19207	150	16
1004	11757	138	10	11608950-17	19207	145	6
1020	11757	137	7	11621344	19207	112	6
1023	11757	137	6		19207	151	12
103	11757	138	26	11621411	19207	141	1
103196	24617	69	19	11621626	19207	56	12
103196	24617	67	38		19207	57	8
103217	24617	67	10	11621962	19207		
1033A	11757	138	32	1162745-2	19207	121	44
103869	24617	74	25	11630417	19207	6	13
103896	24617	77	47	11640678	19207	8	22
104268	24617	23	9	11640679	19207	69	6
105	11757	137	1	11640680	19207	84	2
1050	11757	138	20	11640681	19207	54	12
1054	11757	138	34	11640682	19207	15	15
105A	11757	137	2	11640702	19207	104	5
1060	11757	137	4	11640703	19207	152	26
106330		21	1	11640704	19207	15	20
107268	24617	107	13	11640707	19207	109	1
107368	24617	132	15		19207	139	6
10863031	19207	37	3	11640709	19207	34	22
10871980	19207	119	1	11640710	19207	33	4
10871987	19207	119	2	11640713	19207	142	13
10883265-1	19207	30	19	11640715	19207	137	5
10883265-2	19207	30	18	11640716	19207	86	
10885431-1	19207	97	14	11640718-1	19207	80	20
10885796	19207	148	6	11640718-2	19207	80	20
	19207	150	4	11640719	19207	79	5
10888013	19207	83	9		19207	79	13
10896505	19207	141	21	11640720-1	19207	80	20
10896514	19207			11640720-2	19207	80	20
10896515	19207			11640721	19207	84	3
10900337	19207	121	49	11640722	19207	32	18
10910174-22	19207	19	3	11640724-1	19207	106	14
		17	7	11640725	19207	27	1
10910174-30	19207	7	2	11640728	19207	61	11
10910174-31	19207	83	6	11640733-1	19207	23	23
10924916	19207	127	20	11640734	19207	77	35
10929668	19207	35	23		19207	84	10
10944542	19207	42	1	11640735	19207	80	1
10947439	19207	154	10	11640736	19207	14	10
10950978-9	19206	26	5	11640737	19207	58	1
		27	5		19207	142	20
111630	24617	152	20		19207	153	9
113103	24617	144	28	11640739	19207	8	4
	24617	149	19	11640740	19207	31	23
114629	24617	144	28	11640742	19207	94	15
	24617	144	14		19207	96	16
114630	24617	144	36	11640743	19207	17	2
	24617	149	11	11640745	19207	9	6
114631	24617	144	37	11640746	19207	39	13
	24617	149	12	11640749	19207	36	10
114795	24617	145	4	11640750	19207	37	5
114796	24617	145	24	11640751	19207	37	4
1150426-2	19207	130	12	11640752	19207	62	1
11598930	19207	26	4	11640755-1	19207	80	12
	19207	26	9	11640755-2	19207	80	12
	19207	27	6	11640757	19207	74	19

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
11640759	19207	74	30	11640821	19207	9	1
11640763	19207	23	30	11640822	19207	9	24
11640764	19207	23	33	11640823	19207	9	2
11640765	19207	23	31	11640824	19207	9	19
11640769	19207	154	31	11640825	19207	88	1
11640770	19207	15	24	11640827	19207	133	2
11640771	19207	54	15	11640828	19207	133	21
11640773	19207	58	17	11640829	19207	8	23
	19207	153	11	11640830	19207	88	6
	19207	154	7	11640831	19207	88	7
11640775	19207	97	25	11640832	19207	8	8
11640776	19207	26	2	11640833	19207	29	19
	19207	27	19	11640834	19207	96	14
11640778	19207	74	42	11640835	19207	133	12
	19207	77	31	11640836	19207	32	6
	19207	61	15	11640838	19207	8	15
11640779	19207	54	2	11640839	19207	84	6
11640782	19207	5	12	11640841	19207	32	27
11640783	19207	155	1	11640842	19207	82	8
11640784	19207	24	5	11640843	19207	17	8
11640785	19207	28	19	11640849	19207	7	15
11640787	19207	104	4	11640850	19207	61	5
11640788	19207	104	3	11640865	19207	27	9
11640791	19207	105	19	11640873	19207	146	24
11640792	19207	109	7	11640874	19207	33	7
11640793	19207	142	4	11640875	19207	98	8
11640794	19207			11640876	19207	105	3
11640795	19207	71	1	11640877	19207	100	10
	19207	27	14	11640878	19207	105	14
	19207	142	6	11640880	19207	27	20
11640797	19207	88	37	11640881	19207	10	8
11640798	19207	113	4	11640883	19207	132	23
11640799	19207	113	12	11640887	19207	8	16
11640802	19207	26	7	11640888	19207	31	11
11640804	19207	13	4	11640892-2	19207	98	13
11640804-1	19207	13	4	11640893	19207	148	15
11640805	19207	145	22	11640894	19207	82	7
11640805-1	19207			11640895-1	19207	98	15
11640805-2	19207	25	15	11640895-2	19207	98	15
	19207	29	2	11640899	19207		
11640805-3	19207	71	2	11640906	19207	75	6
	19207	73	1	11640909	19207	9	16
	19207	76	2	11640910	19207	94	4
	19207	25	24	11640911	19207	7	10
	19207	27	15	11640912	19207	31	8
	19207	24	8	11640914	19207	15	25
11640805-4	19207	25	28	11640915	19207	31	20
11640806	19207	38	15	11640916	19207	88	34
11640807	19207	8	19	11640917	19207	8	21
11640808	19207	56	15	11640932-1	19207	98	2
11640809	19207	9	12	11640932-2	19207	98	2
11640810	19207	16	1	11640933-2	19207	97	22
11640811	19207	16	2	11640934	19207	109	6
11640812	19207	14	14	11640935	19207	18	7
11640813	19207	133	15	11640935-1	19207	97	22
11640814	19207	19	12	11640936	19207	107	1
11640815	19207	29	4		19207	132	1
11640816	19207	6	9	11640937-1	19207	84	4
11640817	19207	75	5	11640937-2	19207	84	5
11640818	19207	77	29	11640938	19207	148	12
11640819	19207	8	20				

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
11640940	19207	147	9	11641025	19207	93	5
11640941	19207	147	6	11641027-1	19207	38	8
11640942	19207	147	7	11641027-2	19207	38	7
11640947	19207	152	32	11641027-3	19207	38	5
11640948	19207	6	14	11641027-4	19207	38	4
11640955	19207	18	5	11641027-5	19207	38	3
	19207	9	18	11641027-6	19207	38	1
11640957	19207	109	3	11641028	19207	6	4
11640958	19207	82	13	11641032	19207	85	3
11640959	19207	8	2	11641036	19207	30	3
11640960	19207	21	14	11641037	19207	82	1
11640961	19207	18	3	11641038	19207	117	24
11640962	19207	21	3	11641039	19207	13	8
11640963-2	19207	58	13	11641039-1	19207	13	8
11640964	19207	72	8	11641065	19207	54	10
11640965	19207	72	10	11641066	19207	88	8
11640966	19207	9	15	11641067	19207	54	10
11640967	19207	9	3	11641068	19207	98	20
11640968-12	19207	10	5	11641069	19207	148	17
11640969	19207	30	11	11641070	19207	75	27
11640970	19207	81	3	11641071	19207	64	41
11640971	19207	88	3	11641072	19207	65	18
11640973	19207	84	3	11641074	19207	63	7
11640974	19207	148	20	11641075	19207	22	2
11640981	19207	24	7	11641077	19207	110	
11640983	19207	98	1	11641078	19207	15	8
11640984-1	19207	98	4		19207	15	8
11640984-2	19207	98	4	11641078-3	19207		
11640985-1	19207	99		11641080-1	19207	98	7
11640985-2	19207	99		11641080-2	19207	98	7
11640987	19207	72	9	11641080-3	19207	98	10
11640988	19207	98	18	11641080-4	19207	98	10
11640991	19207	84	6	11641082	19207	150	19
11640995-1	19207	75	33	11641093	19207	77	33
11640995-2	19207	75	33	11641095-1	19207	7	4
11640996	19207	75	34	11641095-2	19207	7	1
11640997	19207	88	36	11641095-3	19207	7	17
11640998-1	19207	100		116447	24817	8	13
11640998-2	19207	100		11646983	19207	63	1
11640999	19207	54	19	11647242	19207	106	5
11641000	19207	12	20	11647448	19207	76	6
11641001	19207	25	10	11647475-2	19207	97	5
11641002	19207	24	1	11647494	19207	102	3
11641003	19207	66	16	11647811	19207		
11641004-1	19207	121	40	11647812	19207		
11641004-2	19207	151	8	11650714	19207	10	7
11641006	19207	98	21	11650736	19207	133	16
11641009-1	19207	98	16	11650871	19207	99	11
11641009-2	19207	98	16	11650883	19207	115	6
11641010	19207	95	4	11652522	19207	142	12
11641011	19207	27	21	11652678	19207	96	12
11641014	19207	88	14	11656675-1	19207	89	
11641015	19207	31	29	11656675-2	19207	89	
11641016	19207	13	2	11656681-1	19207	89	10
11641016-1	19207	13	2	11656685	19207	89	4
11641017	19207	13	10	11656692	19207	89	13
11641020	19207	84	1	11656693	19207	89	11
11641021	19207	84	1	11656703	19207	89	8
11641023	19207	13	3	11656704	19207	89	1
11641023-1	19207	13	3	11656709	19207	89	9
11641024	19207	94	23	11656719-1	19207	89	12

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
11656719-2	19207	89	7	11656874	19207	77	36
11656723	19207	5	18		19207	84	11
11656725	19207	89	2	11656875	19207	83	11
11656726	19207	89	5	11656877	19207	79	16
11656734-1	19207	89	3	11656878	19207	79	4
11656734-2	19207	89	3	11656879	19207	32	21
11656737	19207	89	6	11656881	19207	79	7
11656739	19207	113	1	11656882	19207	79	1
11656762	19207	115	14	11656883	19207	81	13
11656766	19207	113	18	11656884	19207	82	10
11656779-1	19207	106	21	11656885	19207	82	15
11656779-2	19207	106	21	11656886	19207	82	6
11656780	19207	113	13	11656887	19207	82	12
11656781	19207	113	2	11656888	19207		
11656788-1	19207	94	7	11656889	19207	82	9
11656788-2	19207	94	7	11656890	19207	82	14
11656792	19207	7	14	11656891	19207	81	11
11656793	19207	7	7	11656893	19207	105	20
11656795	19207	9	28	11656901-1	19207	90	8
11656797	19207	9	30	11656901-2	19207	90	8
11656798	19207	7	9	11656904	19207	91	3
11656799	19207	9	22	11656905	19207	91	11
11656800	19207	9	23	11656907	19207	91	16
11656801	19207	9	17	11656908	19207	91	15
11656802	19207	9	20	11656909	19207	91	2
11656803	19207	19	5		19207	77	39
11656805	19207	19	4		19207	84	12
11656817	19207	95	21	11656910	19207	90	1
11656818	19207	95	22	11656912-1	19207	96	12
11656819	19207	94	14	11656912-2	19207	96	12
11656820	19207	94	16	11656914	19207	80	21
11656822	19207	95	12	11656917	19207	23	6
11656824	19207	95	17	11656920	19207	22	3
11656825	19207	94	18	11656921	19207	23	32
11656830	19207	23	4	11656922	19207	23	—
11656831	19207	23	20	11656922-1	19207	23	22
11656833	19207	23	29	11656924	19207	70	25
11656837	19207	23		11656925	19207	70	26
11656838	19207	23	7	11656927	19207	70	4
11656839	19207	22	10	11656928	19207	70	7
11656842	19207	23	16	11656930	19207	70	8
11656843	19207	32	3	11656932	19207	70	13
11656844	19207	23	13	11656935	19207	66	4
11656845	19207	23	26	11656936	19207	66	1
	19207	83	7	11656937	19207	61	14
11656846	19207	22	5	11656938	19207	66	10
11656847	19207	23	3	11656939	19207	66	7
	19207	83	13	11656939	19207	5	16
11656848	19207	23	24	11656940	19207	66	6
11656849	19207	114	6	11656940	19207	5	17
11656850	19207	23	8	11656941	19207	66	5
11656851	19207	22	7	11656942	19207	5	2
11656853	19207	32	9	11656943	19207	5	6
11656862	19207	101	7	11656944	19207	5	22
11656868	19207	83	1	11656945	19207	5	23
11656869	19207	83	3	11656946	19207	5	10
11656870	19207	80	22	11656947	19207	5	5
11656871	19207	83	5	11656948	19207	70	16
11656872	19207	83	8	11656949	19207	70	12
11656873	19207	83	10	11656950	19207	70	19
11656874	19207	91	17		19207	79	12

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
11656951	19207	70	23	11657033	19207	64	30
11656952	19207	70	20	11657034	19207	64	7
11656953	19207	70	21	11657035	19207	133	30
11656954-1	19207	66	23	11657037	19207	136	2
11656954-2	19207	66	15	11657038	19207	136	10
11656955	19207	19	6	11657041	19207	136	3
11656957	19207	24	10	11657042	19207	136	5
11656958	19207	34	23	11657043	19207	136	13
11656959	19207	34	15	11657047	19207	136	1
11656960	19207	19	2	11657050	19207	64	21
11656962	19207	34	21	11657051	19207	64	24
11656963	19207	64	2	11657052	19207	65	21
11656964	19207	32	17	11657053	19207	17	1
11656964	19207	152	11	11657056	19207	17	6
11656967	19207	6	5	11657057	19207	17	9
11656968	19207	6	3	11657058	19207	22	9
11656969	19207	4	1	11657059	19207	14	1
11656970	19207	5	8	11657060	19207	17	4
11656978	19207	62	6	11657061	19207	14	15
11656979	19207	64	14	11657062	19207	14	2
11656980	19207	64	16	11657063	19207	17	3
11656981-2	19207	65	4	11657064-1	19207	115	4
11656982	19207	63	5	11657065	19207	114	7
11656983	19207	63	1	11657066-1	19207	115	11
11656984	19207	63	8	11657066-2	19207	115	11
11656985	19207	63	11	11657067	19207	105	1
11656988	19207	32	13	11657072	19207	105	15
11656990	19207	32	12	11657078	19207	31	9
11656991	19207	15	17	11657080	19207	31	17
11656993-1	19207	32	24	11657082	19207	31	15
11656994	19207	32	16	11657083	19207	31	21
11656995	19207	65	11	11657084	19207	31	3
11656996	19207	65	2	11657085	19207	31	24
11656997	19207	61	7	11657086	19207	31	27
11656999	19207	63	22	11657087	19207	31	28
11657000	19207	64	36	11657088	19207	31	13
11647001	19207	64	37	11657091	19207	65	19
11657002	19207	64	35	11657092	19207	63	14
11657003	19207	64	47	11657093	19207	65	23
11657004	19207	64	46	11657094	19207	64	6
11657005	19207	64	26	11657095	19207	64	13
11657006	19207	65	20	11657096	19207	64	10
11657011	19207	65	9	11657098	19207	9	4
11657012	19207	64	9	11657099	19207	9	5
11657013	19207	65	14	11657100	19207	11	1
11657014	19207	63	20	11657101	19207	11	2
11657015	19207	64	19	11657102	19207	11	3
11657016	19207	64	12	11657103	19207	11	6
11657018	19207	90	13	11657104	19207	16	14
11657019	19207	90	17	11657105	19207	16	13
11657020-1	19207	134	24	11657106	19207	10	9
11657020-2	19207	134	24	11657107	19207	5	7
11657021	19207	134	13	11657108	19207	10	6
11657022-2	19207	134	21	11657109	19207	9	8
11657023-1	19207	134	11	11657111	19207	9	11
11657023-2	19207	134	3	11657112	19207	10	4
11657024	19207	134	19	11657114	19207	9	10
11657025	19207	133	10	11657115	19207	9	13
11657027	19207	133	28	11657116	19207	9	9
11657030	19207	133	31	11657119-1	19207	13	11
11657031	19207	64	29	11657119-2	19207	13	11
11657032	19207	64	5				

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
11657120	19207	13	1	11657245	19207	147	9
11657121	19207	13	6	11657246	19207	147	7
11657122	19207	64	50	11657248	19207	106	1
11657123	19207	65	8	11657251	19207	146	19
11657124	19207	13	14	11657256	19207	18	4
11657125	19207	13	13	11657261	19207	35	12
11657126-1	19207	30	7	11657262	19207	94	8
11657126-2	19207	30	7	11657264-1	19207	101	5
11657127	19207	13	12	11657264-2	19207	101	5
11657128	19207	13	14	11657267	19207	56	4
11657130	19207	13	5	11657269	19207	111	7
11657130-1	19207	13	5	11657271	19207	35	22
11657135	19207	16	3	11657272	19207	25	20
11657136	19207	152	30	11657272-1	19207	25	21
11657137	19207	88	11	11657273	19207	29	23
11657139	19207	152	17	11657280	19207	56	2
11657150	19207	65	22	11657283	19207	56	6
11657151	19207	63	6	11657284	19207	35	8
11657152	19207	63	3	11657286	19207	20	2
11657153	19207	64	3	11657287	19207	35	4
11657154	19207	63	21	11657288	19207	68	10
11657155	19207	64	1	11657289	19207	33	6
11657156	19207	64	17	11657290	19207	97	0
11657157	19207	63	16	11657292	19207	97	13
11657158	19207	140	1	11657293	19207	35	10
11657159	19207	65	12	11657294	19207	22	8
11657160	19207	63	23	11657296	19207	29	20
11657161	19207	64	4	11657296-1	19207		
11657162	19207	62	5	11657300	19207	20	1
11657163	19207	63	18	11657301	19207	25	12
11657165	19207	63	15	11657301-1	19207	25	14
11657166	19207	64	39	11657302	19207	70	10
11657167	19207	63	13	11657303	19207	147	7
11657168	19207	63	2	11657304	19207	147	9
11657169	19207	54	6	11657310	19207	86	14
11657170	19207	54	9	11657311	19207	12	7
11657171	19207	54	7	11657312	19207	65	17
11657172	19207	54	5	11657313	19207	18	8
11657173	19207	103	2	11657318	19207	6	12
11657198	19207	35	13	11657332	19207	56	9
11657199	19207	93	2	11657333	19207	56	8
11657205	19207	12	6	11657334	19207	67	35
11657209	19207	148	2	11657337	19207	106	24
11657210	19207	148	1	11657341	19207	95	7
11657211	19207	84	8	11657347	19207	13	7
11657212	19207	154	27	11657348	19207	7	11
11657213	19207	98	11	11657352	19207	22	1
11657214	19207	15	5	11657353	19207	23	38
11657221	19207	28	21	11657354	19207	23	34
11657222	19207	97	8	11657358	19207	106	16
11657224	19207	18	1	11657359	19207	28	2
11657228	19207	70	11	11657360	19207	106	6
11657230	19207	23	37	11657361	19207	28	22
11657231	19207	81	2	11657362	19207	106	17
11657232	19207	23	36	11657373	19207	105	11
11657233	19207	97	18	11657374	19207	107	3
11657235	19207	56	10		19207	132	3
11657236	19207	56	11	11657375-1	19207	107	2
11657241	19207	147	5		19207	132	2
11657242	19207	147	3	11657375-2	19207	107	14
11657243	19207	147	1		19207	132	16

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
11657375-3	19207	107	8	11657433	19207	68	11
	19207	132	13	11657434	19207	67	7
11657375-5	19207	107	10	11657435	19207	69	12
	19207	115	8	11657436	19207	69	20
	19207	132	11	11657437	19207	67	4
11657375-6	19207	115	5		19207	68	14
	19207	132	22	11657438	19207	67	5
11657375-7	19207	115	3	11657448	19207	73	7
	19207	132	24	11657450	19207	12	22
11657375-9	19207	105	4	11657450-1	19207	12	23
11657376	19207	16	4	11657451	19207	73	11
11657377	19207	147	9	11657452	19207	73	8
11657378	19207	105	16	11657453	19207	N	1
11657379-1	19207	108	3		19207	73	3
11657379-2	19207	108	3	11657455	19207	71	5
11657380	19207	29	26		19207	27	22
11657381	19207	30	1	11657456	19207	76	7
11657384	19207	30	4	11657458	19207	18	15
11657385	19207	102	2	11657469-1	19207	82	4
11657386	19207	30	5	11657469-2	19207	71	4
11657387	19207	30	8		19207	73	2
11657388	19207	30	16		19207	76	3
11657391	19207	29	7	11657469-4	19207	24	9
11657393	19207	30	8	11657469-5	19207	27	13
11657394-1	19207	29	9	11657469-6	19207	28	13
11657394-2	19207	25	16		19207	82	3
	19207	29	8	11657469-7	19207	25	25
11657394-3	19207	29	5	11657469-8	19207	71	3
11657394-5	19207			11657470-1	19207	101	6
11657394-6	19207	29	3	11657470-2	19207	101	6
11657394-7	19207	145	21	11657471	19207	97	23
11657398	19207	29	16	11657474-1	19207	97	2
11657401	19207	96		11657474-2	19207	97	2
11657401-1	19207	96	17	11657475-1	19207	97	7
11657401-2	19207	96	18	11657475-3	19207	97	4
11657402	19207	105	17	11657482	19207	102	4
11657403	19207	96		11657485	19207	102	9
11657403-1	19207	96	3	11657488	19207	102	7
11657403-2	19207	96	5	11657496	19207	109	2
11657403-3	19207	96	7	11657497	19207	109	4
11657405	19207	95	23	11657498	19207	97	6
11657410	19207	78	22	11657517	19207	66	17
11657411	19207	67	44	11657526	19207	61	16
11657414	19207	64	8	11657527	19207	78	21
11657416	19207	78	16	11657528	19207	65	13
11657418	19207	94	19	11657529	19207	98	27
	19207	16	6	11657530-1	19207	104	8
11657419	19207	95	20	11657530-2	19207	104	8
11657420	19207	14	7	11657531	19207	33	2
11657421	19207	14	3	11657532	19207	98	17
11657421-1	19207	14	4	11657533	19207	36	7
11657422	19207	133	17	11657534	19207	88	32
11657422-1	19207	133	18	11657535	19207	64	28
11657423	19207	136	6	11657536-1	19207	105	12
11657424	19207	136	9	11657536-2	19207	105	6
11657425	19207	56	1	11657538	19207	7	12
11657426	19207	78	8	11657542-1	19207	104	7
11657427	19207	64	22	11657543-1	19207	98	25
11657428	19207	67	28	11657543-2	19207	98	25
11657430	19207	8	6	11657546	19207	54	8
11657433	19207	69	16	11657547	19207	82	25

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
11657548	19207	87	7	11657666	19207	113	19
11657554	19207	54	14	11657667	19207	9	21
11657555	19207	54	13	11657668	19207	7	6
11657557	19207	15	3		19207	8	9
11657558	19207	15	18	11657669	19207	34	8
11657559	19207	107	9	11657670	19207	148	16
11657559	19207	132	10	11657670-1	19207	146	22
11657560	19207	12	2	11657670-2	19207	146	23
11657561	19207	12	3	11657670-4	19207	148	14
11657562	19207	25	11	11657671	19207	146	13
11657563	19207	54	16	11657673	19207	9	25
11657564	19207	16	5	11657674	19207	7	13
11657565	19207	63	9	11657675	19207	34	10
11657568	19207	15	12	11657676-1	19207	115	7
11657569	19207	88	21	11657676-1	19207	96	4
11657570	19207	88	29	11657676-1	19207	132	21
11657572	19207	88	27	11657677	19207	12	18
11657573	19207	88	23	11657678	19207	12	16
11657575	19207	88	33	11657679	19207	12	15
11657577	19207	88	28	11657680	19207	12	5
11657578	19207	88	22	11657682	19207	12	4
11657579-2	19207	28	15	11657684	19207	69	11
11657588	19207	88	10		19207	67	6
11657590	19207	28	17		19207	68	13
11657592	19207	28	7	11657685	19207	88	15
11657594	19207	28	16	11657686	19207	152	24
11657595	19207	28	18	11657687	19207	28	4
11657596	19207	28	3	11657688	19207	12	8
11657597	19207	28	9	11657689	19207	67	47
11657598-1	19207	28	10	11657690	19207	27	17
11657600	19207	23	6	11657691	19207	152	35
11657610	19207	82	2	11657693	19207	32	28
11657619	19207	97	3	11657695	19207	9	29
	19207	101	4	11657696	19207	31	2
1165762	19207	—	—	11657697	19207	155	2
11657627	19207	54	1	11657698	19207	69	8
11657628	19207	88	4	11657699	19207	155	4
11657629	19207	34	24	11657700	19207	146	3
11657630	19207	34	13	11657701	19207	8	1
11657631	19207	34	11	11657703	19207	14	
11657633	19207	68	2	11657704	19207	18	2
	19207	69	2	11657704-3	19207	15	21
11657634	19207	24	6	11657704-6	19207	14	9
11657635	19207	8	18	11657705	19207	15	1
11657636	19207	7	5	11657706-1	19207	14	13
11657637	19207	19	9	11657706-2	19207	14	8
11657637-2	19207	19	10	11657708	19207	15	16
11657637-3	19207	19	11	11657710	19207	16	10
11657638-1	19207	8	14	11657711	19207	15	2
11657638-2	19207	8	12	11657712	19207	15	7
11657638-3	19207	14	19	11657713	19207	15	
11657640	19207	109	13	11657714	19207	15	4
11657641-1	19207	8	17	11657715	19207	15	13
11657642	19207	34	3	11657716	19207	109	5
11657645	19207	114	5	11657726	19207	33	12
11657654	19207	54	23	11657729	19207	152	8
11657661	19207	88	2	11657730-1	19207		
11657662	19207	116	15	11657730-2	19207		
11657663	19207	28	13	11657733-1	19207	139	3
11657663-1	19207	28	14	11657733-2	19207	139	3
11657665	19207	146	10	11657735	19207	94	10

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
11657735	19207	96	8	11657818	19207	148	11
11657737-1	19207	63	24	11657819	19207	69	
11657737-2	19207	63	10	11657820	19207	68	
11657737-3	19207	64	43	11657821	19207	67	14
11657741	19207	93	4	11657822	19207		
11657742	19207	93	6	11657824	19207	98	19
11657743-1	19207	100	3	11657825	19207	148	3
11657743-2	19207	100	3		19207	153	
11657745	19207	100	7	11657827	19207	107	12
11657746	19207				19207	132	18
11657747	19207	10	1	11657828	19207	107	11
11657748	19207	33	8		19207	132	12
11657749	19207	36	1	11657832	19207	146	1
11657750	19207	57	12	11657833	19207	146	6
11657751	19207	100	2	11657836	19207	61	3
11657752-2	19207	152	21	11657837	19207	146	5
11657753	19207	152	18	11657838	19207	105	5
11657754	19207	140	2	11657839	19207	4	7
11657756	19207	58	20	11657840	19207	29	24
11657757	19207	58	20	11657841	19207	152	28
11657758	19207	21	5	11657842	19207	140	7
11657759	19207	21	6	11657844	19207	49	4
11657760	19207	93	3	11657848	19207	42	6
11657761	19207	100	5	11657849-1	19207	45	3
11657763	19207	100	4	11657849-2	19207	45	3
11657764	19207	152	33	11657850	19207	60	1
11657765	19207	152	1	11657851	19207	58	22
11657766	19207	152	4	11657852	19207	146	2
11657767	19207	18	14	11657855	19207	84	7
11657770	19207	98	28	11657856	19207	75	1
11657771	19207	98	26		19207	77	26
11657774-1	19207	143	2	11657857	19207		
11657774-2	19207	143	2	11657857-1	19207		
11657782-1	19207	116	23	11657860	19207	75	2
11657782-2	19207	116	23		19207	77	25
11657785	19207	99	8	11657862	19207	85	5
11657792-1	19207	116	25	11657863	19207	150	20
11657793	19207	16	9	11657865	19207	85	4
11657797-1	19207	113	15	11657867	19207	99	1
11657797-2	19207			11657869	19207	150	7
11657798-1	19207	113	16	11657870	19207	150	
11657798-2	19207	113	17	11657871	19207	7	3
11657798-3	19207	113	16	11657872	19207	58	18
11657799	19207	58	12	11657873	19207	150	22
11657800	19207	84	15	11657874	19207		
11657801	19207	98	6	11657875	19207	99	2
11657802-1	19207	55	11	11657876	19207		
11657802-2	19207	55	7	11657877	19207		
11657802-3	19207	55	1	11657878	19207	150	26
11657802-4	19207	36	6	11657881	19207	150	3
11657802-6	19207	55	11	11657882	19207	150	17
11657805	19207	98	5	11657883	19207		
11657807	19207			11657884	19207	154	5
11657808	19207	148		11657885	19207	154	17
11657809	19207			11657886	19207	154	14
11657810	19207			11657887	19207	154	22
11657811	19207			11657888	19207	154	20
11657812	19207			11657839	19207	154	8
11657813	19207			11657892	19207	154	
11657814	19207	148	4	11657893	19207	154	30
11657816	19207	148	5	11657906	19207	8	3

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
11657914	19207	58	21	11658024	19207	151	6
11657915	19207	15	6	11658026	19207	126	12
11657916	19207	146	15	11658028	19207	120	
11657917	19207	97	24	11658029	19207	153	2
11657919	19207	25	17	11658030-1	19207	96	11
11657919-1	19207	25	18	11658030-2	19207	96	13
11657923	19207	25	1	11658033	19207	96	9
11657923-1	19207	25	2	11658039	19207	96	6
11657925-1	19207	99	3	11658041	19207	126	10
11657925-2	19207	99	3	11658042	19207	96	10
11657926	19207	154	9	11658043	19207	64	25
11657927	19207	154	3	11658044-1	19207	117	9
11657928	19207	154	2	11658044-2	19207	117	9
11657929	19207	36	4	11658046	19207	121	1
11657934	19207	150	15	11658047	19207	121	11
11657935	19207	112	4	11658048	19207	145	5
11657938-1	19207	104	9	11658052	19207		
11657938-2	19207	104	9	11658054	19207	122	11
11657940	19207	88	30	11658057	19207	122	1
11657941	19207	139	2	11658062	19207		
11657942	19207	140	8	11658063	19207		
11657943	19207	139	5	11658065	19207	131	1
11657943	19207	140	13	11658069	19207	131	3
11657943	19207	151	2	11658071	19207	120	20
11657943-1	19207	151	1	11658071	19207	121	10
11657944	19207	140	13	11658072	19207	118	5
11657946	19207	78	10	11658073	19207	126	
11657959	19207	140	15	11658074	19207	126	
11657962	19207	107	15	11658076	19207	32	31
11657962	19207	132	17	11658078	19207	30	8
11657963	19207			11658081	19207	147	9
11657964	19207	139	1	11658082	19207	147	7
11657967	19207	148	10	11658084	19207		
11657967	19207	150	28	11658086	19207		
11657968	19207	152	2	11658089	19207	26	1
11657968	19207	152	2	11658093	19207	128	32
11657976-2	19207	96	1	11658177	19207	123	1
11657982	19207	14	6	11658185	19207	44	2
11657983-1	19207	97	1	11658186	19207		
11657983-3	19207	154	28	11658187-1	19207		
11657985	19207	87	9	11658187-3	19207		
11657986	19207	59	3	11658191-1	19207	128	14
11657987	19207	59	10	11658191-2	19207	128	14
11657989-1	19207	59	6	11658192-1	19207	128	16
11657989-2	19207	59	7	11658192-2	19207	128	16
11657989-3	19207	59	1	11658194-1	19207	128	17
11657989-4	19207	52	4	11658194-2	19207	128	17
11657989-4	19207	59	6	11658196-1	19207	128	34
11657990-1	19207	43	7	11658199	19207	132	25
11657990-2	19207	43	7	11658201	19207	120	36
11657991	19207	59	8	11658202	19207	128	28
11657993	19207	128	22	11658203	19207	128	7
11657999	19207	120	9	11658204	19207	128	41
11658000	19207	128	21	11658210	19207	128	29
11658003	19207	122	2	11658216	19207	145	8
11658004	19207	96	19	11658222	19207	129	9
11658007	19207	59	4	11658223	19207	128	8
11658008	19207	121	19	11658228	19207	121	2
11658009	19207	126	8	11658228	19207	127	18
11658013	19207	151	7	11658232	19207	117	23
11658021	19207	151	4	11658238	19207	127	7

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
11658240	19207	117	26	11658430	19207	122	14
11658245	19207	127	12	11658437	19207	129	4
11658251	19207	117	11	11658444	19207	128	23
11658260	19207	121	46	11658450-1	19207	130	17
11658266	19207	130	7	11658450-2	19207	130	17
11658269	19207	124	4	11658453-1	19207	126	20
11658271	19207	121	16	11658453-2	19207	126	20
11658272	19207	127	13	11658460	19207	125	1
11658274-1	19207	57	11	11658464	19207	121	18
11658274-2	19207	57	2	11658465-1	19207	122	4
11658278	19207	121	21	11658465-2	19207	122	12
11658289	19207	110	20	11658483-1	19207	130	16
11658295	19207	120	24	11658483-2	19207	130	16
11658298	19207	123	5	11658484	19207	125	8
11658300-1	19207	130	18	11658485	19207	128	24
11658300-2	19207	130	19	11658485-1	19207	130	4
11658306	19207	130	8	11658485-2	19207	130	4
11658307	19207	121	37	11658493	19207	110	7
11658308	19207	123	2	11658494	19207	110	3
11658310	19207	124	5	11658495	19207	110	15
11658313	19207	57	7	11658496	19207	57	3
11658316	19207	117	5	11658501	19207	145	19
11658320	19207	110	8	11658502-1	19207	125	3
11658322-1	19207	128	37	11658502-2	19207	125	3
11658322-2	19207	128	37	11658503-1	19207	125	7
11658323-1	19207	128	3	11658503-2	19207	125	7
11658323-2	19207	128	2	11658509	19207	129	2
11658324	19207	128	33	11658510	19207	120	35
11658330	19207	122	17	11658511	19207	120	30
11658331	19207	120	37	11658512	19207	120	33
11658332-1	19207	128	31	11658513	19207	120	32
11658332-2	19207	128	31	11658515	19207	120	31
11658337	19207			11658517	19207	125	6
11658338	19207	121	17	11658518	19207	129	3
11658339	19207	141	8	11658519	19207	120	40
11658343-1	19207	130	11	11658519	19207	125	4
11658343-2	19207	130	11	11658527	19207	110	19
11658345	19207	120	26	11658530	19207	127	2
11658346	19207	120	16	11658532-1	19207	127	27
11658347	19207	121	41	11658532-2	19207	127	28
11658348	19207	128	30	11658533	19207		
11658354	19207	130	3	11658534	19207	121	47
11658357	19207	120	11	11658535	19207	118	4
11658363-1	19207	128	15	11658536	19207	117	16
11658363-2	19207	128	15	11658539	19207	121	30
11658366	19207	128	38	11658540-1	19207	129	
11658367	19207	128	9	11658540-2	19207	129	
11658368	19207	126	16	11658543	19207	121	52
11658369	19207	126	16	11658546-1	19207	121	14
11658371	19207	117	3	11658546-2	19207	121	14
11658373	19207	131	2	11658548	19207	120	21
11658405	19207	120	14	11658549-1	19207	120	2
11658406	19207	120	38	11658549-2	19207	121	25
11658407	19207	120	7	11658551	19207	121	29
11658408	19207	120	39	11658551	19207	125	9
11658412	19207	57	1	11658554	19207	128	19
11658423	19207	124	8	11658555-1	19207	110	5
11658424	19207	124	8	11658555-2	19207	110	22
11658426-1	19207	130	12	11658557	19207	110	
11658427	19207	123	10	11658558	19207	110	1
11658428	19207	123	12	11658564-1	19207	118	7

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
11658564-2	19207	118	7	11662603	19207	106	11
11658565	19207	110	2	11662604	19207	118	6
11658570-1	19207	129	6	11662605	19207	21	10
11658570-2	19207	129	6	11662606	19207	21	12
11658572	19207	127	3	11662607	19207	21	7
11658573	19207	44	4	11662608	19207	21	8
11658574	19207			11662610	19207	21	11
11658575	19207	121	13	11662611	19207	130	2
11658579	19207	—	—	11662612	19207	120	8
11658580	19207	120	3	11662676-1	19207	96	24
11658581	19207	121	24	11662676-2	19207	96	26
11658584-1	19207	128	27	11662677	19207	96	22
11658584-2	19207	128	18	11662678	19207	96	25
11658584-2	19207	129	11	11662679	19207	43	2
11658585	19207	128	20	11662680	19207	150	1
11658590	19207	124	3	11662681	19207	121	45
11658591-1	19207	117	14	11662682	19207	128	40
11658591-2	19207	117	14	11662683	19207	122	9
11658594	19207	57	10	11662685	19207	130	17
11658598	19207	120	27	11662685	19207	127	15
1165981-1	19207	64	18	11662686	19207	120	44
11662515	19207	87	6	11662686	19207	121	35
11662516	19207	88	5	11662687	19207	77	30
11662521	19207	67	11	11662688	19207	37	6
11662523-2	19207	76	1	11662689	19207	75	4
11662523-2	19207	29	6	11662692	19207	27	7
11662524	19207	98	27	11662700	19207	126	
11662524	19207	99	10	11662701	19207	126	9
11662526	19207	30	11	11662702	19207	126	7
11662527	19207	31	10	11662726	19207	58	11
11662529	19207	73	9	11662737	19207	126	1
11662529	19207	76	9	11662741	19207	41	2
11662548	19207	67	9	11662742	19207	41	4
11662549	19207	78	20	11662744	19207	121	31
11662550	19207	46	1	11662745-1	19207	128	26
11662551	19207	64	27	11662746	19207	118	1
11662552	19207	61	6	11662786	19207	Group 0609	
11662554	19207	34	20	11662792	19207		1
11662555	19207	105	13	11663219	19207		
11662559	19207	67	43	11687401-3	19207	96	20
11662560	19207	64	38	1177	11757	138	15
11662561	19207	117	10	1178	11757	138	14
11662565-1	19207	104	1	1179	11757	138	13
11662565-2	19207	104	1	117959	24617	144	41
11662569	19207	127	29	117959	24617	149	32
11662579	19207	121	53	118730	24617	39	12
11662580	19207	120	18	118730	78385	144	23
11662583	19207	145	23	119956-N		40	17
11662587	19207	58	19	118382	71500		
11662590	19207	63	17	11869	71500		
11662591	19207	62	4	1202	77640	86	22
11662592-4	19207	64	44	120371	24617	58	7
11662593	19207	139	10	120382	24617	58	6
11662594-1	19207	117	8				
11662594-2	19207	117	22				

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
120384	24617	75	30	155348	24617	128	25
120384	24617	36	8	155358	24617	117	17
120394	24617	58	5	156125	24617	120	42
120614	24617	41	7	159920	24617	50	2
120622	24617			15R94-1	29092		
121-134	71500			160-239	19207		
121-414	71500			161790	24617	147	2
121358	24617	54	11	1630	77640	86	16
121743	24617	120	15	164430	24617	51	2
123480	24617	28	5	1657799	19207	58	16
123852	24617	32	25	167214	24617	124	7
125912	24617	73	13	1675	81221	133	7
126428	19207	90	12	1676	81221	133	4
127753		153	10	1677	81221	133	3
127754	24617	58	10	17-1-1725-76	19207		
127951	24617	30	17	1701026	24617	76	5
127951	24617	7	8	170677	78385	149	2
1288	11757	138	16	171	11757	138	8
131885	24617	102	11	172044	24617	118	2
134530	24617	144	13	172044	24617	121	51
134566	24617	49	6	173203	24617		
137204	24617	87	5	174935	24617	152	29
137397	24617	12	24	174935	24617	152	29
137405	24617	25	23	17627-17	72447	74	30
137405	24617	25	5	178364	24617	144	27
137406	24617	25	4	178551	24617	58	3
137406	24617	29	22	179839	24617	58	4
137406	24617			179890	24617	77	15
137412	24617	82	11	186493	24617	102	15
137420	24617	38	14	186493	24617	130	9
137421	24617	71	7	187151	24617	12	12
137421	24617	38	10	187527	19207	111	13
137422	24617	29	21	187527	24617	56	13
138479	24617	50	3	187527	24617	28	20
138526	24617	144	9	1875A	11757	138	17
142427	24617	25	3	187745	24617	141	14
142427	24617	25	13	187993	24617	105	8
142432	24617	71	16	187993	24617		
142432	24617	73	12	187993	24617	108	1
142432	24617	76	8	187993	24617	55	10
142432	24617	25	22	187993	24617	67	27
142432	24617	25	19	187993	24617	18	10
143343	24617	8	7	187993	24617	23	40
143482	24617	27	16	188479	24617	N	1
144214	24617	86	25	188749	24617	130	14
145183	24617	141	22	188749	24617	113	7
145474	24617	81	14	188749	24617	102	5
145525	24617	58	8	188749	24617	56	5
145526	24617			189694	24617	36	2
147485		65	3	18R117A	24614	143	7
155113	24617	123	12	191347	29092	97	12
155198	24617	142	11	191681	24617	12	21
155348	24617	117	20	191985	24617	57	9
				192050	24617	106	20
				192069	24617	152	22
					24617	148	18

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
192088	24617			30271	72447	77	24
192108	24617			30272-1	72447	74	14
19382	77640	86	15	30272-1	72447	77	17
19685798	19207	141		30272-2	72447	74	14
2-16-263	72447	72	12	30272-2	72447	77	17
2-4-3801X	72447	74	3	30272-3	72447	74	14
2-4-3921X	72447	77	22	30272-3	72447	77	17
2-5-368X	72447	72	4	30272-4	72447	74	14
2-5-528	72447	72	4	30272-4	72447	77	17
2-6-948X	72447	72	6	30273	72447	74	5
2-7-29	72447	72	5	30273	72447	77	20
2-938X	72447	72	6	30275	72447	74	2
203-1696	71500			30275	72447	77	23
203-38	71500			30276-1	95019	74	20
2109-14-01	78189			30276-1	95019	77	3
213513	24617	116	4	30276-2	95019	74	20
213513	24617	140	11	30276-2	95019	77	3
214B33K01	78940	26	3	30276-3	95019	74	20
219434	24617	115	10	30276-3	95019	77	3
22-W-1630	81349	7	23	30276-4	95019	74	20
22-W-1630	81349	78	1	30276-4	95019	77	3
22R793	81349			30291-1	95019	74	15
232080	58464	59	5	30291-2	95019	74	15
250-035A	8302	135	32	30291-3	95019	74	15
25007X	72447	77	46	30784	72477	77	5
250A32	78940	26	8	30786	72477	77	41
25164	14351	114	7	30788	95019	77	8
25724X	72447	74	23	30790	95019	77	10
25730X	72447	75	17	30797-1	72447	77	32
25731X	72447	75	17	30797-2	72447	77	32
25735X	72447	74	8	30797-3	72447	77	32
25R385A	29092			308132	58464	41	3
26258X	72447	74	31	30842	95019	77	11
26399X	72447	77	6	30864	72447	74	11
26400X	72447	77	4	30864	72447	75	8
27-W-918	80244	111	2	30874	72447	75	11
27-W-921	80244	111	2	30875	72447	75	18
271113	24617	98	14	30891	95019	77	9
271464	24617	119	5	30961-1	72447	77	34
272474	24617			30961-2	72447	77	34
272475	24617	103	1	30982	72447	74	13
272475	24617	112	3	30999	72447	75	7
272475	24617	31	26	3100	77640	86	24
272712	24617	32	26	31002	72447	75	14
279453	58464			31005-1	95019		
27R229	29092			31005-2	95019		
27W918	81349			31005-3	95019		
28388	81221	133	6	312-065A	8302	135	21
2937	11757	138	11	32542-1	72447	74	9
3-14-39	72447	72	11	32682-4	72447	74	29
3-15-33	72447	72	13	33662	72447	75	24
3020	77640	86	7	33663	72447	75	22
30233-1	72447	75	23	33772	77640	86	21
30256	72447	74	41	33940	77640	86	2
30256	72447	77	16	33R418-1	29092		
30258	72447	74	38	3405	77640	86	5
30263	95019	74	37	34055	72447	77	48
30264	95019	77	7	34367	95019	74	35
30266	72447	74	39	34394	95019	74	33
		77	43	34615	72447	77	21
30271	72447	74	1	34643	72447	74	18

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
34644	72447	74	24	432682			
34648	72447	75	10	432714	24617	58	14
34687	72447	77	42	443882	24617	34	
34729	72447	74	32	443976	24617		
34730	95019	74	34	444000	24617		
34822	72447	77	45	444038	24617	6	8
351	11757	138	7	444120	24617	144	2
35104-1	72447	77	40	444588	24617	7	16
35185	72447	75	37	444697	24617	75	9
35243	72447	75	21	445638	24617	15	22
35261	72447	75	12	446609	19207	98	24
352A	11757	138	9	449627	24617	60	3
35725	72447	74	4	450539	19207	46	2
35DC07	77640	86	20	451230	24617	152	34
35DC08	77640	86	20	451246	24617	61	4
35DC09	77640	86	20	451339	24617	150	11
35DF23	77640	86	3	451339	24617	75	29
35JC14	77640	86	12	451673	24617	87	4
35R852A1	29092			451953	24617		
3602	77640	86	9	451976	24617	42	5
364	11757	138	5	453046	24617	6	7
365	11757	138	31	454341		104	10
367	11757	138	23	454542	24617	141	21
36R169	29092			454718	24617	98	3
375-05BA	8302	135	39	454732	24617	144	10
378390	11757	137	3	454735	24617	40	15
378430-10	11757	138	1	454787	24617	149	18
380084	58464	110	4	454789	24617	40	18
380804	58464	41	5	455167	24617	42	4
382-S	60038	77	1	455229	24617	121	4
400014	77640			455230	24617	144	14
400079	77640			455344	24617	144	31
400079A1	77640	86	18	469	24617	112	7
400084	77640	86	23	475005	11757	138	28
40083	77640	86	19	484114	78385	149	20
402296	77640	86	10	484153	78385	144	42
402296	77640	86	11	487274	78385	144	24
418123	57733	40	1	487283	78385	149	63
420454	24617	54	17	488163	78385	149	36
420939	24617	121	55	488164	78385	149	35
423351	24617	74	29	488755	78385	149	34
423544	24617	102	14	489406	78385	149	43
423560	24617	49	9	489414	78385	149	21
423561	24617	88	13	489426	78385	149	5
423562	24617	49	3	4DF03	78385	149	6
423564	24617	88	12	5-266X	77640	86	6
423569	24617	110	17	500007-12	72477	72	7
423569	24617	45	4	500357-13	72447	75	16
425323	24617	109	11	500365-26	72447	75	36
425338	24617			500365-26	72447	74	26
425589	24617	117	25	500412-12	72447	77	49
425589	24617	121	22	500698-21	72447	75	35
425594	24617	122	16	501235	95019	74	36
426310	24617	136	7	503262	19207	85	6
428220	19207	134	9	519637	24617	114	8
42C15120-205	10001	92	3	5248952	19207	86	1
431953	24617	109	10	5250608	24617	21	4
432449	24617	97	19	5250614	19207	65	10
432449	24617	132	7	5250642	19207	62	7
43266	24617	92	16	5263926	19207	65	15
432666	24617	29	13	528008	19207	69	7
					19207	78	15

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
5294507	19207	49	2	5704433	19207		
5307299	19207	72	3	5704434	72447	77	12
5325989	19207		Group 0613	5704436	19207	13	9
534004	19207	121	5	5704437	19207	9	
5381088	19207	40	19	5704438	19207	13	
5383899	19207	154	19	5704439	19207		
541429	19207	14	5	5704440	19207	13	9
550	11757	138	6	5704441	19207		
550356	72447	74	6	5704442	19207		
550358	72447	77	13	572889	24617	144	30
550359	72447	74	7	572999	19207		
550359	72447	77	18	573007	19207		
550360	72447	74	17	573141	19207	51	4
550361	72447	74	16	585852			
550363	72447	74	22	593549	24617	145	3
550399	72447	77	19	593549	24617	150	27
550400	72447	77	14	594436	24617	127	16
550420	72447	75	13	596453	00000	113	9
550459	72447	75	25	5DF75	77640	86	4
550829	72447	75	26	5JM49	77640	86	17
556824	19207	92	8	5R476-1	29092		
559	11757	138	2	61086	78385	149	3
560	11757	138	24	6184279	19207	61	1
5601318-3	19207	128	11	63R787	29092		
5647	11757	138	12	64459	78385	149	4
5704033	19207		Group 0100	6453F	78977	52	3
5704043	19207	75	15	6566675	19207	114	3
5704060	19207	13		6566675	19207	121	43
5704395	19207			656675	65909		
5704396	19207			664228	24617	49	7
5704397	19207			6702576	78385	149	23
5704399	19207	75		68313	58464	59	2
5704400	19207	75		7000997	19207	142	19
5704401	19207			7000997	19207	146	11
5704404	19207			700138	78385	149	8
5704406	19207	25	9	700245	78385	149	7
5704406	19207			700793	19207	64	31
5704407	19207			7008259	19207	142	23
5704408	19207	32		700860	78385	149	17
5704409	19207	7		7012171	19207	55	5
5704410	19207	29	1	7012172	19207	55	3
5704412	19207			701314	78385	149	27
5704413	19207			7017199-2	19207	134	15
5704414	19207			701761	78385	149	33
5704415	19207	72	7	7017829	19207	142	7
5704416	19207			7017830-1	19207	142	15
5704417	19207			702556	78385	149	59
5704418	19207			702557	78385	149	58
5704420	19207	81		702566	78385	149	52
5704421	19207	80	17	702607	78385	149	49
5704422	19207	74		702612	78385	149	48
5704423	19207	80	9	702853	78385	149	16
5704424	19207			702884	78385	149	53
5704425	19207			703020		75	3
5704426	19207	34	9	703100	24617	69	18
5704427	19207			703100	24617	67	29
5704428	19207			703100	24617	68	12
5704429	19207			703349	78385	149	56
5704430	19207	18		7034597	19207	53	4
5704431	19207			7034597-1	19207		
5704432	19207			7034601	19207	118	10

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
7034617	19207	118	13	7343052	19207	95	3
7034618	19207	118	11	7346933	19207	153	14
703495	78385	149	46	734859	19207	67	45
703497	78385	149	47	7349062	19207	78	19
703498	78385	149	44	7349219	19207	78	7
703500	78385	149	28	7350355	19207	120	12
703551	78385	149	24	7351062	19207	67	19
7044253	19207	92	13	7351125	19207	67	42
7044862	19207	127	14	7351134	19207	67	37
7044900	19207	31	30	7351254	19207	78	25
7050005	19207	42	9	7351258	19207	78	2
705053	19207	74	21	7351549	19207	51	1
705053	19207	77	2	7353816	19207	51	5
7056637	19207		Group 0612	7355390	19207	92	11
7056675	19207		Group 0612	7368523	19207	40	21
7056723	19207		Group 0612	7369880-1	19207	33	9
705785		77	27	7370384	19207	116	3
7061092-1	19207	116	22	7370394-1	19207	140	5
7061093	19207	116	20	7371193	19207	31	25
7061094-1	19207	116	16	7371311	19207	58	2
7066144	19207	12	19	7372448	19207	61	8
7066424	19207	98	23	7372590	19207	33	14
7071880-2	19207	134	17	7372790-1	19207	116	19
7075609	19207	117	21	7372790-2	19207	116	21
7091753	19207	68	3	7372834	19207		
7091753	19207	69	3	7373276	19207	119	
7091754	19207	67	21	7373277	19207	119	
712412	19207	63	12	7373289	19207	118	8
713097		77	28	7373290	19207	118	8
718768-22	78385	149	57	7373341	19207		
719	11757	138	30	7373725	19207	78	11
719675	78385	149	31	7374880	19207	39	2
720565-1	78385	149	25	7374883	19207	39	1
7207	11757	138	18	7374969	19207	61	9
7320691	19207	48	6	7374973	19207	65	6
7320711	19207	49	12	7375036	19207		Group 0306
7322788	19207	116	10	7375117	19207	23	21
7325399	19207	102	8	7375124	19207	25	27
7336451	19207	109	9	7375124-1	19207	76	4
7342496-1	19207	69	22	7375131	19207	64	20
7342496-1	19207	67	30	7375146	19207	53	5
7342496-1	19207	68	6	7375312	19207	101	2
7342496-2	19207	69	23	7375358	19207	102	12
7342496-2	19207	67	31	7377106	19207	21	9
7342496-2	19207	68	7	7387853	19207	121	8
7342496-3	19207	69	24	7390043	19207	145	17
7342496-3	19207	67	32	7390197	19207	144	4
7342496-3	19207	68	8	7390369	19207	145	12
7342496-4	19207	69	25	7390787	19207	145	14
7342496-4	19207	67	33	7397994-1	19207	116	1
7342496-4	19207	68	9	7397995-1	19207	116	6
7342499	19207	69	5	7397996-2	19207	116	2
7342500	19207	67	34	7397997-1	19207	116	5
7342501	19207	68	5	739A	11757	138	29
7342505	19207	67	24	7404151	19207	107	17
7342649	19207	67	26	7404151	19207	132	19
7342723	19207	67	17	7410324	19207	144	16
7342858	19207	67	46	7410715	19207	118	3
7342860	19207	69	17	7410715	19207	120	10
7342864	19207	67	16	7410715	19207	121	50
7343032	19207	94	3	7410836	19207	152	27

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
7411824	19207	67	12	7699767-1	19207	134	16
7411871	19207	78	14				
7411872	19207	78	13	7700170	19207	144	5
7411885	19207	67	25	7700170	19207	149	61
741205-2	19207	67	8	7700237	19207	150	13
7412051-1	19207	67	8	7700242	19207	145	16
7412534	19207	69	15	7700243	19207	145	15
7412534	19207	67	3	7703707	19207	21	13
7412534	19207	68	17	7717031	19207	134	18
7412583	19207	147	8	7719236	19207	90	2
7413564	19207	144	32	7728126	19207	135	
7416464	19207	N	1	7731428	19207	60	2
7416552	19207	144	43	7743652	19207	69	14
7416682	19207	142	18	7743652	19207	68	16
744	4768			7743652	19207	67	2
747	11757	138	21	7744472	19207	11	4
751	11757	138	4	7745282	19207	78	24
751A	11757	138	3	7745632	19207	133	1
7520336	19207	144	1	7748500	19207	119	3
7520340	19207	144	15	7748506	19207	119	6
7520346	19207	144	33	7748506	19207	119	6
7520348	19207	144	3	780A	11757	138	27
7520358	19207	144	6	785	11757	138	19
7520358	19207	149	60	791084	19207	150	18
7520366	19207	144	20	7951064	19207	148	7
7520372	19207	144	11	7951122-1	19207	145	9
7520373	19207	144	12	7951221	19207	141	6
7524078	19207	150	6	7951221	19207	144	25
7524315	19207	92	7	7951286	19207	149	45
7524316	19207	92	6	7951725	19207	141	13
7525936	19207	50	7	7951726	19207	141	3
7525940	19207	49	10	7951727	19207	141	5
7525940	19207	50	6	7951730	19207	141	17
7526020	19207	47	6	7951731	19207	141	2
7526030	19207	45	8	7951732	19207	141	11
7526590	19207	40	8	7951752	19207	141	12
7526591	19207	40	7	7951753	19207	141	15
7526592	19207	40	24	7951754	19207	141	18
7526593	19207	40	2	7951827	19207	145	27
7526594	19207	40	23	7951958	19207	144	40
7526726	19207			7951959	19207	144	39
753005	19207			7951960	19207	144	34
7531444	19207	118	9	7951964	19207	144	7
7531445	19207	118	12	7954720	19207	154	6
753197-1	19207	106	21	7954919	19207	126	11
7533778	19207	40	4	7965959	19207	33	1
7537537	19207	145	26	7966348	19207	31	16
7539296	19207	144	44	7966692	19207	35	5
7539310	19207	81	12	79660	19207	149	41
7539392	19207	99	9	7974395	19207	141	4
7540419	19207	121	3	7974659	19207		
7540419	19207	127	17	7975607	1907	117	19
755	11757	138	33	7979485	19207	88	9
75R37-1	29092			797APL	11757	138	16
768	11757	138	22	7980932	19207	68	1
769479	19207	64	22	7980932	19207	69	1
7697511	19207	107	4	7980933	19207	67	15
7697514	19207	132	4	7980934	19207	67	20
7697570	19207	64	40	7980935	19207	67	36
7697591	19207	106	3	7986167	19207	141	19
7697867	19207	31	4	7994043	19207	67	22
				7994044	19207	67	18

SECTION IV REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
7994045	19207	67	13	8338564	19207		
7994329	19207	69	4	8338564	19207		
7996483	19207	99	4	8338564	19207		
7998483	19207	113	6	8338566	19207		
7998561	19207	134	6	8338567	19207		
800802	19207	101	1	8359533	19207	144	17
8328272	19207	120	6	8359533	19207	149	22
8328272	19207	121	42	8359534	19207	144	8
8328282	19207	151	9	8359534	19207	149	29
8328392	19207	88	24	8359613	19207		
8328405	19207	136	4	8359617	19207		
8328424	19207	106	18	8359683	19207	144	21
8328424	19207	115	1	8359743	19207	144	22
8328424	19207			8359746	19207	126	4
8328424	19207			8359774	19207	144	
8328424	19207	56	14	8359774	96906	150	9
8328424	19207	58	15	8359778	19207		
8328424	19207	42	10	8359779	19207	144	29
8328424	19207	142	8	8359782	19207	144	26
8328424	19207			8359783	19207	144	19
8328456	19207	34	19	8359787	19207	144	18
8328456	19207			8359955	19207	106	23
8328456	19207			8376246-1	19207	63	4
8328456	19207			8376499	19207	40	14
8328462	19207	36	5	8376500	19207	40	10
8328462	19207	29	11	8376501	19207	40	3
8328462	19207	12	14	8380196	19207	92	14
8328462	19207			8380199	19207	92	
8328462	19207			8393193-4	19207	56	3
8328462	19207			8393193-5	19207	56	7
8328464	19207	109	12	8396496	19207	120	29
8328465	19207	109	8	8402359	19207	43	1
8328467	19207	154	16	8424501	19207	154	32
8328482	19207	88	18	8438462	19207	153	1
8328482	19207	30	14	8438578	19207	90	3
8328482	19207	31	5	8438579	19207	90	19
8328482	19207	146	18	85R2688	29092		
8328482	19207			8673395-1	19207	95	18
8328485	19207	114	1	8673395-2	19207	94	21
8329624	19207	29	14	8679549	19207	105	10
8329654	19207	102	10	8683543	19207	42	8
8329680	19207	4	10	8686901-1	19207	31	6
8329781	19207	30	12	8686901-2	19207	146	12
8329873	19207	64	45	8686901-3	19207	146	9
8332060	19207	34	18	8686901-3	19207	150	25
8332127	19207	50	1	8686901-4	19207	146	7
8336138	19207	12	13	8687066	19207	70	22
8338561	19207			8687086	19207	78	9
8338561	19207			8690467	19207	111	4
8338561	19207			8690467	19207	111	12
8338561	19207			8690470	19207	111	8
8338561	19207			8690473	19207	111	5
8338561	19207			8690474	19207	111	11
8338562	19207			8690475	19207	111	10
8338562	19207			8690476	19207	111	9
8338562	19207			8690528	19207	111	6
8338562	19207			8690544	19207	140	16
8338562	19207			8694464	19207	48	4
8338562	19207			8701565	19207	140	3
8338564	19207			8704441	19207	32	23
8338564	19207			8707837	19207		

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
8710565	19207	140	17	944572	65909	77	
8711056	19207	145	7	944658	96906		
8711056	19207	150	5	945718	65909	37	2
8712354	19207	58	16	945727	65909	72	14
8712400	19207	39	3	945731	65909	75	6
8712401	19207	39	4	945749	65909	84	9
8712408	19207	112	2	945755	65909	80	18
8712409	19207	112	8	99-92475-100	63477	80	4
8712409	19207	127	22	990148	65909	74	
8712411	19207	112	1	990298	65909		
8712411	19207	127	9	990300	65909	26	6
8721408	19207	127	8	992343	65909	33	15
8723935-24	19207	150	2	A241	4768		
8723965-20	19207	150	2	A242	4768		
8724383	19207	116	11	A3750	8302	135	16
8724494	19207			A5000	8302	135	51
8724494	19207			A6041	4768		
8739189	19207	119	3	A6044	4768		
8741462	19207	50	5	A6484	25472		
8741645	19207	48	1	A650R	81221	133	5
8741646	19207	48	5	ANS-3208			Group 0803
8742136-1	19207	120	4	AS500	8302	135	59
8742136-1	19207	121	23	B118A	8302	135	54
8742688	19207	142	21	B130	4768		
8742689	19207	145	25	B133	4768		
8747987	19207	49	11	B250J	8302	135	18
8762055	19207	120	41	B3538	4768		
8762055-1	19207	125	5	B3539	4768		
8763474-1	19207	56	17	B6040	4768		
8764887	19207	105	9	B6064	4768		
8765721	19207	92	12	B6065	4768		
8828272	19207	130	1	B6067	4768		
8R1329	29092			B6069	4768		
8R518	29092			B6096	4768		
8R534	29092			B6097	4768		
8R923	29092			B6098	4768		
8R956	29092			B6099	4768		
90-44469-200	63477	81	15	B693	4768		
901507	65909			B695	4768		
901778	65909			C6039	4768		
902419-1	72447	74	12	C6077	4768		
902419-2	72447	74	43	C7500	8302	135	36
908002	65909			E118HCS	8302	135	29
908201	65909			F63340	39125		
908203	65909			FC-19562	63477	80	3
908652	65909			FC10699	63477	80	10
919328	72447	74	10	FC10901	63477	81	5
919619	65909	74	20	FC1219	63477		
91A14602	23040	58	9	FC15190	63477	80	15
9409098	24617	31	22	FC17814	63477	80	19
9409100	24617	48	2	FC18691	63477	80	7
9409106	24617	102	1	FC18704	63477	80	13
9409106	24617	29	18	FC18707	63477	80	14
9409107	24617	54	24	FC18708	63477	80	8
9409110	24617	47	2	FC18732	63477	80	6
9409110	24617	45	2	FC19561	63477	80	16
9411483	24617	32	29	FC23597	63477	81	6
9415783	24617			FC2937	63477		
9416017	24617	32	4	FC32604	63477	81	4
944509	65909	29	24	FC37123	63477	81	7
944509-1	65909			FC46370	63477	81	9

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
FD18722-001	63477	80	11				
FD18731	63477	80	11	LU4-148	8302	135	14
FD2108	63477	81	8	LU4-149A	8302	135	9
FD59288	63477	81	10	LU4-184B	8302	135	49
FD59297	63477			M13486-1-5	8288		
FD59299	63477			M13486-1-5	8288		
FE59269	63477	80	5	M13486-1-5	81348		
FE59400	63477	80	5	M13486-1-5	81349		
G486216	78385	149	62	M13486-1-5	81349		
G489359	78385	144	35	M13486-1-5	81349		
G489442	78385	149	10	M13486-1-5	81349		
G702531	78385	149	55	M13486-1-5	81349		
G702542	78385	149	9	M13486-1-5	81349		
G702561	78385	149	42	M13486-1-5	81349		
G702573	78385	149	15	M13486-1-7	81349		
G702581	78385	149	37	M2-141	8302	135	Group 0613 25
G702591	78385	149	38	MAK-61A	19728		
G702592	78385	149	40	MCL-127	19728		
G702593	78385	149	39	MCL-129A	19728		
G702647	78385	149	1	MCL-132A	19728		
G703499	78385	149	30	MDL-1063CS	19728		
G703503	78385	149	26	MDL-50C	19728		
G703504	78385	149	54	MIL-C-13486	81349		
G703505	78385	149	13	MIL-C-13486-1-5	81349	43	5
G703506	78385	149	51	MIL-F-21840	81349		
G703508	78385	149	50	MIL-F-21840	81349		
HM-803110	60038	74	40	MIL-G-3787	81349	100	1
IAH15A	19728	39	7	MIL-G-3787	81349		
IAT1117	19728	39	9	MIL-H-13444	81349		
IAT2105S	19728	39	6	MIL-H-13444	81349		
IAT3076DS	19728	39	17	MIL-H-62028	81349		
IAU103	19728	39	8	MIL-H-62028	81349		
IAU1066	19728	39		MIL-H-62028	81349		
IBF9	19728	39	5	MIL-H-13444	81394		
IGC2168LS	19728	39	10	MIL-R-3065	80244		
IGS2224LB	19728	39	15	MIL-T-3520	81349		
IGS228S	19728	39	11	MILR24243/1A602	81349	130	5
J2-134E	8302	135	61	MILR24243/1A604	81349	130	13
K400X	11757			MILR24243/1A604	81349	121	48
LU1490	8302	135	11	MS15001-1	96906	75	32
LU284A	8302	135	50	MS15001-1	96906	87	8
LU4-131-0	8302	135	47	MS15001-1	96906	92	4
LU4-131S	8302	135	46	MS15001-1	96906	72	15
LU4-133-0	8302	135	27	MS15001-1	96906	133	9
LU4-133A	8302	135	26	MS15003-1	96906	95	15
LU4-134-0	8302	135	5	MS15003-1	96906	133	8
LU4-134W	8302	135	44	MS15003-6	96906	95	19
LU4-135-0	8302	135	20	MS151943-36	96906	133	27
LU4-135A	8302	135	6	MS15720-1	96906	23	28
LU4-135B	8302	135	24	MS15770-1251	96906	45	5
LU4-136	8302	135	62	MS15770-1251	96906	47	3
LU4-143	8302	135	40	MS15770-125	96906	48	3
LU4-143A	8302	135	43	MS15795-507	96906	53	3
LU4-143B	8302	135	34	MS15795-507	96906		
LU4-143C	8302	135	30	MS15795-813	96906	106	22
LU4-143H	8302	135	35	MS15795-813	96906	108	2
LU4-143H	8302	135	42	MS15953-9	96906		
LU4-143J	8302	135	28	MS16535-228	96906	147	4
LU4-143K	8302	135	41	MS16535-300	96906	119	4
LU4-144-0	8302	135	1	MS16556-49	96906		
LU4-144G	8302	135	2	MS16562-49	96906	117	6
				MS16624-1050	96906	92	5

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
MS16997-101	96906	88	16	MS24544-2	96906	40	13
MS16997-80	96906	9	26	MS24615-4	96906	117	7
MS16997-81	96906	9	14	MS24617-10	96906	152	3
MS17100-1	96906	154	1	MS24617-10	96906	152	3
MS17131-22	96906	23	10	MS24617-21	96906	43	3
MS171689	96906	133	11	MS24617-21	96906	44	1
MS18005-4530	96906	46	3	MS24617-21	96906	128	39
MS18005-4530	96906	52	2	MS24617-21	96906		
MS18005-4530	96906			MS24617-21	96906	126	14
MS19059-90	96906	67	41	MS24617-31	96906	97	9
MS19061-11	96906	63	19	MS24617-31	96906	98	22
MS19061-11	96906	65	16	MS24617-31	96906	102	6
MS19065-31	96906	64	11	MS24617-31	96906	41	6
MS19065-37	96906	64	48	MS24617-31	96906	129	1
MS19081-86	96906	69	21	MS24617-31	96906	142	10
MS19081-86	96906	68	4	MS24617-31	96906	121	26
MS20613-10P14	96906			MS24617-31	96906	124	1
MS20613-12P14	96906			MS24617-32	96906	129	5
MS20613-12P16	96906			MS24617-34	96906	120	1
MS20913-45	96906	66	18	MS24617-34	96906	120	1
MS20913-18	96906	65	7	MS24617-35	96906	125	11
MS20955-F32	96906	22	6	MS24617-42	96906	130	10
MS21044-N4	96906	143	3	MS24617-42	96906	142	17
MS21045-C6	96906	70	24	MS24617-42	96906	145	13
MS21045-C6	96906	19	1	MS24617-42	19207	120	25
MS21045-C7	96906	94	1	MS24617-42	96906	122	13
MS21045-C7	96906	95	1	MS24617-42	96906	123	3
MS21045-C7	96906	107	6	MS24617-42	96906	124	6
MS21045-C7	96906	32	26	MS24617-42	96906	125	2
MS21045-C7	96906	32	26	MS24617-42	96906	127	1
MS21045-C7	96906	134	14	MS24617-46	96906	121	27
MS21045-C7	96906	134	23	MS24621-18	96906	70	9
MS21045-C7	96906	4	9	MS24621-18	96906	23	27
MS21045C6	96906	152	5	MS24621-29	96906	54	3
MS21045C6	96906	152	5	MS24621-31	96906	97	26
MS21045C7	96906	132	6	MS24621-42	96906	45	7
MS21045C7	96906	152	12	MS24621-42	96906	47	5
MS21045C7	96906	152	12	MS24621-42	96906	50	4
MS21094-6010	96906	23	2	MS24627-22	96906	100	6
				MS24627-31	96906	100	9
MS21094-6	96906	83	2	MS24627-50	96906	121	34
MS21306-1	96906	132	9	MS24627-52	96906	123	11
MS21318-14	96906	90	20	MS24627-66	96906	121	7
MS21318-49	96906	92	10	MS24629-24	96906	120	18
MS21322-6	96906	33	5	MS24629-33	96906	100	8
MS21333-33	96906			MS24629-35	96906	104	2
MS21333-33	96906	146	17	MS24629-46	96906	143	7
MS21333-34	96906			MS24629-46	96906	127	4
MS21333-34	96906	82	5	MS24629-46	96906	127	26
MS21333-34	96906			MS24629-48	96906	117	15
MS21333-35	96906	29	12	MS24629-50	96906	117	1
MS21333-36	96906	29	12	MS24629-50	96906	121	54
MS21333-36	96906	29	17	MS24629-51	96906	123	4
MS21333-40	96906			MS24629-59	96906	129	8
MS21333-45	96906	29	15	MS24629-59	96906	127	23
MS21333-46	96906		Group 0306	MS24629-61	96906	121	6
MS24532-2	96906	40	9	MS24649-33	96906	126	2
MS24637-1	96906	53	7	MS24665	96906	113	11
MS24538	96906	53	1	MS24665-285	96906	121	20
MS24538	96906	40	16	MS24665-283	96906	110	21
MS24538	96906	40	6	MS24665-283	96906	93	1

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
MS24665-283	96906	23	18	MS27183-12	96906	25	8
MS24665-283	96906	23	23	MS27183-12	96906	N	1
MS24665-283	96906	31	18	MS27183-12	96906	32	2
MS24665-283	96906	32	5	MS27183-12	96906	133	24
MS24665-283	96906	133	25	MS27183-12	96906	140	9
MS24665-283	96906	79	17	MS27183-12	96906	5	19
MS24665-285	96906	18	6	MS27183-12	96906	9	7
MS24665-287	96906	22	4	MS27183-12	96906	14	16
MS24665-353	96906	75	20	MS27183-12	96906	145	11
MS24665-353	96906	78	6	MS27183-12	96906		
MS24665-355	96906	69	13	MS27183-12	96906	152	15
MS24665-355	96906	67	1	MS27183-12	96906	152	15
MS24665-355	96906	68	15	MS27183-12	96906	122	15
MS24665-357	96906	33	11	MS27183-13	96906	105	7
MS24665-362	96906			MS27183-13	96906	105	20
MS24665-362	96906			MS27183-13	96906	106	8
MS24665-383	96906	70	2	MS27183-13	96906	130	15
MS24665-628	96906	92	9	MS27183-13	96906	152	7
MS24665-640	96906	92	1	MS27183-13	96906	152	7
MS24692-160	96906	64	32	MS27183-14	96906	93	7
MS250-07	8302	135	45	MS27183-14	96906	70	3
MS25036-108	96906			MS27183-14	96906		
MS25036-108	96906			MS27183-14	96906	23	19
MS25036-108	96906			MS27183-14	96906	24	4
MS25036-108	96906			MS27183-14	96906	31	7
MS25036-108	96906			MS27183-14	96906	79	15
MS25036-108	96906			MS27183-14	96906	4	6
MS25036-108	96906	43	4	MS27183-14	96906	6	6
MS25036-108	96906	43	4	MS27183-14	96906	153	5
MS25036-112	96906			MS27183-15	96906	110	13
MS25036-114	96906			MS27183-15	96906	114	2
MS25038-108	96906			MS27183-15	96906	33	10
MS25231-31	96906	42	3	MS27183-15	96906	30	15
MS27147	96906			MS27183-15	96906	5	4
MS27148-2	96906			MS27183-16	96906	90	9
MS27148-2	96906			MS27183-16	96906	91	6
MS27183-1	96906	126	18	MS27183-16	96906	32	8
MS27183-10	96906	103	3	MS27183-17	96906	94	22
MS27183-10	96906	73	6	MS27183-17	96906	95	25
MS27183-10	96906	15	28	MS27183-17	96906	107	5
MS27183-10	96906	139	9	MS27183-17	19207	132	5
MS27183-10	96906	143	4	MS27183-17	96906	78	18
MS27183-10	96906			MS27183-18	96906	90	16
MS27183-10	96906			MS27183-18	96906	95	11
MS27183-10	96906	154	15	MS27183-18	96906	66	2
MS27183-10	96906	122	5	MS27183-18	96906	134	2
MS27183-10	96906	126	6	MS27183-19	96906		
MS27183-11	96906	102	16	MS27183-19	96906	5	21
MS27183-11	96906	110	16	MS27183-2	96906	18	13
MS27183-11	96906	121	28	MS27183-21	96906	94	2
MS27183-11	96906	125	10	MS27183-21	96906	95	2
MS27183-12	96906	97	17	MS27183-21	96906		
MS27183-12	96906	99	5	MS27183-21	96906	134	20
MS27183-12	96906	113	5	MS27183-211	96906	79	9
MS27183-12	96906	116	9	MS27183-23	96906	95	11
MS27183-12	96906	38	13	MS27183-23	96906	95	11
MS27183-12	96906	34	5	MS27183-23	96906	95	13
MS27183-12	96906	35	3	MS27183-23	96906	95	13
MS27183-12	96906	15	9	MS27183-42	96906	102	13
MS27183-12	96906	15	9	MS27183-42	96906	115	13
MS27183-12	96906	18	9	MS27183-42	96906		

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
MS27183-5	96906	54	18	MS35224-80	96906	127	11
MS27183-7	96906	54	4	MS35225-48	96906	141	20
MS21783-77	96906	87	3	MS35268-80		113	7
MS27183-9	96906			MS35297-10	96906	127	25
MS27183-9	96906	120	34	MS35303-85	96906	35	16
MS27980-1B	96906	139	11	MS35333-23	96906	141	10
MS27980-6B	96906	139	12	MS35333-37	96906	122	8
MS28775-111	96906	64	15	MS35333-39	96906	142	2
MS28775-116	96906	104	6	MS35333-39	96906	153	13
MS35000-1	96906	55	4	MS35333-42	96906	11	5
MS35000-3	96906	55	4	MS35335-31	96906		
MS35058-2	96906	146	14	MS35335-31	96906	126	15
MS35058-22	96906	44	3	MS35335-32	96906	117	2
MS35058-22	96906	141	7	MS35335-33	96906	97	21
MS35059-31	96906	141	16	MS35335-33	96906	54	21
MS35140-5	96906	142	9	MS35335-33	96906	139	8
MS35190-271	96906	106	4	MS35335-33	96906	152	25
MS35190-287	96906	145	18	MS35335-33	96906	152	25
MS35190-289	96906	101	3	MS35335-33	96906	127	10
MS35190-320	96906	70	18	MS35335-34	96906	99	6
MS35191-272	96906	31	12	MS35335-34		55	8
MS35206-226	96906	152	37	MS35335-35	96906	62	8
MS35206-226	96906	152	37	MS35335-35	96906	64	34
MS35206-231	96906	122	10	MS35335-35	96906	62	3
MS35206-241	96906	31	1	MS35335-35	96906	131	5
MS35206-241	96906	128	36	MS35335-36	96906	77	37
MS35206-242	96906	145	29	MS35335-36	96906	23	14
MS35206-242	96906	126	17	MS35335-36	96906	84	13
MS35206-245	96906	126	19	MS35335-40	96906	154	24
MS35206-247	96906	53	2	MS35335-42	96906	124	2
MS35206-247	96906			MS35337-45	96906	91	10
MS35206-260	96906			MS35338-38		40	11
MS35206-261	96906	142	22	MS35338-42	96906	128	34
MS35206-263	96906			MS35338-42	96906	128	35
MS35206-263	96906	41	1	MS35338-43	96906	41	9
MS35206-264	96906	115	12	MS35338-43	96906	128	13
MS35206-264	96906			MS35338-43	96906	123	8
MS35206-264	96906	153	15	MS35338-44	96906	97	11
MS35206-279	96906	151	10	MS35338-44	96906	117	18
MS35206-281	96906			MS35338-44	96906	49	5
MS35206-281	96906	143	8	MS35338-44	96906	88	17
MS35206-283	96906	120	23	MS35338-44	96906	73	5
MS35206-283	96906	121	39	MS35338-44	96906	15	27
MS35206-283	96906	122	6	MS35338-44	96906		
MS35206-284	96906	151	5	MS35338-44	96906	143	9
MS35206-284	96906	120	28	MS35338-44	96906	152	31
MS35206-286	96906	151	3	MS35338-44	96906	152	31
MS35206-287	96906	120	43	MS35338-44	96906	128	6
MS35206-29	96906	113	3	MS35338-45	96906	97	16
MS35206-300	96906	99	7	MS35338-45	96906	106	9
MS35206-300	96906	116	8	MS35338-45	96906	72	2
MS35206-300	96906	140	6	MS35338-45	96906	38	12
MS35206-301	96906	140	12	MS35338-45	96906	34	17
MS35207-265	96906	142	1	MS35338-45	96906	34	6
MS35207-281	96906	145	2	MS35338-45	96906	34	2
MS35207-281	96906	127	19	MS35338-45	96906	35	2
MS35207-282	96906	97	20	MS35338-45	96906	15	10
MS35207-295	96906	28	12	MS35338-45	96906	15	10
MS35214-39	96906			MS35338-45	96906	16	11
MS35214-39	96906			MS35338-45	96906	18	12
MS35223-41		40	12	MS35338-45	96906	19	7

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

<i>Reference Number</i>	<i>Mfg. Code</i>	<i>Fig. No.</i>	<i>Item No.</i>	<i>Reference Number</i>	<i>Mfg. Code</i>	<i>Fig. No.</i>	<i>Item No.</i>
MS35338-45	96906	25	7	MS35648-5	96906	65	5
MS35338-45	96906	32	15	MS35648-9	96906	8	10
MS35338-45	96906			MS35649-202	96906	40	25
MS35338-45	96906	5	14	MS35649-202	96906	41	8
MS35338-45	96906	9	27	MS35649-202	96906	129	12
MS35338-45	96906	12	9	MS35649-202	96906	153	12
MS35338-45	96906	14	11	MS35649-202	96906	123	9
MS35338-45	96906	14	17	MS35649-2312	96906	105	18
MS35338-45	96906	145	10	MS35649-2312	96906	106	7
MS35338-45	96906			MS35649-2312	96906	108	5
MS35338-45	96906	152	14	MS35649-2312	96906	154	34
MS35338-45	96906	152	14	MS35649-262	96906	122	7
MS35338-46	96906	94	6	MS35649-282	96906	126	13
MS35338-46	96906	95	6	MS35650-302	96906	126	5
MS35338-46	96906	110	12	MS35684-12	96906		
MS35338-46	96906			MS35690-405	96906	141	9
MS35338-46	96906	70	15	MS35690-605	96906	96	8
MS35338-46	96906	69	9	MS35690-825	96906	75	31
MS35338-46	96906	35	6	MS35691-13	96906	30	2
MS35338-46	96906	68	19	MS35691-21	96906		
MS35338-46	96906	21	2	MS35691-21	96906	23	35
MS35338-46	96906	23	12	MS35691-21	96906		
MS35338-46	96906	23	39	MS35691-29	96906	23	15
MS35338-46	96906	24	3	MS35691-29	96906	23	21
MS35338-46	96906	31	14	MS35691-29	96906	32	7
MS35338-46	96906	78	4	MS35691-33	96906	115	9
MS35338-46	96906	79	14	MS35691-33	96906		
MS35338-46	96906	4	3	MS35691-33	96906	132	26
MS35338-46	96906	5	11	MS35691-38	96906	105	2
MS35338-46	96906	5	11	MS35691-9	96906	96	21
MS35338-46	96906	152	6	MS35691-9	96906	79	10
MS35338-46	96906	153	6	MS35743-14	96906		
MS35338-47	96906	87	2	MS35743-14	96906	121	15
MS35338-47	96906	88	20	MS35743-74	96906		
MS35338-47	96906	90	6	MS35743-75	96906		
MS35338-47	96906	91	5	MS35743-78	96906		
MS35338-47	96906	35	18	MS35751-42	96906	116	7
MS35338-47	96906	67	39	MS35751-42	96906	116	11
MS35338-47	96906	12	11	MS35751-43	96906	116	12
MS35338-47	96906	10	3	MS35752-025	96906	140	4
MS35338-47	96906	154	12	MS35756-15	96906	16	15
MS35338-48	96906	91	12	MS35756-35	96906	133	13
MS35338-48	96906	66	3	MS35769-18	96906	6	10
MS35338-48	96906	16	7	MS35769-18	96906		
MS35338-49	96906	61	13	MS35769-19	96906	6	10
MS35338-50	96906	134	10	MS35782-5	96906	33	13
MS35340-48	96906			MS35810-33	96906	110	10
MS35340-5	96906			MS35810-33	96906	23	17
MS35387-1	96906	113	8	MS35810-34	96906	79	18
MS35387-1	96906	143	6	MS35810-35	96906	70	1
MS35387-2	96906	113	20	MS35810-36	96906	78	5
MS35387-2	96906	143	6	MS35812-5	96906	70	5
MS35387-2	96906	127	5	MS35812-5	96906	70	5
MS35388-11	96906	85	1	MS35842-1	96906	148	8
MS35390-10	96906	85	2	MS35842-10	96906	61	2
MS35425-39	96906			MS35842-11	96906	38	9
MS35425-41	96906	140	10	MS35842-11	96906	34	7
MS35478-1683	96906	45	6	MS35842-11	96906	34	23
MS35478-1683	96906	47	4	MS35842-11	96906	146	20
MS35490-11	96906	142	3	MS35842-11	96906	146	21
MS35490-11	96906	142	14	MS35842-11	96906	148	13

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
MS35842-11	96906	148	19	MS51922-45	96906	94	17
MS35842-12	96906	56	16	MS51922-45	96906	94	12
MS35842-12	96906	38	6	MS51922-45	96906	94	12
MS35842-12	96906	33	3	MS51922-5	96906	145	20
MS35842-12	96906	34	12	MS51922-5	96906	127	21
MS35842-12	96906	154	29	MS51922-53	96906	95	14
MS35842-13	96906	57	6	MS51922-53	96906	95	14
MS35842-13	96906			MS51922-9	96906	130	19
MS35842-14	96906	27	18	MS51922-9	96906	128	4
MS35842-15	96906	30	6	MS51926-3	96906	111	3
MS35842-15	96906	29	2	MS51926-3	96906	111	3
MS35842-16	96906	30	9	MS51926-3	96906		
MS35842-16	96906	30	9	MS51926-3	96906		
MS35842-16	96906	150	8	MS51926-3	96906		
MS35844-99	96906	6	11	MS51926-5	96906		
MS35909-5	96906	38	2	MS51926-5	96906		
MS39020-1	96906	43	6	MS51926-5	19207		
MS39020-2	96906		Group 0612	MS51926-5			
MS39021-2	96906	155	3	MS51929-2	96906	111	1
MS39060-2	96906	40	20	MS51929-2	96906	111	1
MS39061-1	96906	51	3	MS51929-2	96906	111	1
MS39326-11	96906	—	—	MS51929-2	96906		
MS45904-57	96906	145	28	MS51929-2	96906		
MS45904-57	96906	126	3	MS51929-2	96906		
MS45904-72	96906	106	12	MS51929-2	96906		
MS45904-72	96906	108	4	MS51929-3	96906	111	3
MS45904-72	96906	55	9	MS51937-1	96906		
MS45904-72	96906	32	30	MS51939-3	96906	129	13
MS45904-72	96906	154	33	MS51939-3	96906	121	33
MS45904-76	96906	153	4	MS51939-3	96906	123	6
MS45904-76	96906	154	23	MS51943-31	96906	28	8
MS49005-4	96906	8	11	MS51943-31	96906	133	20
MS49005-6	96906	8	5	MS51943-31	96906	136	12
MS49005-16	96906	61	10	MS51943-32	96906	110	9
MS51065-42-3	96906	34	26	MS51943-33	96906	32	22
MS51065-42-4	96906	154	26	MS51943-33	96906	133	32
MS51074-1	96906	54	22	MS51943-34	96906	110	23
MS51085-1	96906	150	23	MS51943-34	96906	28	1
MS51113-1	96906	40	22	MS51943-34	96906	32	11
MS51131-1	96906	49	1	MS51943-34	96906	133	33
MS51321-1	96906	145	1	MS51943-34	96906	136	11
MS51321-1	96906	150	24	MS51943-36	96906	78	23
MS51329-1	96906	47	1	MS51943-38	96906	32	20
MS51399-2	96906	40	5	MS51943-4	96906	66	13
MS51867-8	96906	154	25	MS51943-40	96906	95	10
MS51922-1	96906	117	12	MS51943-40	96906	94	20
MS51922-1	96906	57	4	MS51943-40	96906	95	24
MS51922-1	96906	129	10	MS51943-40	96906	90	7
MS51922-1	96906	130	6	MS51943-40	96906	90	7
MS51922-1	96906	131	4	MS51943-40	96906	90	14
MS51922-1	19207			MS51943-40	96906	94	20
MS51922-1	96906	120	22	MS51943-40	96906	83	4
MS51922-1	96906	121	38	MS51943-40	96906	95	10
MS51922-1	96906	122	3	MS51943-40	96906	95	10
MS51922-13	96906	122	18	MS51943-40	96906	23	1
MS51922-17	96906	107	18	MS51943-40	96906	134	4
MS51922-17	96906	23	41	MS51943-40	96906	5	1
MS51922-17	96906	81	16	MS51943-42	96906	134	12
MS51922-2	96906	151	11	MS51958-63	96906	123	7
MS51922-21	96906	132	14	MS51963-101	96906	133	14
MS51922-21	96906			MS51964-66	96906	120	19
MS51922-37	96906	80	2	MS51964-66	96906	121	9

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
MS51964-79	96906	133	19	MS51968-8	96906		
MS51967-11	96906	90	11	MS51968-8	96906	96	2
MS51967-14	96906	91	13	MS51968-8	96906	69	10
MS51967-14	96906	132	27	MS51968-8	96906	35	14
MS51967-2	96906	106	19	MS51968-8	96906	68	18
MS51967-2	96906	112	5	MS51968-8	96906	17	5
MS51967-2	96906	60	4	MS51968-8	96906	23	39
MS51967-2	96906	15	26	MS51968-8	96906	24	2
MS51967-2	96906	78	12	MS51968-8	96906	78	3
MS51967-2	96906	139	7	MS51968-8	96906	4	8
MS51967-2	96906	143	1	MS51968-8	96906	5	3
MS51967-3	96906			MS51968-8	96906	5	3
MS51967-3	96906			MS51968-8	96906	153	8
MS51967-3	96906			MS53000-1	96906	42	7
MS51967-5	96906	116	17	MS53015-1	96906	143	5
MS51967-5	96906	49	8	MS53047-1	96906	45	1
MS51967-5	96906	55	6	MS53051	96906	42	2
MS51967-5	96906			MS53075-1	96906	30	13
MS51967-6	96906			MS75063-1	96906	53	6
MS51967-8	96906	113	14	MS77074-3	96906		
MS51967-8	96906	55	2	MS85751-59	96906	150	14
MS51967-8	96906	55	2	MS87006-33	96906		
MS51968-11	96906	88	19	MS87006-53	96906		
MS51968-11	96906	90	5	MS87006-53	96906	92	2
MS51968-11	96906	91	4	MS90725-10	96906		
MS51968-11	96906	70	6	MS90725-10	96906	128	5
MS51968-11	96906	77	38	MS90725-109	96906	91	8
MS51968-11	96906	70	6	MS90725-110	96906	36	9
MS51968-11	96906	35	19	MS90725-111	96906	66	1
MS51968-11	96906	67	40	MS90725-116	96906	66	8
MS51968-11	96906	78	17	MS90725-120	96906	115	2
MS51968-11	96906	84	14	MS90725-120	96906		
MS51968-14	96906	66	14	MS90725-120	96906	132	20
MS51968-2	96906	73	4	MS90725-14	96906	129	7
MS51968-2	96906	152	26	MS90725-14	96906	139	4
MS51968-2	96906	152	26	MS90725-3	96906	106	2
MS51968-2	96906	127	6	MS90725-3	96906		
MS51968-5	96906	96	15	MS90725-3	96906		
MS51968-5	96906	91	9	MS90725-3	96906	151	14
MS51968-5	19207	96	15	MS90725-31	96906	97	15
MS51968-5	96906	72	1	MS90725-32	96906	106	10
MS51968-5	96906	38	11	MS90725-32	96906		
MS51968-5	96906	34	16	MS90725-34	96906	34	1
MS51968-5	96906	34	25	MS90725-35	96906		
MS51968-5	96906	35	9	MS90725-36	96906	12	10
MS51968-5	96906	15	19	MS90725-36	96906		
MS51968-5	96906	16	12	MS90725-36	96906	128	1
MS51968-5	96906	18	11	MS90725-41	96906	15	14
MS51968-5	96906	19	8	MS90725-42	96906	15	23
MS51968-5	96906	25	6	MS90725-45	96906	96	23
MS51968-5	96906	136	8	MS90725-46	96906	34	4
MS51968-5	96906	79	2	MS90725-5	96906	106	15
MS51968-5	96906	5	13	MS90725-5	96906		
MS51968-5	96906	14	12	MS90725-5	96906	36	3
MS51968-5	96906	14	18	MS90725-5	96906	29	10
MS51968-5	96906	152	13	MS90725-51	96906	154	4
MS51968-5	96906	152	13	MS90725-57	96906	62	9
MS51968-8	96906	94	5	MS90725-57	96906	131	6
MS51968-8	96906	95	5	MS90725-59	96906	62	2
MS51968-8	96906	116	13	MS90725-59	96906	23	5
MS51968-8	96906	116	21	MS90725-59	96906	4	5

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

Reference Number	Mfg. Code	Fig. No.	Item No.	Reference Number	Mfg. Code	Fig. No.	Item No.
MS90725-6	96906			MS90726-58	96906	35	15
MS90725-6	96906	57	5	MS90726-59	96906		
MS90725-6	96906	29	25	MS90726-59	96906	30	10
MS90725-6	19207	131	7	MS90726-59	96906	5	9
MS90725-6	96906	133	22	MS90726-6	96906	54	20
MS90725-6	96906			MS90726-6	96906	73	10
MS90725-6	96906	153	7	MS90726-6	96906	127	24
MS90725-6	96906	154	13	MS90726-60	96906	94	11
MS90725-6	96906	128	10	MS90726-60	96906	153	3
MS90725-60	96906	114	4	MS90726-61	96906	35	11
MS90725-60	96906	64	33	MS90726-61	96906	152	9
MS90725-60	96906	23	11	MS90726-61	96906	152	9
MS90725-60	96906	4	4	MS90726-62	96906	4	2
MS90725-61	96906	23	25	MS90726-63	96906	133	26
MS90725-61	96906	81	1	MS90726-66	96906	79	3
MS90725-63	96906	70	14	MS90726-67	96906	107	7
MS90725-66	96906	64	49	MS90726-67	96906	116	14
MS90725-67	96906	110	11	MS90726-67	96906	132	8
MS90725-7	96906	136	14	MS90726-68	96906	116	18
MS90725-7	96906	12	1	MS90726-71	96906	94	9
MS90725-70	96906	154	21	MS90726-71	96906	95	9
MS90725-8	96906			MS90726-84	96906	91	7
MS90725-8	96906	151	13	MS90726-84	96906	10	2
MS90725-86	96906	87	1	MS90726-85	96906	35	20
MS90725-86	96906	12	17	MS90726-85	96906	134	5
MS90725-86	96906	154	18	MS90726-86	96906	90	10
MS90725-9	96906	117	13	MS90726-87	96906	91	1
MS90725-98	96906	87	10	MS90726-87	96906	134	22
MS90726-110	96906	90	4	MS90726-89	96906	35	21
MS90726-110	96906	90	4	MS90726-89	96906	32	25
MS90726-111	96906	66	12	MS90726-89		32	25
MS90726-112	96906	90	16	MS90726-89	96906	133	29
MS90726-112	96906	134	1	MS90726-89	96906	152	10
MS90726-115	96906	16	8	MS90726-89	96906	152	10
MS90726-116	96906	75	28	MS90726-90	96906	32	19
MS90726-117	96906	95	16	MS90726-91	96906	88	31
MS90726-122	96906	5	15	MS90726-96	96906	134	7
MS90726-136	96906	134	8	MS90727-38	96906	88	26
MS90726-138	96906	61	12	MS90727-46	96906	70	17
MS90726-148	96906	94	13	MS90727-68	96906	79	11
MS90726-148	96906	94	13	MS90727-87	96906	35	17
MS90726-187	96906	10	10	MS90728-44	96906	15	11
MS90726-3	96906	110	6	MS90728-44	96906	35	1
MS90726-3	96906	152	23	MS90728-59	96906	35	7
MS90726-3	96906	152	23	MS90728-87	96906	154	11
MS90726-31	96906	91	14	MS9245-27	96906	31	19
MS90726-31	96906			MS9245-63	96906	65	1
MS90726-31	96906			MS9320-13	96906	113	10
MS90726-31	96906	152	19	MS9320-13	96906	117	4
MS90726-31	96906	152	19	MSS375-10	8302	135	31
MS90726-32	96906	110	18	MU-54	19728		
MS90726-32	19207	110	18	MU100A	8302	135	55
MS90726-32	96906	133	23	MU100R	8302	135	56
MS90726-32	96906	152	16	MU101A	8302	135	19
MS90726-32	96906	152	16	MU101R	8302	135	4
MS90726-33	96906	35	24	MU102S	8302	135	53
MS90726-33	96906	152	38	MU103A	8302	135	8
MS90726-34	96906	32	1	MU103B	8302	135	7
MS90726-34	96906	5	20	MU134B	8302	135	3
MS90726-36	96906	32	14	MU139	8302	135	22
MS90726-38	96906	32	10	MU141A	8302	135	23

SECTION IV. REFERENCE NUMBER AND FEDERAL STOCK NUMBER INDEX — Continued

<i>Reference Number</i>	<i>Mfg. Code</i>	<i>Fig. No.</i>	<i>Item No.</i>	<i>Reference Number</i>	<i>Mfg. Code</i>	<i>Fig. No.</i>	<i>Item No.</i>
MU143D	8302	135	33	RR-C-27LA	81349	90	18
MU143E	8302	135	37	S375-10	8302	135	57
MU143S	8302	135	38	S375-12	8302	135	17
MU149G	8302	135	10	S500-10	8302	135	52
MU151	8302	135	12	S500-15	8302	135	60
MU1520	8302	135	13	S706P	8302	135	48
MU156	8302	135	15	SAE 30R2			Group 0804
MU2-302	8302	135	58	SAE 30R2			Group 1000
MZ-19CS	19728	37	1	WW-H1053	81349		
P10-1324	18265	27	4	XA744AA	19728	39	14
P10-3198	18265	27	11	YDF257	77640	86	8
P10-4002	18265	27	10	ZZ-H428	81349		
P10-4426	18265	27	3	ZZ-H428	81349		
P10-4777	18265	27	12	ZZ-H428	81349		
P11-2982	18265	27	8	ZZ-H428	81349		
P11-2983	18265	27	2	ZZ-H617	80244	25	26
QQ-T830	81349	146	16	ZZ-H617	81349		
RR-C-271		113	19	ZZ-H617	81349		

By the Order of the Secretary of the Army:

W. C. WESTMORELAND,
*General, United States Army,
Chief of Staff.*

Official:

VERNE L. BOWERS,
*Major General, United States Army,
The Adjutant General.*

DISTRIBUTION:

To be distributed in accordance with DA Form 12-38, Direct/General Support requirements for Truck, Cargo, 1½ TON, M715; Truck, Ambulance, 1½ Ton, M725.

DEPARTMENT OF THE ARMY
US ARMY AG PUBLICATIONS CENTER
1855 WOODSON ROAD
ST. LOUIS, MISSOURI 63114

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE, \$300

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314



PIN: 027265-000